

VNMR User Programming

VNMR 6.1C Software
Pub. No. 01-999165-00, Rev. A0800



VARIAN

VNMR User Programming
VNMR 6.1C Software
Pub. No. 01-999165-00, Rev. A0800

Revision history
A0500 – Initial release for VNMR 6.1C

Applicability of manual:
^{UNITY}*INOVA*, *MERCURY VxWorks Powered* (shortened to *MERCURY-VX* throughout this manual), *MERCURY*, *UNITYplus*, *GEMINI 2000*, *UNITY*, and VXR-S NMR spectrometer systems with VNMR 6.1C software installed

Technical contributors: Dan Iverson, Frits Vosman, Matt Howitt, Greg Brissey, Hung Lin, Debbie Mattiello, Evan Williams
Technical writers: Michael Carlisle, Dan Steele, Mike Miller
Technical editor: Dan Steele

Copyright ©2000 by Varian, Inc.
3120 Hansen Way, Palo Alto, California 94304
<http://www.varianinc.com>
All rights reserved. Printed in the United States.

The information in this document has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Statements in this document are not intended to create any warranty, expressed or implied. Specifications and performance characteristics of the software described in this manual may be changed at any time without notice. Varian reserves the right to make changes in any products herein to improve reliability, function, or design. Varian does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights nor the rights of others. Inclusion in this document does not imply that any particular feature is standard on the instrument.

^{UNITY}*INOVA*, *MERCURY*, Gemini, *GEMINI 2000*, *UNITYplus*, *UNITY*, VXR, XL, VNMR, VnmrS, VnmrX, VnmrI, VnmrV, VnmrSGI, MAGICAL II, AutoLock, AutoShim, AutoPhase, limNET, ASM, and SMS are registered trademarks or trademarks of Varian, Inc. Sun, Solaris, CDE, Suninstall, Ultra, SPARC, SPARCstation, SunCD, and NFS are registered trademarks or trademarks of Sun Microsystems, Inc. and SPARC International. Oxford is a registered trademark of Oxford Instruments LTD. Ethernet is a registered trademark of Xerox Corporation. VxWORKS and VxWORKS POWERED are registered trademarks of WindRiver Inc. Other product names in this document are registered trademarks or trademarks of their respective holders.

Overview of Contents

<i>SAFETY PRECAUTIONS</i>	19
<i>Introduction</i>	23
<i>Chapter 1. MAGICAL II Programming</i>	25
<i>Chapter 2. Pulse Sequence Programming</i>	63
<i>Chapter 3. Pulse Sequence Statement Reference</i>	159
<i>Chapter 4. UNIX-Level Programming</i>	277
<i>Chapter 5. Parameters and Data</i>	283
<i>Chapter 6. Customizing Graphics Windows</i>	311
<i>Index</i>	345

Table of Contents

SAFETY PRECAUTIONS	19
Introduction	23
Chapter 1. MAGICAL II Programming	25
1.1 Working with Macros	25
Writing a Macro	26
Executing a Macro	26
Transferring Macro Output	28
Loading Macros into Memory	28
1.2 Programming with MAGICAL	29
Tokens	29
Variable Types	32
Arrays	33
Expressions	34
Input Arguments	35
Name Replacement	35
Conditional Statements	36
Loops	36
Macro Length and Termination	37
Command and Macro Tracing	37
1.3 Relevant VNMR Commands	38
Spectral Analysis Tools	38
dres Measure linewidth and digital resolution	38
dsn Measure signal-to-noise	38
dsnmax Calculate maximum signal-to-noise	38
getll Get line frequency and intensity from line list	38
getreg Get frequency limits of a specified region	38
integ Find largest integral in specified region	39
mark Determine intensity of the spectrum at a point	39
nll Find line frequencies and intensities	39
numreg Return the number of regions in a spectrum	39
peak Find tallest peak in specified region	39
select Select a spectrum or 2D plane without displaying it	39
Input/Output Tools	40
apa Plot parameters automatically	40
banner Display message with large characters	40
clear Clear a window	40
confirm Confirm message using the mouse	40
echo Display strings and parameter values in text window	40
flip Flip between graphics and text window	40
format Format a real number or convert a string for output	40
input Receive input from keyboard	41
lookup Look up and return words and lines from text file	41
nrecords Determine number of lines in a file	41

psgset	Set up parameters for various pulse sequences	41
vnmr_confirmer	Display a confirmer window (UNIX)	41
write	Write output to various devices	41
Regression and Curve Fitting		42
analyze	Generalized curve fitting	42
autoscale	Resume autoscaling after limits set by scalelimits	42
expfit	Least-squares fit to exponential or polynomial curve (UNIX)	42
expl	Display exponential or polynomial curves	42
pexpl	Plot exponential or polynomial curves	42
poly0	Display mean of the data in the file regression.inp	42
rinput	Input data for a regression analysis	42
scalelimits	Set limits for scales in regression	42
Mathematical Functions		43
abs	Find absolute value of a number	43
acos	Find arc cosine of a number	43
asin	Find arc sine of a number	43
atan	Find arc tangent of a number	43
atan2	Find arc tangent of two numbers	43
averag	Calculate average and standard deviation of input	43
cos	Find cosine value of an angle	43
exp	Find exponential value of a number	43
ln	Find natural logarithm of a number	43
sin	Find sine value of an angle	44
tan	Find tangent value of an angle	44
Creating, Modifying, and Displaying Macros		44
cocom	Create a user macro without using a text editor	44
delcom	Delete a user macro	44
hidecommand	Execute macro instead of command with same name	44
macrocat	Display a user macro on the text window	44
macrocp	Copy a user macro file	44
macrodir	List user macros	44
macroedit	Edit a user macro with user-selectable editor	44
macrold	Load a macro into memory	45
macrorm	Remove a user macro	45
macrosyscat	Display a system macro on the text window	45
macrosyscp	Copy a system macro to become a user macro	45
macrosysdir	List system macros	45
macrosysrm	Remove a system macro	45
macrovi	Edit a user macro with vi text editor	45
mstat	Display memory usage statistics	45
purge	Remove a macro from memory	45
record	Record keyboard entries as a macro	46
Miscellaneous Tools		46
axis	Provide axis labels and scaling factors	46
beepoff	Turn beeper off	46
beepon	Turn beeper on	46
bootup	Macro executed automatically when VNMR is started	46
exec	Execute a VNMR command	46
exists	Determine if a parameter, file, or macro exists	46
focus	Send keyboard focus to VNMR input window	47
gap	Find gap in the current spectrum	47
getfile	Get information about directories and files	47
graphis	Return the current graphics display status	47

length	Determine length of a string	47
listenoff	Disable receipt of messages from send2Vnmr	47
listenon	Enable receipt of messages from send2Vnmr	47
login	User macro executed automatically when VNMR activated	47
off	Make a parameter inactive	48
on	Make a parameter active or test its state	48
readlk	Read current lock level	48
rtv	Retrieve individual parameters	48
shell	Start a UNIX shell	48
solppm	Return ppm and peak width of solvent resonances	48
substr	Select a substring from a string	49
textis	Return the current text display status	49
unit	Define conversion units	49
1.4	Using Dialog Boxes from a Macro	49
1.5	Customizing the Menu System	52
	Customizing the Permanent Menu	52
	Customizing Menu Files and Help Files	53
	Controlling Menus	55
	Programming Menus	55
	User-Programmable Menus in Interactive Programs	57
1.6	Customizing the Files Menus	58
	Starting the Program	59
	Selecting and Accessing Files	59
	Using the Files Program with the Menu System	59
Chapter 2.	Pulse Sequence Programming.....	63
2.1	Programming Pulse Sequences from Menus	63
	Pulse Sequence Programming Menus	65
	Pulse Sequence Entry Main Menu	66
	Pulse Sequence Entry Delay Menu	66
	Pulse Sequence Entry Phases Menu	67
	Pulse Sequence Entry Phases Secondary Menu	67
	Pulse Sequence Entry Pulses Menu	67
	Pulse Sequence Entry Decoupler Pulses Menu	68
	Pulse Sequence Entry Status Menu	68
2.2	Overview of Pulse Sequence Programming	69
	Spectrometer Differences	69
	Pulse Sequence Generation Directory	69
	Compiling the New Pulse Sequence	70
	Troubleshooting the New Pulse Sequence	71
	Types of Acquisition Controller Boards	72
	Creating a Parameter Table for Pulse Sequence Object Code	72
	C Framework for Pulse Sequences	72
	Implicit Acquisition	74
	Acquisition Status Codes	74
2.3	Spectrometer Control	79
	Creating a Time Delay	79
	Pulsing the Observe Transmitter	80
	Pulsing the Decoupler Transmitter	82
	Pulsing Channels Simultaneously	84

Setting Transmitter Quadrature Phase Shifts	85
Setting Small-Angle Phase Shifts	86
Controlling the Offset Frequency	90
Controlling Observe and Decoupler Transmitter Power	91
Controlling Status and Gating	93
Interfacing to External User Devices	97
2.4 Pulse Sequence Statements: Phase and Sequence Control	98
Real-Time Variables and Constants	98
Calculating in Real-Time Using Integer Mathematics	99
Controlling a Sequence Using Real-Time Variables	100
Real-Time vs. Run-Time—When Do Things Happen?	101
Manipulating Acquisition Variables	102
Intertransient and Interincrement Delays	103
Controlling Pulse Sequence Graphical Display	104
2.5 Real-Time AP Tables	104
Loading AP Table Statements from UNIX Text Files	105
Table Names and Statements	105
AP Table Notation	106
Handling AP Tables	107
Examples of Using AP Tables	108
2.6 Accessing Parameters	110
Categories of Parameters	110
Looking Up Parameter Values	117
Using Parameters in a Pulse Sequence	117
2.7 Using Interactive Parameter Adjustment	120
General Routines	120
Generic Pulse Routine	121
Frequency Offset Subroutine	122
Generic Delay Routine	123
Fine Power Subroutine	125
2.8 Hardware Looping and Explicit Acquisition	125
Controlling Hardware Looping	126
Number of Events in Hardware Loops	127
Explicit Acquisition	129
Receiver Phase For Explicit Acquisitions	130
Multiple FID Acquisition	130
2.9 Pulse Sequence Synchronization	131
External Time Base	131
Controlling Rotor Synchronization	131
2.10 Pulse Shaping	131
File Specifications	132
Performing Shaped Pulses	134
Programmable Transmitter Control	136
Setting Spin Lock Waveform Control	137
Shaped Pulse Calibration	138
2.11 Shaped Pulses Using Attenuators	138
AP Bus Delay Constants	139
Controlling Shaped Pulses Using Attenuators	140
Controlling Attenuation	141

2.12 Internal Hardware Delays	142
Delays from Changing Attenuation	143
Delays from Changing Status	143
Waveform Generator High-Speed Line Trigger	145
2.13 Indirect Detection on Fixed-Frequency Channel	146
Fixed-Frequency Decoupler	146
2.14 Multidimensional NMR	148
Hypercomplex 2D	148
Real Mode Phased 2D: TPPI	150
2.15 Gradient Control for PFG and Imaging	150
Setting the Gradient Current Amplifier Level	150
Generating a Gradient Pulse	151
Controlling Lock Correction Circuitry	151
Programming Microimaging Pulse Sequences	152
2.16 Programming the Performa XYZ PFG Module	153
Creating Gradient Tables	153
Pulse Sequence Programming	154
2.17 Imaging-Related Statements	155
Real-time Gradient Statements	155
Oblique Gradient Statements	155
Global List and Position Statements	157
Looping Statements	157
Waveform Initialization Statements	157
Other Statements	157
2.18 User-Customized Pulse Sequence Generation	157

Chapter 3. Pulse Sequence Statement Reference **159**

acquire	Explicitly acquire data	159
add	Add integer values	160
apovrride	Override internal software AP bus delay	160
apshaped_decpulse	First decoupler pulse shaping via AP bus	161
apshaped_dec2pulse	Second decoupler pulse shaping via AP bus	162
apshaped_pulse	Observe transmitter pulse shaping via AP bus	163
assign	Assign integer values	164
blankingoff	Unblank amplifier channels and turn amplifiers on	164
blankingon	Blank amplifier channels and turn amplifiers off	164
blankoff	Stop blanking observe or decoupler amplifier (obsolete)	164
blankon	Start blanking observe or decoupler amplifier (obsolete)	165
clearapdatatable	Zero all data in acquisition processor memory	165
create_delay_list	Create table of delays	165
create_freq_list	Create table of frequencies	166
create_offset_list	Create table of frequency offsets	167
dbl	Double an integer value	168
dcphase	Set decoupler phase (obsolete)	168
dcplrphase	Set small-angle phase of 1st decoupler, rf type C or D	169
dcplr2phase	Set small-angle phase of 2nd decoupler, rf type C or D	169
dcplr3phase	Set small-angle phase of 3rd decoupler, rf type C or D	170
decblank	Blank amplifier associated with first decoupler	170
dec2blank	Blank amplifier associated with second decoupler	170
dec3blank	Blank amplifier associated with third decoupler	171
declvloff	Return first decoupler back to “normal” power	171

declvlon	Turn on first decoupler to full power	171
decoff	Turn off first decoupler	172
dec2off	Turn off second decoupler	172
dec3off	Turn off third decoupler	172
decoffset	Change offset frequency of first decoupler	172
dec2offset	Change offset frequency of second decoupler	172
dec3offset	Change offset frequency of third decoupler	173
dec4offset	Change offset frequency of fourth decoupler	173
decon	Turn on first decoupler	173
dec2on	Turn on second decoupler	173
dec3on	Turn on third decoupler	174
decphase	Set quadrature phase of first decoupler	174
dec2phase	Set quadrature phase of second decoupler	174
dec3phase	Set quadrature phase of third decoupler	174
dec4phase	Set quadrature phase of fourth decoupler	175
decpower	Change first decoupler power level, linear amp. systems	175
dec2power	Change second decoupler power level, linear amp. systems	175
dec3power	Change third decoupler power level, linear amp. systems	176
dec4power	Change fourth decoupler power level, linear amp. systems	176
decprgoff	End programmable decoupling on first decoupler	176
dec2prgoff	End programmable decoupling on second decoupler	177
dec3prgoff	End programmable decoupling on third decoupler	177
decprgon	Start programmable decoupling on first decoupler	177
dec2prgon	Start programmable decoupling on second decoupler	177
dec3prgon	Start programmable decoupling on third decoupler	178
decpulse	Pulse first decoupler transmitter with amplifier gating	179
decpwr	Set first decoupler high-power level, class C amplifier	179
decpwrf	Set first decoupler fine power	179
dec2pwrf	Set second decoupler fine power	180
dec3pwrf	Set third decoupler fine power	180
decr	Decrement an integer value	180
decrpulse	Pulse first decoupler with amplifier gating	181
dec2rgpulse	Pulse second decoupler with amplifier gating	182
dec3rgpulse	Pulse third decoupler with amplifier gating	182
dec4rgpulse	Pulse fourth decoupler with amplifier gating	183
decshaped_pulse	Perform shaped pulse on first decoupler	183
dec2shaped_pulse	Perform shaped pulse on second decoupler	184
dec3shaped_pulse	Perform shaped pulse on third decoupler	185
decspinlock	Set spin lock waveform control on first decoupler	186
dec2spinlock	Set spin lock waveform control on second decoupler	187
dec3spinlock	Set spin lock waveform control on third decoupler	187
decstepsize	Set step size for first decoupler	188
dec2stepsize	Set step size for second decoupler	188
dec3stepsize	Set step size for third decoupler	189
decunblank	Unblank amplifier associated with first decoupler	189
dec2unblank	Unblank amplifier associated with second decoupler	189
dec3unblank	Unblank amplifier associated with third decoupler	189
delay	Delay for a specified time	190
dhpflag	Switch decoupling from low-power to high-power	190
divn	Divide integer values	190
dps_off	Turn off graphical display of statements	190
dps_on	Turn on graphical display of statements	191
dps_show	Draw delay or pulses in a sequence for graphical display	191
dps_skip	Skip graphical display of next statement	193

elsenz	Execute succeeding statements if argument is nonzero	193
endhardloop	End hardware loop	194
endif	End execution started by ifzero or elsenz	194
endloop	End loop	194
endmsloop	End multislice loop	195
endpeloop	End phase-encode loop	195
gate	Device gating (obsolete)	196
getarray	Get arrayed parameter values	196
getelem	Retrieve an element from an AP table	197
getorientation	Read image plane orientation	197
getstr	Look up value of string parameter	198
getval	Look up value of numeric parameter	198
G_Delay	Generic delay routine	199
G_Offset	Frequency offset routine	199
G_Power	Fine power routine	199
G_Pulse	Generic pulse routine	199
hdwshiminit	Initialize next delay for hardware shimming	200
hlv	Find half the value of an integer	200
hsdelay	Delay specified time with possible homospoil pulse	201
idecpulse	Pulse first decoupler transmitter with IPA	201
idecrgpulse	Pulse first decoupler with amplifier gating and IPA	202
idelay	Delay for a specified time with IPA	202
ifzero	Execute succeeding statements if argument is zero	202
incdelay	Set real-time incremental delay	203
incgradient	Generate dynamic variable gradient pulse	203
incr	Increment an integer value	204
indirect	Set indirect detection	205
init_rfpattern	Create rf pattern file	205
init_gradpattern	Create gradient pattern file	206
init_vscan	Initialize real-time variable for vscan statement	207
initdelay	Initialize incremental delay	207
initparms_sis	Initialize parameters for spectroscopy imaging sequences	207
initval	Initialize a real-time variable to specified value	208
iobspulse	Pulse observe transmitter with IPA	208
ioffset	Change offset frequency with IPA	208
ipulse	Pulse observe transmitter with IPA	209
ipwrf	Change transmitter or decoupler fine power with IPA	209
ipwrn	Change transmitter or decoupler lin. mod. power with IPA	210
irgpulse	Pulse observe transmitter with IPA	210
lk_hold	Set lock correction circuitry to hold correction	211
lk_sample	Set lock correction circuitry to sample lock signal	211
loadtable	Load AP table elements from table text file	211
loop	Start loop	212
magradient	Simultaneous gradient at the magic angle	212
magradpulse	Gradient pulse at the magic angle	213
mashapedgradient	Simultaneous shaped gradient at the magic angle	213
mashapedgradpulse	Simultaneous shaped gradient pulse at the magic angle	214
mod2	Find integer value modulo 2	215
mod4	Find integer value modulo 4	215
modn	Find integer value modulo n	216
msloop	Multislice loop	216
mult	Multiply integer values	217
obl_gradient	Execute an oblique gradient	217
oblique_gradient	Execute an oblique gradient	218

obl_shapedgradient	Execute a shaped oblique gradient	218
oblique_shapedgradient	Execute a shaped oblique gradient	219
obsblank	Blank amplifier associated with observe transmitter	220
obsoffset	Change offset frequency of observe transmitter	220
obspower	Change observe transmitter power level, lin. amp. systems	221
obsprgoff	End programmable control of observe transmitter	221
obsprgon	Start programmable control of observe transmitter	221
obspulse	Pulse observe transmitter with amplifier gating	222
obsprwf	Set observe transmitter fine power	222
obsstepsize	Set step size for observe transmitter	222
obsunblank	Unblank amplifier associated with observe transmitter	223
offset	Change offset frequency of transmitter or decoupler	223
pe_gradient	Oblique gradient with phase encode in one axis	223
pe2_gradient	Oblique gradient with phase encode in two axes	224
pe3_gradient	Oblique gradient with phase encode in three axes	224
pe_shapedgradient	Oblique shaped gradient with phase encode in one axis	225
pe2_shapedgradient	Oblique shaped gradient with phase encode in two axes	226
pe3_shapedgradient	Oblique shaped gradient with phase encode in three axes	226
peloop	Phase-encode loop	227
phase_encode_gradient	Oblique gradient with phase encode in one axis	228
phase_encode3_gradient	Oblique gradient with phase encode in three axes	228
phase_encode_shapedgradient	Oblique shaped gradient with PE in one axis	229
phase_encode3_shapedgradient	Oblique shaped gradient with PE in three axes	230
phaseshift	Set phase-pulse technique, rf type A or B	231
poffset	Set frequency based on position	231
poffset_list	Set frequency from position list	232
position_offset	Set frequency based on position	232
position_offset_list	Set frequency from position list	232
power	Change power level, linear amplifier systems	233
pulse	Pulse observe transmitter with amplifier gating	234
prwf	Change transmitter or decoupler fine power	234
prwm	Change transmitter or decoupler linear modulator power	235
rcvloff	Turn off receiver gate and amplifier blanking gate	235
rcvlon	Turn on receiver gate and amplifier blanking gate	236
readuserap	Read input from user AP register	236
recoff	Turn off receiver gate only	237
recon	Turn on receiver gate only	237
rgpulse	Pulse observe transmitter with amplifier gating	238
rgradient	Set gradient to specified level	238
rlpower	Change power level, linear amplifier systems	239
rlprwf	Set transmitter or decoupler fine power	240
rlprwm	Set transmitter or decoupler linear modulator power	240
rotorperiod	Obtain rotor period of MAS rotor	240
rotorsync	Gated pulse sequence delay from MAS rotor position	241
setautoincrement	Set autoincrement attribute for an AP table	241
setdivnfactor	Set divn-return attribute and divn-factor for AP table	242
setreceiver	Associate the receiver phase cycle with an AP table	242
setstatus	Set status of observe transmitter or decoupler transmitter	242
settable	Store an array of integers in a real-time AP table	243
setuserap	Set user AP register	244
shapedpulse	Perform shaped pulse on observe transmitter	244
shaped_pulse	Perform shaped pulse on observe transmitter	244
shapedgradient	Generate shaped gradient pulse	245
shaped2Dgradient	Generate arrayed shaped gradient pulse	246

shapedincgradient	Generate dynamic variable gradient pulse	248
shapedvgradient	Generate dynamic variable shaped gradient pulse	249
simpulse	Pulse observe and decouple channels simultaneously	251
sim3pulse	Pulse simultaneously on 2 or 3 rf channels	251
sim4pulse	Simultaneous pulse on four channels	252
simshaped_pulse	Perform simultaneous two-pulse shaped pulse	253
sim3shaped_pulse	Perform a simultaneous three-pulse shaped pulse	254
sli	Set SLI lines	255
sp#off	Turn off specified spare line	256
sp#on	Turn on specified spare line	257
spinlock	Control spin lock on observe transmitter	257
starthardloop	Start hardware loop	258
status	Change status of decoupler and homospoil	259
statusdelay	Execute the status statement with a given delay time	259
stepsize	Set small-angle phase step size, rf type C or D	260
sub	Subtract integer values	261
tsadd	Add an integer to AP table elements	261
tsdiv	Divide an integer into AP table elements	262
tsmult	Multiply an integer with AP table elements	262
tssub	Subtract an integer from AP table elements	263
ttadd	Add an AP table to a second table	263
ttdiv	Divide an AP table into a second table	263
ttmult	Multiply an AP table by a second table	264
ttsub	Subtract an AP table from a second table	264
txphase	Set quadrature phase of observe transmitter	265
vgradient	Variable angle gradient	265
vgradpulse	Variable angle gradient pulse	266
vshapedgradient	Variable angle shaped gradient	266
vshapedgradpulse	Variable angle shaped gradient pulse	268
vdelay	Set delay with fixed timebase and real-time count	268
vdelay_list	Get delay value from delay list with real-time index	269
vfreq	Select frequency from table	270
vgradient	Set gradient to a level determined by real-time math	270
voffset	Select frequency offset from table	272
vscan	Provide dynamic variable scan	272
vsetuserap	Set user AP register using real-time variable	273
vsli	Set SLI lines from real-time variable	273
xgate	Gate pulse sequence from an external event	275
xmtroff	Turn off observe transmitter	275
xmtron	Turn on observe transmitter	275
xmtrphase	Set transmitter small-angle phase, rf type C, D	275
zero_all_gradients	Zero all gradients	276
zgradpulse	Create a gradient pulse on the z channel	276
Chapter 4. UNIX-Level Programming		277
4.1 UNIX and VNMR		277
4.2 UNIX: A Reference Guide		278
Command Entry		278
File Names		278
File Handling Commands		278
Directory Names		278
Directory Handling Commands		278
Text Commands		279

Other Commands	279
Special Characters	279
4.3 UNIX Commands Accessible from VNMR	280
Opening a UNIX Text Editor from VNMR	280
Opening a UNIX Shell from VNMR	280
4.4 Background VNMR	280
Running VNMR Command as a UNIX Background Task	281
Running VNMR Processing in the Background	281
4.5 Shell Programming	282
Shell Variables and Control Formats	282
Shell Scripts	282
Chapter 5. Parameters and Data	283
5.1 VNMR Data Files	283
Binary Data Files	283
Data File Structures	285
VNMR Use of Binary Data Files	288
Storing Multiple Traces	289
Header and Data Display	290
5.2 FDF (Flexible Data Format) Files	290
File Structures and Naming Conventions	290
File Format	291
Header Parameters	291
Transformations	294
Creating FDF Files	294
Splitting FDF Files	295
5.3 Reformatting Data for Processing	295
Standard and Compressed Formats	295
Compress or Uncompress Data	296
Move and Reverse Data	296
Table Convert Data	298
Reformatting Spectra	298
5.4 Creating and Modifying Parameters	298
Parameter Types and Trees	298
Tools for Working with Parameter Trees	299
Format of a Stored Parameter	301
5.5 Modifying Parameter Displays in VNMR	304
Display Template	304
Default Display Templates	305
Conditional and Arrayed Displays	306
Output Format	307
5.6 User-Written Weighting Functions	307
Writing a Weighting Function	308
Compiling the Weighting Function	309
5.7 User-Written FID Files	310
Chapter 6. Customizing Graphics Windows	311
6.1 Customizing the Sample Entry Form Window	311
Window Configuration Files	311
Setting Which Selections Are Displayed	314

Setting the Content of the Output File	314
Setting Name Attributes	315
Setting the Types of Widgets	316
Alternate Interfaces	316
File Attribute	317
Button Definitions	319
Sample Entry Control	321
Adding a New Field	322
6.2 Customizing the status Window	322
Window Configuration File	323
Defining Buttons and Window Attributes	324
6.3 Customizing the Interactive dg Window	324
Types of Fields	326
Selecting the New Interface	328
Deselecting the New Interface	328
Window Configuration Files	328
Editing the Configuration Files	328
Interaction Elements	332
Tips for dg Design	339
Utilities for Accessing VNMR Parameters.	342
Sending a Tcl Script	343
Index.....	345

List of Figures

Figure 1. Dialog Box for array Macro	50
Figure 2. Homonuclear-2D-J Pulse Sequence	64
Figure 3. Amplifier Gating	81
Figure 4. Pulse Observe and Decoupler Channels Simultaneously	85
Figure 5. Waveform Generator Offset Delay on ^{UNITY} INNOVA Systems	145
Figure 6. Magnet Coordinates as Related to User Coordinates.	292
Figure 7. Single-String Display Template with Output	304
Figure 8. Multiple-String Display Template	305
Figure 9. Default Interface (enter Program)	315
Figure 10. Alternate Interface (enter Program)	317
Figure 11. Second Alternate Interface (enter Program)	318
Figure 12. Default Interface (status Program)	325
Figure 13. dg Window	325
Figure 14. Matrix Window (dg Program)	330
Figure 15. Interaction Elements Window (dg Program)	330

List of Tables

Table 1. Reserved Words in MAGICAL.	30
Table 2. Order of Operator Precedence (Highest First) in MAGICAL	31
Table 3. Menu-Related Commands and Parameters	52
Table 4. Variable Types in Pulse Sequences	74
Table 5. Acquisition Status Codes	75
Table 6. Delay-Related Statements	79
Table 7. Observe Transmitter Pulse-Related Statements	81
Table 8. Decoupler Transmitter Pulse-Related Statements	83
Table 9. Simultaneous Pulses Statements	84
Table 10. Transmitter Quadrature Phase Control Statements	85
Table 11. Phase Shift Statements	86
Table 12. Frequency Control Statements	90
Table 13. Power Control Statements	91
Table 14. Gating Control Statements	94
Table 15. Interfacing to External User Devices	97
Table 16. Mapping of User AP Lines	97
Table 17. Integer Mathematics Statements	99
Table 18. Pulse Sequence Control Statements	100
Table 19. Statements for Controlling Graphical Display of a Sequence	104
Table 20. Statements for Handling AP Tables	107
Table 21. Parameter Value Lookup Statements	110
Table 22. Global PSG Parameters	111
Table 23. Imaging Variables	113
Table 24. Hardware Looping Related Statements	126
Table 25. Number of Events for Statements in a Hardware Loop	128
Table 26. Rotor Synchronization Control Statements	131
Table 27. Shaped Pulse Statements	134
Table 28. Programmable Control Statements	137
Table 29. Spin Lock Control Statements	138
Table 30. AP Bus Delay Constants	140
Table 31. Statements for Pulse Shaping Through the AP Bus	141
Table 32. AP Bus Overhead Delays	144
Table 33. Example of AP Bus Overhead Delays for <code>status</code> Statement	145
Table 34. Multidimensional PSG Variables	149
Table 35. Gradient Control Statements	151
Table 36. Delays for Obliquing and Shaped Gradient Statements	152
Table 37. Performa XYZ PFG Module Statements	154
Table 38. Imaging-Related Statements	156
Table 39. Commands for Reformatting Data	296
Table 40. Commands for Working with Parameter Trees	300

SAFETY PRECAUTIONS

The following warning and caution notices illustrate the style used in Varian manuals for safety precaution notices and explain when each type is used:

WARNING: *Warnings* are used when failure to observe instructions or precautions could result in injury or death to humans or animals, or significant property damage.

CAUTION: *Cautions* are used when failure to observe instructions could result in serious damage to equipment or loss of data.

Warning Notices

Observe the following precautions during installation, operation, maintenance, and repair of the instrument. Failure to comply with these warnings, or with specific warnings elsewhere in Varian manuals, violates safety standards of design, manufacturing, and intended use of the instrument. Varian assumes no liability for customer failure to comply with these precautions.

WARNING: **Persons with implanted or attached medical devices such as pacemakers and prosthetic parts must remain outside the 5-gauss perimeter from the centerline of the magnet.**

The superconducting magnet system generates strong magnetic fields that can affect operation of some cardiac pacemakers or harm implanted or attached devices such as prosthetic parts and metal blood vessel clips and clamps.

Pacemaker wearers should consult the user manual provided by the pacemaker manufacturer or contact the pacemaker manufacturer to determine the effect on a specific pacemaker. Pacemaker wearers should also always notify their physician and discuss the health risks of being in proximity to magnetic fields. Wearers of metal prosthetics and implants should contact their physician to determine if a danger exists.

Refer to the manuals supplied with the magnet for the size of a typical 5-gauss stray field. This gauss level should be checked after the magnet is installed.

WARNING: **Keep metal objects outside the 10-gauss perimeter from the centerline of the magnet.**

The strong magnetic field surrounding the magnet attracts objects containing steel, iron, or other ferromagnetic materials, which includes most ordinary tools, electronic equipment, compressed gas cylinders, steel chairs, and steel carts. Unless restrained, such objects can suddenly fly towards the magnet, causing possible personal injury and extensive damage to the probe, dewar, and superconducting solenoid. The greater the mass of the object, the more the magnet attracts the object.

Only nonferromagnetic materials—plastics, aluminum, wood, nonmagnetic stainless steel, etc.—should be used in the area around the magnet. If an object is stuck to the magnet surface and cannot easily be removed by hand, contact Varian service for assistance.

Warning Notices (*continued*)

Refer to the manuals supplied with the magnet for the size of a typical 10-gauss stray field. This gauss level should be checked after the magnet is installed.

WARNING: Only qualified maintenance personnel shall remove equipment covers or make internal adjustments.

Dangerous high voltages that can kill or injure exist inside the instrument. Before working inside a cabinet, turn off the main system power switch located on the back of the console, then disconnect the ac power cord.

WARNING: Do not substitute parts or modify the instrument.

Any unauthorized modification could injure personnel or damage equipment and potentially terminate the warranty agreements and/or service contract. Written authorization approved by a Varian, Inc. product manager is required to implement any changes to the hardware of a Varian NMR spectrometer. Maintain safety features by referring system service to a Varian service office.

WARNING: Do not operate in the presence of flammable gases or fumes.

Operation with flammable gases or fumes present creates the risk of injury or death from toxic fumes, explosion, or fire.

WARNING: Leave area immediately in the event of a magnet quench.

If the magnet dewar should quench (sudden appearance of gasses from the top of the dewar), leave the area immediately. Sudden release of helium or nitrogen gases can rapidly displace oxygen in an enclosed space creating a possibility of asphyxiation. Do not return until the oxygen level returns to normal.

WARNING: Avoid liquid helium or nitrogen contact with any part of the body.

In contact with the body, liquid helium and nitrogen can cause an injury similar to a burn. Never place your head over the helium and nitrogen exit tubes on top of the magnet. If liquid helium or nitrogen contacts the body, seek immediate medical attention, especially if the skin is blistered or the eyes are affected.

WARNING: Do not look down the upper barrel.

Unless the probe is removed from the magnet, never look down the upper barrel. You could be injured by the sample tube as it ejects pneumatically from the probe.

WARNING: Do not exceed the boiling or freezing point of a sample during variable temperature experiments.

A sample tube subjected to a change in temperature can build up excessive pressure, which can break the sample tube glass and cause injury by flying glass and toxic materials. To avoid this hazard, establish the freezing and boiling point of a sample before doing a variable temperature experiment.

Warning Notices (*continued*)

WARNING: Support the magnet and prevent it from tipping over.

The magnet dewar has a high center of gravity and could tip over in an earthquake or after being struck by a large object, injuring personnel and causing sudden, dangerous release of nitrogen and helium gasses from the dewar. Therefore, the magnet must be supported by at least one of two methods: with ropes suspended from the ceiling or with the antivibration legs bolted to the floor. Refer to the *Installation Planning Manual* for details.

WARNING: Do not remove the relief valves on the vent tubes.

The relief valves prevent air from entering the nitrogen and helium vent tubes. Air that enters the magnet contains moisture that can freeze, causing blockage of the vent tubes and possibly extensive damage to the magnet. It could also cause a sudden dangerous release of nitrogen and helium gases from the dewar. Except when transferring nitrogen or helium, be certain that the relief valves are secured on the vent tubes.

WARNING: On magnets with removable quench tubes, keep the tubes in place except during helium servicing.

On Varian 200- and 300-MHz 54-mm magnets only, the dewar includes removable helium vent tubes. If the magnet dewar should quench (sudden appearance of gases from the top of the dewar) and the vent tubes are not in place, the helium gas would be partially vented sideways, possibly injuring the skin and eyes of personnel beside the magnet. During helium servicing, when the tubes must be removed, carefully follow the instructions and safety precautions given in the manual supplied with the magnet.

Caution Notices

Observe the following precautions during installation, operation, maintenance, and repair of the instrument. Failure to comply with these cautions, or with specific cautions elsewhere in Varian manuals, violates safety standards of design, manufacturing, and intended use of the instrument. Varian assumes no liability for customer failure to comply with these precautions.

CAUTION: Keep magnetic media, ATM and credit cards, and watches outside the 5-gauss perimeter from the centerline of the magnet.

The strong magnetic field surrounding a superconducting magnet can erase magnetic media such as floppy disks and tapes. The field can also damage the strip of magnetic media found on credit cards, automatic teller machine (ATM) cards, and similar plastic cards. Many wrist and pocket watches are also susceptible to damage from intense magnetism.

Refer to the manuals supplied with the magnet for the size of a typical 5-gauss stray field. This gauss level should be checked after the magnet is installed.

Caution Notices (*continued*)

CAUTION: Keep the PCs, (including the LC STAR workstation) beyond the 5-gauss perimeter of the magnet.

Avoid equipment damage or data loss by keeping PCs (including the LC workstation PC) well away from the magnet. Generally, keep the PC beyond the 5-gauss perimeter of the magnet. Refer to the *Installation Planning Guide* for magnet field plots.

CAUTION: Check helium and nitrogen gas flowmeters daily.

Record the readings to establish the operating level. The readings will vary somewhat because of changes in barometric pressure from weather fronts. If the readings for either gas should change abruptly, contact qualified maintenance personnel. Failure to correct the cause of abnormal readings could result in extensive equipment damage.

CAUTION: Never operate solids high-power amplifiers with liquids probes.

On systems with solids high-power amplifiers, never operate the amplifiers with a liquids probe. The high power available from these amplifiers will destroy liquids probes. Use the appropriate high-power probe with the high-power amplifier.

CAUTION: Take electrostatic discharge (ESD) precautions to avoid damage to sensitive electronic components.

Wear a grounded antistatic wristband or equivalent before touching any parts inside the doors and covers of the spectrometer system. Also, take ESD precautions when working near the exposed cable connectors on the back of the console.

Radio-Frequency Emission Regulations

The covers on the instrument form a barrier to radio-frequency (rf) energy. Removing any of the covers or modifying the instrument may lead to increased susceptibility to rf interference within the instrument and may increase the rf energy transmitted by the instrument in violation of regulations covering rf emissions. It is the operator's responsibility to maintain the instrument in a condition that does not violate rf emission requirements.

Introduction

Varian's VNMR software provides NMR users with an exceptionally responsive user programming environment that allows customizing the system software and the operator interface. This manual explains how to use these capabilities:

- **Chapter 1, “MAGICAL II Programming,”** describes MAGICAL II (MAGnetics Instrument Control and Analysis Language), a powerful software application that enables full automation of spectrometer operation and data analysis using macros.
- **Chapter 2, “Pulse Sequence Programming,”** covers pulse sequence programming, via menus as well as user-written programs, using Varian’s powerful and extensive set of pulse sequence statements.
- **Chapter 3, “Pulse Sequence Statement Reference,”** is an alphabetical reference to each pulse sequence statement in VNMR.
- **Chapter 4, “UNIX-Level Programming,”** is a short overview of UNIX, the operating system used with VNMR.
- **Chapter 5, “Parameters and Data,”** covers manipulating parameters, using data files, modifying parameter displays, and writing user-defined weighting functions
- **Chapter 6, “Customizing Graphics Windows,”** describes how to customize the interactive graphics display windows for the `enter`, `status`, and `dg` programs.

Notational Conventions

The following notational conventions are used throughout all VNMR manuals:

- Typewriter-like characters identify VNMR and UNIX commands, parameters, directories, and file names in the text of the manual. For example:
The shutdown command is in the `/etc` directory.
- Typewriter-like characters also show text displayed on the screen, including the text echoed on the screen as you enter commands. For example:
`Self test completed successfully.`
- Text shown between angled brackets (`<...>`) in a syntax entry is optional. For example, if the syntax is `seqgen s2pul<.c>`, entering the “`.c`” suffix is optional, and typing `seqgen s2pul.c` or `seqgen s2pul` is functionally the same.
- Lines of text containing command syntax, examples of statements, source code, and similar material are often too long to fit the width of the page. To show that a line of text had to be broken to fit into the manual, the line is cut at a convenient point (such as at a comma near the right edge of the column), a backslash (`\`) is inserted at the cut, and the line is continued as the next line of text. This notation will be familiar to C programmers. Note that the backslash is not part of the line and, except for C source code, should not be typed when entering the line.
- Because pressing the Return key is required at the end of almost every command or line of text you type on the keyboard, use of the Return key will be mentioned only in cases where it is *not* used. This convention avoids repeating the instruction “press the Return key” throughout most of this manual.

- Text with a change bar (like this paragraph) identifies material new to VNMR version 6.1C that was not in the previous version of VNMR. Refer to the *VNMR 6.1C Release Notes* for a description of new features to the software.

Other Manuals

This manual should be your basic source of information on MAGICAL programming, pulse sequence programming, manipulating parameters and data, and customizing graphics windows. Other VNMR 6.1 manuals you should have include:

- *Getting Started*
- *Walkup NMR Using GLIDE*
- *User Guide: Liquids NMR*
- *User Guide: Solid-State NMR*
- *User Guide: Imaging*
- *VNMR Command and Parameter Reference*
- *VNMR and Solaris Software Installation*

All of these manuals are shipped with the VNMR software. These manuals, other Varian hardware and installation manuals, and most Varian accessory manuals are also provided online so that you can view the pages on your workstation and print copies.

Types of Varian Software and Spectrometers

VNMR is the trademark name of Varian's NMR software, which includes acquisition, data processing, menus, macros, and pulse sequences. Occasionally you will also see "Vnmr" mentioned in VNMR manuals as well as in the online help. Vnmr is the name of the main NMR program that runs on UNIX, forming the nucleus of VNMR. Specific applications of VNMR include VNMR for computers using the X Window System (VnmrX), VNMR for IBM workstations (VnmrI), and VNMR for Silicon Graphics computers (VnmrSGI).

In parts of this manual, the type of system (^{UNITY}INOVA, MERCURY, MERCURY-VX, GEMINI 2000, UNITYplus, UNITY, or VXR-S) must be considered in order to use the software properly.

- ^{UNITY}INOVA and MERCURY-VX are the current systems sold by Varian.
- UNITYplus, UNITY, and VXR-S are spectrometer lines that preceded the ^{UNITY}INOVA.
- GEMINI 2000 is a separate line of spectrometers that preceded the MERCURY and MERCURY-VX.

Help Us to Meet Your Needs!

We want to provide the equipment, publications, and help that you want and need. To do this, your feedback is most important. If you have ideas for improvements or discover a problem in the software or manuals, we encourage you to contact us. You can reach us at the nearest Varian Applications Laboratory or at the following address:

Palo Alto Applications Laboratory
Varian, Inc., NMR Systems
3120 Hansen Way, MS D-298
Palo Alto, CA 94304-1030

Chapter 1. **MAGICAL II Programming**

Sections in this chapter:

- 1.1 “Working with Macros,” this page
- 1.2 “Programming with MAGICAL,” page 29
- 1.3 “Relevant VNMR Commands,” page 38
- 1.4 “Using Dialog Boxes from a Macro,” page 49
- 1.5 “Customizing the Menu System,” page 52
- 1.6 “Customizing the Files Menus,” page 58

Many of the actions performed on an NMR spectrometer are performed many times, day after day. To make these actions easier on the user, VNMR software provides for the use of macros and a high-level programming language designed for NMR.

1.1 Working with Macros

A *macro* is a user-defined command that can duplicate a long series of commands and parameter changes you would otherwise have to enter one by one. To plot a spectrum, a scale under the spectrum, and parameters on the page would require a sequence of commands such as

```
p1  
pscale  
hpa  
page
```

It would be possible to define a macro, say, `plot`, that would be the equivalent of these commands. Or, perhaps you routinely plot 2D spectra using certain parameters. In this case, you might define a macro `plot_2d` as equivalent to the following:

```
wc=160  
sc=20  
wc2=160  
sc2=20  
pcon(10,1.4)  
page
```

But macros in the VNMR software are much more than this. Macros are written in Varian's special high-level “NMR” language, MAGICAL II™ (MAGnetics Instrument Control and Analysis Language, version II—usually just called MAGICAL in this chapter). MAGICAL provides an entire series of programming tools, such as if statements and loops, that can be used as part of macros. In addition, MAGICAL provides other NMR-related tools that allow macros to access NMR information like peak heights, integrals, and spectral regions. Using these two sets of tools, “NMR algorithms” are easily implemented with MAGICAL.

Writing a Macro

Consider the following problem: Find the largest peak in a spectrum in which the peaks may be positive or negative (such as an APT spectrum) and adjust the vertical scale of the spectrum so that the tallest peak is 180 mm high. The following macro (or *MAGICAL* program) that we call `vsadj` illustrates how the *MAGICAL* tools can be used to quickly and simply find a solution:

```
"vsadj --- Adjust scale of spectrum"
peak:$height,$frequency      "Find largest peak"
if $height<0 then $height=-  "If negative, make positive"
$height endif
vs=180*vs/$height            "Adjust the vertical scale"
```

As written, the macro `vsadj` has four lines:

- The material in double-quotation marks (the first line and parts of other lines) are comments. *MAGICAL* permits comments, and as is good programming practice, this example is filled with comments to explain what is happening.
- The second line of the macro (“`peak:$height,...`”) illustrates the ability of *MAGICAL* to extract spectral information. The `peak` command looks through the spectrum and returns to the user the height and frequency of the tallest peak in the spectrum, which are then stored (in this example) in temporary variables named `$height` and `$frequency`.
- The third line of the macro (“`if $height<0...`”) illustrates that *MAGICAL* is a high-level programming language, with conditional statements (e.g., `if... then...`), loops, etc. This particular line ensures that the peak height we measure is always a positive value, which is necessary for the calculation in the next line.
- The last line (“`vs=180*vs...`”) illustrates the use of NMR parameters (like `vs`, which sets the vertical scale) as simple variables in our macro. This line accomplishes the task of calculating a new value of `vs` that will make the height of the tallest peak equal to 180 mm.

Part of the power of the *MAGICAL* macro language is its ability to build on itself. For example, we can create first-level macros out of existing commands, second-level macros out of first-level macros and commands, and so on. Suppose we created a macro `plot`, for example, we might also create a macro `setuph`, another macro `acquireh`, and yet another macro `processh`. Now we might create a “higher-level” macro, `H1`, which is equivalent to `setuph acquireh processh plot`. Perhaps we have created two more similar macros, `C13` and `APT`. Now we might create yet another higher-level macro `HCAPT`, equivalent to `H1 C13 APT`. At every step of the way, the power of the macro increases, but without increasing the complexity.

Many macros are part of the standard VNMR software. These macros are discussed in the relevant chapters of the manual *Getting Started*—processing macros are discussed along with processing commands, acquisition setup macros along with acquisition setup commands, etc. Refer to the *VNMR Command and Parameter Reference* for a concise description of standard macros. The examples used here are instructive examples and do not necessarily represent standard Varian software.

Executing a Macro

When any program is executed, the command interpreter first checks to see if it is a standard VNMR command. If the program is not a command, the command interpreter then attempts to find a macro with the program name. Unlike a built-in VNMR command, which

is a built-in procedure containing code that normally cannot be changed by users, the code inside a macro is text that is accessible and can be changed by users as needed.

If a VNMR command and a macro have the same name, the VNMR command always takes precedence over a macro. For example, there is a built-in VNMR command named `wft`. If someone happens to write a macro also named `wft`, the macro `wft` will never get executed because the VNMR command `wft` takes precedence. To get around this restriction, the `hidecommand` command can rename a command so that a macro with the same name as a command is executed instead of the built-in command. If the user who wrote the `wft` macro enters `hidecommand('wft')`, the command is renamed to `Wft` (first letter made upper case) and the macro `wft` is now executable directly. The new `wft` macro can access the hidden `wft` built-in command by calling it with the name `Wft`. To go back to executing the command `wft` first, enter `hidecommand('Wft')`.

Macro files can reside in four separate locations:

1. In the user's `maclib` directory.
2. In the directory pointed to by the `maclibpath` parameter (if `maclibpath` is defined in the user's global parameter file).
3. In the directory pointed to by the `sysmaclibpath` parameter (if defined).
4. In the system `maclib` directory.

When macros are executed, the four locations are searched in this order. The first location found is the one that is used. For example, `rt` is a standard VNMR macro in the system `maclib`. If a user puts a macro named `rt` in the user's `maclib`, the user's `rt` macro takes precedence over the system `rt` macro.

The `which` macro can search these locations and display on line 3 the information it finds about which location contains a macro. For example, entering `which('rt')` determines the location of the macro `rt`.

The system macro directory `/vnmr/maclib` can be changed by the system operator only, but changes to it are available to all users. Each user also has their own private macro directory `maclib` in the user's `vnmrsys` directory. These macros take precedence over the system macros if a macro of the same name is in both directories. Thus, users can modify a macro to their own needs without affecting the operation of other users. If the command interpreter does not find the macro, it displays an error message to the user.

Macros are executed in exactly the same way as normal system commands, including the possibility of accepting optional arguments (shown by angled brackets “<...>”):

```
macroname<(argument1<,argument2, ...)>
```

Arguments passed to commands and macros can be constants (examples are `5.0` and `'apt'`), parameters and variables (`pw` and `$ht`), or expressions (`2*pw+5.0`). Recursive calls to procedures are allowed. Single quotes must be used around constant strings.

Macros can also be executed three other ways:

- When the VNMR program is first run, a system macro `bootup` is run. This macro in turn runs a user macro named `login` in the user's local `maclib` directory if such a macro exists.
- When any parameter `x` is entered, if that parameter has a certain “protection bit” set (see “[Format of a Stored Parameter;](#)” page 301), a macro by the name `x` (that is, the same name as the parameter with an underline as a prefix) is executed. For example, changing the value of `sw` executes the macro `sw`.
- Whenever parameters are retrieved with the `rt`, `rtp`, or `rtv` commands, a macro named `fixpar` is executed.

If the macro needs to know what macro invoked it, that information is stored by the string parameter `macro` available in each experiment.

Transferring Macro Output

Output from many commands and macros, in addition to being displayed on the screen or placed in a file, can also be transferred into any parameter or variable of the same type. To receive the output of a program of this type, the program name (and arguments, if any) are followed by a colon (:) and one or more names of variables and parameters that are to take the output:

```
macroname<(arg1<,arg2, . . .)>:variable1,variable2, . . .
```

For example, the command `peak` (described below in more detail) finds the height and frequency of the tallest peak. Entering the command:

```
peak:r1,r2
```

results in `r1` containing the height of the tallest peak and `r2` its frequency. Therefore, entering the command

```
peak:$ht,cr
```

would set `$ht` equal to the height of the tallest peak and set the cursor (parameter `cr`) equal to its frequency, and thus would be the equivalent of a “tallest line” command (similar to but different than the command `n1` to position the cursor at the nearest line).

It is not necessary to receive all of the information. For example, entering

```
peak:$peakht
```

puts the height of the tallest peak into the variable `$peakht`, and does not save the information about the peak frequency.

The command that displays a line list, `d11`, also produces one output—the number of lines.

Entering

```
d11:$n
```

reads the number of lines into variable `$n`. `d11` alone is perfectly acceptable although the information about the number of lines is then “lost.”

Loading Macros into Memory

Every time a macro is used, it is “parsed” before it is executed. This parsing takes time. If a macro is used many times or if faster execution speed is desirable, the parsed form of the macro, user or system, can be loaded into memory by the `macrold` command. When that macro is executed, it runs substantially faster. You can even “pre-load” one or more macros automatically when you start VNMR by inserting some `macrold` commands into your login macro.

Macros are also loaded into memory when you use the `macrovi` or `macroedit` commands to edit the macro. The only argument in each is the name of the macro file; for example, enter `macrovi('pa')` or `macroedit('pa')` if the macro name is `pa`. Which command you use depends on the type of macro and the text editor you want:

- For a user macro from the UNIX `vi` editor, use `macrovi`.
- For a user macro from an editor you select, use `macroedit`.
- To edit a system macro, copy the macro to your personal macro directory and edit it there with `macrovi` or `macroedit`.

To select the editor for `macroedit`, set the UNIX variable `vnmreditor` to its name (`vnmreditor` is set through the UNIX `env` command). You must have also a script for

the editor in the `bin` subdirectory of the VNMR system directory. For example, you can select Emacs by setting `vnmreditor=emacs` and having a script `vnmr_emacs`.

Several minor problems need to be considered in loading macros into memory:

- These macros consume a small amount of memory. In memory-critical situations, you might want to remove one or more macros from memory. This is done with the `purge<(file)>` command, where `file` is the name of a macro file to be removed from memory. Entering `purge` with no arguments removes all macros loaded into memory.

CAUTION: The `purge` command with no arguments should never be called from a macro, because it will remove all macros from memory, including the macro containing `purge`. Furthermore, `purge`, where the argument is the name of the macro containing the `purge` command, should never be called.

- If a macro is loaded in memory and you try to modify the macro from a separate UNIX window, the copy in memory is *not* changed, so if you execute the macro again, VNMR executes the old copy. To avoid this, use `macrovi` or `macroedit` to edit the macro, or if you have already edited the macro from another window, use `macrold` to replace the macro loaded in memory with the new version.
- If you wish to create a personal macro with the same name as a system macro already in memory, you must use `purge` to clear the system macro from memory so the version in your personal `mac.lib` directory will subsequently be executed.

If one macro calls another macro inside a loop, you might improve performance by having the calling macro load the called macro before entering the loop, execute the loop, and then remove the called macro from memory with the `purge` command.

1.2 Programming with MAGICAL

MAGICAL has many features, including tokens, variables, expressions, conditional statements, and loops. To program in MAGICAL, you need to know about the main features described in this section.

Tokens

In a computer language, a token is defined as a character or characters that is taken by the language as a single “thing” or “unit.” There are five classes of tokens in MAGICAL: identifiers, reserved words, constants, operators, and separators.

Identifiers

An identifier is the name of a command, macro, parameter, or variable, and is a sequence of letters, digits, and the characters `_` `$` `#`. The underline `_` counts as a letter. Upper and lower case letters are different. The first letter of identifiers, except temporary variable identifiers, must be a letter. Temporary variable identifiers start with the dollar-sign (`$`) character. Identifiers can be any length (but be reasonable). Examples of identifiers are `pcon`, `_pw`, or `$height`.

Reserved Words

The identifiers listed in [Table 1](#) are reserved words and may not be used otherwise. Reserved words are recognized in both upper and lower case formats (e.g., do not use either and or AND except as a reserved word).

Table 1. Reserved Words in MAGICAL.

abort	else	or	typeof
abortoff	endif	repeat	then
aborton	endwhile	return	until
and	if	size	while
break	mod	sqrt	
do	not	trunc	

Constants

Constants can be either floating or string.

- A floating constant consists of an integer part, a decimal point, a fractional part, the letter E (or e) and, optionally, a signed integer exponent. The integer and fraction parts both consist of a sequence of digits. Either the integer part or the fraction part (but not both) may be missing; similarly, either the decimal point, or the E and the exponent may be missing. Some examples are 1.37E-3, 4e5, .2E2, 1.4, 5.
- A string constant is a sequence of characters surrounded by single-quote characters ('...') or by backward single-quote characters (`...`). 'This is a string' and `This is a string` are examples of string constants.

To include a single-quote character in a string, place a backslash character (\) before the single-quote character, for example:

```
'This string isn\'t permissible without the backslash'
```

To include a backslash character in the string, place another backslash before the backslash, such as

```
'This string includes the backslash \\'
```

Alternatively, the two styles of single quote characters can be used. If backward single quotes are used to delimit a string, then single quotes can be placed directly within the string, for example:

```
`This isn't a problem`
```

Or the single-quote styles can be exchanged, for example:

```
'This isn` t a problem'
```

The single quote style that initiates the string must also terminate the string.

Operators

[Table 2](#) lists the operators available in MAGICAL. Each operator is placed in a group, and groups are shown in order of precedence, with the highest group precedence first. Within each group, operator precedence in expressions is from left to right, except for the logical group, where the respective members are listed in order of precedence.

There are four “built-in” special operators:

- `sqrt` returns the square root of a real number.
- `trunc` truncates real numbers.

Table 2. Order of Operator Precedence (Highest First) in MAGICAL

<i>Group</i>	<i>Operation</i>	<i>Description</i>	<i>Example</i>
special	sqrt()	square root	a = sqrt(b)
	trunc()	truncation	\$3 = trunc(3.6)
	typeof()	return argument type	if typeof('\$1') then...
	size()	return argument size	r1 = size('d2')
unary	-	negative	a = -5
multiplicative	*	multiplication	a = 2 * c
	/	division	b = a / 2
	%	remainder	\$1 = 4 % 3
	mod	modulo	\$3 = 7 mod 4
additive	+	addition	a = x + 4
	-	subtraction	b = y - sw
relational	<	less than	if a < b then...
	>	greater than	if a > b then...
	<=	less than or equal to	if a <= b then...
	>=	greater than or equal to	if a >= b then...
equality	=	equal to	if a = b then...
	<>	not equal to	if a <> b then...
logical	not	negation	if not (a=b) then...
	and	logical and	if r1 and r2 then...
	or	logical inclusive or	if (r1=2) or (r2=4) then...
assignment	=	equal	a = 3

- `typeof` returns an identifier (0 or 1) for the type (real or string) of an argument.
- `size` returns the number of elements in an arrayed parameter.

The unary, multiplicative, and additive operators apply only to real variables. The + (addition) operator can also be used with string variables to concatenate two strings together. The mathematical operators can not be used with mixed variable types.

If the variable is an array, the mathematical operators try to do simple matrix arithmetic. If two matrices of the same size are equated, added, subtracted, multiplied, divided, or one matrix is taken as a modulus, each element of the first matrix is operated on with the corresponding element of the second. If two matrices of the same size are compared with an `and` operator, the resulting Boolean is the AND of each individual element. If two matrices of the same size are ORed together, the resulting Boolean is the OR of each individual element. If the two matrices have unequal sizes, an error results.

An arrayed variable *cannot* be operated on (added, multiplied, etc.) by a single-valued constant or variable. For example, if `pw` is an array of five values, `pw=2*pw` does *not* double the value of each element of the array.

Separators and Comments

Blanks, tabs, new lines, and comments serve to separate tokens and are otherwise ignored. Characters between double quote marks (“...”) are comments, except when the double

quotes are in a literal string, such as 'The word “and” is a reserved word'. Comments can appear anywhere— at the beginning, middle, or end of a line—but may not span multiple lines. At the end of a comment place a second double quote; otherwise, the comment is automatically terminated when the end of a line occurs.

Variable Types

As with many programming languages, *MAGICAL* provides two classes of variables:

- Global variables (also called external) that retain their values on a permanent or semi-permanent basis.
- Local variables (also called temporary and automatic) that are created for the time it takes to execute the macro in question, after which the variables no longer exist.

Global and local variables can be of two types: real and string. Global real variables are stored as double-precision (64-bit) floating point numbers. The `real(variable)` command creates a real variable without a value, where `variable` is the name of the variable to be created.

Although global real variables have potential limits from $1e308$ to $1e-308$, when such variables are created, they are given default maximum and minimum values of $1e18$ and $-1e18$; these can subsequently be changed with the `setlimit` command. For example, `setlimit('r1', 1e99, -1e99, 0)` sets variable `r1` to limits of $1e99$ and $-1e99$. Local real variables have limits slightly less than $1e18$ ($9.999999843067e17$, to be precise) and cannot be changed.

String variables can have any number of characters, including a null string that has no characters. The command `string(variable)`, where `variable` is the name of the variable to be created, creates a string variable without a value.

Both real and string variables can have either a single value or a series of values (also called an array).

Global and local variables have the following set of attributes associated with them:

name	group	array size
basictype	display group	enumeration
subtype	max./min. values	protection status
active	step size	

The variable's attributes are used by programs when manipulating variables.

Global Variables

The most important global variables used in macros are the VNMR parameters themselves. Thus parameters like `vs` (vertical scale), `nt` (number of transients), `at` (acquisition time), etc., can be used in a *MAGICAL* macro. Like any variable, they can be used on the left side of an equation (and hence their value changed) or they can be used on the right side of an equation (as part of a calculation, perhaps to set another parameter).

The real-value parameters `r1`, `r2`, `r3`, `r4`, `r5`, `r6`, and `r7`, and the string parameter `n1`, `n2`, and `n3` are not NMR variables but can be used by macros. In using these parameters, it is important to remember that they are experiment-based parameters. If you are in `exp1` and a macro changes experiments by using the command `jexp3`, for example, a new set of such parameters appears. Similarly, recalling parameters or data with the `rt` or `rtp` commands overwrites the current values of these parameters, just as it overwrites the values of all other parameters.

Within a single experiment, and assuming that the `rt` and `rtp` commands are not used, however, these parameters do act like global parameters in that all macros can read or write information into these parameters, and hence information can be passed from one macro to another in this way. They thus provide a useful place to store information that must be retained for some time or must be accessed by more than one macro—be sure that some other macro does not change the value of this variable in the meantime!

Local Variables

Any number of local variables can be created within a macro. These temporary variables are distinguished by beginning with the dollar-sign (\$) character, such as `$number` and `$peakht`. The type of variable (real or string) is decided by the first usage—there is no variable declaration, as in many languages. Therefore, setting, `$number=5` and `$select='all'` establishes `$number` as a real variable and `$select` as a string variable.

A special initialization is required in one situation. When the first use of a string variable is as the return argument from a procedure, it must be initialized first by setting it to a null string. For example, a line such as

```
input('Input Your Name: '):$name
```

produces an error. Use instead

```
$name=' ' input('Input Your Name: '):$name.
```

By definition, local variables are lost upon completion of the macro. Furthermore, they are completely local, which means that each macro, even a macro that is being run by another macro, has its own set of variables. If one macro sets `$number=5` and then runs another macro that sets `$number=10`, when the second macro completes operation and the execution of commands returns to the first macro, `$number` equals 5, not 10. If the first macro is run again at a later time, `$number` starts with an undefined value. It is good practice to use local variables whenever possible.

Local variables can also be created on the command input line. These variables are automatically created but are not deleted, and hence this is not a recommended practice; use `r1`, `r2`, etc., instead.

Accessing a variable that does not exist displays the error message:

```
Variable "variable_name" doesn't exist.
```

Arrays

Both global and local variables, whether real or string, can be arrayed. Array elements are referred to by square brackets ([...]), such as `pw[1]`. Indices for the array can be fixed numbers (`pw[3]`), global variables (`pw[r1]`), or local variables (`pw[$i]`). Of course, the index must not exceed the size of the array. You can use the `size` operator to determine the array size. For example, the statement `r1=size('d2')` sets `r1` to number of elements in variable `d2`. If the variable has only a single value, `size` returns a 1; if the variable doesn't exist, it returns a 0.

Some arrays, such as a pulse width array, are user-created by keyboard entry. Other arrays, such as `llfrq` and `llamp`, are created by the software (in this case when a line list is performed). In both these cases, a macro can refer to any existing element of the array, `pw[4]` or `llfrq[5]`, for example.

A MAGICAL macro can also create local variables containing arrayed information by itself. No dimensioning statement is required; the variable just expands as necessary. The only constraint is that the array must be created in order: element 1 is first, element 2

second, and so on. The following example shows how an array might be created and all values initialized to 0:

```
$i=1
repeat
  $newarray[$i]=0
  $i=$i+1
until $i>10
```

Arrays of string variables are identical in every way to arrays of real variables, except that the values are strings. If, for example, a user has entered `dm= 'nny' , 'yyy'`, the following macro plots each spectrum with the proper label:

```
$i=1
repeat
  select($i)
  pl
  write('plotter',0,wc2max-10,'Decoupler mode: %s',dm[$i])
  page
  $i=$i+1
until $i>size('dm')
```

Accessing an array element that does not exist displays the error message:

```
variable_name["index"] index out of bounds
```

Using a string as an index, rather than an integer, displays the error message:

```
Index for variable_name['index'] must be numeric
```

or

```
Index must be numeric
```

Finally, using an array as an index displays the error message:

```
Index for variable_name must be numeric scalar
```

or

```
Index must be numeric scalar.
```

Expressions

An *expression* is a combination of variables, constants, and operators. Parentheses can be used to group together a combination of expressions. Multiple nesting of parentheses is allowed. In making expressions, combine only variables and constants of the same type:

- Real variables and constants only with other real variables and constants.
- String variables and constants only with other string variables and constants.

The type of a local variable (a variable whose name begins with a \$) is determined by the context in which it is first used. The only ambiguity is when a local variable is first used as a return argument of a command such as `input`, as discussed in the previous section on local variables.

If an illegal combination is attempted, an error message is displayed:

```
Can't assign STRING value "value" to REAL variable \
"variable_name"
```

or

```
Can't assign REAL value (value) to STRING variable \
"variable_name"
```

Mathematical Expressions

Expressions can be classified as mathematical or Boolean. Mathematical expressions can be used in place of simple numbers or parameters. Expressions can be used in parameter assignments, such as in `pw=0.6*pw90`, or as input arguments to commands or macros, such as in `pa(-5+sc, 50+vp)`.

When parameters are changed as a result of expressions, the normal checks and limits on the entry of that particular parameter are followed. For example, if `nt=7`, the statement `nt=0.5*nt` will end with `nt=3`, just as directly entering `nt=3.5` would have resulted in `nt=3`. Other examples of this include the round-off of `fn` entries to powers of two, limitation of various parameters to be positive only, etc.

Boolean Expressions

Boolean expressions have a value of either TRUE or FALSE. Booleans are represented internally as 0.0 for FALSE and 1.0 for TRUE, although in a Boolean expression any number other than zero is interpreted as TRUE. Boolean expressions can only compare quantities of the same type—real numbers with real numbers, or strings with strings. Some examples of Boolean expressions include `pw=10`, `sw>=10000`, `at/2<0.05`, and `(pw<5) or (pw>10)`.

The explicit use of the words “TRUE” and “FALSE” is not allowed. All Boolean expressions are implicit—they are evaluated when used and given a value of TRUE or FALSE for the purpose of some decision.

Input Arguments

Arguments passed to a macro are referenced by `$n`, where `n` is the argument number. An unlimited number of arguments (`$1`, `$2`, and so on) can be passed. The name of the macro itself may be accessed using the special name `$0`. For example, if the macro `test1` is running, `$0` is given the value `test1`. A second special variable `$#` contains the number of arguments passed and can be used for routines having a variable number of arguments. Arguments can be either real or string types, as with all parameters.

An example of using an input arguments such as `$1`:

```
"vsmult(multiplier)"
"Multiply vertical scale (vs) by input argument"
vs=$1*vs
```

Another example, which uses two input arguments:

```
"offset(arg1,arg2)"
"Increment vertical position (vp) and horizontal position (sc)"
vp=$1+vp
sc=$2+sc
```

The `typeof` operator returns a zero (FALSE) if the variable is real or does not exist, and returns a non-zero (TRUE) if the variable is a string. For example, in the conditional statement `if typeof('$1') then . . .`, the then part is executed only if `$1` is a string.

Name Replacement

An identifier surrounded by curly braces (`{...}`) results in the identifier being replaced by its value before the full expression is evaluated. If the name replacement is on the left side of the equal sign, the new name is assigned a value. If the name replacement is on the right

side of the equal sign, the value of the new name is used. The following are examples of name replacement:

```
$a = 'pw'           "variable $a is set to string 'pw'"
{$a} = 10.3        "pw is set to 10.3"
pw = 20.5          "pw is set to 20.5"
$b = {$a}          "variable $b is set to 20.5"
{$a}[2]=5         "pw[2] is set to 5.0"
$b = {$a}[2]      "variable $b is set to 5.0"
$cmd='wft'        "$cmd is set to the string 'wft'"
{$cmd}            "execute wft command"
```

The use of curly braces for command execution is subject to a number of constraints. In general, using the VNMR command `exec` for the purpose of executing an arbitrary command string is recommended. In this last example, this would be `exec ($cmd)`.

Conditional Statements

The following forms of conditional statements are allowed:

```
if booleanexpression then ... endif
if booleanexpression then ... else ... endif
```

Any number of statements (including none) can be inserted in place of the ellipses (...). If `booleanexpression` is TRUE, the then statements are executed; if `booleanexpression` is FALSE, the else statements (if any) are executed instead. Note that `endif` is required for both forms and that no other delimiters (such as BEGIN or END) are used, even when multiple statements are inserted. Nesting of `if` statements (the use of `if` statement as part of another `if` statement) is allowed, but be sure each `if` has a corresponding `endif`.

The following example uses a simple `if ... then` conditional statement:

```
"error --- Check for error conditions"
if (pw>100) or (d1>30) or ((tn='H1') and (dhp='y'))
    then write('line3','Problem with acquisition parameters')
endif
```

This example adds an `else` conditional statement:

```
"checkpw --- Check pulse width against predefined limits"
if pw<1
    then pw=1 write('line3','pw too small')
    else if pw>100
        then pw=100 write('line3','pw too large')
    endif
endif
```

Loops

Two types of loops are available. The `while` loop has the form:

```
while booleanexpression do ... endwhile
```

This type of loop repeats the statements between `do` and `endwhile`, as long as `booleanexpression` is TRUE (if `booleanexpression` is FALSE from the start, the statements are not executed).

The other type of loop is the `repeat` loop, which has the form:

```
repeat ... until booleanexpression
```

This loop repeats statements between `repeat` and `until`, until `booleanexpression` becomes TRUE (if `booleanexpression` is TRUE at the start, the statements are executed once).

The essential difference between `repeat` and `while` loops is that the `repeat` type always performs the statements at least once, while the `while` type may never perform the statements. The following macro is an example of using the `repeat` loop:

```
"maxpk(first,last) -- Find tallest peak in a series of spectra"
$first=$1
repeat
  select($1) peak:$ht
  if $1=$first
    then $maxht=$ht
    else if $ht>$maxht then $maxht=$ht endif
  endif
  $1=$1+1
until $1>$2
```

Both types of loops are often preceded by `$n=1`, then have a statement like `$n=$n+1` inside the loop to increment some looping condition. Beware of endless loops!

Macro Length and Termination

Macros have no restriction on length. Execution of a macro is terminated when the command `return` is encountered. This is usually inserted into the macro after testing some condition, as shown in the example below:

```
"plotif--Plot a spectrum if tallest peak less than 200 mm"
peak:$ht
if $ht>200 then return else pl endif
```

The syntax `return(expression1,expression2,...)` allows the macro to return values to another calling macro, just as do commands. This information is captured by the calling macro using the format `:argument1,argument2,...`. Here is an example of returning a value to the calling macro:

```
"abs(input):output -- Take absolute value of input"
if $1>0 then return($1) else return(-$1) endif
```

In nested macros, `return` terminates the currently operating macro, but not the macro that called the current macro.

To terminate the action of the calling macro (and all higher levels of nesting), the `abort` command is provided. `abort` can be made to act like `return` at any particular level by using the `abortoff` command. Consider the following sequence:

```
abortoff macro1 macro2
```

If `macro1` contains an `abort` command and it is executed, `abort` terminates `macro1`; however, `macro2` still will be executed. If the macro sequence did not contain the `abortoff` statement, however, execution of an `abort` command in `macro1` would have prevented the operation of `macro2`. The `aborton` command nullifies the operation of `abortoff` and restores the normal functioning of `abort`.

Command and Macro Tracing

The commands `debug('c')` and `debug('C')` turn on and off, respectively, VNMR command and macro tracing. When tracing is on, a list of each executed command and

macro is displayed in the Terminal (in CDE) or Command Tool (in OpenWindows) window from which VNMR was started. Nesting of the calls is shown by indentation of the output. A return status of “returned” or “aborted” can help track down which macro or command failed.

If VNMR is started when the user logs in, or if it started from a drop-down menu or the CDE tool, the output goes to a Console window. If no Console window is present, the output goes into a file in the `/var/tmp` directory. This last option is not recommended.

1.3 Relevant VNMR Commands

Many VNMR commands are particularly well-suited for use with MAGICAL programming. This section lists some of those commands with their syntax (if the command uses arguments) and a short summary taken from the *VNMR Command and Parameter Reference*. Refer to that publication for more information. (Remember that string arguments must be enclosed in single quotes.)

Spectral Analysis Tools

- dres** **Measure linewidth and digital resolution**
- Syntax: `dres(<frequency<,fractional_height>>)> \`
 `:linewidth,resolution`
- Description: Analyzes line defined by current cursor position (`cr`) for linewidth and digital resolution. `frequency` overrides `cr` as the line frequency. `fractional_height` specifies the height at which linewidth is measured.
-
- dsn** **Measure signal-to-noise**
- Syntax: `dsn<(low_field,high_field)>:signal_to_noise,noise`
- Description: Measures signal-to-noise of a spectrum. Noise region can be specified by supplying `low_field` and `high_field` frequencies, in Hz.
-
- dsnmax** **Calculate maximum signal-to-noise**
- Syntax: `dsnmax<(noise_region)>`
- Description: Finds best signal-to-noise in a region. `noise_region`, in Hz, can be specified, or the cursor difference (`delta`) can be used by default.
-
- getll** **Get line frequency and intensity from line list**
- Syntax: `getll(line_number)<:height,frequency>`
- Description: Returns the height and frequency of the specified line number.
-
- getreg** **Get frequency limits of a specified region**
- Syntax: `getreg(region_number)<:minimum,maximum>`
- Description: Returns the minimum and maximum frequencies, in Hz, of the specified region number.

- integ** **Find largest integral in specified region**
 Syntax: `integ<(highfield,lowfield)><:size,value>`
 Description: Finds the largest absolute-value integral in the specified region or the total integral if no reset points are present between the specified limits. The default values for `highfield` and `lowfield` are parameters `sp` and `sp+wp`, respectively.
- mark** **Determine intensity of the spectrum at a point**
 Syntax: `mark<(f1_position)>`
`mark<(left_edge,region_width)>`
`mark<(f1_position,f2_position)>`
`mark<(f1_start,f1_end,f2_start,f2_end)>`
`mark('trace',<options>)>`
`mark('reset')`
 Description: Functions similarly to the MARK button of `ds` and `dcon1`. 1D or 2D operations can be performed in the cursor or box mode for a total of four separate functions. In the cursor mode, the intensity at a particular point is found. In the box mode, the integral over a region is calculated. For 2D operations, this is a volume integral. In addition, the `mark` command in the box mode finds the maximum intensity and the coordinate(s) of the maximum intensity.
- nll** **Find line frequencies and intensities**
 Syntax: `nll<('pos'<,noise_mult)>><:number_lines>`
 Description: Returns the number of lines using the current threshold, but does not display or print the line list.
- numreg** **Return the number of regions in a spectrum**
 Syntax: `numreg:number_regions`
 Description: Finds the number of regions in a previously divided spectrum.
- peak** **Find tallest peak in specified region**
 Syntax: `peak<(min_frequency,max_frequency)><:height,freq>`
 Description: Finds the height and frequency of the tallest peak in the selected region. `min_frequency` and `max_frequency` are the frequency limits, in Hz, of the region to be searched; default values are the parameters `sp` and `sp+wp`.
- select** **Select a spectrum or 2D plane without displaying it**
 Syntax: `select<(<'f1f3'|'f2f3'|'f1f2'><,'proj'> \`
`<'next'|'prev'|plane>)><:index>`
 Description: Sets future actions to apply to a particular spectrum in an array or to a particular 2D plane of a 3D data set. `index` is the index number of spectrum or 2D plane.

Input/Output Tools

- apa** **Plot parameters automatically**
 Description: Selects the appropriate command on different devices to plot the parameter list.
- banner** **Display message with large characters**
 Syntax: `banner(message<,color><,font>)`
 Description: Displays the text given by `message` as large-size characters on the VNMR graphics windows.
- clear** **Clear a window**
 Syntax: `clear(window_number)>`
 Description: Clears window given by `window_number` on the Sun or GraphOn terminal. With no argument, clears the text screen.
- confirm** **Confirm message using the mouse**
 Syntax: `confirm(message):$response`
 Description: Displays dialog box with `message` and two buttons: Confirm and Cancel. `response` is 1 if the user clicks the mouse on Confirm; `response` is 0 if the user clicks the mouse on Cancel.
- echo** **Display strings and parameter values in text window**
 Syntax: `echo(<'-n',>string1,string2,...)>`
 Description: Functionally similar to the UNIX `echo` command. Arguments to VNMR `echo` can be strings or parameter values, such as `pw`. The `'-n'` option suppresses advancing to the next line.
- flip** **Flip between graphics and text window**
 Syntax: `flip('<graphics'|'text' \

<','off'|'on'|'autooff'|'autoon'>)>`
 Description: Brings the graphics or text window to the top of the screen. It also controls whether parameter changes or commands that write to a window cause a window to appear.
- format** **Format a real number or convert a string for output**
 Syntax: `format(real_number,length,precision):string_var
format(string,'upper'|'lower'|'isreal'):return_var`
 Description: Using first syntax, takes a real number and formats it into a string with the given length and precision. Using second syntax, converts a string variable into a string of characters, all upper case or all lowercase, or tests the first argument to verify that it satisfies the rules for a real number (1 is returned if the first argument is a real number, otherwise a zero is returned).

- input** **Receive input from keyboard**
 Syntax: `input(<prompt><delimiter>):var1,var2,...`
 Description: Receives characters from the keyboard and stores them into one or more string variables. `prompt` is a string that is displayed on the command line. The default `delimiter` is a comma.
- lookup** **Look up and return words and lines from text file**
 Syntax: `lookup(options):return1,return2,...,number_returned`
 Description: Searches a text file for a word and returns to the user subsequent words or lines. `options` is one or more keywords ('file', 'seek', 'skip', 'read', 'readline', 'count', and 'delimiter') and other arguments.
- nrecords** **Determine number of lines in a file**
 Syntax: `nrecords(file):$number_lines`
 Description: Returns the number of “records,” or lines, in the given file.
- psgset** **Set up parameters for various pulse sequences**
 Syntax: `psgset(file,param1,param2,...,paramN)`
 Description: Sets up parameters for various pulse sequences using information in a file from the user or system `parlib`.
- vnmr_confirmer** **Display a confirmer window (UNIX)**
 Syntax: `vnmr_confirmer message <label value>...\`
 `<"-x"posx> <"-y"posy> <"-fn"name>`
 Description: Displays a confirmer window consisting of a message (a single-line multicharacter string) and one or more buttons. The default window location and font can be changed by the arguments `posx`, `posy`, and `name`. Each button has a unique label (a short string) and value (a number or string) that are set by arguments `label` and `value`. When the user clicks on one of the buttons, `vnmr_confirmer` returns a value. Because it is a UNIX command, `vnmr_confirmer` cannot be called directly from VNMR; it must be accessed using the VNMR shell command (e.g., `shell('vnmr_confirmer "This is a test" "Label 1" 1 "Label 2" 2 "Label 3" 3'):$ret` displays the message “This is a test” and makes three buttons available, returning 1, 2, or 3, respectively).
- write** **Write output to various devices**
 Syntax: `write('graphics'|'plotter'<,color|pen> \`
 `<,'reverse'>,x,y<,template>)<:height>`
 `write('alpha'|'printer'|'line3'|'error',template)`
 `write('reset'|'file',file<,template>)`
 Description: Displays strings and parameter values on various output devices.

Regression and Curve Fitting

- analyze** **Generalized curve fitting**
Syntax: (Curve fitting) `analyze('expfit', xarray<, options>)`
(Regression) `analyze('expfit', 'regression'<, options>)`
Description: Provides an interface to the UNIX curve fitting program `expfit`, supplying input data in the form of the text file `analyze.inp` in the current experiment.
- autoscale** **Resume autoscaling after limits set by scalelimits**
Description: Returns to autoscaling in which the scale limits are determined by the `expl` command such that all the data in the `expl` input file is displayed.
- expfit** **Least-squares fit to exponential or polynomial curve (UNIX)**
Syntax: `expfit options <analyze.inp >analyze.list`
Description: A UNIX command that takes a least-squares curve fitting to the data supplied in the file `analyze.inp`.
- expl** **Display exponential or polynomial curves**
Syntax: `expl(<options>, >line1, line2, ...)>`
Description: Displays exponential curves resulting from T_1 , T_2 , or kinetic analyses. Also displays polynomial curves from diffusion or other types of analysis.
- pexpl** **Plot exponential or polynomial curves**
Syntax: `pexpl(<options><, line1, line2, ...)>`
Description: Plots exponential curves from T_1 , T_2 , or kinetics analysis. Also plots polynomial curves from diffusion or other types of analysis.
- poly0** **Display mean of the data in the file regression.inp**
Description: Calculates and displays the mean of data in the file `regression.inp`.
- rinput** **Input data for a regression analysis**
Description: Formats data for regression analysis and places it into the file `regression.inp`.
- scalelimits** **Set limits for scales in regression**
Syntax: `scalelimits(x_start, x_end, y_start, y_end)`
Description: Causes the command `expl` to use typed-in scale limits.

Mathematical Functions

- abs** **Find absolute value of a number**
 Syntax: `abs(number) <:value>`
 Description: Finds absolute value of a number.
- acos** **Find arc cosine of a number**
 Syntax: `acos(number) <:value>`
 Description: Finds arc cosine of a number. The optional return value is in radians.
- asin** **Find arc sine of a number**
 Syntax: `asin(number) <:value>`
 Description: Finds arc sine of a number. The optional return value is in radians.
- atan** **Find arc tangent of a number**
 Syntax: `atan(number) <:value>`
 Description: Finds arc tangent of a number. The optional return value is in radians.
- atan2** **Find arc tangent of two numbers**
 Syntax: `atan2(y,x) <:value>`
 Description: Finds arc tangent of y/x . The optional return argument value is in radians.
- averag** **Calculate average and standard deviation of input**
 Syntax: `averag(num1,num2,...) \`
 `:average,sd,arguments,sum,sum_squares`
 Description: Finds average, standard deviation, and other characteristics of a series of numbers.
- cos** **Find cosine value of an angle**
 Syntax: `cos(angle) <:value>`
 Description: Finds cosine of an angle given in radians.
- exp** **Find exponential value of a number**
 Syntax: `exp(number) <:value>`
 Description: Finds exponential value (base e) of a number.
- ln** **Find natural logarithm of a number**
 Syntax: `ln(number) <:value>`
 Description: Finds natural logarithm of a number. To convert to base 10, use $\log_{10}x = 0.43429 * \ln(x)$.

sin **Find sine value of an angle**
Syntax: `sin(angle)<:value>`
Description: Finds sine an angle given in radians.

tan **Find tangent value of an angle**
Syntax: `tan(angle)<:value>`
Description: Finds tangent of an angle given in radians.

Creating, Modifying, and Displaying Macros

crcom **Create a user macro without using a text editor**
Syntax: `crcom(file,actions)`
Description: Creates a user macro file in the user's macro directory. The `actions` string is the contents of the new macro.

delcom **Delete a user macro**
Syntax: `delcom(file)`
Description: Deletes a user macro file in the user's macro directory. The `actions` string is the contents of the new macro.

hidecommand **Execute macro instead of command with same name**
Syntax: `hidecommand(command_name)<:$new_name>`
`hidecommand(' ? ')`
Description: Renames a built-in VNMR command so that a macro with the same name as the built-in command is executed instead of the built-in command. `command_name` is the name of the command to be renamed. `' ? '` displays a list of renamed built-in commands.

macrocat **Display a user macro on the text window**
Syntax: `macrocat(file1<,file2><,...>)`
Description: Displays one or more user macro files, where `file1`, `file2`,... are names of macros in the user macro directory.

macrocp **Copy a user macro file**
Syntax: `macrocp(from_file,to_file)`
Description: Makes a copy of an existing user macro.

macrodir **List user macros**
Description: Lists names of user macros.

macroedit **Edit a user macro with user-selectable editor**
Syntax: `macroedit(file)`

Description: Modifies an existing user macro or creates a new macro. To edit a system macro, copy it to a personal macro directory first.

macrold Load a macro into memory

Syntax: `macrold(file)<:dummy>`

Description: Loads a macro, user or system, into memory. If macro already exists in memory, it is overwritten by the new macro. Including a return value suppresses the message on line 3 that the macro is loaded.

macrorm Remove a user macro

Syntax: `macrorm(file)`

Description: Removes a user macro from the user macro directory.

macrosyscat Display a system macro on the text window

Syntax: `macrosyscat(file1<,file2><,<...>)`

Description: Displays one or more system macro files, where `file1`, `file2`,... are names of macros in the system macro directory.

macrosyscp Copy a system macro to become a user macro

Syntax: `macrosyscp(from_file,to_file)`

Description: Makes a copy of an existing system macro.

macrosysdir List system macros

Description: Lists names of system macros.

macrosysrm Remove a system macro

Syntax: `macrosysrm(file)`

Description: Removes a system macro from the macro directory.

macrovi Edit a user macro with vi text editor

Syntax: `macrovi(file)`

Description: Modifies an existing user macro or creates a new macro using the `vi` text editor. To edit a system macro, copy it to a personal macro directory first.

mstat Display memory usage statistics

Syntax: `mstat<(program_id)>`

Description: Displays memory usage statistics on macros loaded into memory.

purge Remove a macro from memory

Syntax: `purge<(file)>`

Description: Removes a macro from memory, freeing extra memory space. With no argument, removes all macros loaded into memory by `macrold`.

record **Record keyboard entries as a macro**

Syntax: `record<(file|'off')>`

Description: Records keyboard entries and stores the entries as a macro file in the user's `maclib` directory.

Miscellaneous Tools

axis **Provide axis labels and scaling factors**

Syntax: `axis('fn'|'fn1'|'fn2')<:$axis_label, \ $frequency_scaling,$factor>`

Description: Returns axis labels, the divisor to convert from Hz to units defined by the axis parameter with any scaling, and a second scaling factor determined by any `scalesw` type of parameter. The parameter `'fn'|'fn1'|'fn2'` describes the Fourier number for the axis.

beepoff **Turn beeper off**

Description: Turns beeper sound off. The default is beeper sound on.

beepon **Turn beeper on**

Description: Turns beeper sound on. The default is beeper sound on.

bootup **Macro executed automatically when VNMR is started**

Syntax: `bootup<(foreground)>`

Description: Displays a message, runs a user `login` macro (if it exists), starts `Acqstat` and `acqi` (spectrometer only), and displays the menu system. `bootup` and `login` can be customized for each user (`login` is preferred because `bootup` is overridden when a new VNMR release is installed). `foreground` is 0 if VNMR is being run in foreground; non-zero otherwise.

exec **Execute a VNMR command**

Syntax: `exec(command_string)`

Description: Takes as an argument a character string constructed from a macro and executes the VNMR command given by `command_string`.

exists **Determine if a parameter, file, or macro exists**

Syntax: `exists(name,type):$exists`

Description: Checks for the existence of a parameter, file, or macro with the given name. `type` is `'parameter'`, `'file'`, `'maclib'`, `'ascii'`, or `'directory'`.

- focus** **Send keyboard focus to VNMR input window**
 Description: Sends keyboard focus to the VNMR input window.
- gap** **Find gap in the current spectrum**
 Syntax: `gap(gap,height):found,powition,width`
 Description: Looks for a gap between lines of the currently displayed spectrum, where `gap` is the width of the desired gap and `height` is the starting height. `found` is 1 if search is successful, or 0 if unsuccessful.
- getfile** **Get information about directories and files**
 Syntax: `getfile(directory,file_index):$file,$file_extension`
 `getfile(directory):$number_files`
 Description: If `file_index` is specified, the first return argument is the name of the file in the directory with the index `file_index`, excluding any extension, and the second return argument is the extension. If `file_index` is not specified, the return argument contains the number of files in the directory (dot files are not included in the count).
- graphis** **Return the current graphics display status**
 Syntax: `graphis(command):$yes_no`
 `graphis:$display_command`
 Description: Determines what command currently controls the graphics window. If no argument is supplied, the name of the currently controlling command is returned.
- length** **Determine length of a string**
 Syntax: `length(string):$string_length`
 Description: Determines the length in characters of the given string.
- listenoff** **Disable receipt of messages from send2Vnmr**
 Description: Deletes file `$vnmruser/.talk`, disallowing UNIX command `send2Vnmr` to send commands to VNMR.
- listenon** **Enable receipt of messages from send2Vnmr**
 Description: Writes files with VNMR port number that UNIX command `send2Vnmr` needs to talk to VNMR. The command then to send commands to VNMR is `/vnmr/bin/send2Vnmr $vnmruser/.talk command` where `command` is any character string (commands, macros, or if statements) normally typed into the VNMR input window.
- login** **User macro executed automatically when VNMR activated**
 Description: When VNMR starts, the `bootup` macro executes, and then, if the `login` macro exists, `bootup` executes the `login` macro. By creating and

customizing the `login` macro, a VNMR session can be tailored for an individual user. The `login` macro does not exist by default.

off **Make a parameter inactive**

Syntax: `off(parameter | 'n' <, tree >)`

Description: Makes a parameter inactive. `tree` is 'current', 'global', 'processed', or 'systemglobal'.

on **Make a parameter active or test its state**

Syntax: `on(parameter | 'y' <, tree >) <: $active >`

Description: Makes a parameter active or tests the active flag of a parameter. `tree` is 'current', 'global', 'processed', or 'systemglobal'.

readlk **Read current lock level**

Syntax: `readlk <: lock_level >`

Description: Returns the same information as would be displayed on the digital lock display using the manual shimming window. It cannot be used during acquisition or manual shimming, but can be used to develop automatic shimming methods such as shimming via grid searching.

rtv **Retrieve individual parameters**

Syntax: `rtv <(file, par1 <, index1 <, par2, index2... >> > <: val >`

Description: Retrieves one or more parameters from a parameter file to the experiment's current tree. If a return argument is added, `rtv` instead returns values to macro variables, which avoids creating additional parameters in the current tree. For arrayed parameters, array index arguments can specify which elements to return to the macro. The default is the first element.

shell **Start a UNIX shell**

Syntax: `shell <(command > <: $file1, $file2, ...`

Description: If no argument is given, brings up a normal UNIX shell. If a UNIX command entered as an argument, `shell` executes the command. The text lines usually displayed as a result of the UNIX command given in the argument can be returned to `$file1`, `$file2`, etc.

solppm **Return ppm and peak width of solvent resonances**

Syntax: `solppm: chemical_shift, peak_width`

Description: Returns information about the chemical shift in ppm and peak spread of solvent resonances in various solvents for either ^1H or ^{13}C , depending on the observe nucleus `tn` and the solvent parameter `solvent`. This macro is used "internally" by other macros only.

- substr** **Select a substring from a string**
- Syntax: `substr(string,word_number):substring`
`substr(string,index,length):substring`
- Description: Picks a substring out of a string. If two arguments are given, `substring` returns the `word_number` word in `string`. If three arguments, it returns a substring from `string` where `index` is the number of the character at which to begin and `length` is the length of the substring.
- textis** **Return the current text display status**
- Syntax: `textis(command):$yes_no`
`textis:$display_command`
- Description: Determines what command currently controls the text window. If no argument is supplied, the name of the currently controlling command is returned.
- unit** **Define conversion units**
- Syntax: `unit(<suffix,label,m<,tree><,'mult'|'div'>,\ \`
`b<,tree><,'add'|'sub'>>`
- Description: Defines a linear relationship that can be used to enter parameters with units. The unit is applied as a suffix to the numerical value (e.g., 10k, 100p). `suffix` identifies the name for the unit (e.g., 'k'). `label` is the name to be displayed when the `axis` parameter is set to the value of the suffix (e.g., 'kHz'). `m` and `b` are the slope and intercept, respectively, of the linear relationship. A convenient place to put `unit` commands for all users is in the `bootup` macro. Put private `unit` commands in a user's `login` macro.

1.4 Using Dialog Boxes from a Macro

A macro can pop up a dialog box for obtaining user input through the `dialog` command. This command has the following syntax:

```
dialog(definition_file,output_file<,'nowait'>)
```

The `definition_file` argument is the name of the definition file (specified as an absolute path) that specifies the layout of the dialog box. The syntax of this file is the same as the `.def` files for *GLIDE* discussed in the manual *Walkup NMR Using GLIDE*. Normally this file is stored in `$vnmruser/dialoglib` or `$vnmrsystem/dialoglib`. Note, however, that `dialog` does not follow the VNMR standard of first looking for a file in `$vnmruser` and then in `$vnmrsystem`.

The `output_file` argument is a text output file as specified in the definition file. A good place for the output file is in `/tmp`. After the user answers the prompts and clicks the OK button, the answers are written to this output file. The macro can then use the command `lookup` to read the results.

Existing macros can be written to take advantage of the pop up dialog box. [Listing 1](#) is the `array` macro, rewritten using `dialog`. Note the following in this macro:

- Lines 1–7 are comments explaining what the macro does.
- Line 8 checks if none (interactive) or all arguments are supplied (non-interactive). If only part of the arguments are supplied, an error message (Lines 9–11) is displayed.
- Line 12 forces `$par` to a string type.

Listing 1. The array Macro, Rewritten Using the dialog Command

```

1: "*****"
2: " array - macro for easy setup of arrays  "
3: "*****"
4: " usage:  array          interactive mode  "
5: "array(parameter_name,steps,start,ssize)  "
6: "          optional fifth argument avoids da "
7:
8: if ($# > 1) and ($# < 4) then
9:   write('error','usage: array<(parameter_name<,steps, \
          start,ssize)>>')
10:  return(1)
11: endif
12: $par = ``
13: exists('/tmp/array','file'):$e
14: if ($e > 0) then
15:   shell('rm /tmp/array')
16: endif
17: dialog(userdir+'/dialoglib/array','/tmp/array')
18: exists('/tmp/array','file'):$e
19: if ($e = 0) then
20:   return
21: endif
22: lookup('file','/tmp/array')
23: lookup('readline'):$par
24: lookup('readline'):$steps
25: lookup('readline'):$start
26: lookup('readline'):$delta
27:
28:
29: gain='y'
30: $count=0
31: repeat
32:   {$par}[$count+1] = $start + $count*$delta
33:   $count = $count+1
34: until $count>=$steps
35: if ($# <> 5) then
36:   da
37: endif


```

- Lines 13–16 checks if the output file /tmp/array exists, and if so, deletes it. Next, the dialog command is called (Line 17), which pops up the dialog box, as shown in **Figure 1**.

The dialog command waits for the user to click the OK or Cancel button.

OK executes the SAVE

command; that is, dialog saves the output to the output file, and then CLOSE closes the dialog box.

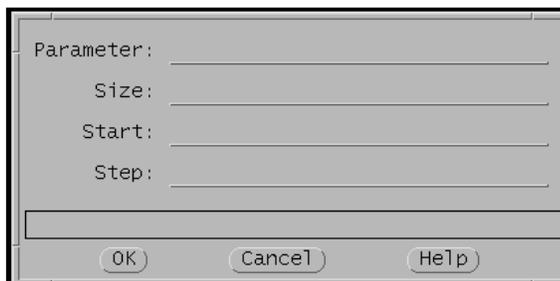**Figure 1.** Dialog Box for array Macro

Cancel closes the dialog box without creating the output file.

- Lines 18–21 check if the output file exists.

If Cancel was clicked, the output file does not exist and return is executed (this is why it was deleted in lines 12–16).

If OK was clicked, the output file can be read by the lookup macro, as is done in lines 22–26.

- The remainder of the macro stores the values into the array.

Listing 2 is the definition file, in this case `$vnmruser/dialoglib/array`.

Listing 2. Definition File for dialog Version of array Macro

```
{
  label: Parameter:
  input:
  output:      $input
  cols:      30
  remark:   Enter the name of the parameter
}

{
  label: Size:
  input:
  output: $input
  cols:   30
  remark: Enter the number of steps in the array
}

{
  label: Start:
  input:
  output: $input
  cols:   30
  remark: Enter the first value in the array
}

{
  label: Step:
  input:
  cols:   30
  output: $input
  remark: Enter the increment for the array
}

{
  button(1): OK
  exec(1):   SAVE CLOSE
  remark(1): Done with this window

  button(2): Cancel
  exec(2):   CLOSE
  remark(2): Cancel this command

  button(3): Help
  rtoutput(3): man(`array`)
  remark: Show help for array
}
```

Note that the `dialog` command runs until the OK button or Cancel button is clicked. VNMR is therefore busy, because the macro still executes. However, the `man` command, used with the `rtoutput(3)` on `button(3)` is executed before `dialog` returns. `rtoutput` provides a back door into VNMR.

1.5 Customizing the Menu System

Fully integrated into the VNMR software package are a series of user-programmable, menus. Accessible to the user at all times are two rows of menu buttons, selected by clicking the left mouse button on the relevant choice or by pressing the corresponding function key on the keyboard. The upper row of buttons, called the Permanent menu, contains functions that must be accessible to the user at all time. The next section describes how to customize the Permanent menu.

The lower row of buttons contains choices for a large number of different menus. These menus can make many operations easier and faster than using the command line. All menu buttons are user-programmable through menu files, which is covered below.

Table 3 lists the commands and parameters connected with programming menus. The manual *Getting Started* covers menus from the user viewpoint.

Table 3. Menu-Related Commands and Parameters

Commands	
<code>clear<(window_number)></code>	Clear a window
<code>glide</code>	Toggle on and off the <i>GLIDE</i> interface
<code>help</code>	Display the current help file
<code>menu<(menu_name 'off')></code>	Change status of menu system
<code>menuvi(menu_name)</code>	Edit a menu with <code>vi</code> text editor
<code>newmenu(menu) <\$current_menu></code>	Select menu without activation
Parameters	
<code>helppath {absolute path}</code>	Path to user's help directory
<code>lastmenu {menu name}</code>	Menu to display if Return clicked
<code>menulibpath {absolute path}</code>	Path to user's menu directory
<code>mlabel {string}</code>	Menu label
<code>mstring {command string}</code>	Menu string

Customizing the Permanent Menu

The Permanent menu is the upper fixed row of buttons. This menu provides easy user access to the most important functions of the system:



The Permanent menu is fixed in the sense that the labels must be defined when VNMR starts; however, you can customize the labels and functions of the buttons by editing a text file. When VNMR is started, if the variable `vnmrmenu` is present in the UNIX environment, it is used as the path to the text file defining the menu buttons (you can display this environment by entering the command `env` from UNIX). For example, if the *GLIDE* option is installed, the `vnmrmenu` variable displayed by `env` is set to a file named `vnmrmenu` in the `glide` subdirectory.

If the `vnmrmenu` variable does not exist, the default text file defining the menu is still named `vnmrmenu` but is instead located in the VNMR system directory.

The definition text file is a list of up to eight button descriptions. Each menu button is defined with three fields:

- The first field is the word `Function`.
- The second is the action to be performed when that button is pressed. The available actions are the following:

<code>abort</code>	Abort acquisition
<code>cancel</code>	Cancel the current VNMR command
<code>glide</code>	Toggle the <i>GLIDE</i> interface
<code>menu</code>	Select the current menu
<code>mainmenu</code>	Select the main menu
<code>flip</code>	Hide and show the text window
<code>resize</code>	Toggle the graphics window between large and small size
<code>help</code>	Display help file for the current menu
<code>exit</code>	Exit from VNMR
<code>usermacro1 to usermacro8</code>	Call user-defined macros <code>usermacro1</code> , <code>usermacro2</code> ..., <code>usermacro8</code>

- The third field, which starts one character after the second field and extends to the end of the line, is the label displayed for the button.

The default Permanent menu definition, found in the `vnmrmenu` file, includes the following definitions:

```
Function abort Abort Acq
Function cancel Cancel Cmd
Function menu Menu On
Function mainmenu Main Menu
Function help Help
Function flip Flip
Function resize Resize
```

Using one of the actions `usermacro1` to `usermacro8` sets the name to the macro called. That macro then determines the action of the button. For example, to label the first button as `Send Plot` and make it the same as calling the `page` command, use the following definition in the `vnmrmenu` file:

```
Function usermacro1 Send Plot
```

Then edit the macro `usermacro1` to contain the `page` command.

Customizing Menu Files and Help Files

The standard system menu files are stored in the directory `/vnmr/menulib`. For example, the file `/vnmr/menulib/display_1D` contains main choices for the 1D Data Display Menu. Most often a menu is activated by selecting a button on a menu that involves switching to another menu. Alternately, a menu can be activated by pressing on a function key associated with menu-switching button or by entering the menu command with the name of the menu as an argument. An example of using the menu command, would be entering `menu('display_1D')` to open the 1D Data Display Menu.

Every menu has associated with it a help file, stored in the `/vnmr/help` system directory with the same name as the menu itself. The help file for the current menu is displayed when the Help button in the upper menu is selected or the `help` command is entered. For

example, the file `/vnmr/menulib/display_1D` contains the main choices for the 1D Data Display Menu; the corresponding help file is found in `/vnmr/help/display_1D`.

Menu Files

Menu files are simple text files that can be examined or modified as desired (assuming appropriate permission). The `menuvi` command is available for editing a menu file using the UNIX `vi` editor. For example, entering `menuvi('display_1D')` opens for editing the text file for the 1D data display menu.

After editing, menu files can reside in several places. When the user selects a button that opens another menu (or if the menu command is entered with the name of a menu as an argument), VNMR looks for the menu file name in the following order:

1. In the user's `menulib` directory.
2. In the directory pointed to by the `menulibpath` parameter (if the `menulibpath` parameter is defined in the user's global parameter file). This parameter must contain an absolute path, not a relative path.
3. In the system `menulib` directory. If the file name is not found, the command interpreter displays an error message.

This order of search means that each user can have their own private menu directory `menulib` in their `vnmrsys` directory. User menus take precedence over the system menus if a menu of the same name exists in both directories. This allows users to modify each menu to their own needs without affecting the operation of other users. The system menu directory `/vnmr/menulib` can be changed by the system administrator only; however, changes to it are available to all users.

Menus are themselves a special form of macros. Specifically, menus are macros containing other macros. Invoking a menu macro sets up the menu bar in which each button is itself a macro. This combination of macros allows the entire system to be run using menus without limiting operation to just a "simplified" mode.

Help Files

Custom help files can be created to go with custom menus. The help file for a particular menu has the same name as the menu file. When a user clicks on the Help button or enters the `help` command, VNMR looks for the help file in the following order:

1. In the user's `help` directory. This directory is a subdirectory of the user's VNMR directory. A typical path is `/home/vnmr1/vnmrsys/help`.
2. In the directory pointed to by the `helppath` parameter (if the parameter `helppath` is defined in the user's global parameter file). This parameter must contain an absolute path, not a relative path.
3. In the system `help` directory. This directory is a subdirectory of the system VNMR directory. A typical path might be `/vnmr/help`.

The same as with menu files, each user can have their own private help files. A file in the user's `help` directory takes precedence over the system `help` directory. The system help directory can only be changed by the system administrator; however, changes to the help directory are available to all users.

Manual Files

A VNMR manual directory contains text files with information about VNMR commands, macros, and parameters. When a user enters the `man` command to look at a manual file (e.g., `man('go')`), VNMR looks for the manual directory in the following order:

1. In the user's manual directory. This directory is a subdirectory of the user's VNMR directory. A typical path is `/home/vnmr1/vnmrsys/manual`.
2. In the directory pointed to by the `manualpath` parameter (if the parameter is defined in the user's global parameter file). `manualpath` contains the absolute path to a user's directory of VNMR manual entries. This parameter must contain an absolute path, not a relative path.

To create `manualpath`, enter the following command:

```
create( 'manualpath', 'string', 'global' )
```

3. In the system manual directory. This directory is a subdirectory of the system VNMR directory. A typical path is `/vnmr/manual`.

Each user can have private manual files. A file in the user's manual directory takes precedence over the system manual directory. The system manual directory can only be changed by the system administrator; however, changes to the manual directory are available to all users.

Controlling Menus

To turn on the menu system and display the current menu, enter the `menu` command with no arguments. `menu('off')` turns off the menu system. `menu(menu_name)` turns on the menu system and displays the menu `menu_name` (e.g., `menu('workspace')`).

To select a menu without immediate activation, enter `newmenu(menu_name)`. This is most useful when selecting which menu will be active when an interactive command exits. For example, entering `newmenu('manipulate_1D') ds` causes the menu "manipulate_1D" to be displayed when the Return button in the `ds` menu is selected. The command `newmenu: $current_menu` returns the name of the currently active menu to the string parameter `current_menu`.

The `lastmenu` parameter contains the name of the menu that displays when the Return button is selected

Programming Menus

An active menu consists of two arrayed string parameters, `mlabel` and `mstring`:

- `mlabel[i]` contains the label that is displayed on the `i`th button. The total length of all the displayed labels cannot exceed the width of the screen (80 characters).
- `mstring[i]` contains the text string that is executed when the `i`th button is selected.

The `mstring` text string is essentially identical to a macro, with three exceptions:

- No new lines (that is, carriage returns) should appear in the text string.
- As with all strings, single quotes in the text string must be replaced by reverse single quotes (`...`) or by the escape sequence backslash with single quote (`\'`).
- The length for the text string is subject to a maximum. Of course, a menu string can simply contain the name of a macro, which is not subject to any limitation.

Listing 3 shows what a typical menu looks like (this menu is somewhat simplified from the actual system menu). In this menu, the first three lines is a comment with the name of the menu. Like regular macros, comments are indicated by double quotation marks ("...").

Listing 3. Typical Menu

```
mlabel=' '
mstring=' '
mlabel[1]='Plot'
  mstring[1]='pl'
mlabel[2]='Scale'
  mstring[2]='pscale'
if (plotter='HP7550A')or(plotter='HP7570A')
  or(plotter='HP7570A_C')or(plotter='HP7570A_D')
  or(plotter='HP7475A') then
mlabel[3]='HP Params'
  mstring[3]='hpa'
else
  mlabel[3]=' 'mstring[3]=' '
endif
mlabel[4]='Params'
  mstring[4]='ppa'
mlabel[5]='All Params'
  mstring[5]='pap'
mlabel[6]='Peaks'
  mstring[6]='ppf'
mlabel[7]='Page'
  mstring[7]='page menu(`display_1D`)'
mlabel[8]='Return'
  mstring[8]='menu(`display_1D`)'
```

In the first active line of the menu, `mlabel` and `mstring` are set to a null string. This removes any trace of the previously active menu. After that, a series of assignments are made for each of up to eight values of `mlabel[i]` and `mstring[i]`.

The labels are just that, button labels, and hence can contain anything appropriate. The strings, on the other hand, are themselves macros to be executed later, and hence they must contain valid commands, parameters, macros, and other MAGICAL language statements. In **Listing 3**, strings 1 through 6 contain a single command. If one of these buttons is selected, the command is executed, and the same menu is reactivated. String 7, however, issues a `page` command and then a second command that changes to the “display_1D” menu. The assumption here is that several of the choices 1 through 6 may be made on a single plot, but that once choice 7 is made, the user is finished with this menu and wants to revert back to the “parent” menu.

Note the reverse quotation marks (``...``) in strings 7 and 8, which are converted to regular quotation marks when the string is executed.

The sample menu in **Listing 4** illustrates additional features of menus.

Notice the new features in this menu:

- The `clear` command appears near the start of the file. Executing `clear(2)` clears the graphics window. Because this command is in the menu itself and not in any particular string, it is executed each time the menu is activated.
- A number of comments are included in addition to the title—these are perfectly permissible and are encouraged to make the statement action clearer.

Listing 4. Typical Menu with Additional Features

```

mlabel=' '
mstring=' '
clear(2) "clear any spectrum from screen"
mlabel[1]='No WT'
  mstring[1]='sb=`n` sbs=`n` lb=`n` gf=`n` gfs=`n` awc=`n`'
mlabel[2]='Resolve'
  mstring[2]='resolv(0.1,0.3,`noft`)'
mlabel[3]='Broaden'
  mstring[3]='lb=sw/(fn/2) "set to digital resolution"'
if (dmg='ph') then
  mlabel[4]='->AV' mstring[4]='av'
else
  mlabel[4]='->PH' mstring[4]='ph'
endif
mlabel[5]='FN: Small'
  mstring[5]='fn=np/4'
mlabel[6]='Normal'
  mstring[6]='fn=`n`'
mlabel[7]='Large'
  mstring[7]='fn=2*np'
mlabel[8]='Return'
  mstring[8]='menu(`process_1D`)'

```

- The label and action of button 4 depend on the value of a particular parameter, `dmg`. If the spectrum is in the phase-sensitive mode, button 4 displays the label `->AV`; clicking on the button switches the spectrum to the absolute-value mode. If the spectrum is in the absolute-value mode, button 4 displays `->PH`; clicking on it switches the spectrum to the phase-sensitive mode.

Menus are redisplayed after any choice is made from the menu, and also after any other action, such as entering a parameter. For this reason, menus can respond dynamically to changed conditions by displaying different choices or taking different actions in response to different situations.

Consider the menu in [Listing 5](#) that allows the user to display the experiment library, join different experiments, and create and delete experiments.

Of course, we only want to allow experiments that exist to be joined. It is meaningless to join the current experiment. The macro that sets up the menu evaluates the current situation and prepares the menu accordingly. Note that if you select this menu (by selecting `Workspace` in the Main menu) and then create an experiment (with the `Create New` button), the menu changes immediately. Note also in this menu, the creation of menu strings is not by simple assignments but with string concatenation operations. Those interested in exploring the limits of creating complex macros should find this menu an interesting model.

User-Programmable Menus in Interactive Programs

Many of the various interactive programs that are part of VNMR, such as `dcon1` and `df`, have user-programmable menus. Entering a command to start one of these programs displays a menu from the `menulib` directory: For example,

- `dcon1` automatically brings up the menu `dcon1` when started.
- `df` (or `dfid`) automatically brings up the menu `dfid` when started.

Listing 5. Typical Menu with Dynamic Changes

```

mlabel=' '
mstring=' '
mlabel[1]='Library'
mstring[1]='explib'
$x=' ' $y=' '
jexp:$x
$i=2 $e=1 $firstfree='10'
repeat
  format($e,1,0):$y
  exists(userdir+'/exp'+$y,'file'):$expexists
  if NOT($expexists) and ($firstfree='10')
    then $firstfree=$y endif
  if $expexists AND ($y<>$x) then
    mlabel[$i]='Exp '+$y
    mstring[$i]='jexp'+$y+' menu(`main`)'
    $i=$i+1
  endif
  $e=$e+1
until ($i>7) or ($e>9)
if ($firstfree<>'10') AND ($i<8) then
  mlabel[$i]='Create New'
  mstring[$i]='cexp('+$firstfree+')'
  $i=$i+1
endif
mlabel[$i]='Delete'
mstring[$i]='input(`Enter # of Experiment to Delete: `):$exp
delexp($exp)'

```

- `ds` automatically brings up the menu `ds_1` when started.
- `inset` automatically brings up the menu `inset` when started.

A user or system administrator wishing to change the opening menu displayed when one of these commands is executed must edit the `menulib` file listed above for the command. Similarly, all the menus available for each program can be modified. For further information, see [“Programming Menus,” page 55](#).

In order not to redraw the display after every menu selection, these menus generally involve special calls to the program in question. For example, entering `ds('thresh')` activates the display of a horizontal threshold on the `ds` display. For 1D displays (`df`, `ds`), any change in a display parameter (e.g., `vs`) causes the display to be updated, whereas for 2D displays (`dconi`) the display must be deliberately reactivated, either by `dconi('restart')`, which reactivates the display without redrawing it, or by `dconi('again')`, which redraws the display with any parameter changes in effect.

1.6 Customizing the Files Menus

The Files program in VNMR provides an interface with the UNIX file system. You can use the menus in the program to create, delete, copy, and rename files, or to select a data set or parameter set to load into your experiment. Because the Files program relies on the standard menu and help file mechanism, the special-purpose menus and help files reside in the same libraries as other menus and help files. The manual *Getting Started* covers the

standard Files program menus as seen by the user. In this section, we look at programming these menus.

Starting the Program

To start the Files program, take one of the following actions:

- Enter the `files` command in the VNMR input window.
- Click on the File button in the Main Menu.

By default, either action selects the menu `files_main` (also called the Files Main Menu) or the last active files menu. You can also call up a particular menu by entering the command `files(file)`, where `file` is the file name of the menu. For example, entering `files('files_main')` calls up the Files Main Menu.

Selecting and Accessing Files

At startup, the program reads the entries in the current directory and displays them on the screen. To select a file, click on each entry you want with the mouse. Each name is highlighted in reverse video to show it has been selected. You then click on the button with the desired function in the menu. To deselect a file name, click on the entry again.

Use the `filesinfo` command to access the list of selected files. This command expects at least one of the following input arguments:

- `filesinfo('number')` returns the number of selected files. If no files have been selected, it returns a value of 0.
- `filesinfo('name' <, num >)` returns the names of the selected files. If you have selected more than one file, all their names are returned, each separated with a space from its neighboring names in the list. An optional second argument lets you return an individual file name. This argument is a number giving the position in the list of the file names to return.
- `filesinfo('redisplay')` displays again the files in the current directory. Use the `filesinfo` command with this argument whenever a change occurs in the file system, for example, a file is deleted or created.

Using the Files Program with the Menu System

To better understand how the `filesinfo` command interacts with MAGICAL programming, consider how the Display button might work. We will use the `cat` command to display the file.

The first requirement is to limit the number of selected files to 1, because additional steps would be necessary to distinguish between the different files if more than one file is selected (later we will show how to work with more than one file). A first attempt might be as follows:

```
filesinfo('number'):$f
$n=' '
if ($f = 1) then
    filesinfo('name'):$n
    cat($n)
else
    write('error','You must select one element')
    abort
endif
```

This becomes the text of a macro that the menu arranges to have executed when the Display button is pressed. But suppose the user selected a directory or a compiled binary program file. Neither is really suitable for display. Fortunately the `exists` command has options to determine if a file is a directory or a text file.

The test for a directory is to include the statement `exists($n, 'directory'):$e` and display an error message if the return argument `$e` is nonzero. To test for an ASCII file, include `exists($n, 'ascii'):$e` and display an error message if `$e` is zero. Files that make it through the macro without an error message can be considered suitable for display. So our second version might be the following:

```
filesinfo('number'):$f
$n=' '
if ($f = 1) then
  filesinfo('name'):$n
  exists($n, 'directory'):$e
  if ($e <> 0) then
    write('error', ' \
      %s is a directory and cannot be displayed', $n)
    abort
  endif
  exists($n, 'ascii'):$e
  if ($e = 0) then
    write('error', '%s is not an ASCII file', $n)
    abort
  endif
  cat($n)
else
  write('error', 'You must select one element')
  abort
endif
```

Now we would like to display the text file in that directory if it turns out that if the user selected a FID or an experiment directory. Programming this extra capability is simple:

```
filesinfo('number'):$f
$n=' '
if ($f = 1) then
  filesinfo('name'):$n
  exists($n, 'directory'):$e
  if ($e <> 0) then
    exists($n+'/text', 'file'):$e
    if ($e <> 0) then
      cat($n+'/text')
    else
      write('error', ' \
        %s is a directory and cannot be displayed', $n)
      abort
    endif
  endif
  exists($n, 'ascii'):$e
  if ($e = 0) then
    write('error', '%s is not an ASCII file', $n)
    abort
  endif
  cat($n)
else
  write('error', 'You must select one element')
  abort
endif
```

Notice in each case the macro first establishes that the user selected exactly one file and then obtains that file name. Each successive example shows how one can program more operations using the file name.

Several files can be displayed by selecting individual file names with `filesinfo`. To avoid obscuring the macro's structure, we shall return to the original function of just displaying the selected files, not checking for directories or non-ASCII files:

```
filesinfo('number'):$f
if ($f < 1) then
    write('error','You must select one element')
    abort
endif
$i=1
repeat
    filesinfo('name',$i):$n
    write('alpha','Contents of %s:',$n)
    cat($n)
    write('alpha','')
    $i=$i+1
until ($i >= $f)
```

To illustrate using the `'redisplay'` keyword argument, we show how one might program a Delete button. Again we limit the user to deleting one file at a time.

```
filesinfo('number'):$f
$n=' '
if ($f = 1) then
    filesinfo('name'):$n
    delete($n)
    filesinfo('redisplay')
else
    write('error','You must select one element')
    abort
endif
```

Once the macro deletes the selected file, it displays again the files in the current directory using `filesinfo('redisplay')`.

Chapter 2. Pulse Sequence Programming

Sections in this chapter:

- 2.1 “Programming Pulse Sequences from Menus,” this page
- 2.2 “Overview of Pulse Sequence Programming,” page 69
- 2.3 “Spectrometer Control,” page 79
- 2.4 “Pulse Sequence Statements: Phase and Sequence Control,” page 98
- 2.5 “Real-Time AP Tables,” page 104
- 2.6 “Accessing Parameters,” page 110
- 2.7 “Using Interactive Parameter Adjustment,” page 120
- 2.8 “Hardware Looping and Explicit Acquisition,” page 125
- 2.9 “Pulse Sequence Synchronization,” page 131
- 2.10 “Pulse Shaping,” page 131
- 2.11 “Shaped Pulses Using Attenuators,” page 138
- 2.12 “Internal Hardware Delays,” page 142
- 2.13 “Indirect Detection on Fixed-Frequency Channel,” page 146
- 2.14 “Multidimensional NMR,” page 148
- 2.15 “Gradient Control for PFG and Imaging,” page 150
- 2.16 “Programming the Performa XYZ PFG Module,” page 153
- 2.17 “Imaging-Related Statements,” page 155
- 2.18 “User-Customized Pulse Sequence Generation,” page 157

Programming pulse sequences on VNMR-based spectrometer systems is a process called pulse sequence generation (PSG). To simplify this process, the software includes a menu-driven mode for writing new pulse sequences. This mode allows generation of the most common pulse sequences and presents a useful starting point, even for those users who wish to make use of pulse sequence features not accessible from the menus. The chapter starts, therefore, by describing this simplified mode of pulse sequence programming.

2.1 Programming Pulse Sequences from Menus

One way to begin is by making a diagram of the pulse sequence you want to program, then adding to the diagram the names of the parameters that describe the pulses and delays shown. Also, write down the phase cycling to be used. Finally, decide the points in the pulse sequence at which the status needs to change (see the manual *Getting Started* for a discussion of the status concept). With this information, you can quickly program the pulse sequence using the menu system.

For example, **Figure 2** displays the diagram for a homonuclear-2D-J pulse sequence (A, B, and C represent the status).

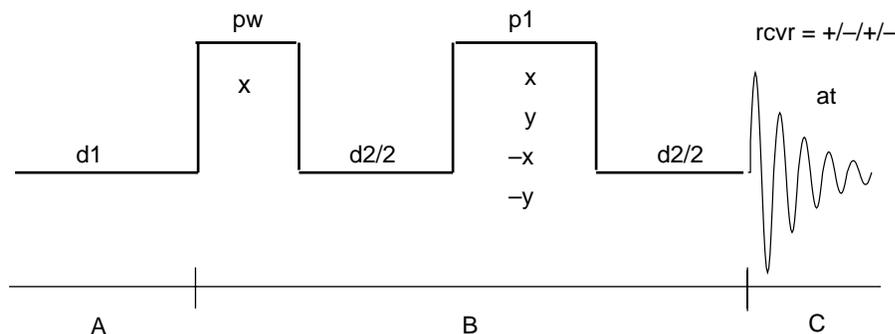


Figure 2. Homonuclear-2D-J Pulse Sequence

Here are the steps to program this sequence:

1. In the Permanent menu (the top row of buttons), click on **Main Menu**.
2. Click on **More > Write Pulse Sequence > Start**.
You are now in the Pulse Sequence Entry Main Menu with the prompt:
Enter a Name for the Pulse Sequence:
3. Enter **hom2dj**.
A new prompt appears:
Enter Basic Phase Cycle Length (without additional phase cycling):
4. Because HOM2DJ has a basic phase cycle that is four transients long, enter **4**.
This action produces a total phase cycle 16 transients long, 4 for the basic cycle, with the whole cycle repeated 4 times in successively incremented phases.

You are now ready to start programming the sequence. Start with status A. Select a delay $d1$ with homospoil. Adding homospoil means that a homospoil pulse can occur at the start of this delay, depending on your choice of parameters when the experiment is run.

5. Click on **Status > A > Delay > Allow Homospoil > D1**
If you are using a *GEMINI 2000* system, no homospoil is possible; however, you can enter homospoil-related statements and parameters without an error occurring.

Next, consider status B. Looking at **Figure 2**, we see that in status B we want the following elements: (1) a pulse of phase x and length pw , (2) a delay $d2/2$ (because this experiment has a split evolution time), (3) a pulse of length $p1$ whose phase cycles 0, 3, 2, 1 during the course of four transients, and (4) another $d2/2$ delay.

6. Click on **Status > B > Pulse > X > PW > Delay > D2/2**.
Then click on **Pulse > More > 0321 > P1 > Delay > D2/2**.

In status C, we need only one action—to select alternating receiver phase.

7. Click on **Status > C > Status > Set Rcvr Phase > +/-+/-**.
8. The programming is finished. Click on **Finish**.

This closes the pulse sequence file and compiles the pulse sequence. Some messages appear in the text window, and then the output is saved in the user pulse sequence directory.

If you have followed this procedure correctly, a homonuclear-2D-J pulse sequence is now ready to use. You can view it graphically by entering `dps` in the input window. Notice that you have just used a few keystrokes and the mouse to write a complete computer program in the C language!

Pulse Sequence Programming Menus

By clicking the buttons Main Menu → More → Write Pulse Sequence, many pulse sequence entry menus are available on your system to help you program pulse sequences, including the following menus:

Pulse Sequence Entry Main Menu



Pulse Sequence Entry Delay Menu



Pulse Sequence Entry Phases Menu



Pulse Sequence Entry Phases Secondary Menu



Pulse Sequence Entry Pulses Menu



Pulse Sequence Entry Decoupler Pulses Menu



Pulse Sequence Entry Status Menu



The only tricky part is that the Pulse Sequence Entry Pulses Menu and Pulse Sequence Entry Decoupler Pulses Menu are not directly accessible from the Main Menu. Instead, any time a pulse is called for, a phase menu appears for you to set phase, and *then* the appropriate pulse menu appears for you to set the pulse width. This occurs because the phase of the pulse must be known to the sequence before the pulse can occur.

In all menus, to make a selection, move the mouse arrow to the desired button on the screen and press the left mouse button. The center and right mouse buttons are inactive.

For information on the VNMR menu system in general, refer to the manual *Getting Started*.

The following sections describe the choices on the pulse sequence entry menus.

Pulse Sequence Entry Main Menu

The Pulse Sequence Entry Main Menu is typically entered by selecting Write Pulse Sequence in the Secondary Main Menu or by entering `menu('psg_main')`.

<i>Button</i>	<i>Description</i>
Start	Show prompts “Enter a Name for the Pulse Sequence:” and “Enter Basic Phase Cycle Length (without additional phase cycling):” and uses the information you enter to initialize a pulse sequence file in your pulse sequence directory (use Start button first and only once).
Delay	Display Pulse Sequence Entry Delay Menu (see below) to add a delay at this point of the sequence.
Pulse	Display Pulse Sequence Entry Phases Menu (page 67) to select the phase and add a pulse at this point of the sequence.
DecPulse	Display Pulse Sequence Entry Decoupler Pulses Menu (page 68) to select decoupler phase and add a decoupler pulse at this point of the sequence.
Status	Display the Sequence Entry Status Menu (page 68) to change the decoupler and receiver status at this point of the sequence.
Other	Show prompt “Enter Pulse Sequence Statement:” and use the information you enter.
Finish	Close the pulse sequence file and compile the pulse sequence, placing the output in the user pulse sequence directory.
Show Seq.	Display a listing of the pulse sequence in the text window.

Pulse Sequence Entry Delay Menu

The Pulse Sequence Entry Delay Menu is typically entered by selecting Delay in the Pulse Sequence Entry Main Menu or by entering `menu('psg_delay')`. After each button action is complete, the Pulse Sequences Entry Main Menu (see above) is displayed.

<i>Button</i>	<i>Description</i>
D1	Add delay <code>d1</code> at this point in the sequence.
D2	Add delay <code>d2</code> at this point in the sequence (automatically made the evolution time in 2D experiments).
D2/2	Add a delay <code>d2 / 2</code> at this point in the sequence (for split evolution times in 2D experiments).
D3	Add delay <code>d3</code> at this point in the sequence.
MIX	Add a delay <code>mix</code> at this point in the sequence.
Other	Show prompt “Input Name of Delay:” and add the name you enter as a delay at this point in the sequence.
Allow Homospoil	Make the delay that follows start with a homospoil pulse of length <code>hst</code> . (You must use this button before selecting buttons 1 through 6 if that delay is to have a homospoil pulse.) Note that homospoil is not possible on the <i>GEMINI 2000</i> .
Return	Display Pulse Sequence Entry Main Menu (page 66) without adding a delay at this point in the sequence.

Pulse Sequence Entry Phases Menu

The Pulse Sequence Entry Phases Menu is typically entered by selecting Pulse or DecPulse in the Pulse Sequence Entry Main Menu, by selecting Set Rcvr Phase in the Pulse Sequence Entry Status Menu, or by entering menu ('psg_phase'). For buttons 1 to 7, the Pulse Sequence Entry Pulses Menu (page 67), the Pulse Sequence Entry Decoupler Pulses Menu (page 68), or the Pulse Sequences Entry Main Menu is displayed (page 66), as appropriate.

<i>Button</i>	<i>Description</i>
SELECT PHASE:	Use Previous
	Use the phase of the previous pulse for this pulse as well.
X	Use a phase of X, which will have additional phase cycling automatically added to it. For example, if the phase cycle length has been set to be 2, the additional phase cycle will be 00112233 (or 0, 0, 90, 90, 180, 180, 270, 270) and an “X” pulse will have the same phase (00112233). This choice will be common if this menu is used to set receiver phase.
Y	Use a phase of Y (see description of X).
-X	Use a phase of -X (see description of X).
-Y	Use a phase of -Y (see description of X).
Fixed:0	Use a fixed phase of 0° that is not phase cycled.
++-	Use phase alternation for this pulse. Phase cycling will be automatically added; the minimum phase cycle length that should have been selected for this to be meaningful is 2. For example, if the phase cycle length has been set to be 4, the additional phase cycle is 0000111122223333 and selecting this button will give a phase 0202131320203131.
More	Display Pulse Sequence Entry Phases Secondary Menu (below) for more phase choices.

Pulse Sequence Entry Phases Secondary Menu

The Pulse Sequence Entry Phases Menu is typically entered by selecting More in the Pulse Sequence Entry Phases Menu or by entering menu ('psg_phase2'). For buttons 1 to 6, the Pulse Sequence Entry Pulses Menu (see below), the Pulse Sequence Entry Decoupler Pulses Menu (page 68), or the Pulse Sequences Entry Main Menu is displayed (page 66), as appropriate.

<i>Button</i>	<i>Description</i>
3210	Use a cycling phase 3, 2, 1, 0 (= 270, 180, 90, 0).
0321	Use a cycling phase 0, 3, 2, 1 (= 0, 270, 180, 90).
0022	Use a cycling phase 0, 0, 2, 2 (= 0, 0, 180, 180).
2200	Use a cycling phase 2, 2, 0, 0 (= 180, 180, 0, 0).
Fixed:90	Use a fixed phase of 90° that is not phase cycled.
Fixed:180	Use a fixed phase of 180° that is not phase cycled.
Return	Display Pulse Sequence Entry Phases Menu (page 67).

Pulse Sequence Entry Pulses Menu

The Pulse Sequence Entry Pulses Menu is typically entered by selecting a phase value in the Pulse Sequence Entry Phases Menu or in the Pulse Sequence Entry Phases Secondary

Menu, or by entering `menu('psg_pulse')`. After each button action is complete, the Pulse Sequences Entry Main Menu (page 66) is displayed.

<i>Button</i>	<i>Description</i>
PW	Add a pulse <code>pw</code> at this point in the sequence.
P1	Add a pulse <code>p1</code> at this point in the sequence.
2PW	Add a pulse <code>2*pw</code> at this point in the sequence.
2P1	Add a pulse <code>2*p1</code> at this point in the sequence.
Other	Show prompt “Input Name of Pulse:” and add name you enter as a pulse at this point in the sequence.
Return	Display Pulse Sequence Entry Main Menu (page 66) without adding a pulse at this point in the sequence.

Pulse Sequence Entry Decoupler Pulses Menu

The Pulse Sequence Entry Decoupler Menu is typically entered by selecting DecPulse in the Pulse Sequence Entry Main Menu or by `menu('psg_decpulse')`. After each button action is complete, the Pulse Sequences Entry Main Menu (page 66) is displayed.

<i>Button</i>	<i>Description</i>
PP	Add a decoupler pulse <code>pp</code> at this point in the sequence.
2PP	Add a decoupler pulse <code>2*pp</code> at this point in the sequence.
Other	Show prompt “Input Name of Pulse:” and add the name you enter as a decoupler pulse at this point in the sequence.
Return	Display Pulse Sequence Entry Main Menu (page 66) without adding a decoupler pulse at this point in the sequence.

Pulse Sequence Entry Status Menu

The Pulse Sequence Entry Status Menu is typically entered by selecting Status in the Pulse Sequence Entry Main Menu or by entering `menu('psg_status')`. After each button action is complete, the Pulse Sequences Entry Main Menu (page 66) is displayed.

<i>Button</i>	<i>Description</i>
A	Change status of decoupler to “A” at this point in the sequence. This corresponds to the first letter of parameters <code>dm</code> (decoupler mode) and <code>dmm</code> (decoupler modulation mode). Thus, if <code>dm= 'yNy'</code> , the decoupler will be turned on (because of the first 'y') during status “A”.
B	Select status “B” at this point in the sequence.
C	Select status “C” at this point in the sequence.
D	Select status “D” at this point in the sequence.
RcvrOn	Turn receiver on at this point in the sequence.
RcvrOff	Turn receiver off at this point in the sequence.
Set Rcvr Phase	Display Pulse Sequences Entry Phases Menu (page 67) to set receiver phase different than default 0123 (= 0, 90, 180, 270).
Return	Display Pulse Sequence Entry Main Menu (page 66) without changing status at this point in the sequence.

2.2 Overview of Pulse Sequence Programming

Pulse sequences are written in C, a high-level programming language that allows considerable sophistication in the way pulse sequences are created and executed. New pulse sequences are added to the software by writing and compiling a short C procedure. This process is greatly simplified, however, and need not be thought of as programming if you prefer not to. As shown in the previous section, simple pulse sequences can be written completely using the menu system, without any knowledge of C programming. For example, the `hom2dj` pulse sequence that we “wrote” in the step-by-step example is a simple text file similar to [Listing 6](#). We will return in a moment to the specifics of what is included in this text file.

Spectrometer Differences

This manual contains information on how to write pulse sequences for *UNITYINOVA*, *MERCURY-VX*, *MERCURY*, *UNITYplus*, *GEMINI 2000*, *UNITY*, and *VXR-S* spectrometers. Each class of spectrometer has different capabilities, so not all statements may be executed on all platforms.

For example, because *MERCURY-VX* hardware differs significantly from *UNITYINOVA* hardware, sections in this manual covering waveform generators and imaging are not applicable to the *MERCURY-VX* even though the pulse sequence programming language is the same. Pay careful attention to comments in the text regarding the system applicability of the pulse sequence statement or technique.

Pulse Sequence Generation Directory

Pulse sequence generation (PSG) text files (like `hom2dj.c` in [Listing 6](#)) are stored in a directory named `psglib`. There are many such `psglib` directories, including the system `/vnmr/psglib` directory and a `psglib` directory that belongs to each user.

Listing 6. Text File for `hom2dj.c` Pulse Sequence Listing

```

/* VARIAN VNMR MENU GENERATED PULSE SEQUENCE: hom2dj */
#include <standard.h>
pulsesequence()
{
    initval(4.0,v9); divn(ct,v9,v8);
    status(A);
    hsdelay(d1);
    status(B);
    add(zero,v8,v1); pulse(pw,v1);
    delay(d2/2.0);
    mod4(ct,v1); add(v1,v8,v1); pulse(p1,v1);
    delay(d2/2.0);
    status(C);
    mod2(ct,oph); dbl(oph,oph); add(oph,v8,oph);
}

```

The user `psglib` is stored in the user’s private directory system (e.g., for user `vnmr1`, in `/export/home/vnmr1/vnmrsys/psglib`). All pulse sequence files stored in these directories are given the extension `.c` to indicate that the file contains C language source code. For instance, the homonuclear-2D-J sequence that you may have written as an

example was automatically stored in your private pulse sequence directory and thus has a name like `/export/home/vnmr1/vnmrsys/psglib/hom2dj.c`.

You may find that a pulse sequence you need is already available. Numerous sequences are in the standard Varian-supplied directory `/vnmr/psglib` and in the user library directory `/vnmr/userlib/psglib`, or you can program a sequence using the menu system or write a sequence using any of the standard text editors such as `vi` or `textedit`. Once a pulse sequence exists, it can subsequently be modified as desired, again using one of a number of text editors.

Compiling the New Pulse Sequence

After a pulse sequence is written, the source code is compiled by one of these methods:

- By clicking on the Finish button in the Pulse Sequence Entry Main Menu (only if the sequence was created using the VNMR menu system).
- By entering `seqgen(file<.c>)` within VNMR.
- By entering `seqgen file<.c>` from a UNIX shell.

For example, entering `seqgen('hom2dj')` compiles the `hom2dj.c` sequence in VNMR and entering `seqgen hom2dj` does the same in UNIX. Note that a full path, such as `seqgen('/export/home/vnmr1/vnmrsys/psglib/hom2dj.c')` or even `seqgen('hom2dj.c')` is not necessary or possible—the `seqgen` command knows where to look to find the source code file and knows that it will have a `.c` extension.

During compilation, the system performs the following steps:

1. If the program `dps_ps_gen` is present in `/vnmr/bin`, extensions are added to the pulse sequence to allow a graphical display of the sequence by entering the `dps` command. Statements `dps_off`, `dps_on`, `dps_skip`, and `dps_show` can be inserted in the pulse sequence to control the `dps` display.
2. The source code is passed through the UNIX program `lint` to check for variable consistency, correct usage of functions, and other program details.
3. The source code is converted into object code.
4. If the conversion is successful, the object code is combined with the necessary system `psg` object libraries (`libparam.so` and `libpsglib.so`), in a procedure called link loading, to produce the executable pulse sequence code. This is actually done at run-time. If compilation of the pulse sequence with the `dps` extensions fails, the pulse sequence is recompiled without the `dps` extensions.

If the executable pulse sequence code is successfully produced, it is stored in the user `seqlib` directory (e.g., `/export/home/vnmr1/vnmrsys/seqlib`). If the user does not have a `seqlib` directory, it is automatically created.

Like `psglib`, different `seqlib` directories exist, including the system directory and each user's directory. The user's `vnmrsys` directory should have directories `psglib` and `seqlib`. Whenever a user attempts to run a pulse sequence, the software looks first in the user's personal directory for a pulse sequence by that name, then in the system directory.

A number of sequences are supplied in `/vnmr/seqlib`, compiled and ready to use. The source code for each of these sequences is found in `/vnmr/psglib`. To compile one of these sequences, or to modify a sequence in `/vnmr/psglib`, copy the sequence into the user's `psglib`, make any desired modifications, then compile the sequence using `seqgen`. (`seqgen` will not compile sequences directly in `/vnmr/psglib`). All sequences in `/vnmr/psglib` have an appropriate macro to use them.

Troubleshooting the New Pulse Sequence

During the process of pulse sequence generation (PSG) with the `seqgen` command, the user-written C procedure is passed through a utility to identify incorrect C syntax or to hint at potential coding problems. If an error occurs, a number of messages usually are displayed. Somewhere among them are these statements:

```
Pulse Sequence did not compile.
The following errors can also be found in the
file /home/vnmr1/vnmrsys/psglib/errmsg:
```

As a rule of thumb, focus on the lines in the `errmsg` text file that begin with the name of the pulse sequence enclosed in double quotes followed by the line number and those that begin with a line number in parentheses. In both cases, a brief description of the problem is also displayed. If the line of code looks correct, often the preceding line of code is the culprit. Note that a large number of error messages can be generated from the same coding error.

If a warning occurs, the following message appears:

```
Pulse Sequence did compile but may not function properly.
The following comments can also be found in the
file /home/vnmr1/vnmrsys/psglib/errmsg:
```

This message means that although the pulse sequence has some inconsistent C code that may produce run-time errors, the pulse sequence did compile. Three warnings to watch for are the following:

```
warning: conversion from long may lose accuracy
warning: parameter_name may be used before set
warning: parameter_name redefinition hides earlier one
```

The first warning may be generated by less than optimum usage of the `ix` variable:

```
conversion from long may lose accuracy
```

An example can be found in a few of the earlier pulse sequences implementing TPPI. The following construct, which was taken from an older version of `hmqc.c`, generates the warning:

```
if (iphase == 3)
{
    t1_counter = ((int) (ix - 1)) / (arraydim / ni);
    initval((double) (t1_counter), v14);
}
```

Changing these lines to

```
if (iphase == 3)
    initval((double) ((int)((ix - 1) / (arraydim / ni) \
+1e-6)), v14);
```

avoids the warning and also provides for roundoff of the floating point expression to give proper TPPI phase increments.

Even the above expression can fail under some circumstances. That construction will not work for 3D and 4D experiments. With the availability of increment counters such as `id2`, `id3`, and `id4`, and the predefined `phase1` variable, this example can be rewritten as

```
if (phase1 == 3)
    assign(id2, v14);
```

The second warning generally suggests an uninitialized variable:

```
parameter_name may be used before set
```

This should be corrected; otherwise, unpredictable execution of the pulse sequence is likely. A common cause is the use of a user variable without first using a `getval` or `getstr` statement on the variable.

The third warning generally suggests that a variable is defined within the pulse sequence that has the same name as one of the standard PSG variables.

```
parameter_name redefinition hides earlier one
```

This warning is normally avoided by renaming the variable in the pulse sequence or, if the variable corresponds to a standard PSG variable, by removing the variable definition and initialization from the pulse sequence and just using the standard PSG variable. A list of the standard PSG variable names is given in “[Accessing Parameters](#),” page 110.

Finally, if the pulse sequence program is syntactically correct, the following message is displayed:

```
Done! Pulse sequence now ready to use.
```

Types of Acquisition Controller Boards

Hardware looping, timing, and other system capabilities are often determined by the type of acquisition controller board used on the system. The following list describes the types of acquisition controller boards used on Varian ^{UNITY}INOVA, UNITY*plus*, UNITY, and VXR-S systems. *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* controller boards are directly described.

- **Data Acquisition Controller boards, Part No. 01-902010-00.** Varian started shipping this board in mid-1995 with the introduction of the ^{UNITY}INOVA system.
- **Pulse Sequence Controller boards, Part No. 00-992560-00.** Varian started shipping this board in early 1993 with the introduction of the UNITY*plus* system.
- **Acquisition Controller boards, Part No. 00-969204-00 or 00-990640-00.** Varian started shipping 00-969204-00 in late 1988 as a replacement for the Output boards, and then 00-990640-00 replaced 00-969204-00 in mid-1990.
- **Output boards, Part No. 00-953520-0#, where # is an integer.** These boards were used on systems prior to 1988.

Creating a Parameter Table for Pulse Sequence Object Code

The ability to modify or customize acquisition parameters to fit a given user-created pulse sequence is provided by a small number of commands. These commands make it possible to perform the following operations on an existing parameter table:

- Create new parameters
- Control the display and enterability of parameters
- Control the limits of the parameter
- Create a parameter table for two-dimensional experiments

The commands that enable the creation and modification of parameters are discussed in Chapter 5 of this manual.

C Framework for Pulse Sequences

Each pulse sequence is built onto a framework written in the C programming language. Look again at the `hom2dj` sequence in [Listing 6](#). The absolutely essential elements of this framework are these:

```
#include <standard.h>
pulsesequence()
{
}
```

This framework must be included exactly as shown. Between the two curly braces (`{ }`) are placed pulse sequence statements, each statement ending with a semicolon.

The majority of pulse sequence statements allow the user to control pulses, delays, frequencies, and all functions necessary to generate pulse sequences. Most are in the general form `statement(argument1, argument2, ...)`, where `statement` is the name of the particular pulse sequence statement, and `argument1, argument2, ...` is the information needed by that statement in order to function.

Many of these arguments are listed as real number. Because of the flexibility of C, a real-number argument can take three different forms: variable (e.g., `d1`), constant (e.g., `3.4`, `20.0e-6`), or expression (e.g., `2.0*pw`, `1.0-d2`).

Times, whether delays or pulses, are determined by the type of acquisition controller board used on the system (listed on [page 72](#)):

- On Data Acquisition Controller boards, times can be specified in increments as small as 12.5 ns with a minimum of 100 ns.
- On Acquisition Controller boards and Pulse Sequence Controller boards, times can be specified in increments as small as 25 ns with a minimum of 200 ns.
- On Output boards and the *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*, times can be specified in increments as small as 0.1 μ s. The smallest possible time interval in all other cases is 0.2 μ s, or 0.

Any pulse widths or delays less than the minimum generate a warning message and are then eliminated internally from the sequence. (Note that time constants within a pulse sequence are always expressed in seconds.)

A series of internal, real-time variables named `v1`, `v2`, ..., `v14` are provided to perform calculations in real-time (by the acquisition computer) while the pulse sequence is executing. Real-time variables are discussed in detail later in this chapter. For now, note that all of the phases, and a small number of the other arguments to the pulse sequence statements discussed here, must be real-time variables. A real-time variable must appear as a simple argument (e.g., `v1`), and *cannot* be replaced by anything else, including an integer, a real number, a “regular” variable such as `d1`, or an expression such as `v1+v2`.

Any variables you choose to use in writing a pulse sequence must be declared. Most variables will be of type `double`, while integers will be of type `int`, and strings, such as `dmm`, are of type `char` with dimension `MAXSTR`. [Table 4](#) lists the length of these basic types on the Sun computer. Many variables that refer to parameters used in an experiment are already declared (see “[Accessing Parameters](#),” [page 110](#)).

Real-time variables are of type `codeint` (`int` on *MERCURY-VX* and `UNITYINOVA`, 32 bits), whose size is 16 bits—you will probably not be declaring new variables of this type. A framework including variable declarations of the main types might look like this:

```
#include <standard.h>
pulsesequence()
{
    double delta;           /* declare delta as double */
    char xpolar[MAXSTR];    /* declare xpolar as char */
    ...
}
```

Table 4. Variable Types in Pulse Sequences

<i>Type</i>	<i>Description</i>	<i>Length (bits)</i>
char	character	8
short	short integer	16
int	integer	32
long	long integer	32
float	floating point	32
double	double-precision floating point	64

Implicit Acquisition

The `hom2dj.c` pulse sequence listing in [Listing 6](#) on [page 69](#) has one notable omission—data acquisition. In most pulse sequences, the sequence of events consists of a series of pulses and delays, followed at the very end by the acquisition of an FID; the entire process is then repeated for the desired number of transients, and then again (for arrayed and nD experiments) for subsequent elements of the arrayed or nD experiment.

In all these cases, pulse sequences use *implicit acquisition*, that is, following the pulse sequence as written by the user, an FID is automatically (implicitly) acquired. This acquisition is preceded by a delay that combines the parameter `alfa` with a delay based on the type of filter and the filter bandwidth. In addition, the phase of all channels of the spectrometer (except the receiver) is set to zero at this time.

Some pulse sequences are not described by this simple model; many solids NMR sequences are in this category, for example. These sequences use explicit acquisition, in which the preacquisition and acquisition steps must be explicitly programmed by the user. This method is described further in [“Hardware Looping and Explicit Acquisition,”](#) [page 125](#). (Explicit acquisition is not available on the *MERCURY* and *GEMINI 2000*.)

Acquisition Status Codes

Whenever `wbs`, `wnt`, `wexp`, or `werr` processing occurs, the acquisition condition that initiated that processing is available from the parameter `acqstatus`. This acquisition condition is represented by two numbers, a “done” code and an “error” code. The done code is set in `acqstatus[1]` and the error code is set in `acqstatus[2]`. Macros can take different actions depending on the acquisition condition.

The done codes and error codes are listed in [Table 5](#) and in the file `acq_errors` in `/vnmr/manual`. For example, a `werr` command could specify special processing if the maximum number of transients is accumulated. The appropriate test would be the following:

```
if (acqstatus[2] = 200) then
  "do special processing, e.g. dp='y' au"
endif
```

These codes apply to all systems, except codes marked with an asterisk (*) are not used on *MERCURY* and *GEMINI 2000* systems.

Codes marked with a double asterisk (**) apply only to *UNITY INOVA Whole Body Imaging* systems.

Table 5. Acquisition Status Codes

Done codes:	11. FID complete	
	12. Block size complete (error code indicates bs number completed)	
	13. Soft error	
	14. Warning	
	15. Hard error	
	16. Experiment aborted	
	17. Setup completed (error code indicates type of setup completed)	
	101. Experiment complete	
	102. Experiment started	
	Error codes:	Warnings
		101. Low-noise signal
		102. High-noise signal
		103. ADC overflow occurred
		104. Receiver overflow occurred*
		Soft errors
		200. Maximum transient completed for single precision data
		201. Lost lock during experiment (LOCKLOST)
300. <i>Spinner errors:</i>		
301. Sample fails to spin after 3 attempts to reposition (BUMPFAIL)		
302. Spinner did not regulate in the allowed time period (RSPINFAIL)*		
303. Spinner went out of regulation during experiment (SPINOUT)*		
395. Unknown spinner device specified (SPINUNKNOWN)*		
396. Spinner device is not powered up (SPINNOPOWER)*		
397. RS-232 cable not connected from console to spinner (SPINRS232)*		
398. Spinner does not acknowledge commands (SPINTIMEOUT)*		
400. <i>VT (variable temperature) errors:</i>		
400. VT did not regulate in the given time <code>vttime</code> after being set		
401. VT went out of regulation during the experiment (VTOUT)		
402. VT in manual mode after auto command (see Oxford manual)*		
403. VT safety sensor has reached limit (see Oxford manual)*		
404. VT cannot turn on cooling gas (see Oxford manual)*		
405. VT main sensor on bottom limit (see Oxford manual)*		
406. VT main sensor on top limit (see Oxford manual)*		
407. VT <code>sc/ss</code> error (see Oxford manual)*		
408. VT <code>oc/ss</code> error (see Oxford manual)*		
495. Unknown VT device specified (VTUNKNOWN)*		
496. VT device not powered up (VTNOPOWER)*		
497. RS-232 cable not connected between console and VT (VTRS232)*		
498. VT does not acknowledge commands (VTTIMEOUT)		
500. <i>Sample changer errors:</i>		
501. Sample changer has no sample to retrieve		
502. Sample changer arm unable to move up during retrieve		
503. Sample changer arm unable to move down during retrieve		
504. Sample changer arm unable to move sideways during retrieve		

Table 5. Acquisition Status Codes (continued)

505. Invalid sample number during retrieve
506. Invalid temperature during retrieve
507. Gripper abort during retrieve
508. Sample out of range during automatic retrieve
509. Illegal command character during retrieve*
510. Robot arm failed to find home position during retrieve*
511. Sample tray size is not consistent*
512. Sample changer power failure during retrieve*
513. Illegal sample changer command during retrieve*
514. Gripper failed to open during retrieve*
515. Air supply to sample changer failed during retrieve*
525. Tried to insert invalid sample number*
526. Invalid temperature during sample changer insert*
527. Gripper abort during insert*
528. Sample out of range during automatic insert
529. Illegal command character during insert*
530. Robot arm failed to find home position during insert*
531. Sample tray size is not consistent*
532. Sample changer power failure during insert*
533. Illegal sample changer command during insert*
534. Gripper failed to open during insert*
535. Air supply to sample changer failed during insert*
593. Failed to remove sample from magnet*
594. Sample failed to spin after automatic insert
595. Sample failed to insert properly
596. Sample changer not turned on
597. Sample changer not connected to RS-232 interface
598. Sample changer not responding*
600. <i>Shimming errors:</i>
601. Shimming user aborted*
602. Lost lock while shimming*
604. Lock saturation while shimming*
608. A shim coil DAC limit hit while shimming*
700. <i>Autolock errors:</i>
701. User aborted (ALKABORT)*
702. Autolock failure in finding resonance of sample (ALKRESFAIL)
703. Autolock failure in lock power adjustment (ALKPOWERFAIL)*
704. Autolock failure in lock phase adjustment (ALKPHASFAIL)*
705. Autolock failure, lost in final gain adjustment (ALKGAINFAIL)*
800. <i>Autogain errors.</i>
801. Autogain failure, gain driven to 0, reduce pw (AGAINFAIL)
Hard errors
901. Incorrect PSG version for acquisition
902. Sum-to-memory error, number of points acquired not equal to np

Table 5. Acquisition Status Codes (continued)

903.	FIFO underflow error (a delay too small?)*
904.	Requested number of data points (np) too large for acquisition*
905.	Acquisition bus trap (experiment may be lost)*
1000.	<i>SCSI errors:</i>
1001.	Recoverable SCSI read transfer from console*
1002.	Recoverable SCSI write transfer from console**
1003.	Unrecoverable SCSI read transfer error*
1004.	Unrecoverable SCSI write transfer error*
1100.	<i>Host disk errors:</i>
1101.	Error opening disk file (probably a UNIX permission problem)*
1102.	Error on closing disk file*
1103.	Error on reading from disk file*
1104.	Error on writing to disk file*
1400–1500.	<i>RF Monitor errors:</i>
1400.	An RF monitor trip occurred but the error status is OK **
1401.	Reserved RF monitor trip A occurred **
1402.	Reserved RF monitor trip B occurred **
1404.	Excessive reflected power at quad hybrid **
1405.	STOP button pressed at operator station **
1406.	Power for RF Monitor board (RFM) failed **
1407.	Attenuator control or read back failed **
1408.	Quad reflected power monitor bypassed **
1409.	Power supply monitor for RF Monitor board (RFM) bypassed **
1410.	Ran out of memory to report RF monitor errors **
1411.	No communication with RF monitor system **
1431.	Reserved RF monitor trip A1 occurred on observe channel **
1432.	Reserved RF monitor trip B1 occurred on observe channel **
1433.	Reserved RF monitor trip C1 occurred on observe channel **
1434.	RF Monitor board (PALI/TUSUPI) missing on observe channel **
1435.	Excessive reflected power on observe channel **
1436.	RF amplifier gating disconnected on observe channel **
1437.	Excessive power detected by PALI on observe channel **
1438.	RF Monitor system (TUSUPI) heartbeat stopped on observe channel **
1439.	Power supply for PALI/TUSUPI failed on observe channel **
1440.	PALI asserted REQ_ERROR on observe channel (should never occur) **
1441.	Excessive power detected by TUSUPI on observe channel **
1442.	RF power amp: overdrive on observe channel **
1443.	RF power amp: excessive pulse width on observe channel **
1444.	RF power amp: maximum duty cycle exceeded on observe channel **
1445.	RF power amp: overheated on observe channel **
1446.	RF power amp: power supply failed on observe channel **
1447.	RF power monitoring disabled on observe channel **
1448.	Reflected power monitoring disabled on observe channel **
1449.	RF power amp monitoring disabled on observe channel **

Table 5. Acquisition Status Codes (continued)

1451. Reserved RF monitor trip A2 occurred on decouple channel **
1452. Reserved RF monitor trip B2 occurred on decouple channel **
1453. Reserved RF monitor trip C2 occurred on decouple channel **
1454. RF Monitor board (PALI/TUSUPI) missing on decouple channel **
1455. Excessive reflected power on decouple channel **
1456. RF amplifier gating disconnected on decouple channel **
1457. Excessive power detected by PALI on decouple channel **
1458. RF Monitor system (TUSUPI) heartbeat stopped on decouple channel **
1459. Power supply for PALI/TUSUPI failed on decouple channel **
1460. PALI asserted REQ_ERROR on decouple channel (should never occur) **
1461. Excessive power detected by TUSUPI on decouple channel **
1462. RF power amp: overdrive on decouple channel **
1463. RF power amp: excessive pulse width on decouple channel **
1464. RF power amp: maximum duty cycle exceeded on decouple channel **
1465. RF power amp: overheated on decouple channel **
1466. RF power amp: power supply failed on decouple channel **
1467. RF power monitoring disabled on decouple channel **
1468. Reflected power monitoring disabled on decouple channel **
1469. RF power amp monitoring disabled on decouple channel **
1501. Quad reflected power too high **
1502. RF Power Monitor board not responding **
1503. STOP button pressed on operator's station **
1504. Cable to Operator's Station disconnected **
1505. Main gradient coil over temperature limit **
1506. Main gradient coil water is off **
1507. Head gradient coil over temperature limit **
1508. RF limit read back error **
1509. RF Power Monitor Board watchdog error **
1510. RF Power Monitor Board self test failed **
1511. RF Power Monitor Board power supply failed **
1512. RF Power Monitor Board CPU failed **
1513. ILI Board power failed **
1514. SDAC duty cycle too high **
1515. ILI Spare #1 trip **
1516. ILI Spare #2 trip **
1517. Quad hybrid reflected power monitor BYPASSED **
1518. SDAC duty cycle limit BYPASSED **
1519. Head Gradient Coil errors BYPASSED **
1520. Main Gradient Coil errors BYPASSED **
1531. Channel 1 RF power exceeds 10s SAR limit **
1532. Channel 1 RF power exceeds 5min SAR limit **
1533. Channel 1 peak RF power exceeds limit **
1534. Channel 1 RF Amp control cable error **
1535. Channel 1 RF Amp reflected power too high **

Table 5. Acquisition Status Codes (continued)

1536. Channel 1 RF Amp duty cycle limit exceeded **
1537. Channel 1 RF Amp temperature limit exceeded **
1538. Channel 1 RF Amp pulse width limit exceeded **
1539. Channel 1 RF Power Monitoring BYPASSED **
1540. Channel 1 RF Amp errors BYPASSED **
1551. Channel 2 RF power exceeds 10s SAR limit **
1552. Channel 2 RF power exceeds 5 min SAR limit **
1553. Channel 2 peak RF power exceeds limit **
1554. Channel 2 RF Amp control cable error **
1555. Channel 2 RF Amp reflected power too high **
1556. Channel 2 RF Amp duty cycle limit exceeded **
1557. Channel 2 RF Amp temperature limit exceeded **
1558. Channel 2 RF Amp pulse width limit exceeded **
1559. Channel 2 RF Power Monitoring BYPASSED **
1560. Channel 2 RF Amp errors BYPASSED **

2.3 Spectrometer Control

More than 200 pulse sequence statements are available for pulse sequence generation (PSG). This section starts the discussion of each statement by covering statements intended primarily for spectrometer control. For discussion purposes, the statements in this section are divided into categories: delay-related, observe transmitter pulse-related, decoupler transmitter pulse-related, simultaneous pulses, transmitter phase control, small-angle phase shift, frequency control, power control, and gating control.

Creating a Time Delay

The statements related to time delays are `delay`, `hsdelay`, `idelay`, `vdelay`, `initdelay`, and `incdelay`. [Table 6](#) summarizes these statements.

Table 6. Delay-Related Statements

<code>delay(time)</code>	Delay specified time
<code>hsdelay(time)</code>	Delay specified time with possible hs pulse
<code>idelay(time,string)</code>	Delay specified time with IPA
<code>incdelay(count,index)</code>	Set real-time incremental delay
<code>initdelay(time_increment,index)</code>	Initialize incremental delay
<code>vdelay(timebase,count)</code>	Set delay with fixed timebase and real-time count

The main statement to create a delay in a pulse sequence for a specified time is the statement `delay(time)`, where `time` is a real number (e.g., `delay(d1)`). The `hsdelay` and `idelay` statements are variations of `delay`:

- To add a possible homospoil pulse to the delay, use `hsdelay(time)`. If the homospoil parameter `hs` is set to 'y', then at the beginning of the delay, `hsdelay` inserts a homospoil pulse of length `hst` seconds. Although homospoil is not available

on the *GEMINI 2000*, the `hsdelay` statement can still be used for a delay on *GEMINI 2000* systems.

- To cause interactive parameter adjustment (IPA) information to be generated when `gf` or `go('acqi')` is entered, use `idelay(time, string)`, where `string` is the label used in `acqi`. If `go` is entered, `idelay` is the same as `delay`. See “Using Interactive Parameter Adjustment,” page 120, for details on IPA. IPA and `idelay` are not available on the *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

To set a delay to the product of a fixed timebase and a real-time count, use `vdelay(timebase, count)`, where `timebase` is `NSEC` (defined below), `USEC` (microseconds), `MSEC` (milliseconds), or `SEC` (seconds) and `count` is one of the real-time variables (`v1` to `v14`). For predictable acquisition, the real-time variable should have a value of 2 or more. If `timebase` is set to `NSEC`, the delay depends on the type of acquisition controller board (see page 72 for a list) in the system:

- On systems with a Data Acquisition Controller board, the minimum delay is a count of 0 (100 ns), and a count of n corresponds to a delay of $(100 + (12.5*n))$ ns.
- On systems with a Pulse Sequence Controller board or an Acquisition Controller board, the minimum delay is a count of 2 (200 ns), and a count greater than 2 is the minimum delay plus the resolution (25 ns) of the board.
- On systems with Output boards, the minimum delay is a count of 2 (200 ns), and a count greater than 2 is the minimum delay plus the resolution (100 ns) of the board.

The `vdelay` statement is not available on the *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Use `initdelay(time_increment, index)` or `incdelay(count, index)` to enable a real-time incremental delay. A maximum of five incremental delays (set by `index`) can be defined in one pulse sequence. The following steps are required to set up an incremental delay (`initdelay` and `incdelay` are not available on the *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*):

1. Enter `initdelay(time_increment, index)` to initialize the time increment and delay.

The argument `time_increment` is the time increment that will be multiplied by the count (a real-time variable) for the delay time, and `index` is one of the indices `DELAY1`, `DELAY2`, ..., `DELAY5` (e.g., `initdelay(1.0/sw, DELAY1)` or `initdelay(1.0/sw1, DELAY2)`).

2. Set the increment delay by specifying its index and the multiplier count using `incdelay(count, index)` (e.g., for `incdelay(v3, DELAY2)`, when `v3=0`, the delay is $0 * (1/sw1)$).

Pulsing the Observe Transmitter

Statements related to pulsing the observe transmitter are `rgpulse`, `irgpulse`, `pulse`, `ipulse`, `obspulse`, and `iobspulse`. Table 7 summarizes these statements.


Use `rgpulse(width, phase, RG1, RG2)` as the main statement to pulse the observe transmitter in a sequence, where `width` is the pulse width, `phase` (a real-time variable) is the pulse phase, and `RG1` and `RG2` are defined according to system type:

- On the ^{UNITY}*INOVA* and *GEMINI 2000*, `RG1` is the delay during which the linear amplifier is gated on and then allowed to stabilize prior to executing the `rf` pulse, and `RG2` is the delay after the pulse after gating off the amplifier. Thus, receiver gating is

Table 7. Observe Transmitter Pulse-Related Statements

<code>iobspulse(string)</code>	Pulse observe transmitter with IPA
<code>ipulse(width,phase,string)</code>	Pulse observe transmitter with IPA
<code>irgpulse(width,phase,RG1,RG2,string)</code>	Pulse observe transmitter with IPA
<code>obspulse()</code>	Pulse observe transmitter with amp. gating
<code>pulse(width,phase).</code>	Pulse observe transmitter with amp. gating
<code>rgpulse(width,phase,RG1,RG2)</code>	Pulse observe transmitter with amp. gating

a misnomer: RG1 and RG2 set amplifier gating, as shown in [Figure 3](#). The receiver is off during execution of the pulses and is only gated on immediately before acquisition.

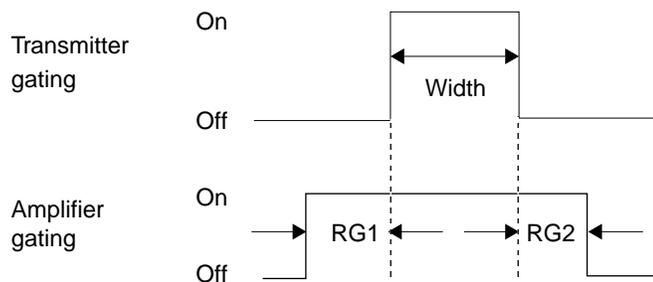**Figure 3.** Amplifier Gating

- On the *MERCURY-VX*, *MERCURY*, *UNITYplus*, *UNITY*, and *VXR-S*, the receiver and amplifiers are tied together such that when the amplifier is on, the receiver is automatically turned off and when the receiver is on, the amplifier is off.

Some further information about RG1 and RG2:

- Typically, RG1 is 10 μs for $^1\text{H}/^{19}\text{F}$ and 40 μs for other nuclei. A typical value for RG2 is 10 to 20 μs .
- The phase of the pulse is set at the beginning of RG1. The phase requires about 0.2 μs to settle on *UNITYINOVA* and *UNITYplus*, 10 μs on *GEMINI 2000* $^1\text{H}/^{13}\text{C}$ and broadband decouplers, 1.0 μs on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* broadband, 0.5 to 1.0 μs on other systems with direct synthesis rf, and twice as long for rf types A and B.
- A transmitter gate is also switched during RG1. The switching time for this gate is 100 ns for *UNITYINOVA* and *UNITYplus* systems or 1 to 3 μs for *GEMINI 2000* and *UNITY* systems.

For systems with linear amplifiers, an rf pulse can be unexpectedly curtailed if the amplifier goes into thermal shutdown. Thermal shutdown can be brought about if the amplifier duty cycle becomes too large for the average power output. In addition, on *GEMINI 2000*, *MERCURY-VX*, and *MERCURY* systems, the pulse length is limited to 1 ms.

The remaining statements for pulsing the observe transmitter are variations of `rgpulse`:

- To pulse the observe transmitter the same as `rgpulse` but with RG1 and RG2 set to the parameters `rof1` and `rof2`, respectively, use `pulse(width,phase)`. Thus, `pulse(width,phase)` and `rgpulse(width,phase,rof1,rof2)` are exactly equivalent.

- To pulse the observe transmitter the same as `pulse` but with `width` preset to `pw` and `phase` preset to `oph`, use `obspulse()`. Thus, `obspulse()` is exactly equivalent to `rgpulse(pw, oph, rof1, rof2)`.
- To pulse the observe transmitter with `rgpulse`, `pulse`, or `obspulse`, but generate interactive parameter adjustment (IPA) information when `gf` or `go('acqi')` is entered, use `irgpulse(width, phase, RG1, RG2, string)`, `ipulse(width, phase, string)`, or `iobspulse(string)`, respectively. The `string` argument is used as a label in `acqi`. If `go` is entered, the IPA information is not generated. For details on IPA, see “Using Interactive Parameter Adjustment,” page 120. IPA is not available on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems.

On *UNITYINOVA* and *UNITYplus* systems, the `ampmode` parameter gives override capability over the default selection of amplifier modes. Unless overridden, the observe channel is set to the pulse mode, other used channels are set to the CW (continuous wave) mode, and any unused channels are set to the idle mode. By using values of `d`, `p`, `c`, and `i` for the default, pulse, CW, and idle modes, respectively, `ampmode` can override the default modes. For example, `ampmode='ddp'` selects default behavior for the first two amplifiers and forces the third channel amplifier into the pulse mode.

The selection of rf channels on *UNITYINOVA* and *UNITYplus* systems also can be independently controlled with the `rfchannel` parameter. You do not need `rfchannel` if you have a single-channel broadband system and you set up a normal HMQC experiment (`tn='H1'`, `dn='C13'`). The software recognizes that you cannot do this experiment and swaps the two channels automatically to make the experiment possible.

The `rfchannel` parameter becomes important if, for example, you have a three-channel spectrometer and you want to do an HMQC experiment with the decoupler running through channel 3. Instead of rewriting the pulse sequence, you can create `rfchannel` (by entering `create('rfchannel', 'flag')`), and then set, for example, `rfchannel='132'`. Now channels 2 and 3 are effectively swapped, without any changes in the sequence.

Similarly, if you want simply to observe on channel 2 (as in the pulse sequence `S2PULR`), you just run `S2PUL` with `rfchannel='21'`.

The `rfchannel` mechanism only works for pulse sequences that eliminate all references to the constants `TODEV`, `DODEV`, `DO2DEV`, and `DO3DEV`. To take advantage of `rfchannel`, you must remove statements, such as `power` and `offset`, that use these constants and replace them with the corresponding statements, such as `obspower` and `decoffset`, that do not contain the constants.

On *UNITYINOVA*, all standard pulse sequences have been edited to take advantage of the rf channel independence afforded by the `rfchannel` parameter. This parameter makes it a simple matter to redirect, for example, the `dn` nucleus to use the third or fourth rf channel.

On *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*, there are only two channels. The software automatically determines which channel is observe or decouple based on `tn` and `dn`.

Pulsing the Decoupler Transmitter

Statements related to decoupler pulsing are `decpulse`, `decrpulse`, `idecpulse`, `idecrpulse`, `dec2rgpulse`, and `dec3rgpulse`. Table 8 summarizes these statements.

Table 8. Decoupler Transmitter Pulse-Related Statements

<code>decpulse(width, phase)</code>	Pulse decoupler transmitter with amp. gating
<code>decrgpulse(width, phase, RG1, RG2)</code>	Pulse first decoupler with amplifier gating
<code>dec2rgpulse(width, phase, RG1, RG2)</code>	Pulse second decoupler with amplifier gating
<code>dec3rgpulse(width, phase, RG1, RG2)</code>	Pulse third decoupler with amplifier gating
<code>dec4rgpulse(width, phase, RG1, RG2)</code>	Pulse deuterium decoupler with amplifier gating
<code>idecpulse(width, phase, string)</code>	Pulse first decoupler transmitter with IPA
<code>idecrgpulse*</code>	Pulse first decoupler with amplifier gating and IPA
* <code>idecrgpulse(width, phase, RG1, RG2, string)</code>	

Use `decpulse(width, phase)` to pulse the decoupler in the pulse sequence at its current power level. `width` is the time of the pulse, in seconds, and `phase` is a real-time variable for the phase of the pulse (e.g., `decpulse(pp, v3)`).

The amplifier is gated on during decoupler pulses as it is during observe pulses. The amplifier gating times (see `RG1` and `RG2` for `decrgpulse` below) are internally set to zero. The decoupler modulation mode parameter `dmm` should be 'c' during any period of time in which decoupler pulses occur.

To pulse the decoupler at its current power level and have user-settable amplifier gating times, use `decrgpulse(width, phase, RG1, RG2)`, where `width` and `phase` are the same as used with `decpulse`, and `RG1` and `RG2` are the same as used with the `rgpulse` statement for observe transmitter pulses. In fact, `decrgpulse` is syntactically equivalent to `rgpulse` and functionally equivalent with two exceptions:

- The decoupler is pulsed at its current power level (instead of the transmitter).
- If `homo= 'n'`, the slow gate (100 ns switching time on ^{UNITY}*INOVA* or *UNITYplus*, 1 to 3 μ s switching time on other systems) on the decoupler board is always open and therefore need not be switched open during `RG1`. In contrast, if `homo= 'y'`, the slow gate on the decoupler board is normally closed and must therefore be allowed sufficient time during `RG1` to switch open (`homo` is not used on the *MERCURY-VX*, *MERCURY*, or *GEMINI 2000*).

For systems with linear amplifiers, `RG1` for a decoupler pulse is important from the standpoint of amplifier stabilization under either of the following conditions:

- When `tn` and `dn` both equal ³H, ¹H, or ¹⁹F (high-band nuclei).
- When `tn` and `dn` are less than or equal to ³¹P (low-band nuclei).

For these conditions, the “decoupler” amplifier module is placed in the pulse mode, in which it remains blanked between pulses. In this mode, `RG1` must be sufficiently long to allow the amplifier to stabilize after blanking is removed: 2 μ s on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems, or 5 to 10 μ s for high-band nuclei and 10 to 20 μ s for low-band nuclei on other systems. On 500-MHz systems that use the ENI-5100 class A amplifier for low-band nuclei on the observe channel, `RG1` should be set for 40 to 60 μ s.

If the `tn` nucleus and the `dn` nucleus are in different bands, such as `tn` is ¹H and `dn` is ¹³C, the “decoupler” amplifier module is placed in the continuous wave (CW) mode, in which it is always unblanked regardless of the state of the receiver. In this mode, `RG1` is unimportant with respect to amplifier stabilization prior to the decoupler pulse, but with respect to phase setting, it must be set.

The remaining decoupler transmitter pulse-related statements are variations of `decpulse` and `decrgpulse`:

- To pulse the decoupler the same as `decpulse` or `decrgpulse`, but generate interactive parameter adjustment (IPA) information when `gf` or `go` ('acqi') is entered, use `idecpulse`(width,phase,string) or `idecrgpulse`(width,phase,RG1,RG2,string), respectively, where string is used as a label in acqi. If `go` is entered instead, the IPA information is not generated. For details on IPA, see “Using Interactive Parameter Adjustment,” page 120. IPA is not available on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems.
- To pulse the second decoupler, use `dec2rgpulse`(width,phase,RG1,RG2). To pulse the third decoupler, use `dec3rgpulse`(width,phase,RG1,RG2). To pulse *UNITYINOVA* systems with a deuterium decoupler installed as the fifth channel, use `dec4rgpulse`(width,phase,RG1,RG2). The width, phase, RG1, and RG2 arguments have the same meaning as used with `decrgpulse` and `rgpulse`. The homo parameter has no effect on the gating on the second decoupler board. On *UNITYINOVA* and *UNITYplus* systems only, homo2 controls the homodecoupler gating of the second decoupler, homo3 does the same on the third decoupler, and homo4 does the same on the fourth decoupler when it is used as a deuterium channel (on the *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*, `dec2rgpulse`, `dec3rgpulse`, and `dec4rgpulse` have no meaning and homo is not used).

Pulsing Channels Simultaneously

Statements for controlling simultaneous, non-shaped pulses are `simpulse`, `sim3pulse`, and `sim4pulse`. Table 9 summarizes these statements. Simultaneous pulses statements using shaped pulses are covered in a later section.

Table 9. Simultaneous Pulses Statements

<code>simpulse*</code>	Pulse observe and decoupler channels simultaneously
<code>sim3pulse*</code>	Pulse simultaneously on two or three rf channels
<code>sim4pulse*</code>	Simultaneous pulse on four channels
* <code>sim3pulse</code> (pw1,pw2,pw3,phase1,phase2,phase3,RG1,RG2)	
<code>sim3pulse</code> (pw1,pw2,pw3,phase1,phase2,phase3,RG1,RG2)	
<code>sim4pulse</code> (pw1,pw2,pw3,pw4,phase1,phase2,phase3,phase4,RG1,RG2)	

Use `simpulse`(obswidth,decwidth,obsphase,decphase,RG1,RG2) to simultaneously pulse the observe and first decoupler rf channels with amplifier gating (e.g., `simpulse`(pw,pp,v1,v2,0.0,rof2)).

Figure 4 illustrates the action of `simpulse` on *UNITYINOVA*, *MERCURY-VX*, *MERCURY*, *GEMINI 2000*, *UNITYplus*, *UNITY*, and *VXR-S* systems.

The shorter of the two pulses is centered on the longer pulse, while the amplifier gating occurs before the start of the longer pulse (even if it is the decoupler pulse) and after the end of the longer pulse. The absolute difference in the two pulse widths must be greater than or equal to 0.2 μ s (0.4 μ s on the *MERCURY-VX*, *MERCURY*, *UNITYplus*, and *GEMINI 2000*); otherwise, a timed event of less than the minimum value (0.1 μ s on *UNITYINOVA*, 0.2 μ s on other systems) would be produced. In such cases, a short time (0.2 μ s on *UNITYINOVA*, 0.4 μ s on other systems) is added to the longer of the two pulse widths to remedy the problem, or the pulses are made the same if the difference is less than half the minimum (less than 0.1 μ s on *UNITYINOVA*, less than 0.2 μ s on other systems).

`sim3pulse`(pw1,pw2,pw3,phase1,phase2,phase3,RG1,RG2) performs a simultaneous, three-pulse pulse on three independent rf channels, where pw1, pw2, and pw3 are the pulse durations on the observe transmitter, first decoupler, and second decoupler, respectively. phase1, phase2, and phase3 are real-time variables for the

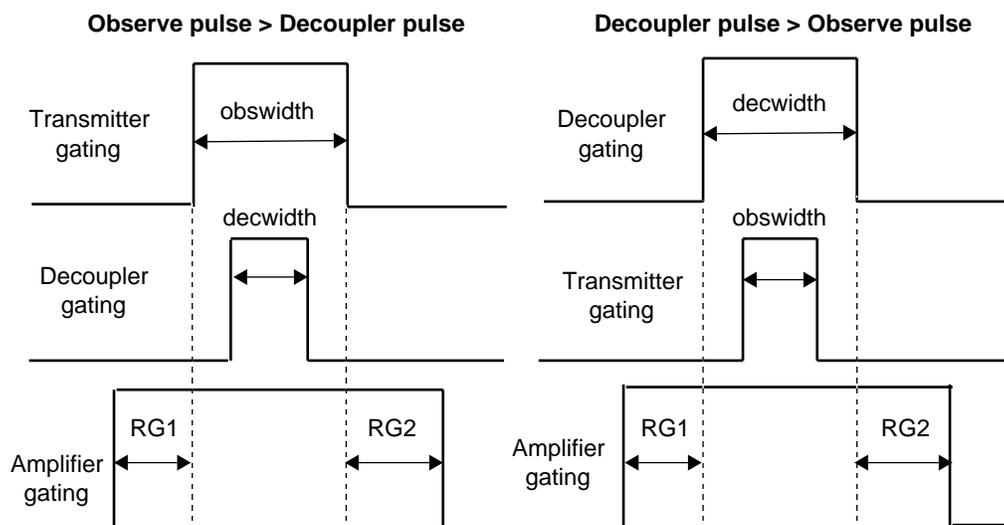


Figure 4. Pulse Observe and Decoupler Channels Simultaneously

phases of the corresponding pulses, for example, `sim3pulse(pw, p1, p2, oph, v10, v1, rof1, rof2)`.

A simultaneous, two-pulse pulse on the observe transmitter and the second decoupler can be achieved by setting the pulse length for the first decoupler to 0.0; for example, `sim3pulse(pw, 0.0, p2, oph, v10, v1, rof1, rof2)`. (`sim3pulse` has no meaning on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*).

Use `sim4pulse(pw1, pw2, pw3, pw4, phase1, phase2, phase3, phase4, RG1, RG2)` to perform simultaneous pulses on as many as four different rf channels. Except for the added arguments `pw4` and `phase4` for a third decoupler, the arguments in `sim4pulse` are defined the same as `sim3pulse`. If any pulse is set to 0.0, no pulse is executed on that channel (`sim4pulse` has no meaning on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*).

Setting Transmitter Quadrature Phase Shifts

The statements `txphase`, `decphase`, `dec2phase`, `dec3phase`, `dec4phase` control transmitter quadrature phase (multiple of 90°). [Table 10](#) summarizes these statements.

Table 10. Transmitter Quadrature Phase Control Statements

<code>decphase</code> (phase)	Set quadrature phase of first decoupler
<code>dec2phase</code> (phase)	Set quadrature phase of second decoupler
<code>dec3phase</code> (phase)	Set quadrature phase of third decoupler
<code>dec4phase</code> (phase)	Set quadrature phase of fourth decoupler
<code>txphase</code> (phase)	Set quadrature phase of observe transmitter

To set the transmitter phase, use `txphase(phase)`, where `phase` is a real-time variable (`v1` to `v14`, etc.) or a real-time constant (zero, one, etc.) that references the desired phase. This enables changing the transmitter phase independently from a pulse.

For example, knowing that the transmitter phase takes a finite time to shift (as much as 10 μ s on a *GEMINI 2000* $^1\text{H}/^{13}\text{C}$ system, about 1 μ s on a *MERCURY-VX*, *MERCURY*, or *GEMINI 2000* broadband system, about 400 ns for rf type C, less than 200 ns for rf type D used on *UNITYplus*, and longer for types A and B), you may wish to “preset” the transmitter phase at the beginning of a delay that precedes a particular pulse. The “normal” pulse sequences use an `rof1` time preceding the pulse to change the transmitter phase and do not need to “preset” the phase. The phase change will occur at the start of the next event in the pulse sequence.

The other phase control statements are variations of `txphase`:

- To set the decoupler phase, use `decphase (phase)`. The `decphase` statement is syntactically and functionally equivalent to `txphase`. `decphase` is useful for a decoupler pulse in all cases where `txphase` is useful for a transmitter pulse.
- To set the quadrature phase of the second decoupler rf or third decoupler rf, use `dec2phase (phase)` or `dec3phase (phase)`, respectively.

On *UNITYINOVA*, *MERCURY-VX*, *MERCURY*, *GEMINI 2000*, and *UNITYplus*, the hardware WALTZ decoupling lines are XORed with the decoupler phase control. The performance of the WALTZ decoupling should not be affected by the decoupler phase setting. On *UNITY* and *VXR-S* systems, however, the hardware WALTZ decoupling lines are ORed with the decoupler phase control. As a consequence, the decoupler phase *must* be set to 0 for WALTZ to function properly.

When using pulse sequences with implicit acquisition, the decoupler phase is set to 0 automatically (within the `test4acq` procedure in the module `hwlooping.c` in `/vnmr/psg`), so under most circumstances no problems are seen. But if you are using explicit acquisition or if you are trying to perform WALTZ decoupling during a period other than acquisition, you must use a `decphase (zero)` statement in the pulse sequence before the relevant time period.

Setting Small-Angle Phase Shifts

Setting the small-angle phase of rf pulses is implemented by three different methods:

- Fixed 90° settings
- Direct synthesis hardware control
- Phase-pulse phase shifting

The statements related to these methods are summarized in [Table 11](#). None of these statements apply to the *GEMINI 2000*.

Table 11. Phase Shift Statements

<code>dcplrphase (multiplier)</code>	Set small-angle phase of first decoupler, rf type C or D
<code>dcplr2phase (multiplier)</code>	Set small-angle phase of second decoupler, rf type C or D
<code>dcplr3phase (multiplier)</code>	Set small-angle phase of third decoupler, rf type C or D
<code>decstepsize (base)</code>	Set step size of first decoupler
<code>dec2stepsize (base)</code>	Set step size of second decoupler
<code>dec3stepsize (base)</code>	Set step size of third decoupler
<code>obsstepsize (base)</code>	Set step size of observe transmitter
<code>phaseshift*</code>	Set phase-pulse technique, rf type A or B
<code>stepsize (base, device)</code>	Set small-angle phase step size, rf type C or D
<code>xmtrphase (multiplier)</code>	Set small-angle phase of observe transmitter, rf type C
* <code>phaseshift (base, multiplier, device)</code>	

Fixed 90° Settings

The first method is the hardwired 90° (or quadrature) phase setting. For both the observe and the decoupler transmitters, phases of 0°, 90°, 180°, and 270° are invoked instantaneously using the `obspulse`, `pulse`, `rgpulse`, `simpulse`, `decpulse`, `decrgpulse`, `dec2rgpulse`, `dec3rgpulse`, `dec4rgpulse`, `txphase`, `decphase`, `dec2phase`, `dec3phase`, and `dec4phase` statements.

The receiver phase is actually fixed but is “shifted” by setting the `oph` variable, which changes the “mode” of the receiver. A 180° receiver “phase” sets the system to subtract instead of add the data—a 90° receiver phase swaps the two channels of the receiver.

Hardware Control

A second method of small-angle phase selection is implemented only on spectrometers with direct synthesis. This method uses hardware that sets transmitter phase in 0.25° increments on ^{UNITY}*INOVA* and *UNITYplus* systems, 0.5° increments on *UNITY* and *VXR-S* systems, or 1.41° on *MERCURY-VX* and *MERCURY* systems, independently of the phase of the receiver. Unlike the phase-pulse technique (described below), this method is an absolute technique (e.g., if a phase of 60° is invoked twice, the second phase selection does nothing).

The `obsstepsize(base)` statement sets the step size of the small-angle phase increment to `base` for the observe transmitter. Similarly, `decstepsize(base)`, `dec2stepsize(base)`, and `dec3stepsize(base)` set the step size of the small-angle phase increment to `base` for the first decoupler, second decoupler, and third decoupler, respectively (assuming that system is equipped with appropriate hardware). The `base` argument is a real number or variable.

The base phase shift selected is active only for the `xmtrphase` statement if the transmitter is the requested device, only for the `dcplrphase` statement if the decoupler is the requested device, only for the `dcplr2phase` statement if the second decoupler is the requested device, or only for the `dcplr3phase` if the third decoupler is the required device, that is, every transmitter has its own “base” phase shift. Phase information into `pulse`, `rgpulse`, `decpulse`, `decrgpulse`, `dec2rgpulse`, `dec3rgpulse`, and `simpulse` is still expressed in units of 90°.

The statements `xmtrphase(multiplier)`, `dcplrphase(multiplier)`, `dcplr2phase(multiplier)`, and `dcplr3phase(multiplier)` set the phase of transmitter, first decoupler, second decoupler, or third decoupler, respectively, in units set by `stepsize`. If `stepsize` has not been used, the default step size is 90°. The argument `multiplier` is a small-angle phaseshift multiplier. The small-angle phaseshift is a product of the multiplier and the preset `stepsize` for the rf device (observe transmitter, first decoupler, second decoupler, or third decoupler). `multiplier` must be a real-time variable.

The `decstepsize`, `dec2stepsize`, `dec3stepsize`, and `obsstepsize` statements are similar to the `stepsize` statement but have the channel selection fixed. Each of the following pairs of statements are functionally the same:

- `obsstepsize(base)` and `stepsize(base, OBSch)`.
- `decstepsize(base)` and `stepsize(base, DECch)`.
- `dec2stepsize(base)` and `stepsize(base, DEC2ch)`.
- `dec3stepsize(base)` and `stepsize(base, DEC3ch)`.

On systems with Output boards only (see [page 72](#) for the types of boards), if the product of the `base` and `multiplier` is greater than 90°, the sub-90° part is set by the

xmtrphase, dcplrphase, dcplr2phase, or dcplr3phase statements. Carryovers that are multiples of 90° are automatically saved and added in at the time of the next 90° phase selection (e.g., at the time of the next pulse or decpulse). This is true even if stepsize has not been used and base is at its default value of 90° . The following example may help you to understand this question of “carryovers”:

```
obsstepsize(60.0); /* set 60° step size for obs. xmtr*/
initval(6.0,v1); modn(ct,v1,v2); /* v2=012345012345 */
xmtrphase(v2); /* phase=0,60,120,180,240,300 */
/* small-angle part=0,60,30,0,60,30 */
/* carry-over=0,0,90,180,180,270 */

mod4(ct,v3);pulse(pw,v3); /* specified phase=0,90,180,270 */
/* 90° phase shift actually used */
/* = 0,90,270,450,180,360 */
/* = specified + carry-over */
```

On systems with Acquisition Controller boards or Pulse Sequence Controller boards, the 90° multiples are set by the call to xmtrphase, dcplrphase, dcplr2phase, and dcplr3phase.

If xmtrphase, dcplrphase, dcplr2phase, or dcplr3phase is used to set the phase for some pulses in a pulse sequence, it is often necessary to use xmtrphase(zero), dcplrphase(zero), dcplr2phase(zero), or dcplr3phase(zero) preceding other pulses to ensure that the phase specified by a previous xmtrphase, dcplrphase, dcplr2phase, or dcplr3phase does not carry-over into an unwanted pulse or decpulse statement.

Phases specified in txphase, pulse, rgpulse, decphase, decpulse, decrgpulse, dec2phase, dec2rgpulse, dec3rgpulse, and dec4rgpulse statements change the 90° portion of the phase shift only. This feature provides a separation between the small-angle phase shift and the 90° phase shifts, and facilitates programming phase cycles or additional coherence transfer selective phase cycling “on top of” small-angle phase shifts.

Be sure to distinguish xmtrphase from txphase. txphase is optional and rarely needed; xmtrphase is needed any time the transmitter phase shift is to be set to a value not a multiple of 90° . The same distinction can be made between dcplrphase and decphase, dcplr2phase and dec2phase, and dcplr3phase and dec3phase.

Phase-Pulse Technique

The third method is a phase-shifting technique called the *phase-pulse*, described by Lallemand and co-workers (E. Guittet, D. Piveteau, M.-A. Delsuc, and J.-Y. Lallemand, *J. Magn. Reson.*, **62**, 336-339 (1985)) and also discovered independently at Varian (D. Iverson and S.L. Patt, Varian Owners Conference, April, 1985). This method is applicable only to systems lacking hardware small-angle phase shift, which is the case on UNITY and VXR-S spectrometers with type A or B rf.

This method involves shifting the frequency of the transmitter (observe or decoupler) for a brief time at a point in the pulse sequence when no pulse is required, and then returning the frequency to its original value. If this change of frequency can be accomplished with phase continuity (the case on VNMR spectrometers), the temporary shift of transmitter frequency has the effect of producing an apparent phase shift in the transmitter that is the product of the time during which the frequency was changed and the period of the difference frequency. For example, if the frequency is increased by 1000 Hz, the phase will “get

ahead” at a rate of 360° in 1 ms. If this frequency difference is left in effect for $100\ \mu\text{s}$, the phase shift is $(360^\circ/1\ \text{ms}) \times 100\ \mu\text{s} = 36^\circ$.

Since the frequency difference and the time for this shift are under computer control, tremendous flexibility is possible. The larger the frequency shift, the smaller the time for a particular phase shift but also the less the precision in specifying the shift; the smaller the shift, the larger the time for a particular phase shift but the greater the precision in generating that shift. The technique as described by Lallemand required a minimum time of 1 ms to perform the phase pulse; the Varian implementation uses a time of $30\ \mu\text{s}$ and a resolution of 1.44° .

Use the statement `phaseshift(base,multiplier,device)` to implement the phase-pulse technique on systems with rf type A or B (for type C, see the next section). `base` is a real number, expression, or variable representing the base phase shift in degrees. Any value is acceptable. `multiplier` is the name of a real-time variable (`ct`, `v1` to `v14`, etc.). The value must be positive. The phase shift will be $((\text{base} \times \text{multiplier}) \bmod 360)$. `device` specifies if the transmitter, first decoupler, second decoupler, or third decoupler will be phase shifted. Values can be `OBSch`, `DECch`, `DEC2ch`, or `DEC3ch`, respectively (e.g., `phaseshift(60.0,ct,OBSch)`).

An important point to understand about using the phase-pulse technique is that it is a cumulative technique. That is, a phase shift of 60° followed by another phase shift of 60° results in a total phase shift of 120° . If one pulse requires a 60° phase and a subsequent pulse requires a 0° phase, a -60° phase shift will need to be used after the first pulse.

Another important point is that the frequency that is shifted is the local oscillator (L.O.) frequency. For the observe channel, this means that the phase of the transmitter and the receiver are linked. That is, a 60° phase shift of the observe transmitter during the course of the pulse sequence will also shift the receiver by 60° . If this is not desirable, it would again be possible simply to shift the phase by -60° after the last pulse but before the start of the acquisition.

A third point about `phaseshift` is the time factor. The phase shift is created by shifting the frequency by a fixed amount for a variable time. However, the introduction of a time delay into a pulse sequence whose length would be variable depending upon the phase shift chosen would be in most cases undesirable. Thus what we have done is to shift the frequency for a variable time, then shift the frequency back, followed by waiting for another variable time at the original frequency, such that the total time of this combined operation is a constant. This time has been chosen to be $30\ \mu\text{s}$. Thus, whenever the pulse sequence statement `phaseshift` is encountered in a pulse sequence, an implicit delay of $30\ \mu\text{s}$ occurs. In many pulse sequences, this has little consequence. In cases involving spin echoes, however, it will be important to correct for this time.

The final point to understand is the step size. Because of limitations on the timing in the system (25 ns for systems with the Acquisition Controller board or Pulse Sequence Controller board, $0.1\ \mu\text{s}$ time resolution for systems with the Output board), there is an effective resolution of the phase shift (for the type of board on your system, see “Types of Acquisition Controller Boards,” page 72). The implementation as provided gives phase steps of 0.36° (Acquisition Controller board or Pulse Sequence Controller board) or 1.44° (Output board). Thus, for any particular phase shift, there may be a roundoff of $\pm 0.18^\circ$ (Acquisition Controller board or Pulse Sequence Controller board) or $\pm 0.72^\circ$ (Output board). This is not a real error because you know exactly what the phase shift is, but are not able to set it with any finer resolution.

On systems with an Output board only (see page 72 for a list of boards), a $0.2\ \mu\text{s}$ delay internally precedes the AP (analog port) bus statements `xmtrphase`, `dcplrphase`, and `dcplr2phase`. The `apovrride()` statement prevents this $0.2\ \mu\text{s}$ delay from being

inserted prior to the next (and only the next) occurrence of one of these AP bus statements.

Controlling the Offset Frequency

Statements for frequency control are `decoffset`, `dec2offset`, `dec3offset`, `dec4offset`, `obsoffset`, `offset`, and `ioffset`. Table 12 summarizes these statements.

Table 12. Frequency Control Statements

<code>decoffset</code> (frequency)	Change offset frequency of first decoupler
<code>dec2offset</code> (frequency)	Change offset frequency of second decoupler
<code>dec3offset</code> (frequency)	Change offset frequency of third decoupler
<code>dec4offset</code> (frequency)	Change offset frequency of fourth decoupler
<code>obsoffset</code> (frequency)	Change offset frequency of observe transmitter
<code>offset</code> (frequency, device)	Change offset frequency of transmitter or decoupler
<code>ioffset</code> (frequency, device, string)	Change offset frequency with IPA

The main statement to set the offset frequency of the observe transmitter (parameter `tof`), first decoupler (`dof`), second decoupler (`dof2`), or third decoupler (`dof3`) is the statement `offset`(frequency, device), where `frequency` is the new value of the appropriate parameter and `device` is `OBSch` (observe transmitter), `DECch` (first decoupler), `DEC2ch` (second decoupler), or `DEC3ch` (third decoupler). For example, use `offset`(`tof`, `OBSch`) to set the observe transmitter offset frequency. `DEC2ch` can be used only on systems with three rf channels. Likewise, `DEC3ch` is used only on systems with four rf channels.

- For systems with rf types A or B, the frequency typically changes in 10 to 30 μs , but 100 μs is automatically padded into the sequence by the `offset` statement so that the time duration of the `offset` statement is constant and not frequency-dependent.
- For systems with rf type C, which necessarily use PTS frequency synthesizers, the frequency shift time is shown in Table 32. No 100- μs delay is padded into the sequence for systems with rf type C or D. Offset frequencies are not automatically returned to their “normal” values before acquisition—this must be done explicitly.
- For systems with rf type D (*UNITYplus*), the frequency shift time is 14.95 μs (latching with or without over-range). No 100- μs delay is inserted into the sequence by the `offset` statement. Offset frequencies are not returned automatically to their “normal” values before acquisition; this must be done explicitly, as in the example below.
- For *UNITYINOVA* systems, the frequency shift time is 4 μs .
- For *GEMINI 2000* systems (rf types F or E): on broadband systems, only the decoupler can be shifted (8.6 μs); on $^1\text{H}/^{13}\text{C}$ systems, observe (6.48 μs), decoupler (8.6 μs), and homodecoupler (8.6 μs) can be set.
- For *MERCURY-VX* and *MERCURY* systems, the setup time is 86.4 μs and the shift time is 1 μs .
- On systems with the Output board only, all `offset` statements by default are preceded internally by a 0.2- μs delay.

Other frequency control statements are variations of `offset`:

- To set the offset frequency of the observe transmitter the same as `offset` but generate interactive parameter adjustment (IPA) information when `gf` or `go`('acqi ') is

entered, use `ioffset (frequency , device , string)`, where `string` is used as a label for the slider in `acqi`. If `go` is entered instead, the IPA information is not generated. For details on IPA, see “Using Interactive Parameter Adjustment,” page 120. IPA is not available on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems.

- To set the offset frequency of the observe transmitter (parameter `tof`), use `obsoffset (frequency)`, which functions the same as `offset (frequency , OBSch)`.
- To set the offset frequency of the first decoupler (parameter `dof`), use `decoffset (frequency)`, which functions the same as `offset (frequency , DECch)`.
- To set the offset frequency of the second decoupler (parameter `dof2`), use `dec2offset (frequency)`, which functions the same as `offset (frequency , DEC2ch)`.
- To set the offset frequency of the third decoupler (parameter `dof3`), use `dec3offset (frequency)`, which functions the same as `offset (frequency , DEC3ch)`.
- To set the offset frequency of the deuterium decoupler used as the fifth channel (parameter `dof4`), use `dec4offset (frequency)`, which functions the same as `offset (frequency , DEC4ch)`.

Controlling Observe and Decoupler Transmitter Power

Statements to control power by adjusting the coarse attenuators on linear amplifier systems are `power`, `obspower`, `decpower`, `dec2power`, `dec3power`, and `dec4power`. Statements to control fine power are `pwrif`, `pwrin`, `rlpwrin`, `obspwrif`, `decpwrf`, `dec2pwrf`, and `dec3pwrf`. Statements to control decoupler power level switching are `declvlon`, `declvloff`, and `decpwr`. The `apovrride` statement overrides an AP bus delay (the delay before AP bus access). Table 13 summarizes these statements. Only the `declvloff`, `declvlon`, `obspower`, and `decpower` statements apply to the *GEMINI 2000*, and only coarse power can be controlled on *MERCURY-VX* and *MERCURY* systems.

Table 13. Power Control Statements

<code>apovrride ()</code>	Override internal software AP bus delay
<code>declvloff ()</code>	Return first decoupler back to “normal” power
<code>declvlon ()</code>	Turn on first decoupler to full power
<code>decpower (value)</code>	Change first decoupler power, linear amplifier
<code>dec2power (value)</code>	Change second decoupler power, linear amplifier
<code>dec3power (value)</code>	Change third decoupler power, linear amplifier
<code>dec4power (value)</code>	Change deuterium decoupler power, linear amplifier
<code>decpwr (level)</code>	Set decoupler high-power level, class C amplifier
<code>decpwrf (value)</code>	Set first decoupler fine power
<code>dec2pwrf (value)</code>	Set second decoupler fine power
<code>dec3pwrf (value)</code>	Set third decoupler fine power
<code>ipwrf (value , device , string)</code>	Change transmitter or decoupler fine power with IPA
<code>ipwrin (value , device , string)</code>	Change transmitter or decoupler linear mod. with IPA
<code>obspower (value)</code>	Change observe transmitter power, linear amplifier
<code>obspwrif (value)</code>	Set observe transmitter fine power
<code>power (value , device)</code>	Change transmitter or decoupler power, linear amplifier
<code>pwrif (value , device)</code>	Change transmitter or decoupler fine power
<code>pwrin (value , device)</code>	Change transmitter or decoupler linear mod. power
<code>rlpwrin (rlvalue , device)</code>	Set transmitter or decoupler linear mod. power

Coarse Attenuator Control

On ^{UNITY}*INOVA*, *UNITYplus*, and *UNITY* systems with linear amplifiers, the statement `power(value, device)` changes transmitter or decoupler power by adjusting the coarse attenuators from 0 (minimum power) to 63 (maximum power) on channels with a 63-dB attenuator, or from -16 (minimum power) to 63 (maximum power) on channels with a 79-dB attenuator.

- `value` must be stored in a real-time variable such as `v2`; the actual value cannot be placed directly in the `power` statement. This allows the attenuators to be changed in real-time or from pulse to pulse.
- `device` is `OBSch` to change the transmitter power, `DECch` to change the first decoupler power, `DEC2ch` to change the second decoupler power, or `DEC3ch` to change the third decoupler power (e.g., `power(v2, OBSch)`).

To avoid using a real-time variable, the fixed-channel statements `obspower(value)`, `decpower(value)`, `dec2power(value)`, and `dec3power(value)` can be used in place of the `power` statement, for example, `obspower(63.0)`. For all of these statements, `value` is either a real number or a variable.

The `power` and associated fixed-channel statements allow configurations such as the use of the transmitter at a low power level for presaturation followed by a higher power for uniform excitation. The phase of the transmitter is specified as being constant to within 5° over the whole range of transmitter power. Therefore, if you pulse at low power with a certain phase and later at high power with the same phase, the two phases are the “same” to within 5° (at any one power level, the phase is constant to considerably better than 0.5°). The time of the power change is specified in [Table 32](#). On *UNITY* and *VXR-S* systems, the power change is somewhat discontinuous and it is advisable, although not strictly necessary, to change the power level at a time when the observe pulse is not turned on, then to allow a minimum of 4 μs before using a transmitter pulse.

On systems with an Output board only (see [page 72](#) for the types of acquisition controller board), the `power` and associated statements are preceded internally by a 0.2 μs delay by default (see the `apovrride` pulse statement for more details).

CAUTION: On systems with linear amplifiers, be careful when using values of `power`, `obspower`, `decpower`, `dec2power`, and `dec3power` greater than 49 (about 2 watts). Performing continuous decoupling or long pulses at power levels greater than this can result in damage to the probe. Use `config` to set a safety maximum for the `tpwr`, `dpwr`, `dpwr2`, and `dpwr3` parameters.

Fine-Power Control

To change the fine power of a transmitter or decoupler by adjusting the optional linear fine attenuators, use `pwrp(value, device)` or `pwrp(value, device)`. The `value` argument is real-time variable, which means it cannot be placed directly in the `pwrp` or `pwrp` statement, and can range from 0 to 4095 (60 dB on ^{UNITY}*INOVA* or *UNITYplus*, about 6 dB on other systems). `device` is `OBSch` (for the observe transmitter) or `DECch` (first decoupler). On ^{UNITY}*INOVA* and *UNITYplus* only, `device` can also be `DEC2ch` (second decoupler) or `DEC3ch` (third decoupler). *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems do not have fine-power control.

You can use the fixed-channel statement `obspwrp(value)`, `decpwrp(value)`, `dec2pwrp(value)`, and `dec3pwrp`, or `rlpwrp(value, device)` to avoid arguments using real-time variables. These statements change transmitter or decoupler

power on systems with linear amplifiers, but `value` is either a real number or a variable and is stored in a C variable of type double.

The `ipwrf(value, device, string)` and `ipwrm(value, device, string)` statement changes interactively the transmitter or decoupler fine power or linear modulators by adjusting the optional fine attenuators. The `value` and `device` arguments are the same as `pwr`. `string` can be any string; the first six letters are used in `acqi`. This statement will generate interactive parameter adjustment (IPA) information only when the command `gf` or `go('acqi')` is typed. When the command `go` is typed, this statement is ignored by the pulse sequence. Use the `pwr` pulse statement for this purpose. Do not execute `pwr` and `ipwrf` in the same pulse sequence, as they cancel each other's effect.

On systems with an Output board only (see [page 72](#) for types of boards), a 0.2 μ s delay internally precedes the AP (analog port) bus statements `power`, `obspower`, `decpower`, and `dec2power`. The `apovrride()` statement prevents this 0.2 μ s delay from being inserted prior to the next (and only the next) occurrence of one of these AP bus statements.

Decoupler Power-Level Switching

On UNITY *INOVA*, UNITY *plus*, and UNITY systems with class C or linear amplifiers, `declvlon()` and `declvloff()` switch the decoupler power level between the power level set by the high-power parameter(s) to the *full* output of the decoupler. The statement `declvlon()` gives full power on the decoupler channel; `declvloff` switches the decoupler to the power level set by the appropriate parameters defined by the amplifier type: `dhp` for class C amplifiers or `dpwr` for a linear amplifiers. If `dhp = 'n'`, these statements do not have any effect on systems with class C amplifiers, but still function for systems with linear amplifiers.

If `declvlon` is used, make sure `declvloff` is used prior to time periods in which normal, controllable power levels are desired, for example, prior to acquisition. Full decoupler power should only be used for decoupler pulses or for solids applications.

On *GEMINI 2000* broadband systems, `declvlon` sets the power of the decoupler to the level set by the parameter `pplvl`. This is an important distinction—decoupler pulse power on the *GEMINI 2000* broadband is controlled by the value in `pplvl`, and `declvlon` does *not* set the power to “full” output. On *GEMINI 2000* $^1\text{H}/^{13}\text{C}$ systems, however, `declvlon` does set the decoupler to full power.

MERCURY-VX and *MERCURY* systems do not use `declvlon` or `declvloff`. To distinguish between *GEMINI 2000* and *MERCURY-VX* and *MERCURY*, use `declvlofflag` (e.g., see `/vnmr/psglab/dept.c`).

On UNITY systems with a class C amplifier, `decpwr(level)` changes the decoupler high-power level to the value set by `level`, which can assume real values from 0 (lowest) to 255 (full power); these units are monotonically increasing but neither linear nor logarithmic. To reset the power back to the “standard” `dhp` level, use `decpwr(dhp)`.

On *GEMINI 2000* $^1\text{H}/^{13}\text{C}$ systems, the power is fixed. `decpwr` has no meaning.

Controlling Status and Gating

Statements to control decoupler and homospoil status are `status` and `setstatus`. Explicit transmitter and receiver gating control statements are `xmtroff`, `xmtron`, `decoff`, `decon`, `dec2off`, `dec2on`, `dec3off`, `dec3on`, `rcvroff`, and `rcvtron`. Statements for amplifier blanking and unblanking are `obsblank`, `obsunblank`, `decblank`, `decunblank`, `dec2blank`, `dec2unblank`, `dec3blank`,

dec3unblank, blankingoff, and blankingon. Finally, statements for user-dedicated lines are sp#off and sp#on. Table 14 summarizes these statements.

Table 14. Gating Control Statements

<code>blankingoff()</code>	Unblank amplifier channels and turn amplifiers on
<code>blankingon()</code>	Blank amplifier channels and turn amplifiers off
<code>decblank()</code>	Blank amplifier associated with the 1st decoupler
<code>dec2blank()</code>	Blank amplifier associated with the 2nd decoupler
<code>dec3blank()</code>	Blank amplifier associated with the 3rd decoupler
<code>decoff()</code>	Turn off first decoupler
<code>dec2off()</code>	Turn off second decoupler
<code>dec3off()</code>	Turn off third decoupler
<code>decon()</code>	Turn on first decoupler
<code>dec2on()</code>	Turn on second decoupler
<code>dec3on()</code>	Turn on third decoupler
<code>decunblank()</code>	Unblank amplifier associated with the 1st decoupler
<code>dec2unblank()</code>	Unblank amplifier associated with the 2nd decoupler
<code>dec3unblank()</code>	Unblank amplifier associated with the 3rd decoupler
<code>dhpflag=TRUE FALSE</code>	Switch decoupling between high- and low-power levels
<code>initparms_sis()</code>	Initialize parameters for spectroscopy imaging sequences
<code>obsblank()</code>	Blank amplifier associated with observe transmitter
<code>obsunblank()</code>	Explicitly enables the amplifier for the observe transmitter
<code>rcvroff()</code>	Turn off receiver gate and amplifier blanking gate
<code>rcvron()</code>	Turn on receiver gate and amplifier blanking gate
<code>recoff()</code>	Turn off receiver gate only
<code>recon()</code>	Turn on receiver gate only
<code>setstatus*</code>	Set status of observe transmitter or decoupler transmitter
<code>status(state)</code>	Change status of decoupler and homospoil
<code>statusdelay(state,time)</code>	Execute status statement with given delay time
<code>xmtroff()</code>	Turn off observe transmitter
<code>xmtron()</code>	Turn on observe transmitter
* <code>setstatus(channel,on,mode,sync,mod_freq)</code>	

Gating States

Use `status(state)` to control decoupler and homospoil gating in a pulse sequence, where `state` is A to Z (e.g., `status(A)` or `status(B)`). Parameters controlled by `status` are `dm` (first decoupler mode), `dmm` (first decoupler modulation mode), and `hs` (homospoil). For systems with a third or fourth rf channel, `dm2` and `dm3` (second and third decoupler modes) and `dmm2` and `dmm3` (second and third decoupler modulation mode) are also under `status` control. For systems with a deuterium decoupler channel as the fourth decoupler, `dm4` and `dmm4` are under `status` control.

Each of these parameters can have multiple states: `status(A)` sets each parameter to the state described by the first letter of its value, `status(B)` uses the second letter, etc. If a pulse sequence has more `status` statements than there are status modes for a particular parameter, control reverts to the last letter of the parameter value. Thus, if `dm='ny'`, `status(C)` will look for the third letter, find none, and then use the second letter (`y`) and turn the decoupler on. (The `status` statement is available on the *GEMINI 2000* although homospoil is not possible on *GEMINI 2000* systems.)

Use `setstatus(channel,on,mode,sync,mod_freq)` to control decoupler gating as well as decoupler modulation modes (GARP, CW, WALTZ, etc.). `channel` is

OBSch, DECch, DEC2ch, or DEC3ch, on is TRUE or FALSE, mode is a decoupler mode ('c', 'g', 'p', etc.), sync is TRUE or FALSE, and mod_freq is the modulation frequency (e.g., `setstatus(DECch, TRUE, 'w', FALSE, dmf)`). (The `setstatus` statement is not available on the *MERCURY-VX*, *MERCURY*, or *GEMINI 2000*.)

`setstatus` provides a way to set transmitters independent of the parameters, one channel at a time. For example, `setstatus(OBSch, TRUE, 'g', TRUE, obs_mf)`, turns the observe transmitter (OBSch) on (TRUE), using GARP modulation ('g') in synchronized mode (TRUE) with a modulation frequency of `obs_mf`. (The `obs_mf` parameter will need to be calculated from a parameter set with an appropriate `getval` statement.)

Note: Be sure to set the power to a safe level before calling `setstatus`.

Timing for `setstatus` is the same as for the `status` statement except that only one channel needs to be taken into account. To ensure that the timing is constant for the status, use the `statusdelay` statement (e.g., `statusdelay(A, 2.0e-5)`).

Homospoil gating is treated somewhat differently than decoupler gating. If a particular homospoil code letter is 'y', delays coded as `hsdelay` that occur when the `status` corresponds to that code letter will begin with a homospoil pulse, the duration of which is determined by the parameter `hst`. Thus if `hs='ny'`, all `hsdelay` delays that occur during `status(B)` will begin with a homospoil pulse. The final status always occurs during acquisition, at which time a homospoil pulse is not permitted. Thus, if a particular pulse sequence uses `status(A)`, `status(B)`, and `status(C)`, `dm` and other decoupler parameters may have up to three letters, but `hs` will only have two, since `hs='y'` during `status(C)` would be meaningless and is ignored.

Transmitter Gating

On all systems, transmitter gating is handled as follows:

- Explicit transmitter gating in the pulse sequence is provided by `xmtroff()` and `xmtron()`. Transmitter gating is handled automatically by `obspulse`, `pulse`, `rgpulse`, `simpulse`, `sim3pulse`, `shaped_pulse`, `simshaped_pulse`, `sim3shaped_pulse`, and `spinlock`. The `obsprgon` statement should generally be enabled with an explicit `xmtron` statement, followed by `xmtroff`.
- Explicit gating of the first decoupler in the pulse sequence is provided by `decoff()` and `decon()`. First decoupler gating is handled automatically by `decpulse`, `decrgpulse`, `declvlon`, `declvloff`, `simpulse`, `sim3pulse`, `decshaped_pulse`, `simshaped_pulse`, `sim3shaped_pulse`, and `decspinlock`. The `decprgon` function should generally be enabled with explicit `decon` statement and followed by a `decoff` call.
- Explicit gating of the second decoupler in the pulse sequence is provided by `dec2off` and `dec2on`. Second decoupler gating is handled automatically by `dec2pulse`, `dec2rgpulse`, `sim3pulse`, `dec2shaped_pulse`, `sim3shaped_pulse`, and `dec2spinlock`. The `dec2prgon` function should generally be enabled with an explicit `d2con` statement, followed by `dec2off`.
- Likewise, explicit gating of the third decoupler in the pulse sequence is provided by `dec3off` and `dec3on`. Third decoupler gating is handled automatically by `dec3pulse`, `dec3rgpulse`, `dec3shaped_pulse`, and `dec3spinlock`. The `dec3prgon` function should generally be enabled with an explicit `dec3con` statement, followed by `dec3off`.

On the *GEMINI 2000*, all amplifier types are handled internally in `declvlon()` and `declvloff()`. No explicit declaration is needed (as described above). `declvlon` and `declvloff` have no effect on *MERCURY-VX* and *MERCURY* systems. The variable

`declvlflag` is added to *GEMINI 2000*, *MERCURY-VX*, and *MERCURY* pulse sequence programming to distinguish between the two within a pulse sequence (`declvlflag` is TRUE for *GEMINI 2000*, and FALSE for *MERCURY-VX* and *MERCURY*). See `dept.c` for an example.

On UNITY and VXR-S systems with class C amplifiers, to switch from low-power to high-power decoupling, insert the statement `dhpflag=TRUE` or the statement `dhpflag=FALSE` in a pulse sequence just before a `status` statement (correct use of upper and lower case letters is necessary). `dhpflag=TRUE` switches the system to high-power decoupling, and `dhpflag=FALSE` switches to low-power decoupling.

Receiver Gating

Explicit receiver gating in the pulse sequence is provided by the `rcvroff()`, `rcvron()`, `recoff()`, and `recon()` statements. These statements control the receiver gates except when pulsing the observe channel (in which case the receiver is off) or during acquisition (in which case the receiver is on). The `recoff` and `recon` statements (available only on UNITYINOVA systems) affect the receiver gate only and do not affect the amplifier blanking gate, which is the role of `rcvroff` and `rcvron`.

- On UNITYINOVA and GEMINI 2000, the receiver is on only during acquisition except for certain imaging pulse sequences that have explicit acquires (such as SEMS, MEMS, and FLASH), and for the `initparms_sis()` statement that defaults the receiver gate to on.
- On MERCURY-VX, MERCURY, UNITY, and VXR-S, receiver gating is tied to the amplifier blanking and is normally controlled automatically by the pulse statements `rgpulse`, `pulse`, `obspulse`, `decrpulse`, `decpulse`, and `dec2rgpulse`.
- On UNITYplus, the observe amplifier blanking and the receiver gate are tied together. Because the decouplers do not affect the receiver (and vice versa), only the `rgpulse`, `pulse`, and `obspulse` statements and a shaped pulse statement gate the receiver.

Amplifier Channel Blanking and Unblanking

Amplifier channel blanking and unblanking methods depend on the system.

- On UNITYINOVA, the receiver and amplifiers are not linked. To explicitly blank and unblank amplifiers, the following statements are provided:
 For the amplifier associated with the observe transmitter:
`obsblank()` and `obsunblank()`.
 For the amplifiers associated with the first, second, and third decouplers:
`decblank()` and `decunblank()`, `dec2blank()` and `dec2unblank()`,
 and `dec3blank()` and `dec3unblank()`, respectively.
 These statements replace `blankon` and `blankoff`, no longer in VNMR.
- On MERCURY-VX and MERCURY, the receiver and amplifier are linked. At the end of each pulse statement, the receiver is automatically turned back on and the amplifier blanked. Immediately prior to data acquisition, the receiver is implicitly turned back on.
- On UNITYplus, the receiver is linked to the observe amplifier. The statements to blank and unblank amplifiers on the UNITYINOVA also apply to the UNITYplus.
- On UNITY and VXR-S, the receiver is linked to both amplifiers. At the end of each pulse statement, if and only if the receiver has not been previously turned off explicitly by a `rcvroff()` statement, the receiver is automatically turned back on and the amplifier blanked. Immediately prior to data acquisition, the receiver is implicitly turned back

on and the amplifier off. UNITY and VXR-S systems use the `obsunblank()` and `decunblank()` statements to unblank the amplifiers.

- On *GEMINI 2000*, the receiver and amplifier are not linked. The receiver is turned on just before the acquisition and turned off during the rest of the pulse sequence; however, the `blankingon()` and `blankingoff()` statements blank and unblank both amplifier channels, as well as turn the amplifiers off and on.

Interfacing to External User Devices

All consoles provide some means of interfacing to external user devices. [Table 15](#) lists the statements available for this feature.

Table 15. Interfacing to External User Devices

<code>readuserap(rtvalue)</code>	Read input from user AP register
<code>setuserap(value, nreg)</code>	Set user AP register
<code>sp#off()</code> , <code>sp#on()</code>	Turn off and on specified spare line
<code>vsetuserap(rtvalue, nreg)</code>	Set user AP register using real-time variable

User-Dedicated Spare Lines

One or more user-dedicated spare lines are available for high-speed device control:

- *UNITY INOVA* consoles have five spare lines in the Breakout panel on the rear of the left cabinet. Each spare line is a BNC connector. The `sp#on()` and `sp#off()` statements control specified SPARE lines.
- *GEMINI 2000* consoles have a single user-dedicated spare line.
- *UNITYplus* consoles have two spare line on the front panel of the Pulse Sequence Controller board in the digital cardcage. Each spare line is a SMB connector. The `sp#on()` and `sp#off()` statements control specified SPARE lines. LEDs between the two connectors indicate activity on each line.
- UNITY and VXR-S consoles have spare lines on the Interface board.

User AP (Analog Port) Lines

UNITY INOVA consoles have two 24-pin user AP connectors, J8212 and J8213, in the Breakout panel on the rear of the left cabinet. Each connector has 16 user-controllable lines coinciding with two 8-bit AP bus registers. All four of the AP bus registers are writeable but only one register is readable.

[Table 16](#) shows the mapping of the user AP lines. On both connectors, lines 17 to 25 are ground lines.

Table 16. Mapping of User AP Lines

Register	Connector	Lines	Function
0	J8213	9 to 16	output
1	J8213	1 to 8	output
2	J8212	9 to 16	output
3	J8212	1 to 8	input/output

User AP lines allow the synchronous access by users to external services while running a pulse sequence. The statements `setuserap(value, reg)`, `vsetuserap(rtvar, reg)`, and `readuserap(rtvar)` provide access to these lines.

The `setuserap` and `vsetuserap` statements enable writing 8-bit information to one of four registers. Each write takes one AP bus cycle, which is 0.5 μ s for the *UNITY INOVA*. The

only difference between `setuserap` and `vsetuserap` is that `vsetuserap` uses a real-time variable to set the value.

The `readuserap` statement lets you read 8-bit information from the register into a real-time variable. You can then act on this information using real-time math and real-time control statements while the pulse sequence is running; however, because the system has to wait for the data to be read before it can continue parsing and stuffing the FIFO, a significant amount of overhead is involved in servicing the read and refilling the FIFO. The `readuserap` statement takes 500 μ s to execute. The `readuserap` statement puts in a 500 μ s delay immediately after reading the user AP lines in order for the parser to parse and stuff more words into the FIFO before it underflows. However, this time may not be long enough and you may want to pad this time with a delay immediately following the `readuserap` statement to avoid FIFO underflow. Depending on the actions in the pulse sequence, your delay may need to be a number of milliseconds. If there is an error in the read, a warning message is sent to the host and a `-1` is returned to the real-time variable.

2.4 Pulse Sequence Statements: Phase and Sequence Control

As explained previously, a series of internal variables, named `v1`, `v2`, ..., `v14`, are provided to perform calculations during “real-time” (while the pulse sequence is executing). All real-time variables are pointers to particular memory locations in the acquisition computer. You do not change a real-time variable, rather you change the value in the memory location to which that real-time variable points.

For example, when we speak of `v1` being set equal to 1, what we really means is that the value in the memory location pointed to by the real-time variable `v1` is 1. The actual value of `v1`, a pointer, is not changed. The two ideas are interchangeable as long as we recognize exactly what is happening at the level of the acquisition computer.

These internal, real-time variables can be used for a number of purposes, but the two most important are control of the pulse sequence execution (for looping and conditional execution, for example) and calculation of phases. For each pulse in the sequence, the phase is calculated dynamically (at the start of each transient) rather than entirely at the start of this experiment. This allows phase cycles to attain essentially unlimited length, because only one number must be calculated for each phase during each transient. By contrast, attempting to calculate in advance a phase cycle with a cycle of 256 transients and different phases for each of 5 different pulses would require storing 256×5 or 1280 different phases.

Real-Time Variables and Constants

The following variables and constants can be used for real-time calculations:

<code>v1</code> to <code>v14</code>	Real-time variables, used for calculations of loops, phases, etc. They are at the complete disposal of the user. The variables point to 16-bit integers, which can hold values of -32768 to $+32767$.
<code>ct</code>	Completed transient counter, points to a 32-bit integer that is incremented after each transient, starting with a value of 0 prior to the first experiment. This pattern (0,1,2,3,4, ...) is the basis for most calculations. Steady-state transients, invoked by the <code>ss</code> parameter, do not change <code>ct</code> .

<code>bsctr</code>	Block size counter, points to a 16-bit integer that is decremented from <code>bs</code> to 1 during each block of transients. After completing the last transient in the block, <code>bsctr</code> is set back to a value of <code>bs</code> . Thus if <code>bs=8</code> , <code>bsctr</code> has successive values of 8,7,6,5,4,3,2,1,8,7,
<code>oph</code>	Real-time variable that controls the phase of the receiver in 90° increments (0=0°, 1=90°, 2=180°, and 3=270°). Prior to the execution of the pulse sequence itself, <code>oph</code> is set to 0 if parameter <code>cp</code> is set to 'n', or to the successive values 0, 1, 2, 3, 0, 1, 2, 3,... if <code>cp</code> is set to 'y'. The value of <code>oph</code> can be changed explicitly in the pulse sequence by any of the real-time math statements described in the next section (<code>assign</code> , <code>add</code> , etc.) and is also changed by the <code>setreceiver</code> statement.
<code>zero, one, two, three</code>	Pointers to constants set to select constant phases of 0°, 90°, 180°, and 270°. They <i>cannot</i> be replaced by numbers 0, 1, 2, and 3.
<code>ssval, ssctr, bsval</code>	Real-time variables described in “ Manipulating Acquisition Variables ,” page 102.
<code>id2, id3, id4</code>	Pointers (or indexes) to constants identifying the current increment in multidimensional experiments. <code>id2</code> is the current <code>d2</code> increment. Its value ranges from 0 to the size of the <code>d2</code> array minus 1, which is typically 0 to (<code>ni-1</code>). <code>id3</code> corresponds to current index of the <code>d3</code> array in a 3D experiment. Its range is 0 to (<code>ni2-1</code>). <code>id4</code> corresponds to the current index of the <code>d4</code> array. Its range is 0 to (<code>ni3-1</code>).

Calculating in Real-Time Using Integer Mathematics

A series of special integer mathematical statements are provided that are fast enough to execute in real-time: `add`, `assign`, `dbl`, `decr`, `divn`, `hlv`, `incr`, `mod2`, `mod4`, `modn`, `mult`, and `sub`. These statements are summarized in [Table 17](#).

Table 17. Integer Mathematics Statements

<code>add(vi, vj, vk)</code>	Add integer values: set <code>vk</code> equal to <code>vi + vj</code>
<code>assign(vi, vj)</code>	Assign integer values: set <code>vj</code> equal to <code>vi</code>
<code>dbl(vi, vj)</code>	Double an integer value: set <code>vj</code> equal to <code>2•vi</code>
<code>decr(vi)</code>	Decrement an integer value: set <code>vi</code> equal to <code>vi - 1</code>
<code>divn(vi, vj, vk)</code>	Divide integer values: set <code>vk</code> equal to <code>vi div vj</code>
<code>hlv(vi, vj)</code>	Find half the value of an integer: set <code>vj</code> to integer part of <code>0.5•vi</code>
<code>incr(vi)</code>	Increment an integer value: set <code>vi</code> equal to <code>vi + 1</code>
<code>mod2(vi, vj)</code>	Find integer value modulo 2: set <code>vj</code> equal to <code>vi modulo 2</code>
<code>mod4(vi, vj)</code>	Find integer value modulo 4: set <code>vj</code> equal to <code>vi modulo 4</code>
<code>modn(vi, vj, vk)</code>	Find integer value modulo n: set <code>vk</code> equal to <code>vi modulo vj</code>
<code>mult(vi, vj, vk)</code>	Multiply integer values: set <code>vk</code> equal to <code>vi•vj</code>
<code>sub(vi, vj, vk)</code>	Subtract integer values: set <code>vk</code> equal to <code>vi - vj</code>

Remember that integer mathematics does not include fractions. If a fraction appears in a result, the value is truncated; thus, one-half of 3 is 1, not 1.5.

Integer statements also use the *modulo*, which is the number that remains after the modulo number is divided into the original number. For example, the value of 8 modulo 2 (often abbreviated “8 mod 2”) is found by dividing 2 into 8, giving an answer of 4 with a remainder of 0, so 8 mod 2 is 0. Similarly, 9 mod 2 is 1, since 2 into 9 gives 4 with a

remainder of 1. The modulus of a negative number is not defined in VNMR software and should not be used.

Each statement performs one calculation at a time. For example, `hlv(ct, v1)` takes half the current value of `ct` and places it in the variable `v1`. Before each transient, `ct` has a given value (e.g., 7), and after this calculation, `v1` has a certain value (e.g., 3 if `ct` was 7).

To visualize the action of a statement over the course of a number of transients, pulse sequences typically document this action explicitly as part of their comments. The comment `v1=0,0,1,1, ...` (or `v1=001122...`) means that `v1` assumes a value of 0 during the first transient, 0 during the second, 1 during the third, etc.

The following series of examples illustrates the action of integer mathematics statements and how comments are typically used:

```
hlv(ct, v1);          /* v1=0011223344... */
dbl(v1, v1);         /* v1=0022446688... */
mod4(v1, v1);        /* v1=0022002200... */

mod2(ct, v2);        /* v2=010101... */
dbl(v2, v3);         /* v3=020202... */

hlv(v1, v2);         /* v1=00112233... */
dbl(v1, v1);         /* v1=00224466... */
add(v1, v2, v3);     /* v3=00225577... */
mod4(v3, oph);       /* oph=00221133..., receiver phase cycle */
```

Note that the same variable can be used as the input and output of a particular statement (e.g., `dbl(v1, v1)` is fine so it is not necessary to use `dbl(v1, v2)`). Note also that although the `mod4` statement is used in several cases, it is never necessary to include it, even if appropriate, because an implicit modulo 4 is always performed on all phases (except when setting small-angle phase shifts).

The division provided by the `divn` statement is integer division, thus remainders are ignored. `vj` in each case must be a real-time variable and not a real number (like 6.0) or even an integer constant (like 6). To perform, for example, a modulo 6 operation, something like the following is required:

```
initval(6.0, v1);
modn(v2, v1, v7);    /* v7 is v2 modulo 6 */
```

Controlling a Sequence Using Real-Time Variables

In addition to being used for phase calculations, real-time variables can also be used for pulse sequence control. Table 18 lists pulse sequence control statements.

Table 18. Pulse Sequence Control Statements

<code>elsenz(vi)</code>	Execute succeeding statements if argument is nonzero
<code>endif(vi)</code>	End ifzero statement
<code>endloop(index)</code>	End loop
<code>ifzero(vi)</code>	Execute succeeding statements if argument is zero
<code>initval(realnumber, vi)</code>	Initialize a real-time variable to specified value
<code>loop(count, index)</code>	Start loop

By placing pulse sequence statements between a `loop(count, index)` statement and an `endloop(index)` statement, the enclosed statements can be executed repeatedly.

The `count` argument used with `loop` is a real-time variable that specifies the number of times to execute the enclosed statements. `count` can be any positive number, including zero. `index` is a real-time variable used as a temporary counter to keep track of the number of times through the enclosed statements, and must not be altered by any of the statements. An example of using `loop` and `endloop` is the following:

```
mod4(ct,v5);          /* times through loop: v5=01230123... */
loop(v5,v3);         /* v3 is a dummy to keep track of count */
  delay(d3);         /* variable delay depending on the ct */
endloop(v3);
```

Statements within the pulse sequence can be executed conditionally by being enclosed within `ifzero(vi)`, `elsenz(vi)`, and `endif(vi)` statements. `vi` is a real-time variable used as a test variable, to be tested for either being zero or non-zero. The `elsenz` statement may be omitted if it is not desired. It is also not necessary for any statements to appear between the `ifzero` and the `elsenz` or the `elsenz` and the `endif` statements. The following code is an example of a conditional construction:

```
mod2(ct,v1);          /* v1=010101... */
ifzero(v1);           /* test if v1 is zero */
  pulse(pw,v2);       /* execute these statements */
  delay(d3);          /* if v1 is zero */
elsenz(v1);           /* test if v1 is non-zero */
  pulse(2.0*pw,v2);   /* execute these statements */
  delay(d3/2.0);      /* if v1 is non-zero */
endif(v1);
```

A syntactical difference exists between the `ifzero` statement on the *MERCURY* and *GEMINI 2000* systems compared to other Varian spectrometers. On the *MERCURY* and *GEMINI 2000*, the sequence above must be written as follows:

```
mod2(ct,v1);
ifzero(1,v1);         /* note different syntax on GEMINI 2000 */
  pulse(pw,v2);
  delay(d3);
elsenz(1);            /* note different syntax on GEMINI 2000 */
  pulse(2.0*pw,v2);
  delay(d3/2.0);
endif(1);             /* note different syntax on GEMINI 2000 */
```

If numbers other than those easily accessible in integer math (such as `ct`, `oph`, `three`) are needed, any variable can be initialized to a value with the `initval(number,vi)` statement (e.g., `initval(4.0,v9)`). The real number input is rounded off and placed in the variable `vi`. This statement, unlike the statements such as `add` and `sub` described above, is executed once and *only once* at the start of a non-arrayed 1D experiment or at the start of each increment in a 2D experiment or an arrayed 1D experiment, not at the start of each transient.

Real-Time vs. Run-Time—When Do Things Happen?

It may help to explain the pulse sequence execution process in more detail. When you enter `go`, the `go` program is executed. This program looks up the various parameters, examines the name of the current pulse sequence, and looks in `seqlib` for a file of that name. The file in `seqlib` is a compiled C program, which was compiled with the `seqgen` command. This program, which is run by the `go` program, combines the parameters supplied to it by `go` together with a series of instructions that form the pulse sequence.

The output of the pulse sequence program in `seqlib` is a table of numbers, known as the *code table* (generally referred to as *Acodes* or *Acquisition codes*), which contains instructions for executing a pulse sequence in a special language. The pulse sequence program sends a message to the acquisition computer to begin operation, informing it where the code table is stored. This code table is downloaded into the acquisition computer and processed by an interpreter, which is executing in the acquisition computer and which controls operation during acquisition. If after entering `go` or `su`, etc., the message that PSG aborted abnormally appears, run the `psg` macro to help identify the problem.

A pulse sequence can intermix statements involving C, such as `d2=1.0/(2.0*J)`, with special statements, such as `hlv(ct, v2)`. These two statements are fundamentally different kinds of operations. When you enter `go`, all higher-level expressions are evaluated, once for each increment. Thus in `d2=1.0/(2.0*J)`, the value of `J` is looked up, `d2` is calculated as one divided by `2*J`, and the value of `d2` is fixed. Statements in this category are called *run-time*, since they are executed when `go` is run. The `hlv` statement, however, is executed every transient. Before each transient, the system examines the current value of `ct`, performs the integer `hlv` operation, and sets the variable `v2` (used for phases, etc.) to that value. On successive transients, `v2` has values of 0,0,1,1,2,2, etc. Statements like these are called *real-time*, because they execute during the real-time operation of the pulse sequence.

Run-time statements, then, are statements that are evaluated and executed in the host computer by the pulse sequence program in `seqlib` when you enter `go`. Real-time statements are statements that are repeatedly (every transient) executed by the code program run in the acquisition computer. Therefore, it is not possible to include a statement like `d2=1.0+0.33*ct`. The variable `ct` is a real-time variable (it is actually an integer pointer variable), while “C-type” mathematics are a run-time operation. Only the special real-time statements included in this section can be executed on a transient-by-transient basis.

Manipulating Acquisition Variables

Certain acquisition parameters, such as `ss` (steady-state pulses) and `bs` (block size), cannot be changed in a pulse sequence with a simple C statement. The reason is that by the time the `pulsesequence` function is executed, the values of these variables are already stored in a region of the host computer memory that will subsequently form the “low-core” portion of the acquisition code in the acquisition computer. These memory locations can be accessed and modified, however, by using real-time math functions with the appropriate real-time variables.

The value of `ss` in low core is associated with real-time variables `ssval` and `ssctr`:

- `ssval` is never modified by the acquisition computer unless specifically instructed by statements within the pulse sequence.
- `ssctr` is automatically initialized to `ssval`.

For the first increment *only*, if `ssval` is greater than zero, or else before every increment in an arrayed 1D or 2D experiment, `ssctr` is decremented after each steady-state transient until it reaches 0. When `ssctr` is 0, all subsequent transients are collected as data.

The value of `bs` in low core is associated with real-time variables `bsval` and `bsctr`:

- `bsval` is never modified by the acquisition computer unless specifically instructed by statements within the pulse sequence.
- `bsctr` is automatically initialized to `bsval` after each block of transients has been completed.

During the acquisition of a block of transients, `bsctr` is decremented after each transient. If `bsval` is non-zero, a zero value for `bsctr` signals that the block of transients is complete.

The ability within a pulse sequence to modify the values of these low core acquisition variables can be used to add various capabilities to pulse sequences. As an example, the following pulse sequence illustrates the cycling of pulse and receiver phases during steady-state pulses:

```
#include <standard.h>
pulsesequence()
{
    /* Implement steady-state phase cycling */
    sub(ct,ssctr,v10);
    initval(16.0,v9);
    add(v10,v9,v10);
    /* Phase calculation statements follow,
       using v10 in place of ct as the starting point */
    /* Actual pulse sequence goes here */
}
```

Intertransient and Interincrement Delays

When running arrayed or multidimensional experiments (using `ni`, `ni2`, etc.), certain operations are done preceding and following the pulse sequence for every array element, the same as there are operations preceding and following the pulse sequence for every transient. These overhead operations take up time that may need to be accounted for when running a pulse sequence. This might be especially important if the repetition time of a pulse sequence has to be maintained across every element and every scan during an arrayed or multidimensional experiment.

These overhead times between increments (array elements) and transients on ^{UNITY}*INOVA* systems are deterministic (i.e., both known and constant); however, the time between increments, which we will call x , is longer than the time between transients, which we will call y . Also, the time between increments will change depending on the number of rf channels.

To maintain a constant repetition time for ^{UNITY}*INOVA* systems, a parameter called `d0` (for `d-zero`) can be created so that $x=y+d0$. Because the interincrement overhead time will differ with different system configurations—and to keep the `d0` delay consistent across systems—if `d0` is set greater than the overhead delay, the inter-FID delay x is padded such that $y+d0=x+(d0-(x-y))$. In other words, `d0` is used to set a standard delay so the interincrement delay and the intertransient delay are the same when executing transient scans within an array element. The delay is inserted at the beginning of each scan of a FID after the first scan has completed. The `d0` delay can be set by the user or computed by PSG (if `d0` is set to 'n'). When `d0` does not exist, no delay is inserted.

Another factor to consider when keeping a consistent timing in the pulse sequence is the `status` statement. The timing of this statement varies depending on the number of channels and the type of decoupler modulation. To keep this timing constant, there is the pulse sequence statement `statusdelay` that allows the user to set a constant delay time for changing the status. For this to work, the delay time has to be longer than the time it takes to set the status. For timing and more information, see the description of `statusdelay` in Chapter 3.

The overhead operations preceding every transient are resetting the DTM (data-to-memory) control information. The overhead operations following every transient are error

detection for number of points and data overflow; detection for blocksize, end of scan, and stop acquisition; and resetting the decoupler status. `d0` does not take these delays into account.

The overhead operations preceding every array element are initializing the rf channel settings (frequency, power, etc.), initializing the high-speed (HS) lines, initializing the DTM, and if arrayed, setting the receiver gain. `d0` does not take into account arraying of decoupler status shims, VT, or spinning speed.

Controlling Pulse Sequence Graphical Display

The `dps_off`, `dps_on`, `dps_skip`, and `dps_show` statements, summarized in [Table 19](#), can be inserted into a pulse sequence to control the graphical display of the pulse sequence statements by the `dps` command:

- To turn off `dps` display of statements, insert `dps_off ()` into the sequence. All pulse sequences following `dps_off` will not be shown.
- To turn on `dps` display of statements, insert `dps_on ()` into the sequence. All pulse sequences following `dps_on` will be shown.
- To skip `dps` display of the next statement, insert `dps_skip ()` into the sequence. The next pulse sequence statement will not be displayed.
- To draw pulses for `dps` display, insert `dps_show (options)` statements into the pulse sequence. The pulses will appear in the graphical display of the sequence.

Many options to `dps_show` are available. These options enable drawing a line to represent a delay, drawing a pulse picture and displaying the channel name below the picture, drawing shaped pulses with labels, drawing observe and decoupler pulses at the same time, and much more. Refer to Chapter 3, “Pulse Sequence Statement Reference,” for a full description of `dps_show`, including examples.

Table 19. Statements for Controlling Graphical Display of a Sequence

<code>dps_off ()</code>	Turn off graphical display of statements
<code>dps_on ()</code>	Turn on graphical display of statements
<code>dps_show (options) *</code>	Draw delay or pulses in a sequence for graphical display
<code>dps_skip ()</code>	Skip graphical display of next statement
* <code>dps_show</code> has many options. See Chapter 3, “Pulse Sequence Statement Reference,” for the syntax and examples of use.	

2.5 Real-Time AP Tables

Real-time acquisition phase (AP) tables can be created under pulse sequence control on all systems except *GEMINI 2000*. These tables can store phase cycles, an array of attenuator values, etc. In the pulse sequence, the tables are associated with variables `t1`, `t2`, ... `t60`.

The following pulse sequence statements accept the table variables `t1` to `t60` at any place where a simple AP variable, such as `v1`, can be used:

<code>pulse</code>	<code>rgpulse</code>	<code>decpulse</code>
<code>decrpulse</code>	<code>dec2rgpulse</code>	<code>dec3rgpulse</code>
<code>simpulse</code>	<code>txphase</code>	<code>decphase</code>
<code>dec2phase</code>	<code>dec3phase</code>	<code>xmtrphase</code>
<code>dcplrphase</code>	<code>dcplr2phase</code>	<code>dcplr3phase</code>

phaseshift	spinlock	decspinlock
dec2spinlock	dec3spinlock	shaped_pulse
decshaped_pulse	dec2shaped_pulse	dec3shaped_pulse
simshaped_pulse	sim3shaped_pulse	power
pwrif		

For example, the statement `rgpulse(pw, t1, rof1, rof2)` performs an observe transmitter pulse whose phase is specified by a particular statement in the real-time AP table `t1`, whereas `rgpulse(pw, v1, rof1, rof2)` performs the same pulse whose phase is specified by the real-time variable `v1`. The real-time math functions `add()`, `assign()`, etc. listed in [Table 17](#) cannot be used with tables `t1`–`t60`. The appropriate functions to use are given in [Table 20](#).

Statements using a table can occur anywhere in a pulse sequence except in the statements enclosed by an `ifzero-endif` pair.

Loading AP Table Statements from UNIX Text Files

Table statements can be loaded from an external UNIX text file with the `loadtable` statement or can be set directly within the pulse sequence with the `settable` statement. The values stored must be integral and must lie within the 16-bit integer range of `-32768` to `32767`.

The AP table file must be placed in the user's private directory `tablib`, which might be, for example, `/home/vnmr1/vnmrsys/tablib`, or in the system directory for table files, `/vnmr/tablib`. The software looks first in the user's personal `tablib` directory for a table of the specified name, then in the system directory. The format for the table file is quite flexible, comments are allowed, and several special notations are available.

Table Names and Statements

Entries in the table file are referred to as *table names*. Each table name must come from the set `t1` to `t60` (e.g., `t14` is a table name). A table name may be used only once within the table file. If a table name is used twice within the table file, an error message is displayed and pulse sequence generation (PSG) aborts.

Each table statement must be written as an integer number and separated from the next statement by some form of “white” space, such as a blank space, tab, or carriage return. The maximum number of statements per table is 8192. For the average pulse sequence, the maximum number of table statements per *experiment* is approximately 10,000.

The table name is separated from the table statements by an `=` or a `+=` sign (the `+=` sign is explained below), and there must be a space between the table name and either of these two signs. For example, if a table file contains the table name `t1` with statements 0, 1, 2, 3, 2, 3, 0, 1, it would be written as `t1 = 0 1 2 3 2 3 0 1`.

The index into a table can range from 0 to 1 less than the number of statements in the table. Note that an index of 0 will access the *first* statement in the table. Unless the autoincrement attribute (described below) is imparted to the table, the index into the table is given by `ct`, the completed transient counter.

If the number of transients exceeds the length of the table, access to the table begins again at the beginning of the table. Thus, given a table of length n with statements numbered 0 through $n-1$ (this numbering is strictly a way to think about the numbering and does not imply the statements are actually numbered), then when the transient number is `ct`, the

number of the statement of the table that will be used is $ct \bmod n$ (remember that ct starts at 0 on the first transient, since ct represents the number of *completed* transients).

AP Table Notation

Special notation is available within the table file to simplify entering the table statements and to impart specific attributes to any table within that file:

- (. . .)# Indicates the table segment within the parentheses is to be replicated in its entirety # times (where # ranges from 1 to 64) before preceding to any succeeding statements or segments. Do not include any space after “)”. For example,
`t1=(0 1 2)3 /* t1 table=012012012 */.`
- [. . .]# Indicates *each* statement in the table segment within square brackets is to be replicated # times (where # ranges from 1 to 64) before going to the *next* statement in that segment. Do not include any space after “]”. For example,
`t1=[0 1 2]3 /* t1 table=000111222 */.`
- { . . . }# Imparts the “divn-return” attribute to the table and indicates that the actual index into the table is to be the index divided by the number # (where # ranges from 1 to 64). # is called the *divn factor* and can be explicitly set within a sequence for any table (see `setdivnfactor`). This attribute provides a #-fold level of table compaction to the acquisition processor. The { } notation *must* enclose *all* of the table statements for a given table. This notation should not be used if this table will be subject to table operations such as `ttadd` (see below)—in this case use []#, which is equivalent except for table compression. In entering the { }# notation, do not include any space after “}”.
- += Indicates that the index into the table starts at 0 for each new FID in an array or 2D experiment, is incremented after *each* access of the table and is therefore independent of ct . This is the *autoincrement* attribute, which can delimit the table name from the table statements. It can be explicitly set within a pulse sequence for any table (see `setautoincrement`). Tables using the autoincrement feature cannot be accessed within a hardware loop.

The (. . .)# and [. . .]# notations are expanded by PSG at run-time and, therefore, offer no degree of table compaction to the acquisition processor. Nesting of (. . .) and [. . .] expressions is not allowed. The autoincrement += attribute can be used in conjunction with the divn-return attribute and with the (. . .) and [. . .] notations.

Multiple { . . . } expressions within one table are not allowed, but (. . .) and [. . .] expressions can be placed within a { . . . } expression.

The following examples illustrate combining the notation:

```
t2 = [0 1 2 3]4 (0 0 2 2)4
      /* t2 table = 00001111222233330022002200220022 */
t3 = {0 1 (0 2)2 0 2 [3 1]4}4
      /* t3 table = 0102020233331111 with divn-factor = 4;
      i.e., 00001111000022220000222200002222 ... */
t4 += {0 1 2 3}8
      /* t4 table with autoincrement and divn-factor = 8
      i.e., 00000000111111112222222233333333 with index
```

incremented at each reference to table, not at each ct */

Handling AP Tables

Table 20 lists statements for handling AP tables. None of these statements apply to *GEMINI 2000* systems.

Table 20. Statements for Handling AP Tables

<code>getelem</code> (tablename, APindex, APdest)	Retrieve an element from an AP table
<code>loadtable</code> (file)	Load AP table elements from table text file
<code>setautoincrement</code> (tablename)	Set autoincrement attribute for an AP table
<code>setdivnfactor</code> (tablename, divnfactor)	Set divn-return attribute and divn-factor
<code>setreceiver</code> (tablename)	Associate rcvr. phase cycle with AP table
<code>settable</code> *	Store array of integers in real-time AP table
<code>tsadd</code> (tablename, scalarval, moduloval)	Add an integer to AP table elements
<code>tsdiv</code> (tablename, scalarval, moduloval)	Divide an AP table into a second table
<code>tsmult</code> (tablename, scalarval, moduloval)	Multiply an integer with AP table elements
<code>tssub</code> (tablename, scalarval, moduloval)	Subtract an integer from AP table elements
<code>ttadd</code> *	Add an AP table to a second table
<code>ttdiv</code> *	Divide an AP table into a second table
<code>ttmult</code> *	Multiply an AP table by a second table
<code>ttsub</code> *	Subtract an AP table from a second table
* <code>settable</code> (tablename, numelements, intarray)	
<code>ttadd</code> (tablenamedest, tablenamemod, moduloval)	
<code>ttdiv</code> (tablenamedest, tablenamemod, moduloval)	
<code>ttmult</code> (tablenamedest, tablenamemod, moduloval)	
<code>ttsub</code> (tablenamedest, tablenamemod, moduloval)	

The `loadtable`(file) statement loads AP table statements from table text file. file specifies the name of the table file (a UNIX text file) in the user's personal `tablib` directory or in the VNMR system `tablib` directory. `loadtable` can be called multiple times within a pulse sequence. Care should be taken to ensure that the same table name is not used more than once by the pulse sequence.

The `settable`(tablename, numelements, intarray) statement stores an array of integers in a real-time AP table. `tablename` specifies the name of the table (t1 to t60). `numelements` specifies the size of the table. `intarray` is a C array that contains the table elements. These elements can range from -32768 to 32767. The user must predefine and predimension this array in the pulse sequence using C language statements prior to calling `settable`.

The `getelem`(tablename, APindex, APdest) statement retrieves an element from an AP table. `tablename` specifies the name of the Table (t1 to t60). `APindex` is an AP variable (v1 to v14, oph, ct, bsctr, or ssctr) that contains the index of the desired table element. Note that the first element of an AP table has an index of 0. `APdest` is also an AP variable (v1 to v14 and oph) into which the retrieved table element is placed. For tables for which the autoincrement feature is set, `APindex`, the second argument to `getelem`, is ignored and can be set to any AP variable name; each element in such a table is by definition always accessed sequentially.

The `setautoincrement`(tablename) statement sets the autoincrement attribute for an AP table. `tablename` specifies the name of the table (t1 to t60). The index into the table is set to 0 at the start of an FID acquisition and is incremented after each access into the table. Tables using the autoincrement feature cannot be accessed within a hardware loop.

The `setdivnfactor(tablename, divnfactor)` statement sets the `divn-return` attribute and the `divn-factor` for an AP table. `tablename` specifies the name of the table (`t1` to `t60`). The actual index into the table is now set to `(index/divnfactor)`. `{0 1}2` is therefore translated by the acquisition processor, not by pulse sequence generation (PSG), into `0 0 1 1`. The `divn-return` attribute results in a `divn-factor-fold` compression of the AP table at the level of the acquisition processor.

The `setreceiver(tablename)` statement assigns the `ctth` element of the AP table `tablename` to the receiver variable `oph`. If multiple `setreceiver` statements are used in a pulse sequence, or if the value of `oph` is changed by real-time math statements such as `assign`, `add`, etc., the last value of `oph` prior to the acquisition of data determines the value of the receiver phase.

To perform run-time scalar operations of an integer with AP table elements, use the following statements:

```
tsadd(tablename, scalarval, moduloval)
tssub(tablename, scalarval, moduloval)
tsmult(tablename, scalarval, moduloval)
tsdiv(tablename, scalarval, moduloval)
```

where `tablename` specifies the name of the table (`t1` to `t60`) and `scalarval` is added to, subtracted from, multiplied with, or divided into each element of the table. The result of the operation is taken modulo `moduloval` (if `moduloval` is greater than 0). `tsdiv` requires that `scalarval` is not equal to 0; otherwise, an error is displayed and PSG aborts.

To perform run-time vector operations of one AP table with a second table, use the following table-to-table statements:

```
ttadd(tablenamedest, tablenamemod, moduloval)
ttsub(tablenamedest, tablenamemod, moduloval)
ttmult(tablenamedest, tablenamemod, moduloval)
ttdiv(tablenamedest, tablenamemod, moduloval)
```

where `tablenamedest` and `tablenamemod` are the names of tables (`t1` to `t60`). Each element in `tablenamedest` is modified by the corresponding element in `tablenamemod`. The result, stored in `tablenamedest`, is taken modulo `moduloval` (if `moduloval` is greater than 0). The number of elements in `tablenamedest` must be greater than or equal to the number of elements in `tablenamemod`. `ttdiv` requires that no element in `tablenamemod` equal 0.

Examples of Using AP Tables

This section contains a two-pulse sequence and a homonuclear J-resolved experiment as examples of using AP tables.

Two-Pulse Sequence

Listing 7 is the contents of the files `/home/vnmr1/vnmrsys/psglib/t2pul.c` and `/home/vnmr1/vnmrsys/tablib/t2pul` associated with a hypothetical two-pulse sequence T2PUL.

Notice that `t2` and `t3` are identical. The pulse sequence could have used just one phase for both the observe pulse and the receiver, but using two separate phases in this way provides more flexibility for allowing run-time modification of all phases independently (e.g., a cancellation experiment can be run by changing line 2 in the `tablib` file to `t2 = 0` or by changing line 3 to `t3 = 0`).

Listing 7. Two-Pulse Sequence t2pul.c with Phase Tables

<pre>#include <standard.h> pulsesequenece() { loadtable("t2pul"); status(A); hsdelay(d1); status(B); pulse(p1,t1); hsdelay(d2); status(C); pulse(pw,t2); setreceiver(t3); } </pre>	<pre>t1 = 0 /* 0000 */ t2 = 0 2 1 3 /* 0213 */ t3 = 0 2 1 3 /* 0213 */ </pre>
---	---

Homonuclear J-Resolved Experiment

Listing 8 lists files /home/vnmr1/vnmrsys/psglib/hom2djt.c and /home/vnmr1/vnmrsys/tablib/hom2djt associated with a hypothetical homonuclear J-resolved sequence HOM2DJT.

Listing 8. Homonuclear J-Resolved Sequence hom2djt.c with Phase Tables

<pre>#include <standard.h> pulsesequenece() { loadtable("hom2djt"); ttadd(t1,t4,4); ttadd(t2,t4,4); ttadd(t3,t4,4); status(A); hsdelay(d1); status(B); pulse(pw,t1); delay(d2/2); pulse(p1,t2); delay(d2/2); status(C); setreceiver(t3); } </pre>	<pre>t1 = [0]16 /*0000000000000000 */ t2 = (1 2 3 0)4 /*1230123012301230 */ t3 = (0 2)8 /*0202020202020202 */ t4 = [0 2 1 3]4 /* 0000222211113333 */ </pre>
---	---

This sequence uses “conventional” phase cycling, completely different than the pulse cycling in the standard HOM2DJ sequence found in `psglib`. The phase cycling, contained here in `t4`, is added to the phases by the pulse sequence itself with the series of three `ttadd` statements. This can also be done in the table itself, for example, by replacing the `t2` line in the `tablib` file with `t2 = 1 2 3 0 3 0 1 2 2 3 0 1 0 1 2 3`, which is the completely “spelled out” phase cycle for the second pulse.

When using a table to be referenced with a `ttadd` statement, you *cannot* compress the table by using `t4 = {0 2 1 3}4`. You must use square brackets, which are exactly equivalent to the curly brackets but without achieving table compression at the level of the acquisition processor.

2.6 Accessing Parameters

The `getval` and `getstr` statement look up the value of parameters, providing access to parameters. [Table 21](#) summarizes these statements.

Table 21. Parameter Value Lookup Statements

<code>getstr(parametername, internalname)</code>	Look up value of string parameter
<code>internalname=getval(parametername)</code>	Look up value of numeric parameter

Parameters are defined by the user in particular experiment files (`exp1`, `exp2`, etc.) in which the operation is occurring. These parameters are not the same as the parameters that are accessible to the pulse sequence during its execution, although they are at least potentially the same.

Categories of Parameters

Parameters can be divided into three categories:

- Parameters used in a pulse sequence exactly as in the parameter set; in other words, the name of the parameter (`d1`, for example) is the same in both places. Thus, a statement like `delay(d1)`; is legitimate. [Table 22](#) lists VNMR parameter names and corresponding pulse sequence generation (PSG) variable names and types. [Table 23](#) summarizes VNMR parameter names used primarily for imaging. (Not available on the *GEMINI 2000* are `d3`, `d4`, `dfrq2`, `dfrq3`, `dm2`, `dm3`, `dm4`, `dmf2`, `dmf3`, `dmm2`, `dmm3`, `dmm4`, `dof2`, `dof3`, `dof4`, `dpwr2`, `dpwr3`, `dpwr4`, `dres`, `dres2`, `dres3`, `dres4`, `dseq`, `dseq2`, `dseq3`, `homo`, `homo2`, `homo3`, `inc2D`, `inc3D`, `inc4D`, `nf`, `phase2`, `phase3`, `pwx`, `satdly`, `satpwr`, and `satmode`.)

Table 22. Global PSG Parameters

<i>Acquisition</i>			
extern	char	il [MAXSTR]	interleaved acquisition parameter, 'y', 'n', o
extern	double	inc2D	t1 dwell time in a 3D/4D experiment
extern	double	inc3D	t2 dwell time in a 3D/4D experiment
extern	double	sw	Sweep width
extern	double	nf	Number of FIDs in pulse sequence /
extern	double	np	Number of data points to acquire
extern	double	nt	Number of transients
extern	double	sfrq	Transmitter frequency mix
extern	double	dfrq	Decoupler frequency MHz
extern	double	dfrq2	2nd decoupler frequency MHz
extern	double	dfrq3	3rd decoupler frequency MHz
extern	double	dfrq4	4th decoupler frequency MHz
extern	double	fb	Filter bandwidth
extern	double	bs	Block size
extern	double	tof	Transmitter offset
extern	double	dof	Decoupler offset
extern	double	dof2	2nd decoupler offset
extern	double	dof3	3rd decoupler offset
extern	double	dof4	4th decoupler offset
extern	double	gain	Receiver gain value, or 'n' for autogain
extern	double	dlp	Decoupler low power value
extern	double	dhp	Decoupler low power value
extern	double	tpwr	Transmitter pulse power
extern	double	tpwrf	Transmitter fine linear attenuator for pulse
extern	double	dpwr	Decoupler pulse power
extern	double	dpwrf	Decoupler fine linear attenuator for pulse
extern	double	dpwrf2	2nd decoupler fine linear attenuator
extern	double	dpwrf3	3rd decoupler fine linear attenuator
extern	double	dpwrf4	4th decoupler fine linear attenuator
extern	double	dpwr2	2nd decoupler pulse power
extern	double	dpwr3	3rd decoupler pulse power
extern	double	dpwr4	4th decoupler pulse power
extern	double	filter	Pulse amp filter setting
extern	double	xmf	Transmitter modulation frequency
extern	double	dmf	Decoupler modulation frequency
extern	double	dmf2	Decoupler modulation frequency
extern	double	fb	Filter bandwidth
extern	double	vttemp	VT temperature setting
extern	double	vtwait	VT temperature time-out setting
extern	double	vtc	VT temperature cooling gas setting
extern	double	cpflag	Phase cycling; 1=no cycling, 0=quad detect
extern	double	dhpflag	Decoupler high power flag

Table 22. Global PSG Parameters (continued)

<i>Pulse Widths</i>			
extern	double	pw	Transmitter modulation frequency
extern	double	p1	A pulse width
extern	double	pw90	90° pulse width
extern	double	hst	Time homospoil is active
<i>Delays</i>			
extern	double	alfa	Time after receiver is turned on that acquisition begins
extern	double	beta	Audio filter time constant
extern	double	d1	Delay
extern	double	d2	A delay, used in 2D experiments
extern	double	d3	A delay, used in 3D experiments
extern	double	d4	A delay, used in 4D experiments
extern	double	pad	Preacquisition delay
extern	double	padactive	Preacquisition delay active parameter flag
extern	double	rof1	Time receiver is turned off before pulse
extern	double	rof2	Time receiver is turned on before receiver is turned on
<i>Total Time of Experiment</i>			
extern	double	totaltime	Total timer events for an experiment duration estimate
extern	int	phase1	2D acquisition mode
extern	int	phase2	3D acquisition mode
extern	int	phase3	4D acquisition mode
extern	int	d2_index	d2 increment (from 0 to ni-1)
extern	int	d3_index	d3 increment (from 0 to ni2-1)
extern	int	d4_index	d4 increment (from 0 to ni3-1)
<i>Programmable Decoupling Sequences</i>			
extern	char	xseq[MAXSTR]	
extern	char	dseq[MAXSTR]	
extern	char	dseq2[MAXSTR]	
extern	char	dseq3[MAXSTR]	
extern	char	dseq4[MAXSTR]	
extern	double	xres	Digit resolution prg dec
extern	double	dres	Digit resolution prg dec
extern	double	dres2	Digit resolution prg dec
extern	double	dres3	Digit resolution prg dec
extern	double	dres4	Digit resolution prg dec
<i>Status Control</i>			
extern	char	xm[MAXSTR]	Transmitter status control
extern	char	xmm[MAXSTR]	Transmitter modulation type control
extern	char	dm[MAXSTR]	1st decoupler status control
extern	char	dmm[MAXSTR]	1st decoupler modulation type control
extern	char	dm2[MAXSTR]	2nd decoupler status control

Table 22. Global PSG Parameters (continued)

extern	char	dmm2 [MAXSTR]	2nd decoupler modulation type control
extern	char	dm3 [MAXSTR]	3rd decoupler status control
extern	char	dmm3 [MAXSTR]	3rd decoupler modulation type control
extern	char	dm4 [MAXSTR]	4th decoupler status control
extern	char	dmm4 [MAXSTR]	4th decoupler modulation type control
extern	char	homo [MAXSTR]	1st decoupler homo mode control
extern	char	homo2 [MAXSTR]	2nd decoupler homo mode control
extern	char	homo3 [MAXSTR]	3rd decoupler homo mode control
extern	char	homo4 [MAXSTR]	4th decoupler homo mode control
extern	int	xmsize	Number of characters in xm
extern	int	xmmsize	Number of characters in xmm
extern	int	dmsize	Number of characters in dm
extern	int	dmmsize	Number of characters in dmm
extern	int	dm2size	Number of characters in dm2
extern	int	dmm2size	Number of characters in dmm2
extern	int	dm3size	Number of characters in dm3
extern	int	dmm3size	Number of characters in dmm3
extern	int	dm4size	Number of characters in dm4
extern	int	dmm4size	Number of characters in dmm4
extern	int	homosize	Number of characters in homo
extern	int	homo2size	Number of characters in homo2
extern	int	homo3size	Number of characters in homo3
extern	int	homo4size	Number of characters in homo4
extern	int	hssize	Number of characters in hs

Table 23. Imaging Variables*RF Pulses*

extern	double	p2	Pulse length
extern	double	p3	Pulse length
extern	double	p4	Pulse length
extern	double	p5	Pulse length
extern	double	pi	Inversion pulse length
extern	double	psat	Saturation pulse length
extern	double	pmt	Magnetization transfer pulse length
extern	double	pwX	X-nucleus pulse length
extern	double	pwX2	X-nucleus pulse length
extern	double	ps1	Spin-lock pulse length
extern	char	pwpat [MAXSTR]	Pattern for pw, tpwr
extern	char	pw1pat [MAXSTR]	Pattern for p1, tpwr1
extern	char	pw2pat [MAXSTR]	Pattern for p2, tpwr2
extern	char	pw3pat [MAXSTR]	Pattern for pw3, tpwr3
extern	char	pw4pat [MAXSTR]	Pattern for pw4, tpwr4

Table 23. Imaging Variables (continued)

extern	char	pw5pat [MAXSTR]	Pattern for pw5, tpwr5
extern	char	pipat [MAXSTR]	Pattern for pi, tpwri
extern	char	satpat [MAXSTR]	Pattern for pw, tpwr
extern	char	mtpat [MAXSTR]	Pattern for psat, satpat
extern	char	pslpat [MAXSTR]	Pattern for spin-lock
extern	double	tpwr1	Transmitter pulse power
extern	double	tpwr2	Transmitter pulse power
extern	double	tpwr3	Transmitter pulse power
extern	double	tpwr4	Transmitter pulse power
extern	double	tpwr5	Transmitter pulse power
extern	double	tpwri	Inversion pulse power
extern	double	satpwr	Saturation pulse power
extern	double	mtpwr	Magnetization transfer pulse power
extern	double	pwxlvl	pw _x pulse level
extern	double	pwxlvl2	pw _x 2 power level
extern	double	tpwrs1	Spin-lock power level
<hr/>			
<i>RF Decoupler Pulses</i>			
extern	char	decpat [MAXSTR]	Pattern for decoupler pulse
extern	char	decpat1 [MAXSTR]	Pattern for decoupler pulse
extern	char	decpat2 [MAXSTR]	Pattern for decoupler pulse
extern	char	decpat3 [MAXSTR]	Pattern for decoupler pulse
extern	char	decpat4 [MAXSTR]	Pattern for decoupler pulse
extern	char	decpat5 [MAXSTR]	Pattern for decoupler pulse
extern	char	dpwr1	Decoupler pulse power
extern	char	dpwr4	Decoupler pulse power
extern	char	dpwr5	Decoupler pulse power
<hr/>			
<i>Gradients</i>			
extern	double	gro, gro2, gro3	Readout gradient strength
extern	double	gpe, gpe2, gpe3	Phase encode for 2D, 3D, and 4D
extern	double	gss, gss2, gss3	Slice-select gradients
extern	double	gror	Readout focus
extern	double	gssr	Slice-select refocus
extern	double	grof	Readout refocus fraction
extern	double	gssf	Slice-select refocus fraction
extern	double	g0, g1, ... g9	Numbered levels
extern	double	gx, gy, gz	X, Y, and Z levels
extern	double	gvox1, gvox2, gvox3	Voxel selection
extern	double	gdif	Diffusion encode
extern	double	gflow	Flow encode
extern	double	gspoil, gspoil2	Spoiler gradient levels
extern	double	gcrush, gcrush2	Crusher gradient levels
extern	double	gtrim, gtrim2	Trim gradient levels
extern	double	gramp, gramp2	Ramp gradient levels

Table 23. Imaging Variables (continued)

extern	double	gpemult	Shaped phase encode multiplier
extern	double	gradstepsz	Positive steps in the gradient DAC
extern	double	gradunit	Dimensional conversion factor
extern	double	gmax	Maximum gradient value (G/cm)
extern	double	gxmax	X maximum gradient value (G/cm)
extern	double	gymax	Y maximum gradient value (G/cm)
extern	double	gzmax	Z maximum gradient value (G/cm)
extern	double	gtotlimit	Limit combined gradient values (G/cm)
extern	double	gxlimit	Safety limit for X gradient (G/cm)
extern	double	gylimit	Safety limit for Y gradient (G/cm)
extern	double	gzlimit	Safety limit for Z gradient (G/cm)
extern	double	gxscale	X scaling factor for gmax
extern	double	gyscale	Y scaling factor for gmax
extern	double	gzscale	Z scaling factor for gmax
extern	char	gpatup[MAXSTR]	Gradient ramp-up pattern
extern	char	gpatdown[MAXSTR]	Gradient ramp-down pattern
extern	char	gropat [MAXSTR]	Readout gradient pattern
extern	char	gpepat [MAXSTR]	Phase encode gradient pattern
extern	char	gsspat [MAXSTR]	Slice gradient pattern
extern	char	gpat [MAXSTR]	General gradient pattern
extern	char	gpat1 [MAXSTR]	General gradient pattern
extern	char	gpat2 [MAXSTR]	General gradient pattern
extern	char	gpat3 [MAXSTR]	General gradient pattern
extern	char	gpat4 [MAXSTR]	General gradient pattern
extern	char	gpat5 [MAXSTR]	General gradient pattern
<hr/>			
<i>Delays</i>			
<hr/>			
extern	double	tr	Repetition time per scan
extern	double	te	Primary echo time
extern	double	ti	Inversion time
extern	double	tm	Mid-delay for STE
extern	double	at	Acquisition time
extern	double	tpe, tpe2, tpe3	Phase encode durations for 2D to 4D
extern	double	tcrush	Crusher gradient duration
extern	double	tdiff	Diffusion encode duration
extern	double	tdelta	Diffusion encode duration
extern	double	tDELTA	Diffusion gradient separation
extern	double	tflow	Flow encode duration
extern	double	tspoil	Spoiler duration
extern	double	hold	Physiological trigger hold off
extern	double	trise	Gradient coil rise time: sec
extern	double	satdly	Saturation time
extern	double	tau	General use delay
extern	double	runtime	User variable for total experiment time

Table 23. Imaging Variables (continued)

<i>Frequencies</i>			
extern	double	resto	Reference frequency offset
extern	double	wsfrq	Water suppression offset
extern	double	chessfrq	Chemical shift selection offset
extern	double	satfrq	Saturation offset
extern	double	mtfrq	Magnetization transfer offset
<i>Physical Sizes and Positions (for slices, voxels, and FOV)</i>			
extern	double	pro	FOV position in readout
extern	double	ppe, ppe2, ppe3	FOV position in phase encode
extern	double	pos1, pos2, pos3	Voxel position
extern	double	pss[<small>MAXSLICE</small>]	Slice position array
extern	double	lro	Readout FOV
extern	double	lpe, lpe2, lpe3	Phase encode FOV
extern	double	lss	Dimension of multislice range
extern	double	vox1, vox2, vox3	Voxel size
extern	double	thk	Slice or slab thickness
extern	double	lpe, lpe2, lpe3	Phase encode FOV
extern	double	fovunit	Dimensional conversion factor
extern	double	thkunit	Dimensional conversion factor
<i>Bandwidths</i>			
extern	double	sw1, sw2, sw3	Phase encode bandwidths
<i>Counts and Flags</i>			
extern	double	nD	Experiment dimensionality
extern	double	ns	Number of slices
extern	double	ne	Number of echoes
extern	double	ni	Number of standard increments
extern	double	nv, nv2, nv3	Number phase encode views
extern	double	ssc	Compressed <i>ss</i> transients
extern	double	ticks	External trigger counter
extern	char	ir[<small>MAXSTR</small>]	Inversion recovery flag
extern	char	ws[<small>MAXSTR</small>]	Water suppression flag
extern	char	mt[<small>MAXSTR</small>]	Magnetization flag
extern	char	pilot[<small>MAXSTR</small>]	Auto gradient balance flag
extern	char	seqcon[<small>MAXSTR</small>]	Acquisition loop control flag
extern	char	petable[<small>MAXSTR</small>]	Name for phase encode table
extern	char	acqtype[<small>MAXSTR</small>]	Example: “full” or “half” echo
extern	char	exptype[<small>MAXSTR</small>]	Example: “se” or “fid” in CSI
extern	char	apptype[<small>MAXSTR</small>]	Keyword for parameter init, e.g. “imaging”
extern	char	seqfile[<small>MAXSTR</small>]	Pulse sequence name
extern	char	rfspoil[<small>MAXSTR</small>]	rf spoiling flag
extern	char	satmode[<small>MAXSTR</small>]	Presentation mode

Table 23. Imaging Variables (continued)

extern	char	verbose[<i>MAXSTR</i>]	Verbose mode for sequences and psg
<i>Miscellaneous</i>			
extern	double	rfphase	rf phase shift
extern	double	B0	Static magnetic field level
extern	double	slcto	Slice selection offset
extern	double	delto	Slice spacing frequency
extern	double	tox	Transmitter offset
extern	double	toy	Transmitter offset
extern	double	toz	Transmitter offset
extern	double	griserate	Gradient rise rate

- Parameters used in the pulse sequence derived from those in the parameter set.
- Parameters unknown to the pulse sequence. This includes parameters created by the user for a particular pulse sequence (such as `J` or `mix`) as well as a few surprises, such as `at`, the acquisition time (the pulse sequence does not know this). The statements `getval` and `getstr` are provided for this category.

Looking Up Parameter Values

The statement `internalname=getval(parametername)` allows the pulse sequence to look up the value of any numeric parameter that it otherwise does not know (`parametername`) and introduce it into the pulse sequence in the variable `internalname`. `internalname` can be any legitimate C variable name that has been defined as type `double` at the beginning of the pulse sequence (even if it is created as type `integer`). If `parametername` is not found in the current experiment parameter list, `internalname` is set to zero, and PSG produces a warning message. For example,

```
double j;
...
j=getval("j");
```

The `getstr(parametername, internalname)` statement is used to look up the value of the string parameter `parametername` in the current experiment parameter list and introduce it into the pulse sequence in the variable `internalname`. `internalname` can be any legitimate C variable name that has been defined as array of type `char` with dimension `MAXSTR` at the beginning of the pulse sequence. If the string parameter `parametername` is not found in the current experiment parameter list, `internalname` is set to the null string, and PSG produces a warning message. For example:

```
char coil[MAXSTR];
...
getstr("sysgcoil", coil);
```

Using Parameters in a Pulse Sequence

As an example of using parameters in a pulse sequence, suppose you wish to create a new pulse sequence with new variable names and have it fully functional from VNMR. Usually, the best way to compose a new pulse sequence is to start from a known good pulse sequence

and from a known good parameter set. For many pulse sequences, `s2pul.c` in `/vnmr/psglib` and `s2pul.par` in `/vnmr/parlib` are a good place to start.

To create a new pulse sequence similar to `s2pul` but with new variable names and using a shaped pulse, do the following steps:

1. In a shell window, enter `cd ~/vnmrsys/psglib`.
2. Use a text editor such as `vi` to create the file `newpul.c` shown in [Listing 9](#).

Listing 9. File `newpul.c` for a New Pulse Sequence

```

/* newpul.c - new pulse sequence */
#include <standard.h>

static int ph2[4] = {0,1,2,3};

pulsesequance()
{
    double dlnew, d2new, plnew, pwnew;
    char patnew[MAXSTR];
    dlnew = getval("dlnew");
    d2new = getval("d2new");
    plnew = getval("plnew");
    pwnew = getval("pwnew");
    getstr("patnew",patnew);
    assign(zero,v1);
    settable(t2,4,ph2);
    getelem(t2,ct,v2);

    /* equilibrium period */
    status(A);
    hsdelay(dlnew);

    /* --- tau delay --- */
    status(B);
    pulse(plnew,v1);
    hsdelay(d2new);

    /* --- observe period --- */
    status(C);
    shaped_pulse(patnew,pwnew,v2,rof1,rof2);
    /* If you don't have a waveform generator, */
    /* use the following line: */
    /* apshaped_pulse(patnew,pwnew,v2,t4,t5,rof1,rof2); */
}

```

3. After `newpul.c` is created, in a shell window, enter `seqgen newpul`.

The following lines are displayed during pulse sequence generation:

```

Beginning Pulse Sequence Generation Process...
Adding DPS extensions to Pulse Sequence...
Lint Check of Sequence...
Compiling Sequence...
Link Loading...
Done! Pulse sequence newpul now ready to use.

```

4. To use the pulse sequence in VNMR, add new parameters starting from a known good parameter set (e.g. `s2pul.par`) by entering from the VNMR command line:

```
s2pul
seqfil='newpul'
create('d1new','delay') d1new=1
create('d2new','delay') d2new=.001
create('p1new','pulse') p1new=0
create('p2new','pulse') p2new=40
create('patnew','string') patnew='square'
```

5. The parameters need to be saved as `newpul.par` in `parlib` so you can easily retrieve them the next time you run the pulse sequence. Enter:

```
cd
cd('vnmrsys/parlib')
svp('newpul')
```

6. To access the new parameters and pulse sequence, create a macro by entering, for example:

```
editmac('newpul')
```

7. In the pop-up editor window, type `editmac('newpul')` to enter the insert mode and add the line:

```
psgset('newpul','array','dg','d1new','d2new','p1new','p2new','patnew')
```

Save the macro and exit. This macro requires the file `newpul.par` to be present in `parlib`.

You can now enter `newpul` in the VNMR command line any time you wish to use your new pulse sequence. Most of the pulse sequences in `/vnmr/psglib` are set up in a similar fashion, and so are easily accessible.

The `newpul.c` pulse sequence also contains examples of phase cycling. There are two basic ways to perform arbitrary user-defined phase cycling:

- Use the real-time variables `v1-v14`, `oph`, `zero`, `one`, `two`, and `three`, and perform math integer operations on them using functions in [Table 17](#).
- Use the real-time AP tables `t1-t60`, which may be assigned either by static variable declarations and using `settable()`, or by loading in a table from `tablib` using `loadtable()` (see [Table 20](#)).

An example of using the real-time variable `v1` is given in `newpul.c` used by `assign()` and `pulse()`. An example of using real-time AP tables is given using `ph2` and `t2`. We could also replace `v2` with `t2` in the `shaped_pulse()` statement in this particular pulse sequence. In some cases, however, it is necessary to perform further integer math operations on the phase cycle, which is easier to perform on real-time variables than on AP tables, so we give the example using `getelem()` to assign the table `t2` to variable `v2`. For other examples of phase cycling calculations, see the pulse sequences in `/vnmr/psglib`.

To add 2D parameters to the `newpul.c` pulse sequence, make the following changes:

- In [step 2](#), change `d2new` to `d2`.
- In [step 4](#), enter `par2d set2d('newpul') p1new=40`.
- In [step 7](#), add `par2d set2d('newpul')` to the `newpul` macro after the `psgset` line.

Also, see the `cosyps.c` pulse sequence in `/vnmr/psglib`, section 2.14 “Multidimensional NMR,” page 148, and the chapter on Multidimensional NMR in the *User Guide: Liquids* manual.

2.7 Using Interactive Parameter Adjustment

The section “Spectrometer Control,” page 79 included statements for interactive parameter adjustment (IPA). Such routines start with the letter `i` (e.g., `idelay`, `irgpulse`). For users who need added flexibility in programming, this section explains IPA and these routines in more detail. IPA is available on all systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

General Routines

In addition to the statements previously described, PSG has four general routines:

- `G_Pulse` for generic pulse control
- `G_Offset` for adjustment of the offset frequency
- `G_Delay` for generic delay control
- `G_Power` for fine power control.

Each of these is called with an argument list (described below) specified with attribute-value pairs, terminated by a mandatory zero. *The terminating zero is mandatory. If the zero is left out, the results are unpredictable and can include a core dump of PSG.*

Each attribute has a default value—a pulse can be specified simply as `G_Pulse(0)`, which would produce a transmitter pulse of size `pw` with `rof1` and `rof2` set the same as the experiment parameters and phase cycled with the parameter `oph`.

The attribute `SLIDER_LABEL` determines whether output is generated for the Acquisition window (opened by the `acqi` command). If no label is specified, no IPA information is generated by the subroutine. The use of the `SLIDER_LABEL` with the same value for delays or pulses allows multiple delays or pulses to be controlled via one slider. This is covered later in this section.

As an example of a pulse sequence using the general routines, Listing 10 shows the source code of `i2pul.c`, which can be compiled and run like `S2PUL`, but when `go('acqi')` is typed, IPA information is generated in `/vnmr/acqqueue/acqi.IPA`.

The command `acqi` can be used to adjust the pulses and delays in the sequence. Note that `G_Pulse` covers the statements `obspulse`, `pulse`, `decpulse`, etc.

Macro definitions have been written to cover these:

```
#define obspulse() G_Pulse(0)
#define decpulse(decpulse,phaseptr) \
        G_Pulse (PULSE_DEVICE,      DODEV,      \
                PULSE_WIDTH,        decpulse, \
                PULSE_PHASE,        phaseptr, \
                PULSE_PRE_ROFF,     0.0,        \
                PULSE_POST_ROFF,    0.0,        \
                0)
```

See the file `/vnmr/psg/macros.h` for a complete list. This file is automatically included when the file `standard.h` is included in a pulse sequence. Note also that the

Listing 10. Pulse Sequence Listing of File i2pul.c

```

/* I2PUL - interactive two-pulse sequence */
#include <standard.h>
static int phasecycle[4]={0,2,1,3};
pulsesequence()
{
    /* equilibrium period */
    settable(t1,4,phasecycle);
    status(A);
    hsdelay(d1);
    /* --- tau delay --- */
    status(B);
    ipulse(p1,zero,"p1");
    /*
     * This ipulse statement is equivalent to
     * the following general pulse statement.
     *   G_Pulse(PULSE_WIDTH,    p1,
     *           PULSE_PHASE,    zero,
     *           SLIDER_LABEL,    "p1",
     *           0);
     */
    G_Delay(DELAY_TIME,        d2,
            SLIDER_LABEL,      "d2",
            SLIDER_MAX,        10,
            0);
    /* --- observe period --- */
    status(C);
    ipulse(pw,t1,"pw");
    setreceiver(t1);
}

```

same pulse sequence can be used to execute `go` as well as `go('acqi')`; however, IPA information is only generated when `go('acqi')` is used.

Interactive adjustment of *simultaneous* pulses is *not* supported. A limit of 10 has been set on the number of calls with a label. This limits the number of parameters that can be adjusted within one pulse sequence. Note that a subroutine call within a hardware loop is still only one label.

Parameters are adjusted at the end of a sweep. Since this takes a finite amount of time, steady state may be affected. Of course, changing any parameter value also affects the steady state, so this should be of little or no consequence.

Generic Pulse Routine

The `G_Pulse` generic pulse routine has the following syntax:

```

G_Pulse( PULSE_WIDTH,        pw,
         PULSE_PRE_ROFF,     rof1,
         PULSE_POST_ROFF,    rof2,
         PULSE_DEVICE,       TODEV,
         SLIDER_LABEL,       NULL,
         SLIDER_SCALE,       1,
         SLIDER_MAX,         1000,

```

```

        SLIDER_MIN,          0,
        SLIDER_UNITS,       1e-6,
        PULSE_PHASE,       oph,
    0);

```

The following table describes the attributes used with G_Pulse:

<i>Attribute</i>	<i>Type</i>	<i>Default</i>	<i>Description</i>
PULSE_WIDTH	double	pw	As specified in parameter set
PULSE_PRE_ROFF	double	rof1	As specified in parameter se.
PULSE_POST_ROFF	double	rof2	As specified in parameter set
PULSE_DEVICE	int	TODEV	TODEV for observe channel or DODEV for 1st decoupler. On UNITYplus, also DO2DEV or DO3DEV for 2nd/3rd decoupler
SLIDER_LABEL	char *	NULL	Label (1- 6 characters) for acqi or NULL for no output to acqi.
SLIDER_SCALE	int	1	Decimal places (0 to 3) on slider
SLIDER_MAX	int	100	Maximum value on the slider
SLIDER_MIN	int	0	Minimum value on the slider
SLIDER_UNITS	double	1e-6	Pulses are in μ s, scale factor
PULSE_PHASE	int	oph	Real-time variable

Examples of using G_Pulse:

```

G_Pulse(0); /* equals obspulse(); */

G_Pulse(PULSE_WIDTH, pw, /* equals pulse(pw,v1); */
        PULSE_PHASE, v1,
        0); /* required terminating zero */

```

Frequency Offset Subroutine

The G_Offset routine adjusts the offset frequency. It has the following syntax:

```

G_Offset(OFFSET_DEVICE,   TODEV,
        OFFSET_FREQ,     tof,
        SLIDER_LABEL,    NULL,
        SLIDER_SCALE,    0,
        SLIDER_MAX,      1000,
        SLIDER_MIN,      -1000,
        SLIDER_UNITS,    0,
    0);

```

The following table describes the attributes used with `G_Offset`:

<i>Attribute</i>	<i>Type</i>	<i>Default</i>	<i>Description</i>
OFFSET_DEVICE	int	none	Device (or rf channel) to receive frequency offset. <i>This is required!</i> Thus, <code>G_Offset(0)</code> not allowed. <code>TODEV</code> for transmitter channel or <code>DODEV</code> for first decoupler channel. On <i>UNITYplus</i> , <code>DO2DEV</code> for 2nd decoupler channel, or <code>DO3DEV</code> for 3rd decoupler channel.
OFFSET_FREQ	double	*	Offset frequency for selected channel. Default is offset frequency parameter (<code>tof</code> , <code>dof</code> , <code>dof2</code> , <code>dof3</code>) of associated channel.
SLIDER_LABEL	char *	NULL	If no slider label selected, offset cannot be changed in <code>acqi</code> . Otherwise, becomes the label (1-6 characters) in <code>acqi</code> .
SLIDER_SCALE	int	0	Number of decimal places displayed in <code>acqi</code> . Default is 0 because default range is 2000 Hz, so a resolution finer than 1 Hz is not necessary.
SLIDER_MAX	int	*	Maximum value on the slider. Default is 1000 Hz more than the offset frequency.
SLIDER_MIN	int	*	Minimum value on the slider. Default is 1000 Hz less than the offset frequency.
SLIDER_UNITS	double	1.0	Frequencies are in Hz.

* Default value is described in the description column for this attribute.

Examples of using `G_Offset`:

```
G_Offset(OFFSET_DEVICE, TODEV, /* equivalent to */
         OFFSET_FREQ,   tof,   /* offset(tof,TODEV); */
         0);             /* required terminating zero */

G_Offset(OFFSET_DEVICE, TODEV, /* basic interactive */
         OFFSET_FREQ,   tof,   /* offset statement */
         SLIDER_LABEL,  "TOF", /* for fine adjustment of */
         0);             /* transmitter frequency */
```

Generic Delay Routine

The `G_Delay` generic delay routine has the following syntax:

```
G_Delay(Delay_TIME,      d1,
        SLIDER_LABEL,    NULL,
        SLIDER_SCALE,    1,
        SLIDER_MAX,      60,
        SLIDER_MIN,      0,
        SLIDER_UNITS,    1.0,
        0);
```

The following table describes the attributes used with `G_Delay`:

<i>Attribute</i>	<i>Type</i>	<i>Default</i>	<i>Description</i>
DELAY_TIME	double	d1	As specified in parameter set.
SLIDER_LABEL	char *	NULL	Label (1 to 6 characters) for <code>acqi</code> or NULL for no output to <code>acqi</code> .
SLIDER_SCALE	int	1	Decimal places (0 to 3) displayed.
SLIDER_MAX	int	60	Maximum value on the slider.
SLIDER_MIN	int	0	Minimum value on the slider.
SLIDER_UNITS	double	1.0	Delays are in seconds.

Examples of using `G_Delay`:

```
G_Delay(0); /* equals delay(d1); */
```

```
G_Delay(DELAY_TIME, d2, /* equals delay(d2); */
0); /* required terminating zero */
```

IPA allows one slider to control more than one delay or pulse. The maximum number of delays or pulses a slider can control is 32. This multiple control is obtained whenever multiple calls to `G_Pulse` or `G_Delay` have the same value for the `SLIDER_LABEL` attribute.

The first call to `G_Pulse` in a pulse sequence sets the initial value, the maximum and minimum of the slider, and the scale. Later calls to `G_Pulse` within that pulse sequence do not alter these. The `SLIDER_UNITS` attribute are unique to each call to `G_Pulse`. This allows changing the value seen by a particular event by some multiplication factor. For example, the following two statements create a single slider in the Acquisition window (opened by the `acqi` command) labeled `PW` that will control two separate pulses.

```
G_Pulse(PULSE_DEVICE, TODEV,
PULSE_WIDTH, pw,
SLIDER_LABEL, "PW",
SLIDER_SCALE, 1,
SLIDER_MAX, 1000,
SLIDER_MIN, 0,
SLIDER_UNITS, 1.0e-6,
0);
```

```
G_Pulse(PULSE_DEVICE, TODEV,
PULSE_WIDTH, pw*2.0,
SLIDER_LABEL, "PW",
SLIDER_UNITS, 2.0e-6,
0);
```

The width of the first pulse will initially be `pw`, as set by the `PULSE_WIDTH` attribute for the first `G_Pulse` call. The width of the second pulse will initially be `pw*2.0`, as set by the `PULSE_WIDTH` attribute for the second `G_Pulse` call.

When the slider is changed in `acqi`, the amount that the actual pulse width changes is determined by the product of the slider change and the respective multiplicative factors specified by the attribute `SLIDER_UNITS`. For example, if the slider increased by 3 units, the first pulse width would be increased by $3 * 1.0e-6$ seconds and the second pulse would be increased by $3 * 2.0e-6$ seconds. In this way, the initial 1 to 2 ratio in pulse widths is maintained while the slider is changed.

Fine Power Subroutine

The `G_Power` subroutine is used on systems with the optional linear fine attenuators. It has the following syntax:

```
G_Power ( POWER_VALUE,      tpwrf,
          POWER_DEVICE,     TODEV,
          SLIDER_LABEL,     NULL,
          SLIDER_SCALE,     1,
          SLIDER_MAX,       4095,
          SLIDER_MIN,       0,
          SLIDER_UNITS,     1.0,
          0 );
```

The following table describes the attributes used with `G_Power`:

<i>Attribute</i>	<i>Type</i>	<i>Default</i>	<i>Description</i>
POWER_VALUE	double	tpwrf	As specified in parameter set.
POWER_DEVICE	int	TODEV	TODEV for transmitter channel or DODEV for decoupler channel. On UNITY ^{plus} also DO2DEV and DO3DEV for 2nd and 3rd decoupler channels.
SLIDER_LABEL	char *	NULL	Label (1 to 6 characters) for <code>acqi</code> or NULL for no output to <code>acqi</code> .
SLIDER_SCALE	int	1	Decimal places (0 to 3) on slider.
SLIDER_MAX	int	4095	Maximum value on the slider.
SLIDER_MIN	int	0	Minimum value on the slider.
SLIDER_UNITS	double	1.0	Power in arbitrary units.

Examples of using `G_Power`:

```
G_Power ( 0 );
```

```
G_Power ( POWER_VALUE,      dpwrf,
          POWER_DEVICE,     DODEV,
          0 );                /* required terminating zero */
```

2.8 Hardware Looping and Explicit Acquisition

The `loop` and `endloop` statements described previously generate a *soft loop*, which means that they force the acquisition computer to repeatedly place the information contained within the loop into the pulse program buffer (a FIFO). If this loop must run extremely fast, a condition may arise in which the acquisition computer is not able to provide input to the pulse program buffer as fast as the sequence is required to operate, and this technique does not work.

Because of this problem, a different mode of looping known as *hardware looping* is supported in certain UNITY^{INOVA}, *MERCURY-VX*, *MERCURY*, UNITY^{plus}, UNITY, and VXR-S systems. In this mode, the pulse program buffer provides its own looping, and the speed can be at the maximum possible rate, with the only limitation being the number of events that can occur during each repetition of the loop. [Table 24](#) lists statements related to hardware looping. Hardware looping is not available on *GEMINI 2000*.

Table 24. Hardware Looping Related Statements

<code>acquire(num_points, sampling_interval</code>	Explicitly acquire data
<code>clearapdatatable()</code>	Zero data in acquisition processor memory
<code>endhardloop()</code>	End hardware loop
<code>starthardloop(num_repetitions)</code>	Start hardware loop

Controlling Hardware Looping

Hardware looping capability is determined by the type of acquisition controller board used on the system (see “Types of Acquisition Controller Boards,” page 72):

- Data Acquisition Controller boards, Pulse Sequence Controller boards, and Acquisition Controller boards offer expanded capability with respect to hardware looping and timing precision.
- Output boards with Part No. 00-953520-05 or 00-953520-06 have hardware looping capability but are limited in the implementation of hardware loops within a pulse sequence.
- Output boards with Part No. 00-953520-0#, where # is from 0 to 4, have no hardware looping capability and will not be discussed further.
- STM/Output board on *MERCURY-VX* and *MERCURY* systems offers expanded capability with respect to hardware looping.

Use the `starthardloop(numrepetitions)` and `endhardloop()` statements start and end a hardware loop. The `numrepetitions` argument to `starthardloop` must be a real-time integer variable, such as `v2`, and *not* a regular integer, a real number, or a variable. The number of repetitions of the hardware loop must be two or more. If the number of repetitions is 1, the hardware looping feature itself is not activated. A hardware loop with a count equal to 0 is not permitted and will generate an error. Depending on the pulse sequence, additional code may be needed to trap for this condition and skip the `starthardloop` and `endhardloop` statements if the count is 0.

Only instructions that require no further intervention by the acquisition computer (pulses, delays, acquires, and other scattered instructions) are allowed in a hard loop. Most notably, no real-time math statements are allowed, thereby precluding any phase cycle calculations. Also, no AP table with the `autoincrement` feature set can be used within a hard loop. The number of events included in the hard loop, including the total number of data points if acquisition is performed, must be as follows:

- 63 or less for Output boards
- 1024 or less for Acquisition Controller boards
- 2048 or less for the *MERCURY-VX* and *MERCURY* STM/Output board, Pulse Sequence Controller board, or Data Acquisition Controller board.

In all cases, the number of events must be greater than 1. No nesting of hard loops is allowed.

For Output boards, a hardware loop must be preceded by some timed event other than an explicit acquisition or another hardware loop. If two hardware loops must follow one another, it will therefore be necessary to insert a statement like `delay(0.2e-6)` between the first `endhardloop` and the second `starthardloop`. With only a single hardware loop, there is no timing limitation on the length of a single cycle of the loop. With two hardware loops (perhaps a loop of pulses and delays followed by an implicit acquisition), the first hardware loop must have a minimum cycle length of approximately 80 μ s. With

three or more hardware loops, loops that are not the first or last must have a minimum cycle length about 100 μ s.

For *MERCURY-VX* and *MERCURY* STM/Output boards, Data Acquisition Controller boards, Acquisition Controller boards, and Pulse Sequence Controller boards, there are no timing restrictions between multiple, back-to-back hard loops. There is one subtle restriction placed on the actual duration of a hard loop if back-to-back hard loops are encountered: the duration of the i th hard loop must be $N(i+1) * 0.4$ ms, where $N(i+1)$ is the number of events occurring in the $(i+1)$ th hard loop.

Number of Events in Hardware Loops

As indicated above, a limit of 63 events can occur in a hardware loop for Output boards, a limit of 1024 events for Acquisition Controller boards, and a limit of 2048 events for the *MERCURY-VX* and *MERCURY* STM/Output, Data Acquisition Controller, and Pulse Sequence Controller boards, with a requirement in all cases that the number of events be greater than 1 (see “Types of Acquisition Controller Boards,” page 72, for a description of board types). But what is meant by “an event”?

An *event* is a single activation of the timing circuitry. Pulses, delays, phase shifts, etc., set or reset various gate lines to turn on and off pulses, phase shift lines, etc. but activate the timing circuitry in the same way. Timing is accomplished as follows:

- The Data Acquisition Controller board uses one time base of 12.5 ns.
- Other acquisition controller boards use four time bases: 1 s, 1 ms, 1 μ s, and 0.1 μ s for Output boards or 25 ns for Acquisition Controller and Pulse Sequence Controller boards. For each time base, the counter can count from 2 to 4095. A maximum of two time bases is used to time any delay, with the smallest time base possible being used.
- *MERCURY-VX* and *MERCURY* uses two time bases: 0.1 μ s and 1 ms. As many events as needed are used. Delays greater than 96 seconds use a hard loop.

For example, consider a pulse of 35 μ s on an Output board. This produces a count of 350 in the 0.1 μ s time base and generates a single event in a hardware loop. On the other hand, consider a delay of 542.4 μ s. This time cannot be generated solely in the lowest time base, so it generates two timed events: a count of 542 in the 1 μ s time base and a count of 4 in the 0.1 μ s time base. Thus, 542.4 μ s generates two events in a hardware loop; however, a delay of 542.0 μ s generates only one event, since it can be made fully with the 1 μ s time base.

The final point to understand is that some things that look like one event may actually be more. Consider, for example, the statement `rgpulse(pw, v1, rof1, rof2)`. Does this generate a single event? No, it generates at least three (or more depending on the length of the events). That is because we generate first a time of `rof1` with the amplifier unblanked but transmitter off, then a time of `pw` with the transmitter on, and then a time `rof2` with the transmitter off but the amplifier unblanked. Times that are zero generate no events, however. For example, `rgpulse(5.0e-6, v1, 0.0, 0.0)` generates only a single event.

Although pulses, delays, and data point acquisitions are the most common things to be in a hardware loop, other choices are possible. Table 25 lists the number of events that may be generated by each statement.

On *MERCURY-VX* and *MERCURY* systems, any delay (`pulse`, `delay`, `decrpulse`, etc.) is limited to 96 seconds within a hardware loop. In practice, this is not a restriction.

Table 25. Number of Events for Statements in a Hardware Loop

<i>Statement</i>	<i>UNITYINOVA</i>	<i>UNITYplus</i>	<i>UNITY, VXR-S</i>	<i>MERCURY-V X and MERCURY</i>	<i>GEMINI 2000</i>
acquire (Data Acq. Controller board)	1 to 2048	—	—	—	—
acquire (Pulse Seq. Controller board)	—	1 to 2048	—	—	—
acquire (Acq. Controller board)	—	—	1 to 1024	—	—
acquire (Output board)	—	—	1 to 63	—	—
dcplrphase, dcplr2phase, dcplr3phase	1	4	1	6	—
declvlon, declvloff	1	2	2 (high power)	—	2
decphase, dec2phase, dec3phase	0	0	0	0	0
decpulse	0	1 or 2	1 or 2	1 or 2	5 or 6
decrgpulse, dec2rgpulse, dec3rgpulse	0	3 to 6	3 to 6	3 to 6	7 to 8
delay	1	1 or 2	1 or 2	1 to 5	1 or 2
hsdelay	1	1 or 2	1 or 2	1 to 5	1 or 2
lk_hold, lk_sample	1	2	—	3	—
obspulse	3	3 to 6	3 to 6	3 to 6	5 to 8
offset	9	9 (latching)	7 (standard) 11 (latching)	72	7
power, obspower, decpower, dec2power, dec3power	1	2	2	3	—
pwrif, obspwrif, decpwrif, dec2pwrif, dec3pwrif	1	4	3	—	—
pulse,rgpulse	3	3 to 6	3 to 6	3 to 6	5 to 8
simpulse	3 to 5	3 to 10	3 to 10	3 to 15	7 to 10
sim3pulse	3 to 7	3 to 14	3 to 14	—	—
status	0 to 5 times number of channels	0 to 8 times number of channels	0 to 7 per channel	0 to 12	0 to 7
txphase	0	0	0	0	0
xmtrphase	1	4	1	6	—

Explicit Acquisition

Closely related to hardware looping is the *explicit acquisition* feature—the acquisition of one or more pairs of data points explicitly by the pulse sequence. This feature (not available on *MERCURY* and *GEMINI 2000*) lets you intersperse pulses and data acquisition, and allows coding pulse sequences that acquire multiple FIDs during the course of a pulse sequence (such as COCONOSY). It also allows pulse sequences that acquire a single FID one or more points at a time (such as MREV-type sequences).

For Output boards, any sequence that uses hardware looping or explicit acquisition must have parameter `d1` greater than 0, or at least some delay prior to the start of the hardware loop or explicit acquisition. For Data Acquisition Controller, Acquisition Controller and Pulse Sequence Controller boards, no such restrictions exist.

The `acquire(number_points, sampling_interval)` statement explicitly acquires data points at the specified sampling interval, where the sequence of events is acquire a pair of points for 200 ns, delay for `sampling_interval` less 200 ns, then repeat `number_points/2` times. For example, acquiring an FID would use `acquire(np, 1.0/sw)`.

Both arguments to the `acquire` statement must be *real* numbers or variables. If an `acquire` statement occurs outside a hardware loop, the number of complex points to be acquired must be a multiple of 2 for Data Acquisition Controller, Acquisition Controller, and Pulse Sequence Controller boards, or a multiple of 32 for Output boards. Inside a hardware loop, Data Acquisition Controller and Pulse Sequence Controller boards can accept a maximum of 2048 complex points, Acquisition Controller boards can accept a maximum of 1024 complex points, and Output boards can accept a maximum of 63 complex points. `number_points` must be a multiple of 2, because only *pairs* of points can be acquired (note that this is a different definition than was used on VXR-style systems).

UNITY *INOVA* systems include small overhead delays before and after the `acquire` statement. The pre-acquire delay takes into account setting the receiver phase (`oph`) and enabling data overflow detection. Disabling data overflow detection creates a post-acquire delay. These overhead delays and associated functions are placed outside the hardware loop when `acquire` statements are within a hardware loop, and before the first `acquire` and after the last `acquire`, when more than one `acquire` statement is used to acquire a FID.

Once an explicit acquisition is invoked, even if for one pair of data points, the standard “implicit” acquisition is turned off, and the user is responsible for acquiring the full number of data points. Failure to acquire the correct number of data points before the end of the pulse sequence generates an error. The total number of data points acquired before the end of the sequence must equal the specified number (`np`). An example of the programming necessary to program a simple explicit acquisition, analogous to the normal implicit acquisition, would look like this:

```
rcvtron();
txphase(zero);
decphase(zero);
delay(alfa+(1.0/(beta*fb)));
acquire(np, 1.0/sw);
```

Although generally not needed, the `clearapdatatable()` statement is available to zero the acquired data table at times other than at the start of the execution of a pulse sequence, when the data table is automatically zeroed.

The limitation that multiple hardloops cannot be nested has consequences for the use of the `acquire` statement inside a hardloop. Depending on its arguments and how it is built into

a pulse sequence, the `acquire` statement may internally be done as a `hardloop` by itself. However, a construct like the following does not work:

```
initval(np/2.0, v14);
starthardloop(v14);
    acquire(2.0, 1.0/sw);
endhardloop();
```

A `hardloop` that consists of a single `acquire` call are not permitted, but such constructs are not needed because a single statement can be used instead:

```
acquire(np, 1.0/sw);
```

This statement is not equivalent to the first construct because the `acquire` statement will sample more than just two points (i.e., a complex data point) per loop cycle, thus allowing for `np` greater than $2.0 \times$ (maximum number of `hardloop` cycles). Note that the `hardloop` uses a 16-bit loop counter. Therefore, the maximum number of cycles is 32767 (the largest possible 16-bit number).

On the other hand, a `hardloop` that contains `acquire` together with other pulse sequence events works fine as long as the number of complex points to be acquired plus the number of extra FIFO words per loop cycle does not exceed the total number of words in the loop FIFO (63 on Output boards, 1024 on Acquisition Controller boards, or 2048 on Pulse Sequence Controller boards):

```
initval(np/2.0, v14);
starthardloop(v14);
    acquire(2.0, 1.0/sw - (rof1 + pw + rof2));
    rgpulse(pw, v1, rof1, rof2);
endhardloop;
```

Explicit `hardloops` with `acquire` calls are a standard feature in multipulse solids sequences.

Receiver Phase For Explicit Acquisitions

Receiver phase can be changed for explicit acquisitions, the same as for implicit acquisitions, by changing `oph` or by using the `setreceiver` statement (`setreceiver` is not available on *GEMINI 2000*). The value of `oph` at the time of the acquisition of the first data point is the value that determines the receiver phase setting for the duration of that particular “scan”—the receiver cannot be changed after acquiring some data points and before acquiring the rest.

Multiple FID Acquisition

Explicit acquisition of data can also be used to acquire more than one FID per pulse sequence (simultaneous COSY-NOESY for example). This can be done for 1D or 2D experiments. The parameter `nf`, for number of FIDs, controls this if it is created and set. To perform such an experiment, enter `create('nf', 'integer')` to create `nf` and then set `nf` equal to an integer such as 2.

Once the data have been acquired, a second new parameter `cf` (current FID), which must also be created, is used to identify the FID to manipulate. Setting `cf=2`, for example, would recognize the second FID in the COSY-NOESY experiment (and hence would produce a NOESY spectrum after Fourier transformation). Note that this is distinct from the standard array capability and is, in fact, compatible with the standard arrays. Thus, you can acquire an array of ten experiments, with each consisting of three FIDs that are generated during each pulse sequence. To display the second FID of the seventh experiment, for example, you would type `cf=2 dfid(7)`.

2.9 Pulse Sequence Synchronization

If broken down to its fundamental elements, a pulse sequence is just a set of accurately timed delays in which the appropriate hardware is turned on or off.

External Time Base

For purposes of synchronization, an external timebase halts the pulse sequence until the number of external events in the count field have occurred. The source of events or ticks of this external timebase is up to the user. See your system technical reference for specifics. This feature is not available on *MERCURY-VX*, *MERCURY*, or *GEMINI 2000* systems.

Controlling Rotor Synchronization

Statements for rotor control on systems with solids rotor synchronization hardware are `rotorperiod`, `rotorsync`, and `xgate`. [Table 26](#) summarizes these statements.

Table 26. Rotor Synchronization Control Statements

<code>rotorperiod(period)</code>	Obtain rotor period of high-speed rotor
<code>rotorsync(rotations)</code>	Gated pulse sequence delay from MAS rotor position
<code>xgate(events)</code>	Gate pulse sequence from an external event

- To obtain the rotor period, use `rotorperiod(period)`, where `period` is a real-time variable into which is the rotor period is placed (e.g., `rotorperiod(v5)`). The period is placed into the referenced variable as an integer in units of 100 ns.
- To insert a variable-length delay, use `rotorsync(rotations)`, where `rotations` is a real-time variable that points to the number of rotations to delay, for example, `rotorsync(v6)`. The delay allows synchronizing the execution of the pulse sequence with a particular orientation of the sample rotor. When the `rotorsync` statement is encountered, the pulse sequence is stopped until the number of rotor rotations has occurred as referenced by the real-time variable given.
- To halt the pulse sequence from an external event, use `xgate(events)`, where `events` is a double variable (e.g., `xgate(2.0)`). When the number of external events has occurred, the pulse sequence continues.

Both `rotorsync` and `xgate` can be used, but there is a very important distinction between the two—`rotorsync` synchronizes to the exact position of the rotor, whereas `xgate` synchronizes to the zero degree position of rotation. For example, if the rotor is at 90°, then for `xgate(1.0)`, the pulse sequence will begin when the rotor is at zero degrees, a rotation of 270°; however, for the equivalent `rotorsync`, the pulse sequence will begin when the rotor is at 90°, or 360° rotation.

2.10 Pulse Shaping

Waveform generators are an optional piece of equipment available on ^{UNITY}*INOVA*, *UNITYplus* and *UNITY* for controlling rf pulse shapes on one or more rf channels, programmed decoupling patterns, and gradient shapes for imaging applications.

For pulse shaping programming using Pbox, see the manual *User Guide: Liquids*.

Pulse control of the waveform generators consists of two separate parts:

- A text file describing the shape of a waveform.
- A pulse sequence statement applying that waveform in an appropriate manner.

The power of rf shape or decoupler pattern is controlled by the standard power and fine power control statements for that rf channel. For example, `obspower` and `obsprwf` will scale the overall power of a shape on the observe channel.

File Specifications

The macro `sh2pul` sets up a shaped two-pulse (SH2PUL) experiment. This sequence behaves like the standard two-pulse sequence S2PUL except that the normal hard pulses are changed into shaped pulses from the waveform generator.

To find pulse shape definitions, the pulse sequence generation (PSG) software looks in a user's `vnmr/sys/shapelib` directory and then in the system's `shapelib`. Each `shapelib` directory contains files specifying the defined shapes for rf pulses, decoupling, and gradient waveforms. To differentiate the files in a `shapelib` directory, each type uses a different suffix:

<i>Pattern Type</i>	<i>Suffix</i>	<i>Example</i>
rf pulses	.RF	gauss.RF
decoupling	.DEC	mlev16.DEC
gradient	.GRD	hard.GRD

Each pattern file is a set of element specifications with one element per line. Therefore, a 67 element pattern contains 67 lines. Any blank lines and comments (characters after a # sign on a line) in a specification are ignored.

Shapes can be created by macro, by programs, or by hand. The specifications for each kind of pattern are listed in the following table (if a field is not specified, the default given is used). As an example, a slightly modified excerpt from a file in the system directory `shapelib` is also shown.

RF Patterns

<i>Column</i>	<i>Description</i>	<i>Limits</i>	<i>Default</i>
1	Phase angle (in degrees) Phase limits	0.5° resolution No limit on magnitude	Required
2	Amplitude	0 to scalable max	max
3	Relative duration	0, or 1 to 255	1
4	Transmitter gate	0, 1	1 (gate on)

For example, the first 8 elements (after the comment lines) of the file `sinc.RF`:

```
0.000      0.000      1.000000
0.000      8.000      1.000000
0.000     16.000      1.000000
0.000     24.000      1.000000
0.000     32.000      1.000000
0.000     40.000      1.000000
0.000     48.000      1.000000
0.000     56.000      1.000000
```

In using the .RF patterns, the actual values for the amplitude are treated as relative values, not as absolute values. All of the amplitudes in the rf shape file are divided by the largest amplitude in the shape file and then multiplied by 1023.0. The net result is that shapes with values of the amplitudes between 0 to 10.0, or between 0 to 1023.0, or between 0 to 100000.0, are effectively all the same shape.

To implement .RF patterns with absolute values for amplitudes, you can use a shape element with 0 duration to fix the scaling factor for the shape. Here is a simple example:

A shape with elements

```
0.00 10.0 1.0
0.00 100.0 1.0
0.00 20.0 1.0
```

will result in an actual shape of

```
0.00 1023.0*10.0/100.0 1.0 0.00 102.30 1.0
0.00 1023.0*100.0/100.0 1.0 or 0.00 1023.0 1.0
0.00 1023.0*20.0/100.0 1.0 0.00 204.60 1.0
```

A shape with elements

```
0.00 1023.0 0.0
0.00 10.0 1.0
0.00 100.0 1.0
0.00 20.0 1.0
```

will result in an actual shape of

```
0.00 1023.0*10.0/1023.0 1.0 0.00 10.0 1.0
0.00 1023.0*100.0/1023.0 1.0 or 0.00 100.0 1.0
0.00 1023.0*20.0/1023.0 1.0 0.00 20.0 1.0
```

Decoupler Patterns

Column	Description	Limits	Default
1	Tip angle per element (in degrees) Phase limits	0° to 500°, 1° resolution No limit on magnitude	Required
2	RF phase (in degrees)	0.5° resolution	Required
3	Amplitude	0 to scalable max	max
4	Transmitter gate	0, 1	0 (gate off)

For example, the first 8 elements (after the comment lines) of the file waltz16.DEC:

```
270.0 180.0
360.0 0.0
180.0 180.0
270.0 0.0
90.0 180.0
180.0 0.0
360.0 180.0
180.0 0.0
```

In using the gate field in .DEC patterns, note the following:

- The waveform generator gate is OR'ed with the output board gate. This means that any time the output board gate is on, the transmitter is on, irrespective of any waveform generator gate.

- If a decoupler pattern is activated under status control (using `dmm= 'p'`), an implicit output board gate statement is added. In this situation, any 0s or 1s in the gate field of the `.DEC` pattern are irrelevant because they are overridden (as indicated above).
- If a decoupler pattern is activated by the `decprgon` statement, the waveform generator gate is the controlling factor. If this gate is specified as 0s or 1s in the `.DEC` file, that gating will occur. If there is no gate field in the `.DEC` file, the default occurs—the gate is set to 0 and the decoupler is off. An alternate is to follow the `decprgon` statement with some kind of gate statement (e.g., `decon`) to turn on the output board gate (overriding the default of the gate set to 0 from the waveform generator) and to proceed the `decprgoff` statement with a statement to turn the gate off (for example, `decoff`).

Gradient Patterns

Column	Description	Limits	Default
1	Output amplitude	-32767 to 32767, 1 unit resolution	Required
2	Relative duration	1 to 255	1

For example, the first 8 elements (after the comment lines) of the file `trap.GRD`:

```
1024      1
2048      1
3072      1
4096      1
5120      1
6144      1
7168      1
8192      1
```

Performing Shaped Pulses

Statements to perform shaped pulses on ^{UNITY}*INOVA*, *UNITYplus* and *UNITY* systems with optional waveform generators are `decshaped_pulse`, `dec2shaped_pulse`, `dec3shaped_pulse`, `shaped_pulse`, `simshaped_pulse`, and `sim3shaped_pulse`. [Table 27](#) provides a summary of these statements.

Table 27. Shaped Pulse Statements

<code>decshaped_pulse*</code>	Perform shaped pulse on first decoupler
<code>dec2shaped_pulse*</code>	Perform shaped pulse on second decoupler
<code>dec3shaped_pulse*</code>	Perform shaped pulse on third decoupler
<code>shaped_pulse*</code>	Perform shaped pulse on observe transmitter
<code>simshaped_pulse*</code>	Perform simultaneous two-pulse shaped pulse
<code>sim3shaped_pulse*</code>	Perform a simultaneous three-pulse shaped pulse
* <code>decshaped_pulse(shape,width,phase,RG1,RG2)</code>	
<code>dec2shaped_pulse(shape,width,phase,RG1,RG2)</code>	
<code>dec3shaped_pulse(shape,width,phase,RG1,RG2)</code>	
<code>simshaped_pulse(obsshape,decshape,obswidth,decwidth,obsphase,decphase,RG1,RG2)</code>	
<code>sim3shaped_pulse(obsshape,decshape,dec2shape,obswidth,decwidth,dec2width,obsphase,decphase,dec2phase,RG1,RG2)</code>	

Shaped Pulse on Observe Transmitter or Decouplers

To perform a shaped pulse on the observe transmitter under waveform generator control, use `shaped_pulse(shape,width,phase,RG1,RG2)`, where `shape` is the name of a text file in `shapelib` that stores the rf pattern (leave off the `.RF` file extension), `width` is the duration of the pulse; `phase` is the phase of the pulse (it must be a real-time variable); `RG1` is the delay between unblanking the amplifier and gating on the transmitter (the phase shift occurs at the beginning of this delay); and `RG2` is the delay between gating off the transmitter and blanking the amplifier (e.g., `shaped_pulse("gauss",pw,v1,rof1,rof2)`).

If a rf channel does not have a waveform generator, the statements `shaped_pulse`, `decshaped_pulse`, and `dec2shaped_pulse` provide pulse shaping through the linear attenuator and the small-angle phase shifter on the AP bus. This type of pulse shaping is available only on `UNITYINOVA` and `UNITYplus` systems. AP tables for the attenuation and phase values are created on the fly, and the real-time variables `v12` and `v13` are used to control the execution of the shape. On previous versions of VNMR, this pulse shaping through the AP bus was exclusively controlled by the statements `apshaped_pulse`, `apshaped_decpulse`, and `apshaped_dec2pulse`.

For shaped pulses under waveform generator control, the minimum pulse length is 0.2 μ s. The overhead at the beginning and end of the shaped pulse varies with the system and the type of acquisition controller board:

- On `UNITYINOVA`: 0.95 μ s at start, 0 at end.
- On `UNITYplus`: 6.19 μ s at start, 0 at end.
- On systems with an Acquisition Controller board: 10.75 μ s at start, 4.3 μ s at end.
- On systems with an Output board: 10.95 μ s at start, 4.5 μ s at end.

If the length is less than 0.2 μ s, the pulse is not executed and there is no overhead.

The `decshaped_pulse`, `dec2shaped_pulse`, and `dec3shaped_pulse` statements allow a shaped pulse to be performed on the first, second, and third decoupler, respectively. The arguments and overhead used for each is the same as `shaped_pulse`, except they apply to the decoupler controlled by the statement.

Simultaneous Two-Pulse Shaped Pulse

`simshaped_pulse(obsshape,decshape,obswidth,decwidth,obsphase,decphase,RG1,RG2)` performs a simultaneous, two-pulse shaped pulse on the observe transmitter and the first decoupler under waveform generator control. `obsshape` is the name of the text file that contains the rf pattern to be executed on the observe transmitter; `decshape` is the name of the text file that contains the rf pattern to be executed on the first decoupler; `obswidth` is the duration of the pulse on the observe transmitter; `decwidth` is the duration of the pulse on the first decoupler; `obsphase` is the phase of the pulse on the observe transmitter (it must be a real-time variable); `decphase` is the phase of the pulse on the first decoupler (it must be a real-time variable); `RG1` is the delay between unblanking the amplifier and gating on the first rf transmitter (all phase shifts occur at the beginning of this delay); and `RG2` is the delay between gating off the final rf transmitter and blanking the amplifier; for example:

```
simshaped_pulse("gauss","hrm180",pw,p1,v2,v5,rof1,rof2)
```

The overhead at the beginning and end of the simultaneous two-pulse shaped pulse varies with the system and acquisition controller board:

- On `UNITYINOVA`: 1.45 μ s at start, 0 at end.
- On `UNITYplus`: 11.5 μ s at start, 0 at end.

- On systems with an Acquisition Controller board: 21.5 μ s at start, 8.6 μ s at end.
- On systems with an Output board: 21.7 μ s at start, 8.8 μ s at end.

These values hold regardless of the values for `obswidth` and `decwidth`.

If either `obswidth` or `decwidth` is 0.0, no pulse occurs on the corresponding channel. If both `obswidth` and `decwidth` are non-zero and either `obsshape` or `decshape` is set to the null string (' '), then a hard pulse occurs on the channel with the null shape name. If either the pulse width is zero or the shape name is the null string, then a waveform generator is not required on that channel.

Simultaneous Three-Pulse Shaped Pulse

The `sim3shaped_pulse` statement performs a simultaneous, three-pulse shaped pulse under waveform generator control on three independent rf channels. The arguments to `sim3shaped` are the same as defined previously for `simshaped_pulse`, except that `dec2shape` is the name of the text file that contains the rf pattern to be executed on the second decoupler, `dec2width` is the duration of the pulse on the second decoupler, and `dec2phase` is the phase (a real-time variable) of the pulse on the second decoupler (e.g., `sim3shaped_pulse("gauss", "hrm180", "sinc", pw, p1, v2, v5, v6, rof1, rof2)`).

The overhead at the beginning and end of the simultaneous three-pulse shaped pulse varies with the system and acquisition controller board:

- On ^{UNITY}*INOVA*: 1.95 μ s at start, 0 at end.
- On *UNITYplus*: 17.25 μ s at start, 0 at end.
- On systems with an Acquisition Controller board: 32.25 μ s at start, 12.9 μ s at end.
- On systems with an Output board: 32.45 μ s at start, 13.1 μ s at end.

These values hold regardless of the values for `obswidth`, `decwidth`, and `dec2width`.

By setting one of the pulse lengths to the value 0.0, `sim3shaped_pulse` can also perform a simultaneous two-pulse shaped pulse on any combination of three rf channels. (e.g., to perform simultaneous shaped pulses on the first decoupler and second decoupler, but not the observe transmitter, set the `obswidth` argument to 0.0).

If any of the shape names are set to the null string (' '), a hard pulse occurs on the channel with the null shape name. If either the pulse width is zero or the shape name is the null string, a waveform generator is not required on that channel.

Programmable Transmitter Control

Statements related to programmable transmitter control on ^{UNITY}*INOVA*, *UNITYplus* and *UNITY* systems with optional waveform generators are `obsprgoff` and `obsprgon` for the observe transmitter, `decprgoff` and `decprgon` for the first decoupler, `dec2prgoff` and `dec2prgon` for the second decoupler, and `dec3prgoff` and `dec3prgon` for the third decoupler. [Table 28](#) provides a summary of these statements.

Programmable Control of Observe Transmitter

Use `obsprgon(name, 90_pulselength, tipangle_resoln)` to set programmable phase and amplitude control of the observe transmitter. `name` is the name of the file in `shapelib` that stores the decoupling pattern, `90_pulselength` is the pulse duration for a 90° tip angle, and `tipangle_resoln` is the resolution in tip-angle degrees to which the decoupling pattern is stored in the waveform generator (e.g.,

Table 28. Programmable Control Statements

<code>decprgoff()</code>	End programmable decoupling on first decoupler
<code>dec2prgoff()</code>	End programmable decoupling on second decoupler
<code>dec3prgoff()</code>	End programmable decoupling on third decoupler
<code>decprgon*</code>	Start programmable decoupling on first decoupler
<code>dec2prgon*</code>	Start programmable decoupling on second decoupler
<code>dec3prgon*</code>	Start programmable decoupling on third decoupler
<code>obsprgoff()</code>	End programmable control of observe transmitter
<code>obsprgon*</code>	Start programmable control of observe transmitter
* <code>decprgon(name, 90_pulselength, tipangle_resoln)</code>	
<code>dec2prgon(name, 90_pulselength, tipangle_resoln)</code>	
<code>dec3prgon(name, 90_pulselength, tipangle_resoln)</code>	
<code>obsprgon(name, 90_pulselength, tipangle_resoln)</code>	

```
obsprgon("waltz16", pw90, 90.0).
```

The `obsprgon` statement returns the number of 50-ns ticks (as an integer value) in one cycle of the decoupling pattern. Explicit gating of the observe transmitter with `xmtron` and `xmtoff` is generally required.

To terminate any programmable phase and amplitude control on the observe transmitter under waveform generator control, use `obsprgoff()`.

Programmable Control of Decouplers

The `decprgon`, `dec2prgon`, and `dec3prgon` statements set programming decoupling on the first, second, and third decouplers, respectively. The arguments for each statement are the same as `obsprgon`, except they apply to the decoupler controlled by the statement. Each statement returns the number of 50 ns ticks (as an integer value) in one cycle of the decoupling pattern. Similarly, explicit gating of the selected decoupler is generally required, and termination of the control is done by the `decprgoff()`, `dec2prgoff()`, and `dec3prgoff()` statements, respectively.

Arguments to `obsprgon`, `decprgon`, `dec2prgon`, and `dec3prgon` can be variables (which need the appropriate `getval` and `getstr` statements) to permit changes via parameters.

The macro `pwsadj(shape_file, pulse_parameter)` adjusts the pulse interval time so that the pulse interval for the shape specified by `shape_file` (a file from `shapelib`) is an integral multiple of 100 ns. This eliminates a time truncation error in the execution of the shaped pulse by the programmable pulse modulators. `pulse_parameter` is a string containing the adjusted pulse interval time.

Setting Spin Lock Waveform Control

Statements for spin lock control on ^{UNITY}*INOVA*, *UNITYplus* and *UNITY* systems with optional waveform generators are `spinlock`, `decspinlock`, `dec2spinlock`, and `dec3spinlock` for the observe transmitter, first decoupler, second decoupler, and third decoupler, respectively. [Table 29](#) provides a summary of these statements.

Spin Lock Waveform Control on Observe Transmitter

To execute a waveform-generator-controlled spin lock on the observe transmitter, use `spinlock(name, 90_pulselength, tipangle_resoln, phase, ncycles)`,

Table 29. Spin Lock Control Statements

<code>decspinlock*</code>	Set spin lock waveform control on first decoupler
<code>dec2spinlock*</code>	Set spin lock waveform control on second decoupler
<code>dec3spinlock*</code>	Set spin lock waveform control on third decoupler
<code>spinlock*</code>	Set spin lock waveform control on observe transmitter
* <code>decspinlock(name, 90_pulselength, tipangle_resoln, phase, ncycles)</code>	
<code>decs2pinlock(name, 90_pulselength, tipangle_resoln, phase, ncycles)</code>	
<code>decs3pinlock(name, 90_pulselength, tipangle_resoln, phase, ncycles)</code>	
<code>spinlock(name, 90_pulselength, tipangle_resoln, phase, ncycles)</code>	

name is the name of the file in `shapelib` that stores the decoupling pattern (leave off the `.DEC` file extension); `90_pulselength` is the pulse duration for a 90° tip angle; `tipangle_resoln` is the resolution in tip-angle degrees to which the decoupling pattern is stored in the waveform generator; `phase` is the phase angle of the spin lock (it must be a real-time variable); and `ncycles` is the number of times that the spin-lock pattern is to be executed (e.g., `spinlock('mlev16', pw90, 90.0, v1, 50)`)

Both rf gating and the mixing delay are handled within this statement.

Spin Lock Waveform Control on Decouplers

The `decspinlock`, `dec2spinlock`, and `dec3spinlock` set spin lock waveform control on the first, second, and third decouplers, respectively. The arguments are the same as used with `spinlock`, except that `90_pulselength` is the pulse duration for a 90° tip angle on the decoupler controlled by the statement.

Arguments to `spinlock`, `decspinlock`, `dec2spinlock`, and `dec3spinlock` can be variables (which would need the appropriate `getval` and `getstr` statements) to permit changes via parameters.

Shaped Pulse Calibration

Macros `bandinfo` and `pulseinfo` can be run interactively (without arguments) to give a table with shaped pulse information for calibration. `bandinfo` takes the name of the shape and the bandwidth desired for the pulse and gives a table containing the duration of that pulse and a predicted 90° pulse power setting. `pulseinfo` takes the name of the shape and the duration of the pulse and gives the bandwidth of that pulse and a predicted 90° pulse power setting. Both macros can also be called from another macro. For more information, refer to the *VNMR Command and Parameter Reference*.

2.11 Shaped Pulses Using Attenuators

^{UNITY}*INOVA*, *MERCURY-VX*, *MERCURY*, *UNITYplus* and *UNITY* systems are equipped with computer-controlled attenuators (0 dB to 79 dB on ^{UNITY}*INOVA* and *UNITYplus*, 0 dB to 63 dB on *MERCURY-VX*, *MERCURY*, and *UNITY*) on the observe and decouple channels, linear amplifiers, and T/R (transmit/receive) switch preamplifiers that allow low-level transmitter signals to be generated and pass unperturbed into the probe. Similarly, *GEMINI 2000* broadband systems are equipped with 0-dB to 63.5-dB computer-controlled attenuators but without the T/R switch preamplifiers. The combination of these elements means that the capability for performing shaped pulse experiments is inherent in the systems and does not require the more sophisticated waveform generation capability of the optional waveform generators.

Hardware differences must be considered between systems, with and without the waveform generators. The attenuators have more limited dynamic range, slower switching time, and fewer pulse programming steps available. Nonetheless, the capability still allows significant experiments using only attenuators.

Two custom (non-standard) configurations also exist on UNITY systems:

- A third (or fourth) 0-dB to 63-dB attenuator can be added.
- One (or both) of the standard attenuators can be replaced with an 79-dB attenuator (whose values run from -16 to 63 for consistency with the 63-dB attenuator).

Three issues affect all shaped pulses, but particularly attenuator-based pulses:

- *Number of steps* – The more steps used, the closer the shape approximates a continuous shape. At what level does this become overkill? For the most common shape, Gaussian, as few as 19 steps have been shown to be completely acceptable.
- *Dynamic range* – How much dynamic range is required within a shape for proper results. For a Gaussian shape it has been shown that 33 dB is a useful limit; little or no improvement is achieved with more. With a single 63-dB attenuator, then, a Gaussian pulse with 33 dB dynamic range can be superimposed on a level ranging from 0- to 30-dB, more with a 79-dB attenuator.
- *Overall power level of the shape* – A Gaussian pulse has an effective power approximately 8 dB lower than a rectangular pulse with an identical peak power. This means that given a full-power rectangular pulse of, say, 25 kHz, a Gaussian pulse with the same peak power has approximately a 10 kHz strength. Using instead a Gaussian pulse with only 33 dB dynamic range and a peak power 30 dB lower results in a shaped pulse of approximately 312 Hz, which is useful for some applications, like exciting the NH region of a spectrum, but too strong for others.

To increase the dynamic range (and decrease the strength of the shaped pulse) further, we can use one of three approaches:

- Replace the 63-dB attenuator with a 79-dB unit. This adds 16 dB of dynamic range, producing shaped pulses in the range of 50 Hz, suitable for multiplet excitation.
- Add an additional 63-dB attenuator in series with the first. If you use the entire 63 dB of the second attenuator to control the level of the pulse and use the first attenuator only for the shape, you still produce a pulse whose power is (for a Gaussian) 71 dB (63 + 8) below that of the hard pulse. This would produce a 7 Hz pulse, about as weak a pulse as one ever needs (and which could be reduced 30 dB further by only using 33 dB of the first attenuator for the shape). On UNITY*plus* systems, both phase and (linear) amplitude can be controlled over the AP bus, in addition to the 79-dB attenuator. It is possible to use this control to create shaped pulses without a waveform generator.
- Use a time-sharing or “DANTE” approach, applying the shaped pulse in such a way that it is switched on and off with a particular duty cycle during the course of the shape. A 10% duty cycle, for example, reduces the power by a factor of ten.

On UNITY*INOVA* and UNITY*plus* systems, both the phase and linear attenuator on each transmitter can be controlled through pulse sequence statements (see `pwr f`, `obspwr f`, `dec pwr f`, `dec2 pwr f`, `dec3 pwr f`, `pwr m`, `rlpwr m`, and `dcplr phase`) so it is possible to create shaped pulses without a waveform generator.

AP Bus Delay Constants

Table 30 lists the most important AP bus delay “constants” (C macros) for the UNITY family of spectrometers (UNITY*INOVA*, UNITY*plus*, UNITY, and VXR-S). The list is

incomplete, but a complete list can be found at the bottom of the text file
/vnmr/psg/apdelay.h.

The constants `OFFSET_DELAY` and `OFFSET_LTCH_DELAY` are applicable only to `UNITYINOVA` and `UNITYplus` systems that use PTS synthesizers with latching on the input.

Although the constants are identical, use only `OFFSET_DELAY` on these systems. Most `UNITY` and `VXR-S` systems do not have PTS synthesizers with latching, but `OFFSET_DELAY` can be used on these systems.

Table 30. AP Bus Delay Constants

<i>Constant</i>	<i>Indicates Duration of</i>
<code>ACQUIRE_START_DELAY*</code>	Overhead at start of acquisition
<code>ACQUIRE_STOP_DELAY*</code>	Overhead at end of acquisition
<code>DECMODFREQ_DELAY</code>	Overhead for setting modulator frequency
<code>GRADIENT_DELAY</code>	<code>rgradient</code> , <code>zgradpulse</code> (two times)
<code>OBLIQUEGRADIENT_DELAY</code>	<code>oblique_gradient</code> (applicable only to imaging)
<code>OFFSET_DELAY**</code>	<code>decoffset</code> , <code>dec2offset</code> , <code>obsoffset</code> , <code>offset</code>
<code>OFFSET_LTCH_DELAY***</code>	<code>decoffset</code> , <code>dec2offset</code> , <code>obsoffset</code> , <code>offset</code>
<code>POWER_DELAY</code>	<code>decpower</code> , <code>dec2power</code> , <code>obspower</code> , <code>power</code> , <code>rlpower</code> , etc.
<code>PRG_OFFSET_DELAY</code>	Time shift of WFG output with <code>obsprgon</code> , etc.
<code>PRG_START_DELAY</code>	<code>decprgon</code> , <code>dec2prgon</code> , <code>obsprgon</code> , etc.
<code>PRG_STOP_DELAY</code>	<code>decprgoff</code> , <code>dec2prgoff</code> , <code>obsprgoff</code> , etc.
<code>PWRP_DELAY</code>	<code>decpwrp</code> , <code>dec2pwrp</code> , <code>obspwrp</code> , <code>pwrp</code>
<code>SAPS_DELAY</code>	<code>dcplrphase</code> , <code>dcplr2phase</code> , <code>dcplr3phase</code> , <code>xmtrphase</code>
<code>SETDECMOD_DELAY</code>	Overhead for setting modulator mode
<code>SPNLCK_START_DELAY</code>	Overhead at start of <code>decspinlock</code> , <code>spinlock</code> , etc.
<code>SPNLCK_STOP_DELAY</code>	Overhead at end of <code>decspinlock</code> , <code>spinlock</code> , etc.
<code>VAGRADIENT_DELAY</code>	<code>vagradpulse</code> (two times)
<code>WFG_OFFSET_DELAY</code>	Time shift of WFG output
<code>WFG_START_DELAY</code>	Overhead at start of <code>decshaped_pulse</code> , <code>shaped_pulse</code>
<code>WFG_STOP_DELAY****</code>	Overhead at end of <code>decshaped_pulse</code> , <code>shaped_pulse</code>
<code>WFG2_START_DELAY</code>	Overhead at start of <code>simshaped_pulse</code> , etc.
<code>WFG2_STOP_DELAY****</code>	Overhead at end of <code>simshaped_pulse</code> , etc.
<code>WFG3_START_DELAY</code>	Overhead at start of <code>sim3shaped_pulse</code> , etc.
<code>WFG3_STOP_DELAY****</code>	Overhead at end of <code>sim3shaped_pulse</code> , etc.

* On `UNITYINOVA` systems; on other systems, this constant is zero (no support for FSQ).
** Use `OFFSET_DELAY` only on `UNITYINOVA` and `UNITYplus` systems.
*** Only on systems that use PTS synthesizers with latching.
**** On `UNITYplus` systems only, this constant is zero.

Controlling Shaped Pulses Using Attenuators

The statements `power`, `obspower`, `decpower`, `dec2power`, `dec3power`, and (optionally) `pwrp`, `obsppwrp`, `decppwrp`, `dec2ppwrp`, `dec3ppwrp`, `pwrp`, and `rlpwrp` are used to change the attenuation (and hence the power level) of either the transmitter or

decouplers. A pulse sequence in which one of these statements is placed in a loop and repeatedly executed with different values for the amount of attenuation therefore results in a shaped pulse. This can be a C loop or a “soft” loop (using the `loop` statement), but not a “hard” loop. The successive values for the power may be calculated in real-time, read from a table (assuming that only positive numbers are involved), or set up from a static C variable. Although no standard pulse sequences exist that implement this feature, several contributions to the user library provide excellent examples of how to do this.

The statements `shaped_pulse`, `decshaped_pulse`, and `dec2shaped_pulse` provide fine-grained “waveform generator-type” pulse shaping through the AP bus. If an rf channel does not have a waveform generator configured, this is the same type of pulse shaping that statements `apshaped_pulse`, `apshaped_decpulse`, and `apshaped_dec2pulse` provide, and is a simpler implementation.

This type of pulse shaping is available only on *UNITYINOVA* and *UNITYplus* systems. They use the standard pulse shape files, such as `gauss.RF`, for the waveform generator. *MERCURY-VX* and *MERCURY* systems support these statements, however, only power level is controlled, not phase, making `gauss.RF` the only shape currently provided.

The `apshaped_pulse`, `apshaped_decpulse`, and `apshaped_dec2pulse` pulse statements use table variables to define the amplitude and phase tables, whereas the standard `shaped_pulse`, `decshaped_pulse`, and `dec2shaped_pulse` statements create and use these tables on the fly. Both types of AP bus waveshaping statements use real-time variables `v12` and `v13` to control execution of the shape. [Table 31](#) summarizes the statements described in this section.

Table 31. Statements for Pulse Shaping Through the AP Bus

<code>apshaped_decpulse*</code>	First decoupler pulse shaping via the AP bus
<code>apshaped_dec2pulse*</code>	Second decoupler pulse shaping via the AP bus
<code>apshaped_pulse*</code>	Observe transmitter pulse shaping via the AP bus
<code>decshaped_pulse*</code>	Perform shaped pulse on first decoupler
<code>dec2shaped_pulse*</code>	Perform shaped pulse on second decoupler
<code>shaped_pulse*</code>	Perform shaped pulse on observe transmitter
<code>* apshaped_decpulse(shape,pulse_width,pulse_phase, power_table,phase_table, RG1, RG2)</code>	
<code>apshaped_dec2pulse(shape,pulse_width,pulse_phase, power_table,phase_table, RG1, RG2)</code>	
<code>apshaped_pulse(shape,pulse_width,pulse_phase,power_table, phase_table, RG1, RG2)</code>	
<code>decshaped_pulse(shape,width,phase, RG1, RG2)</code>	
<code>dec2shaped_pulse(shape,width,phase, RG1, RG2)</code>	
<code>dec3shaped_pulse(shape,width,phase, RG1, RG2)</code>	
<code>shaped_pulse(shape,width,phase, RG1, RG2)</code>	

Controlling Attenuation

This section describes how to configure and control the system attenuators.

Standard System with Two Attenuators

On *UNITYINOVA*, *UNITYplus*, *UNITY*, and *VXR-S* systems with two attenuators, connect the two existing attenuators in series, leaving one channel without computer-controlled attenuation. This is often acceptable in homonuclear experiments, while in heteronuclear experiments and some homonuclear experiments it may be desirable to insert a simple fixed attenuator in-line in the channel that isn't being shaped.

If you take this approach, the `tpwr` and `dpwr` parameters (or, equivalently, the `power (... , OBSch)` and `power (... , DECch)` pulse sequence statements) control the two attenuators. The simplest approach is to use one of the two attenuators to control the shape, while using the second to set the overall level of the pulse. Assuming that there are also hard pulses in the pulse sequence, you'll also need to remember to write your pulse sequence to return both attenuators to values suitable for the hard pulse.

System with a Third Attenuator

On systems specially configured with a third attenuator (not available on ^{UNITY}*INOVA*, *MERCURY-VX*, *MERCURY*, *UNITYplus*, or *GEMINI 2000* systems), connect the hardware so that control of the additional attenuator is through one of the two “fine” attenuator controls. Note that if this system also has two “real” fine attenuators (a 0- to 6-dB attenuator used for solid-state NMR applications), one of the fine attenuators will have to be disconnected while the third 0-dB to 63-dB attenuator uses its control circuitry.

In a system configured this way, the pulse sequence statement `pwrf` or `pwrn` is used to control the power of the pulse (either `pwrf (... , OBSch)` or `pwrf (... , DECch)`, depending on how the additional attenuator was connected). If a 0-dB to 63-dB attenuator is connected to the fine attenuator control, the controlling hardware (and software) runs backwards. In other words, 0 gives no attenuation (maximum power), while 63 gives full attenuation (minimum power). This is the opposite of the standard power control.

Pulse sequences can be written that require the user to recognize this difference, or, more elegantly, a mathematical transformation within the pulse sequence can allow the user to enter “normal” values that are then reversed by the pulse sequence. The transformation approach is recommended for writing pulse sequences.

For example, assume that you want to have a parameter `shapepwr` that sets the overall power of the shaped pulse with the third attenuator, while using the standard attenuator to apply the shape. The relevant part of the pulse sequence might look like this:

```
double shapepwr;
shapepwr = 63 - getval("shapepwr");
initval(shapepwr, v10);
pwrf(v10, OBSch);
...
```

This method allows the user to enter 0 to get minimum power and 63 to get maximum power, just as with `tpwr` and `dpwr`, and reverses the sense of the parameter within the pulse sequence where the user need not be concerned with it. Notice that the only thing different about this sequence is the “63 -” added before the `getval`—everything else in this example would be required in any case.

2.12 Internal Hardware Delays

Many pulse sequence statements result in “hidden” delays. These delays are not intrinsic to pulse sequence generation (PSG) software but are rather internal to the hardware.

Each AP bus instruction is considered a FIFO event and incurs the following delay, which is the time it takes to set the hardware on the AP bus:

- On ^{UNITY}*INOVA*, 0.5- μ s delay (except PFG, which has a 1.0- μ s delay).
- On *MERCURY-VX* and *MERCURY*, 1.2 μ s delay.
- On *UNITYplus*, 1.15- μ s delay.
- On *GEMINI 2000*, *UNITY*, and *VXR-S*, 2.15- μ s delay.

Delays from Changing Attenuation

The pulse sequence statement `power`, which is used to change the level of attenuation produced by a 63-dB rf attenuator in the system, leads to the following values:

- On `UNITYINOVA`, 1 AP bus instruction, 0.5- μ s concomitant internal delay (WFG start takes 1 AP bus instructions at 0.5 μ s and extra board delay of 0.75 μ s, total 1.25 μ s).
- On `MERCURY-VX` and `MERCURY`, 4 AP bus instructions, 4.8- μ s concomitant internal delay.
- On `UNITYplus`, 2 AP bus instructions, 2.3- μ s concomitant internal delay (WFG start takes 5 AP bus instructions at 5.75 μ s).
- On `VXR-S` and `UNITY`, 2 AP bus instructions, 4.3- μ s concomitant internal delay (WFG start takes 7 AP bus instructions at 15.00 μ s).

Table 32 lists all pulse sequence statements that lead to an internal delay and the magnitude of this delay. Similar information to the table is contained in the PSG header file `apdelay.h`, which resides in the VNMR system PSG directory.

On systems with the Output board, **Table 32** indicates that the pulse sequence statement `power` incurs a 4.5 μ s internal delay, not a 4.3 μ s delay as previously stated. Of the 4.5 μ s delay, 0.2 μ s is to allow any high-speed line, (for example, the transmitter gate control line) that has been turned off in PSG at the end of the preceding delay to actually turn off in hardware before the AP bus instructions have been issued from the FIFO. Otherwise, any such high-speed line would not be turned off in hardware until the end of the series of AP bus instructions. This extra 0.2 μ s delay can be avoided with the `apovrride` statement.

Delays from Changing Status

Other delays can be incurred with the `status` and `setstatus` statements. The first occurrence of the `status` statement always incurs the full delay. On subsequent occurrences of `status`, the delay depends on values of the parameters `dmm`, `dmm2`, and `dmm3`. There are three parts that contribute to this delay:

- *Modulation mode* – On `UNITYINOVA`, if and only if the modulation mode changes, 1.0 μ s is added to the delay, and the first occurrence of 's' in the `dm` string (or `dm2` or `dm3`) adds an extra 1.0 μ s. On systems with `apinterface=3` or `UNITYplus` systems, if and only if the modulation mode changes, 2.3 μ s is added to the delay on `UNITYplus` (4.3 μ s on other systems). On `UNITYplus` only, if the mode is synchronous, the first occurrence of the 's' in the `dm` string (or `dm2` or `dm3`) adds an extra 2.3 μ s when the modulation mode is switched from CW to synchronize the decoupling scheme. Note that the waveform generator (mode 'p') needs CW modulation (mode 'c').
- *Waveform generator* – Starting a waveform generator adds 1.25 μ s on `UNITYINOVA`, 5.75 μ s on `UNITYplus`, and 10.75 μ s on other systems. Stopping a waveform generator adds 1 μ s on the `UNITYINOVA`, 2.3 μ s on `UNITYplus`, and 4.3 μ s on other systems. (The modulation mode is to or from 'p'.) The waveform generator also has an offset or propagation delay, which is discussed below.
- *Modulation frequency* – If the modulation frequency changes, 1 μ s is added on the `UNITYINOVA`, 4.6 μ s on the `UNITYplus`, and 6.45 μ s on other systems. Note that for the `UNITYINOVA`, and `UNITYplus`, this is different for a shaped pulse. The modulation frequency can change if the statement `setstatus` is called with a modulation frequency different from the parameter corresponding to the transmitter set, or if the modulation mode changes to or from 'g' and 'r'. If the change is to 'g' and 'r', the modulation frequency is internally scaled, changing the frequency.

Table 32. AP Bus Overhead Delays

Pulse Sequence Statements	Internal Delay (μ s)					
	UNITYINOVA	MERCURY-VX and MERCURY	UNITYplus	GEMINI 2000	UNITY, VXR-S	Output Board Systems
acquire	1.0 pre 0.5 post	—	0.0 pre 0.0 post	—	0.0 pre 0.0 post	—
xmtrphase	0.5	7.2	3.45	—	2.15	2.35
dcphase						
dcplrphase						
dcplr2phase						
dcplr3phase						
power, obspower	0.5	4.8	2.3	—	4.3	4.5
decpower						
dec2power						
dec3power						
pwrfl, obspwrfl	0.5	—	4.6	—	6.45	—
decpwrfl						
dec2pwrfl						
dec3pwrfl						
offset (S=standard L=latching)	4.0	86.4	10.35	15.25	15.05 S 21.5 L	15.25 S 21.7 L
shaped_pulse	1.25 pre	—	5.75	—	15.05	15.45
decshaped_pulse	0.5 post					
dec2shaped_pulse						
dec3shaped_pulse						
simshaped_pulse	*	—	11.5	—	30.1	30.50
sim3shaped_pulse	**	—	17.25	—	45.15	45.55
obsprgon	1.25	—	5.75	—	10.75	10.95
decprgon						
dec2prgon						
dec3prgon						
obsprgoff	0.5	—	2.3	—	4.3	4.5
decprgoff						
dec2prgoff						
dec3prgoff						
spinlock	1.25 pre	—	5.75	—	15.05	15.45
decspinlock	0.5 post					
dec2spinlock						
dec3spinlock						
rgradient and vgradient with gradtype='p'	4.0	—	6.9	—	12.9	Not an option
rgradient and vgradient with gradtype='w'	0.5	—	3.45	—	6.9	Not an option
zgradpulse gradtype='p'	delay + 8.0	—	delay + 13.8	—	delay + 25.8	Not an option
zgradpulse gradtype='w'	delay + 1.0	—	delay + 6.9	—	delay + 13.8	Not an option

* simshaped_pulse: 1.75 pre, 0.5 post

** sim3shaped pulse: 2.25 pre, 0.5 post

Finally, these delays are added up for each channel, and this becomes the delay incurred for status or setstatus. For example, if $dm = 'nnnss'$, $dmm = 'cpfwp'$, and $dm2 = 'y'$, then $dmm2 = 'cccpc'$, Table 33 summarizes the internal intervals, assuming

Table 33. Example of AP Bus Overhead Delays for status Statement

Statement	Delay (μs) UNITY INOVA	Delay (μs) apinterface=3	Delay (μs) UNITYplus	Reason
status(B)	0	0	0	dmm from 'c' to 'p', WFG not started because dm='n' in B
status(C)	1.0	4.3	2.3	dmm from 'p' to 'f', no WFG to stop
status(D)	1.0+1.25	4.3+10.75	4.6+5.75	dmm from 'f' to 'w', UNITY INOVA and UNITYplus synchronize, dmm2 from 'c' to 'p'
status(E)	1.75+0.5	15.05+4.3	8.05+2.3	dmm from 'w' to 'p' (= 'c') and start WFG, dmm2 from 'p' to 'c', only stop WFG

status(A) is the initial state.

To keep the status timing constant, use the statusdelay statement. This statement allows the user to specify a defined period of time for the status statement to execute. For example, if `statusdelay('B', 2.0e-5)` is used, as long as the time it takes to execute status for state B is less than 20 microseconds, the statement will always take 20 microseconds. If the time to execute state B is greater than 20 microseconds, the statement still executes, but a warning message is generated.

Waveform Generator High-Speed Line Trigger

Along with the AP bus overhead delay, the waveform generator has an offset delay as a result of high-speed line (WFG) propagation delay. This shifts the rf pattern beyond the AP bus delay. Figure 5 illustrates the delay for UNITY INOVA. The time overhead for the AP bus is 1.25 μs (this includes a 0.5- μs AP bus delay and a 0.75- μs board delay). The offset delay is an additional 0.45 μs , for a total delay of 1.70 μs . The UNITY INOVA WFG also has a post pulse overhead delay.

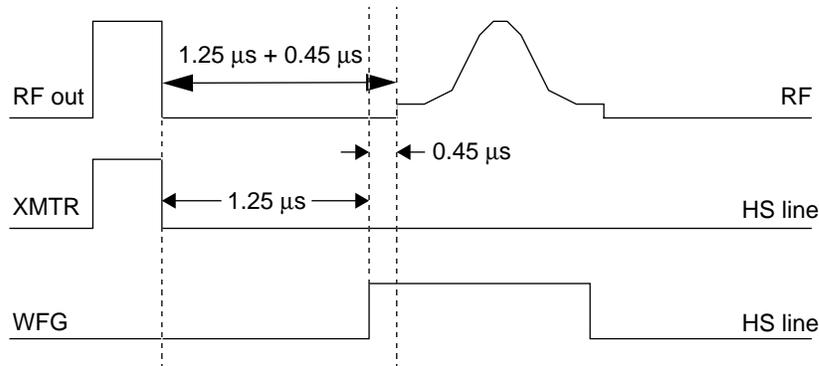


Figure 5. Waveform Generator Offset Delay on UNITY INOVA Systems

On *UNITYplus*, the time overhead for the AP bus is 5.75 μ s. The offset delay is an additional 0.45 μ s, for a total delay of 6.20 μ s.

Note that if the shaped pulse is followed by a delay, say `d3`, then the end of the delay is at `1.7+pshape+0.5+d3`. Similarly, on *UNITYplus*, the end of the delay is at `6.20+pshape+d3`. On *UNITY*, it shifts 1.5 μ s, so the offset delay depends on the type of system. To obtain the proper offset delay, available in `apdelay.h`, are macros `WFG_OFFSET_DELAY`, `WFG2_OFFSET_DELAY`, and `WFG3_OFFSET_DELAY`.

Another delay is incurred between transients on systems other than *UNITYINOVA*. At the end of data collection, 3.5 ms is inserted to give the acquisition computer time to check lock, temperature, spin, etc. If the solids ADC is used so that `sw` is greater than 100000, this delay is extended to 15.5 ms on *UNITYplus* systems or extended by 10 ms per kilobyte points on *UNITY* and *VXR-S* systems. The *UNITYINOVA* has a 0.004-ms delay at the start of a transient to initialize the data collection hardware, and a 2.006-ms delay at the end of a transient for data collection error detection. For systems with gradients, the end of scan delays do not include the times to turn off gradients, which is done at the end of every scan.

2.13 Indirect Detection on Fixed-Frequency Channel

Indirect detection experiments, in which the observe nucleus is ^1H and the decouple nucleus is a low-frequency nucleus, usually ^{13}C , are easily done on systems with two broadband channels (not available on *GEMINI 2000* systems). Systems with a fixed-frequency decoupler depend on the type of system.

Fixed-Frequency Decoupler

For systems with a fixed-frequency ^1H decoupler, the implementation depends on whether the system is a *UNITYINOVA*, *MERCURY-VX*, *MERCURY*, *UNITYplus*, or *GEMINI 2000*, or instead, is a *UNITY* or *VXR-S*.

UNITYINOVA, *MERCURY*, *UNITYplus*, *GEMINI 2000* Systems

A *UNITYINOVA* or *UNITYplus* system with the label Type of RF set to U+ H1 Only in the CONFIG window, or any *MERCURY-VX*, *MERCURY*, or *GEMINI 2000* broadband system, can use the same parameter sets and pulse sequences as a dual-broadband system (e.g., HMQC) as long as the pulse statements in a sequence do not use the channel identifiers `TODEV`, `DODEV`, `DO2DEV`, and `DO3DEV`. This restriction is negligible because statements `obspower`, `decpower`, `dec2power`, and `dec3power` are available that specify an rf channel without requiring these channel identifiers. Each of these statements require only the power level and can be remapped to different rf channels. The `rfchannel` parameter enables remapping rf channel selection. Refer to the description of `rfchannel` in the *VNMR Command and Parameter Reference* for details.

Internal logic on this system checks if the first decoupler is U+ H1 Only, or the system is a *GEMINI 2000*, `tn` is set to 'H1', and `dn` is not set to 'H1'. If this is the case, the parameters and pulse statements for rf channels 1 and 2 are exchanged automatically.

MERCURY-VX, *MERCURY*, and *GEMINI 2000* support automatic channel swapping as well.

UNITY and VXR-S Systems

UNITY and VXR-S fixed-frequency systems present special pulse sequence programming and hardware considerations. The hardware issues are discussed in the operation manuals. In this section, we discuss pulse sequence programming of these systems.

Pulse sequences written to perform indirect detection experiments must use `decpulse` (and related) statements to pulse the ^1H channel, and `pulse` statements to pulse the X channel. Having done this, and having set `tn= 'C13'` and `dn= 'H1'`, the software would normally set Channel A (the high-frequency channel) of the pulse amplifier into a CW mode, as appropriate for decoupling, and Channel B (the low-frequency channel) of the amplifier into a pulse mode. Proper operation of the pulse sequence requires that these modes be switched—the low-frequency channel in CW mode and the high-frequency channel in pulse mode.

To accomplish this, the C source file `revmode.c` is provided, and must be included in any pulse sequence to be run in the “reversed” configuration, as shown here:

```
/* s2pulr - reverse mode s2pul */
#include <standard.h>
#include <revmode.c> /* for reverse configuration */
pulsesequance()
{
    hsdelay(d1); decrgpulse(p1,zero,rof1,rof1);
    delay(d2);   decrgpulse(pw,oph,rof1,rof2);
}
```

In addition to setting the proper modes for each channel of the amplifier, the `revmode` file also configures the local oscillator (L.O.) relay properly so that the local oscillator signal is taken from the “decoupler” board.

When used in the reverse mode, the X nucleus decoupling signal comes from the “observe” board. This board does not contain any of the hardware decoupler modulations such as WALTZ decoupling. Furthermore this decoupling signal is not controlled by the parameter `dm`, which controls (under “status” control) the ^1H signal. For these reasons any pulse sequence in which X nucleus decoupling is desired during acquisition (on a single-broadband system) must use “programmed” decoupling with explicit acquisition—see the `hmqcr.c` sequence for an example. Do *not* code sequences in which the `status` statement is used to switch on the decoupler. If the parameter `dm` is used, it must be used indirectly, as in `hmqcr.c`.

The `legrelay` parameter provides override capability over the magnet leg high band and low (broad) band rf signal routing. This is useful when a probe has a high and low band nucleus double-tuned to a coil and the standard logic would switch to the wrong probe connection. A system has this override capability if it uses N-type connectors instead by BNC connectors on the magnet leg. Valid values of `legrelay` are the following:

- 'n' means to use normal logic to set the magnet leg relay
- 'h' means to set the leg relay to high band
- 'l' means to set the leg relay to low (broad) band

Any other value will result in an error message and PSG will abort. The `legrelay` parameter normally does not exist but can be created with the command `create('legrelay','string')`.

2.14 Multidimensional NMR

A standard feature of all pulse sequences is the ability to array acquisition parameters and automatically acquire an array of the corresponding FIDs. For example, arraying the `pw` parameter and viewing the resulting array of spectra is one way to estimate the 90-degree pulse width. This explicit array feature is automatic, whenever a parameter is set to multiple values, such as `pw=5, 6, 7, 8, 9, 10`.

A separate type of arrayed data set are the 2D, 3D, and 4D data sets. The distinguishing feature of this type of data set is that the arrayed element has a uniform, automatically calculated increment between values. The `ni` parameter is set to the number of increments desired in the first indirect dimension of a multidimensional data set. The inverse of the parameter `sw1` defines the increment in successive values of the implicitly arrayed delay `d2`. For example, if `ni=8`, an implicit `d2` array with values `d2=0, 1/sw1, 2/sw1, 3/sw1, 4/sw1, 5/sw1, 6/sw1, 7/sw1` is generated. Eight FIDs, each using the corresponding `d2` delay, will be acquired.

For the second indirect dimension, the analogous parameters are `ni2`, `sw2`, and `d3`. For the third indirect dimension, the analogous parameters are `ni3`, `sw3`, and `d4`.

When creating a new 2D pulse sequence in standard form, the pulse sequence should contain a `d2` delay. To create the appropriate parameters, use the `par2d` macro. It is usually convenient to call `par2d` from within the macro used to set up the pulse sequence, and to set the parameters to appropriate values with the `set2d` macro. Examples of 2D pulse sequences are given in the standard software in `/vnmr/psglib` and `/vnmr/maclib`.

When creating a new 3D pulse sequence in standard form, the pulse sequence should contain the delays `d2` and `d3`, and parameters can be created with the `par3d` macro. Similarly, a 4D pulse sequence should contain the delays `d2`, `d3`, and `d4`, with parameters created by the `par4d` macro.

Each indirect dimension of data can be acquired in a phase-sensitive mode. Examples of this include the hypercomplex method and the TPPI method (see the chapter on multidimensional NMR in *User Guide: Liquids NMR* for more details).

For each indirect dimension, a *phase* parameter selects the type of acquisition. For the first indirect dimension, the corresponding phase parameter is `phase`. For the second indirect dimension, the parameter is `phase2`. For the third indirect dimension, the parameter is `phase3`. The total number of FIDs in a given multidimensional data set is stored in the parameter `arraydim`. For a 2D experiment, `arraydim` is equal to `ni*(number of elements of the phase parameter)`.

When programming the multidimensional pulse sequences, it is convenient to have access to the current increment in a particular indirect dimension, and to know what the phase element is. Table 34 lists these PSG variables (see Table 22 for the full list of Vnmr parameters and their corresponding PSG variable names and types).

Some pulse sequences, such as heteronuclear 2D-J (HET2DJ), can be used “as is” for phase-sensitive 2D NMR; however, the hypercomplex and TPPI experiments require more information compared to “normal” pulse sequences, and this is presented here.

Hypercomplex 2D

Hypercomplex 2D (States, Haberkorn, Ruben) requires only that a pulse sequence be run using an arrayed parameter that generates the two required experiments. While this can be any parameter, for consistency we recommend the use of a parameter `phase`, which can

Table 34. Multidimensional PSG Variables

<i>PSG Variable</i>	<i>PSG type</i>	<i>Vnmr parameter</i>	<i>Description</i>
d2_index	int	0 to (ni-1)	Current index of the d2 array
id2	real-time	0 to (ni-1)	Current real-time index of the d2 array
inc2D	double	1.0/sw1	Dwell time for first indirect dimension
phase1	int	phase	Acquisition mode for first indirect dimension
d3_index	int	0 to (ni2-1)	Current index of the d3 array
id3	real-time	0 to (ni2-1)	Current real-time index of the d3 array
inc3D	double	1.0/sw2	Dwell time for second indirect dimension
phase2	int	phase2	Acquisition mode for second indirect dimension
d4_index	int	0 to (ni3-1)	Current index of the d4 array
id4	real-time	0 to (ni3-1)	Current real-time index of the d4 array
inc4D	double	1.0/sw3	Dwell time for third indirect dimension
phase3	int	phase3	Acquisition mode for third indirect dimension
ix	int	1 to arraydim	Current element of an arrayed experiment

be set by the user to 0 (to give a non-phase-sensitive experiment) or to an array (as in phase=1, 2) to generate the two desired experiments. The parameter phase is automatically made available to a pulse sequence as the integer phase1. Typical code as part of the pulse sequence might look like this:

```
pulsesequence()
{
  if (phase1==0)
  {
    /* Phase calculation for */
    ... /* 'normal' experiment */
  }
  else if (phase1==1)
  {
    /* Phase calculation for */
    ... /* first of two arrays */
  }
  else if (phase1==2)
  {
    /* Phase calculation for */
    ... /* second of two arrays */
  }
}
```

This code usually can be condensed because the phases are obviously related in the three experiments, and three separate phase calculations are not needed. One possibility is to write down the phase cycle for the entire experiment, interspersing the “real” and “imaginary” experiments, then generate an “effective transient counter” as follows:

```
if (phase1==0) assign(ct,v10); /* v10=01234... */
else /* phase1=1 */ dbl(ct,v10); /* v10=02468... */
if (phase1==2) incr(v10); /* v10=13579... */
```

Now a single phase cycle can be derived from `v10` instead of from `ct`. If `phase1=0`, each element of this phase cycle is selected. If `phase1=1`, only the odd elements are selected (the first, third, fifth, etc. transients for which `ct=0, 2, 4,...`). If `phase1=2`, the even elements only are selected (`ct` odd).

Real Mode Phased 2D: TPPI

For TPPI experiments, the increment index is typically needed at some point in the phase calculation. The simplest way to obtain the index is to use the built-in real-time constant `id2`. This can be used in a construction such as

```
if (phase1==3)
add(v11,id2,v11);
```

which adds the increment value (which starts at 0) to the phase contained in `v11`.

2.15 Gradient Control for PFG and Imaging

UNITYINOVA, *MERCURY-VX*, *MERCURY*, *UNITYplus*, *UNITY*, and *GEMINI 2000* systems support gradient control for applications using the optional pulsed field gradient (PFG) and imaging. The configuration parameter `gradtype`, set by the `config` program, specifies the presence of gradient hardware and its capabilities. The available gradient control statements are listed in [Table 35](#). *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems use `rgradient` and `vgradient`, and *MERCURY-VX* and *MERCURY* uses the `lk_sample` and `lk_hold` statements

[Table 36](#) lists delays for shaped gradient statements on systems with gradient waveform generators (`gradtype='w'` or `gradtype='q'`). The times for the three-axis gradient statements (`obl_gradient`, `oblique_gradient`, `pe2_gradient`, `phase_encode3_gradient`, etc.) are the overhead times for setting all three gradients. The gradients are always set in sequential 'x', 'y', 'z' order.

It is important to note that starting with VNMR 5.1, some gradient statements use DAC values to set the gradient levels and others use values in gauss/cm. The lower level gradient statements (`gradient`, `rgradient`, `shapedgradient`, etc.) use DAC values, and the obliquing and variable-angle gradient statements use gauss/cm. The gradient statements associated with DAC values are used in single-axis PFG pulse sequences and microimaging pulse sequences, while the gradient statements associated with gauss/cm are used in imaging pulse sequences and triple-axis PFG pulse sequences.

Setting the Gradient Current Amplifier Level

To set the gradient current amplifier level, use `rgradient(channel,value)`, where `channel` is 'X', 'x', 'Y', 'y', 'Z', or 'z' (only 'Z' or 'z' is supported on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*) and `value` is a real number for the amplifier level (e.g. `rgradient('z',1327.0)`). For the Performa I PFG module, `value` must be from -2048 to 2047; for Performa II, `value` must be from -32768.0 to 32767.0.

To set the gradient current amplifier level but determine the value instead by real-time math, use `vgradient(channel,intercept,slope,rtval)`, where `channel` is used the same as in `rgradient`, and amplifier level is determined by `intercept + slope * rtval` (e.g., `vgradient('z',-5000.0,2500.0,v10)`). This statement not available on the Performa I PFG module.

Table 35. Gradient Control Statements

<code>lk_hold()</code>	Set lock correction circuitry to hold
<code>lk_sample()</code>	Set lock correction circuitry to sample
<code>obl_gradient*</code>	Execute an oblique gradient
<code>oblique_gradient*</code>	Execute an oblique gradient
<code>obl_shapedgradient*</code>	Execute a shaped oblique gradient
<code>oblique_shapedgradient*</code>	Execute a shaped oblique gradient
<code>pe_gradient*</code>	Oblique gradient with PE in 1 axis
<code>pe2_gradient*</code>	Oblique gradient with PE in 2 axes
<code>pe3_gradient*</code>	Oblique gradient with PE in 3 axes
<code>pe_shapedgradient*</code>	Oblique shaped gradient with PE in 1 axis
<code>pe2_shapedgradient*</code>	Oblique shaped gradient with PE in 2 axes
<code>pe3_shapedgradient*</code>	Oblique shaped gradient with PE in 3 axes
<code>phase_encode_gradient*</code>	Oblique gradient with PE in 1 axis
<code>phase_encode3_gradient*</code>	Oblique gradient with PE in 3 axes
<code>phase_encode_shapedgradient*</code>	Oblique shaped gradient with PE in 1 axis
<code>phase_encode3_shapedgradient*</code>	Oblique shaped gradient with PE in 3 axes
<code>rgradient(channel,value)</code>	Set gradient to specified level
<code>shapedgradient*</code>	Shaped gradient pulse
<code>shaped2Dgradient*</code>	Arrayed shaped gradient function
<code>shapedincgradient*</code>	Dynamic variable gradient function
<code>shapedvgradient*</code>	Dynamic variable shaped gradient function
<code>vgradient*</code>	Set gradient to level determined by real-time math
<code>vgradient*</code>	Variable angle gradient
<code>vgradientpulse*</code>	Pulse controlled variable angle gradient
<code>vashapedgradient*</code>	Variable angle shaped gradient
<code>vashapedgradientpulse*</code>	Variable angle pulse controlled shaped gradient
<code>zgradientpulse(value,delay)</code>	Create a gradient pulse on the z channel
<code>zero_all_gradients*</code>	Set all gradients to zero

* For the argument list, refer to the statement reference in Chapter 3

Generating a Gradient Pulse

To create a gradient pulse on the z channel with given amplitude and duration, use `zgradientpulse(value,delay)`, where `value` is used the same as in `rgradient` and `delay` is any delay parameter (e.g., `zgradientpulse(1234.0,d2)`).

`shapedgradient(pattern,width,amp,channel,loops,wait)` generates a shaped gradient, where `pattern` is a file in `shapelib`, `width` is the pulse length, `amp` is a value that scales the amplitude of the pulse, `channel` is the same as used with `rgradient`, `loops` is the number of times (1 to 255) to loop the waveform, and `wait` is `WAIT` or `NOWAIT` for whether or not a delay is inserted to wait until the gradient is completed before executing the next statement (e.g.,

```
shapedgradient("hsine",0.02,32676,'y',1,NOWAIT))
```

This statement is only available on the Perform II PFG module.

Controlling Lock Correction Circuitry

On *MERCURY-VX*, *MERCURY*, *UNITYINOVA*, and *UNITYplus* systems, `lk_sample()` and `lk_hold()` are provided to control the lock correction circuitry. If during the course

Table 36. Delays for Obliquing and Shaped Gradient Statements

<i>Pulse Sequence Statements</i>	<i>Delay (μs)</i>		
	<i>UNITY INOVA</i>	<i>UNITYplus</i>	<i>UNITY, VXR-S</i>
shapedgradient	0.5	5.75	10.75
shapedvgradient	1.5	14.95	27.95
shapedincgradient	1.5	12.65	23.65
incgradient (gradtype='p', gradtype='q')	4.0	—	—
incgradient (gradtype='w')	0.5	3.45	6.9
obl_gradient, oblique_gradient, pe_gradient, phase_encode_gradient (gradtype='p', gradtype='q')	12.0	20.70	38.70
obl_gradient, oblique_gradient, pe_gradient, phase_encode_gradient (gradtype='w')	1.5	10.35	20.70
pe2_gradient, phase_encode3_gradient (gradtype='p', gradtype='q')	12.0	—	—
pe2_gradient, phase_encode3_gradient (gradtype='w')	1.5	10.35	20.70
obl_shapedgradient, oblique_shapedgradient	1.5	17.25	32.25
pe_shapedgradient, phase_encode_shapedgradient	4.5	44.85	83.85
pe2_shapedgradient, pe3_shapedgradient, phase_encode3_shapedgradient	4.5	37.95	70.95

of a pulse sequence the lock signal is disturbed—for instance, with a gradient pulse or pulses at the ^2H frequency—the lock circuitry might not be able to hold on to the lock. When this is the case, the correction added in the feedback loop that holds the lock can be held constant by calling `lk_hold()`. At some time after the disturbance has passed (how long depends on the type of disturbance), the statement `lk_sample()` should be called to allow the circuitry to correct for disturbances external to the experiment.

Programming Microimaging Pulse Sequences

The procedures for programming microimaging pulse sequences for UNITY and UNITYplus systems are the same as those used in the programming of spectroscopy sequences, with the exception that additional pulse sequence statements have been added to define the amplitude and timing of the gradient pulses and the shaped rf pulses. For example, in the statement `rgradient(name, value)` to set a gradient, the argument name is either X, Y, or Z (or alternatively with the connection through the parameter

orient, gread, gphase, or gslice) and value is the desired gradient strength in DAC units at the time the statement is to be implemented.

The basic imaging sequences included with the VNMR software are sequences for which the image data can be acquired, processed, and displayed with essentially the same software tools that are used with 2D spectra. These sequences have been written in a form that provides a great deal of flexibility in adapting them to the different modes of imaging and include the capabilities of multislice and multiecho imaging. Many of the spectroscopic preparation pulse sequences can be linked to the standard imaging sequences to limit the spin population type that is imaged, to provide greater contrast in the image, or to remove artifacts from the image.

For UNITY*plus*, UNITY, and VXR-S systems, configuring the system as an imaging spectrometer has a number of PSG implications. See the next section for more information on the implications relative to PSG, and see the software installation manual for system configuration procedures.

2.16 Programming the Performa XYZ PFG Module

The Performa XYZ pulsed field gradient (PFG) module adds new capabilities to high-resolution liquids experiments on Varian spectrometers. The module applies gradients in B_0 along three distinct axes at different times during the course of the pulse sequence. These gradients can perform many functions, including solvent suppression and coherence pathway selection. This section describes pulse sequence programming of the module.

Creating Gradient Tables

In order for the software to have the necessary information on all three axes to convert between gauss/cm and DAC values, the XYZ PFG probe and amplifier combination can be calibrated using the `createtable` macro and a gradient table made in `/vnmr/imaging/gradtables`.

The macro first prompts the user to see if the gradient axes are set to the same gradient strength (horizontal-bore imaging system) or if the axes have different gradient strengths (vertical-bore PFG gradients). Next, the user is prompted for a name for the gradient coil, and that name is then used in the `gcoil` and `sysgcoil` parameters in order to correctly translate between DAC and gauss/cm values. Finally, the macro prompts the user for the boresize of the magnet (51 mm), the gradient rise time (40 μ s), and the maximum gradient strength obtainable for each axis. Note that the gradient strengths are not equal and the amplifier does not limit the combined output.

If the parameter `gcoil` does not exist in a parameter set and must be created, you must set the protection bit that causes the macro `_gcoil` to be executed when the value for `gcoil` is changed. Setting the protection bit can be done two ways:

- Use the macro `updtgcoil`, which will create the `gcoil` parameter if it does not exist.
- Create `gcoil` with the following commands:


```
create('gcoil','string')
setprotect('gcoil','set',9)
```

In an experiment that uses gradient coils, the `sysgcoil` parameter can be set to the coil name specified with the `createtable` macro and then the `updtgcoil` macro can be run to update the local `gcoil` parameter from the global `sysgcoil` parameter. When the local `gcoil` parameter is updated, the local `gxmax`, `gymax`, `gzmax`, `trise` and

boresize parameters are also updated. Refer to the *VNMR Command and Parameter Reference* and the *User Guide: Imaging* for additional information about `createtable`.

Pulse Sequence Programming

Table 37 lists the pulse sequence statements related to the XYZ PFG module. The system can be programmed by using the statements `rgradient(channel, value)` and `zgradpulse(value, delay)`. Pulse sequences `g2pul.c` and `profile.c` in `/vnmr/psglib` are examples of using the `gradaxis` parameter and the `rgradient` statement.

Table 37. Performa XYZ PFG Module Statements

<code>magradient(gradlvl)</code>	Simultaneous gradient at the magic angle
<code>magradpulse(gradlvl, gradtime)</code>	Simultaneous gradient pulse at the magic angle
<code>mashapedgradient*</code>	Simultaneous shaped gradient at the magic angle
<code>mashapedgradpulse*</code>	Simultaneous shaped gradient pulse at the magic angle
<code>rgradient(axis, value)</code>	Set gradient to specified level
<code>vagradpulse*</code>	Variable angle gradient pulse
<code>vashapedgradient*</code>	Variable angle shaped gradient
<code>vashapedgradpulse*</code>	Variable angle shaped gradient
<code>zgradpulse(value, delay)</code>	Create a gradient pulse on the z channel
* <code>mashapedgradient(pattern, gradlvl, gradtime, theta, phi, loops, wait)</code>	
<code>mashapedgradpulse(pattern, gradlvl, gradtime, theta, phi)</code>	
<code>vagradpulse(gradlvl, gradtime, theta, phi)</code>	
<code>vashapedgradient(pattern, gradlvl, gradtime, theta, phi, loops, wait)</code>	
<code>vashapedgradpulse(pattern, gradlvl, gradtime, theta, phi)</code>	

To produce a gradient at any angle by the combination of two or more gradients, the `vagradpulse(gradlvl, gradtime, theta, phi)` statement can be used, and to produce three equal and simultaneous gradients, such that an effective gradient is produced at the magic angle, the `magradpulse(gradlvl, gradtime)` statement is available. The statements `vagradpulse` and `magradpulse` are structured so that the software does all of the calculations to produce the effective gradient desired. Both statements take the argument for the gradient level (`gradlvl`) in gauss/cm. This is distinctly different from the `rgradient` and `zgradpulse` statements, which take the argument for the gradient level (`value`) in DAC.

With these statements, the `gcoil` and `sysgcoil` parameters are required for the software to calculate the correct DAC value for each channel in order to produce the requested effective gradient. After the gradients have each been calibrated and a `gradtable` has been constructed with the `createtable` macro, as described above, then the `sysgcoil` parameter can be set to that coil name used. The `updtgcoil` macro can then update the local `gcoil` parameter from the global `sysgcoil` parameter.

The `vagradpulse` statement uses the `theta` and `phi` angles to produce an effective gradient at any arbitrary angle. For example, using `vagradpulse` with `theta=54.7` and `phi=0.0`, an effective gradient is produced at the magic angle by the correct combination of the Z gradient and the Y gradient. Whereas, if `theta=54.7` and `phi=90`, an effective gradient is produced at the magic angle by the correct combination of the Z gradient and the X gradient. Variations on the `vagradpulse` statement include the capability of shaping the gradient waveform with the `vashapedgradient` and the `vashapedgradpulse` statements. For more information about these statements, see their descriptions in Chapter 3.

In addition, the `magradpulse` statement produces equal and simultaneous gradients on all three axes in order to produce an effective gradient at the magic angle. Variations on the `magradpulse` statement include the capability of shaping the gradient waveform with the `maskedgradient` and the `maskedgradpulse` statements. Again, for more information, refer to Chapter 3.

2.17 Imaging-Related Statements

Table 38 summarizes the PSG statements related to imaging. In VNMR 5.1, most of these statements could only be used with the system configured as an imaging spectrometer. With VNMR 5.3 and later software, however, the PSG imaging statements are used whenever their functionality is needed, provided your system does not have a 63-step output board.

Statements related to imaging can be grouped as follows:

- Real-time gradient statements
- Oblique gradient statements
- Global list and position statements
- Looping statements
- Waveform initialization statements
- Other statements

These statements were developed to support oblique imaging using standard units (gauss/cm) to set the gradient values and to support the use of real-time variables and loops when constructing imaging sequences. Using real-time variables and loops resulting in “compressed” acquisitions, instead of standard acquisition arrays, reduces the number of codesets needed to run the experiment, cutting down significantly on the start-up time of the experiment and removing any inter-FID and intertransient overhead delays. This is not really a problem on ^{UNITY}INOVA systems, because its small overhead delays and `d0` parameter make the inter-FID and intertransient delays consistent, but may make a difference in some applications.

Real-time Gradient Statements

Real-time gradient statements consist of additions to the standard `gradient` and `shapedgradient` statements, which provide real-time variable control for the gradient amplitudes. Real-time statements include `shapedvgradient`, which provides real-time control on one axis, `incgradient` and `shapedincgradient`, which support real-time control over three axes. The `vgradient` statement also belongs to this group.

Oblique Gradient Statements

To support oblique imaging and the imaging interface, oblique gradient statements include `oblique_gradient`, `phase_encode_gradient`, `pe_gradient`, and all of their variations. The inputs to these statements are amplitudes and phases. Amplitudes are expressed in gauss/cm and correspond to the read-out, phase-encode, and slice-select axis in the logical frame. Phase angles correspond to Euler angles `psi`, `phi`, and `theta` and describe the coordinate rotation applied to the input amplitudes. For more information on use, see the manual *User Guide: Imaging*.

Table 38. Imaging-Related Statements

<code>create_delay_list*</code>	Create table of delays
<code>create_freq_list*</code>	Create table of frequencies
<code>create_offset_list*</code>	Create table of frequency offsets
<code>endmsloop*/endpeloop*</code>	Ends a loop started by the msloop/pelooop
<code>getarray*</code>	Retrieves all values of arrayed parameter
<code>getorientation*</code>	Read image plane orientation
<code>incgradient*</code>	Dynamic variable gradient function
<code>init_rfpattern*</code>	Create rf pattern file
<code>init_gradpattern*</code>	Create gradient pattern file
<code>init_vscan*</code>	Initialize real-time variable for vscan
<code>obl_gradient*</code>	Execute an oblique gradient
<code>oblique_gradient*</code>	Execute an oblique gradient
<code>obl_shapedgradient*</code>	Execute a shaped oblique gradient
<code>oblique_shapedgradient*</code>	Execute a shaped oblique gradient
<code>msloop*/peloop*</code>	Provides a sequence-switchable loop
<code>pe_gradient*</code>	Oblique gradient with PE in 1 axis
<code>pe2_gradient*</code>	Oblique gradient with PE in 2 axes
<code>pe3_gradient*</code>	Oblique gradient with PE in 3 axes
<code>pe_shapedgradient*</code>	Oblique shaped gradient with PE in 1 axis
<code>pe2_shapedgradient*</code>	Oblique shaped gradient with PE in 2 axes
<code>pe3_shapedgradient*</code>	Oblique shaped gradient with PE in 3 axes
<code>phase_encode_gradient*</code>	Oblique gradient with PE in 1 axis
<code>phase_encode3_gradient*</code>	Oblique gradient with PE in 3 axes
<code>phase_encode_shapedgradient*</code>	Oblique shaped gradient with PE in 1 axis
<code>phase_encode3_shapedgradient*</code>	Oblique shaped gradient with PE in 3 axes
<code>poffset*/position_offset*</code>	Set frequency based on position
<code>poffset_list*</code>	Set frequency from position list
<code>position_offset_list*</code>	Set frequency from position list
<code>shapedgradient*</code>	Provide shaped gradient pulse
<code>shaped2Dgradient*</code>	Arrayed shaped gradient function
<code>shapedincgradient*</code>	Dynamic variable gradient function
<code>shapedvgradient*</code>	Dynamic variable shaped gradient function
<code>sli*</code>	Set SLI lines
<code>vgradient*</code>	Variable angle gradient
<code>vgradpulse*</code>	Pulse controlled variable angle gradient
<code>vashapedgradient*</code>	Variable angle shaped gradient
<code>vashapedgradpulse*</code>	Variable angle pulse controlled shaped gradient
<code>vdelay*</code>	Select delay from table
<code>vdelay_list*</code>	Get delay value from delay list with real-time index
<code>vfreq*</code>	Select frequency from table
<code>vgradient*</code>	Dynamic variable gradient
<code>voffset*</code>	Select frequency offset from table
<code>vscan*</code>	Dynamic variable scan function
<code>vsli*</code>	Set SLI lines from real-time variable
<code>zero_all_gradients*</code>	Sets all gradients to zero
* For the argument list, refer to the statement reference in Chapter 3	

Global List and Position Statements

The global list statements support real-time selection of frequencies, offsets, and delays. Global lists are different from AP tables in that the lists are sent down to the acquisition console when the experiment starts up and remain accessible until the experiments completes. The lists can be arrayed parameters (with a protection bit set to prevent an arrayed acquisition) read into the pulse sequence using the `getarray` statement or standard C language arrays calculated within the pulse sequence. The lists are initialized with the statements `create_freq_list`, `create_offset_list`, and `create_delay_list`, and then selected and set using the `vfreq`, `voffset`, and `vdelay_list` statements; which use a real-time parameter as an index into the list.

The position statements set the rf frequency from a given position or an array of positions. These statements are `poffset`, `poffset_list`, `position_offset`, and `position_offset_list`. The position list statements use global lists, which initialize the list and select and set the position in a single statement.

When creating global list parameters, create them as acquisition parameters and set protection bit 8 (value 256) or else PSG tries to array them as standard arrayed acquisitions.

Looping Statements

The looping statements `msloop` and `peloop` define multislice and phase encode loops when creating imaging pulse sequences. The looping statements also allow selection of a standard “arrayed” acquisition or a “compressed” acquisition using the `seqcon` parameter.

Waveform Initialization Statements

The waveform initialization statements `init_rfpattern` and `init_gradpattern` are available to all configurations and allow the user to calculate and create gradient and rf patterns in PSG.

Other Statements

The `init_vscan` and `vscan` statements are used to provide a dynamic scan capability. The `sli` and `vsli` statements are used with the Synchronized Line Interface board, which is a SIS specific hardware device used to support interfacing to external devices. The `sli` and `vsli` statements are not supported on ^{UNITY}INOVA. ^{UNITY}INOVA support for interfacing to an external device is included in the AP User interface.

2.18 User-Customized Pulse Sequence Generation

The complete pulse sequence generation (PSG) source code is supplied in the VNMR system `psg` directory. This code enables users to create their own `libpsglib.so` PSG directory for link loading with the pulse sequence object file `pulsesequence.o`.

The UNIX shell script `setuserpsg` in the system directory creates the directory `vnmr/sys/psg` for a user, if it does not already exist, and initializes this user PSG directory with the appropriate object libraries from the system PSG directory. The script `setuserpsg` should only have to be run once by each separate user. `setuserpsg` places the file `libpsglib.a` in the user’s `psg` directory.

The UNIX shell script `psggen` compiles files in the user PSG object directory and places the files in the user PSG directory. When executed, `psggen` looks first for the user PSG

library `~/vnmrsys/psg` in the user PSG directory, and then in the system library directory `/vnmr/lib`.

Modifying a PSG source file and subsequently recompiling the user PSG object directory is done as follows:

1. Enter **setuserpsg** from a UNIX shell (done only once).
Typical output from this command is as follows:
Creating user PSG directory...
Copying User PSG library from system directory...
2. Copy the desired PSG source file(s) from `$vnmrsystem/psg` to `$vnmruser/psg`.
3. Modify the PSG source files(s) in the user PSG directory.
4. Enter **psggen** from a UNIX shell or from within Vnmr.
Typical output from this command is as follows:
Creating additional source links...
Compiling PSG Library...
PSG Library Complete.

Chapter 3. Pulse Sequence Statement Reference

This chapter contains a detailed reference to the statements used in VNMR pulse sequence programming. For a list of statements, refer to the Table of Contents.

For each statement, the syntax and a description is provided. If the statement contains arguments, a description of each argument and an example showing the use of the arguments is also provided. For most statements, a cross-reference to related statements is provided at the end of the listing. If the statement applies only to certain hardware or system options, an applicability entry is included. A change bar indicates new or changed information since the last version of VNMR.

A

acquire **Explicitly acquire data**

Applicability: All systems except *MERCURY* and *GEMINI 2000*.

Syntax: `acquire(number_points, sampling_interval)`
`double number_points; /* points to acquire */`
`double sampling_interval; /* dwell time in sec */`

Description: Acquire data points where the sequence of events is to acquire a pair of points for 200 ns, delay for `sampling_interval` minus 200 ns, then repeat for `number_points/2` times.

For ^{UNITY}*INOVA* systems there are small overhead delays before and after the acquire. The pre-acquire delay takes into account setting the receiver phase with `oph` and enabling data overflow detection. The post-acquire delay is for disabling data overflow detection. When using acquire statements within a hardware loop these overhead delays and the functions associated with them are placed outside the hardware loop. When using multiple acquire statements outside a hardware loop in a pulse sequence setting, the phase and enabling data overflow detection is done before the first acquire statement. Disabling overflow detection is done after the last acquire, so there is no overhead time between acquire statements.

If an `acquire` statement occurs outside a hardware loop, the number of complex points to be acquired must be a multiple of 2 on systems with a Digital Acquisition Controller board, an Acquisition Controller board, or a Pulse Sequence Controller board, or must be a multiple of 32 on systems with a Output board (each board is described below).

Inside a hardware loop, systems with a Digital Acquisition Controller board or a Pulse Sequence Controller board can accept a maximum of 2048 complex points, systems with an Acquisition Controller board can accept a maximum of

1024 complex points, and systems with an Output board can accept a maximum of 63 complex points.

The following list identifies the acquisition controller boards used on Varian NMR spectrometer systems:

- *Data Acquisition Controller boards, Part No. 01-902010-00.* Started shipping in mid-1995 with the introduction of the UNITYINOVA system.
- *Pulse Sequence Controller boards, Part No. 00-992560-00.* Started shipping in early 1993 with the introduction of the UNITYplus system.
- *Acquisition Controller boards, Part No. 00-969204-00 or 00-990640-00.* Started shipping 00-969204-00 in late 1988 as a replacement for the Output boards. Part No. 00-990640-00 replaced 00-969204-00 in mid-1990.
- *Output boards, Part No. 00-953520-0#, where # is an integer.* Shipped with systems prior to 1988.

Arguments: `number_points` is the number of data point to be acquired.

`sampling_interval` is the length, in seconds, of the sampling interval.

Examples: `acquire(np, 1.0/sw);`

Related: `endhardwareloop` End hardware loop
`starthardwareloop` Start hardware loop

add Add integer values

Syntax: `add(vi, vj, vk)`
`codeint vi; /* real-time variable vi for addend */`
`codeint vj; /* real-time variable vj for addend */`
`codeint vk; /* real-time variable vk for sum */`

Description: Sets `vk` equal to the sum of integer values of `vi` and `vj`.

Arguments: `vi`, `vj`, and `vk` are real-time variables (`v1` to `v14`, `oph`, etc.).

Examples: `add(v1, v2, v3);`

Related: `assign` Assign integer values
`dbl` Double an integer value
`decr` Decrement an integer value
`divn` Divide integer values
`hlv` Half the value of an integer
`incr` Increment an integer value
`mod2` Find integer value modulo 2
`mod4` Find integer value modulo 4
`modn` Find integer value modulo n
`mult` Multiply integer values
`sub` Subtract integer values

apovrride Override internal software AP bus delay

Applicability: UNITY and VXR-S systems with the 63-step Output board (Part No. 00-953520-0#, where # is an integer). This board shipped prior to 1988.

Syntax: `apovrride()`

Description: Systems with the 63-step Output board can use this statement to prevent a delay of 0.2 μ s from being inserted prior to the next (and only the next) occurrence of one of the AP (analog port) bus statements `dcplrphase`, `dcplr2phase`, `dcplr3phase`, `decprgoff`, `dec2prgoff`, `dec3prgoff`, `decprgon`,

`dec2prgon`, `dec3prgon`, `decshaped_pulse`, `dec2shaped_pulse`, `dec3shaped_pulse`, `decspinlock`, `dec2spinlock`, `dec3spinlock`, `obsprgoff`, `obsprgon`, `power`, `rlpower`, `shaped_pulse`, `simshaped_pulse`, `sim3shaped_pulse`, `spinlock`, and `xmtrphase`.

apshaped_decpulse First decoupler pulse shaping via AP bus

Applicability: UNITYINOVA and UNITYplus systems. On MERCURY-VX and MERCURY, only shapes with no phase shifts are supported.

Syntax: `apshaped_decpulse(shape,pulse_width,pulse_phase, power_table,phase_table,RG1,RG2)`

```
char *shape;          /* name of .RF shape file */
double pulse_width;  /* pulse width in sec */
codeint pulse_phase; /* real-time phase of pulse */
codeint power_table; /* table variable to store power */
codeint phase_table; /* table variable to store phase */
double RG1;          /* gating time before pulse in sec */
double RG2;          /* gating time after pulse in sec */
```

Description: Provides first decoupler fine-grained “waveform generator-type” pulse shaping through the AP bus. A pulse shape file for the waveform generator (`/vnmr/shapelib/* .RF`) is used. This statement overrides any existing small-angle phase shifting (i.e., a preceding `dcplrphase`) and step size setting on the first decoupler channel. After `apshaped_decpulse`, first decoupler channel small-angle phase shifting is reset to zero and the step size is set to 0.25 degrees.

`apshaped_decpulse` capability is now integrated into the statement `decshaped_pulse`. The `decshaped_pulse` statement calls `apshaped_decpulse` without table variables if a waveform generator is not configured on the decoupler channel. `decshaped_pulse` creates AP tables on the fly for amplitude and phase, and does not use the AP tables allocated for users. It still uses real-time variables `v12` and `v13`.

Arguments: `shape` is a shape file (without the `.RF` extension) in `/vnmr/shapelib` or in `~/vnmrsys/shapelib`. The amplitude and phase fields of the shape file are used. The relative duration field (field 3) should be left at the default value of 1.0 or at least small numbers, and the gate field (field 4) is currently not used because the transmitter is switched on throughout the shape. On MERCURY-VX and MERCURY systems, no phase is changed or set.

`pulse_width` is the total pulse width, in seconds, excluding the amplifier gating delays around the pulse.

`pulse_phase` is the 90° phase shift of the pulse. For small-angle phase shifting, note that `apshaped_decpulse` sets the phase step size to the minimum on the one channel that is used.

`power_table` and `phase_table` are two table variables (`t1` to `t60`) used as intermediate storage addresses for the amplitude and phase tables, respectively. If `apshaped_decpulse` is called more than once, different table names should be used in each call.

`RG1` is the amplifier gating time, in seconds, before the pulse.

`RG2` is the amplifier gating time, in seconds, after the pulse.

Examples: `apshaped_decpulse("gauss",pw,v1,rof1,rof2);`

Related: `apshaped_dec2pulse` Second decoupler pulse shaping via the AP bus
`apshaped_pulse` Observe transmitter pulse shaping via the AP bus

`dcplrphase` Set small-angle phase of first decoupler, rf type C or D
`decshaped_pulse` Perform shaped pulse on first decoupler

`apshaped_dec2pulse` Second decoupler pulse shaping via AP bus

Applicability: UNITY*INOVA* and UNITY*plus* systems.

Syntax: `apshaped_dec2pulse(shape, pulse_width, pulse_phase, power_table, phase_table, RG1, RG2)`

```
char *shape;          /* name of .RF shape file */
double pulse_width;  /* pulse width in sec */
codeint pulse_phase; /* real-time phase of pulse */
codeint power_table; /* table variable to store power */
codeint phase_table; /* table variable to store phase */
double RG1;          /* gating time before pulse in sec */
double RG2;          /* gating time after pulse in sec */
```

Description: Provides second decoupler fine-grained “waveform generator-type” pulse shaping through the AP bus. A pulse shape file for the waveform generator (`/vnmr/shapelib/* .RF`) is used. Note that the real-time variables `v12` and `v13` are used by this statement. `apshaped_dec2pulse` overrides any existing small-angle phase shifting (i.e., a preceding `dcplr2phase`) and step size setting on the second decoupler channel.

After `apshaped_dec2pulse`, second decoupler channel small-angle phase shifting is reset to zero and the step size is set to 0.25 degrees.

`apshaped_dec2pulse` capability is now integrated into the statement `dec2shaped_pulse`. The `dec2shaped_pulse` statement calls `apshaped_dec2pulse` without table variables if a waveform generator is not configured on the decoupler channel. `dec2shaped_pulse` creates AP tables on the fly for amplitude and phase, and does not use the AP tables allocated for users. It still uses real-time variables `v12` and `v13`.

Arguments: `shape` is a shape file (without the `.RF` extension) in `/vnmr/shapelib` or in `~/vnmrsys/shapelib`. The amplitude and phase fields of the shape file are used. The relative duration field (field 3) should be left at the default value of 1.0 or at least small numbers, and the gate field (field 4) is currently not used because the transmitter is switched on throughout the shape.

`pulse_width` is the total pulse width, in seconds, excluding the amplifier gating delays around the pulse.

`pulse_phase` is the 90° phase shift of the pulse. For small-angle phase shifting, note that `apshaped_dec2pulse` sets the phase step size to the minimum on the one channel that is used.

`power_table` and `phase_table` are two table variables (`t1` to `t60`) used as intermediate storage addresses for the amplitude and phase tables, respectively. If `apshaped_dec2pulse` is called more than once, different table names should be used in each call.

`RG1` is the amplifier gating time, in seconds, before the pulse.

`RG2` is the amplifier gating time, in seconds, after the pulse.

Examples: `apshaped_dec2pulse("gauss", pw, v1, t10, t11, rof1, rof2);`

Related: `apshaped_decpulse` First decoupler pulse shaping via the AP bus
`apshaped_pulse` Observe transmitter pulse shaping via the AP bus
`dcplr2phase` Set small-angle phase of 2nd decoupler, rf type C or D
`dec2shaped_pulse` Perform shaped pulse on second decoupler

apshaped_pulse **Observe transmitter pulse shaping via AP bus**

Applicability: UNITY*INOVA* and UNITY*plus* systems. On *MERCURY-VX* and *MERCURY*, only shapes with no phase shifts are supported.

Syntax: `apshaped_pulse(shape,pulse_width,pulse_phase,
power_table,phase_table,RG1,RG2)
char *shape; /* name of .RF shape file */
double pulse_width; /* pulse width in sec */
codeint pulse_phase; /* real-time phase of pulse */
codeint power_table; /* table variable to store power */
codeint phase_table; /* table variable to store phase */
double RG1; /* gating time before pulse in sec */
double RG2; /* gating time after pulse in sec */`

Description: Provides observe transmitter fine-grained “waveform generator-type” pulse shaping through the AP bus. A pulse shape file for the waveform generator (`/vnmr/shapelib/*.RF`) is used. This statement overrides any existing small-angle phase shifting (i.e., a preceding `xmtrphase`) and step size setting on the observe transmitter channel. After `apshaped_pulse`, observe transmitter channel small-angle phase shifting is reset to zero and the step size is set to 0.25 degrees.

`apshaped_pulse` capability is now integrated into the `shaped_pulse` statement. The `shaped_pulse` statement calls `apshaped_pulse` without table variables if a waveform generator is not configured on the decoupler channel. `shaped_pulse` creates AP tables on the fly for amplitude and phase, and does not use the AP tables allocated for users. It still uses real-time variables `v12` and `v13`.

Arguments: `pattern` is a shape file (without the `.RF` extension) in `/vnmr/shapelib` or in `~/vnmrsys/shapelib`. The amplitude and phase fields of the shape file are used. The relative duration field (field 3) should be left at the default value of 1.0 or at least small numbers, and the gate field (field 4) is currently not used because the transmitter is switched on throughout the shape. On *MERCURY-VX* and *MERCURY* systems, no phase is changed or set.

`pulse_width` is the total pulse width, in seconds, excluding amplifier gating delays around the pulse.

`pulse_phase` is the 90° phase shift of the pulse. For small-angle phase shifting, note that `apshaped_pulse` sets the phase step size to the minimum on the one channel that is used.

`power_table` and `phase_table` are two table variables (`t1` to `t60`) used as intermediate storage addresses for the amplitude and phase tables, respectively. If `apshaped_pulse` is called more than once, different table names should be used in each call.

`RG1` is the amplifier gating time, in seconds, before the pulse.

`RG2` is the amplifier gating time, in seconds, after the pulse.

Examples: `apshaped_pulse("gauss",pw,v1,rof1,rof2);`

Related:	<code>apshaped_decpulse</code>	First decoupler pulse shaping via the AP bus
	<code>apshaped_dec2pulse</code>	Second decoupler pulse shaping via the AP bus
	<code>shaped_pulse</code>	Perform shaped pulse on observe transmitter
	<code>xmtrphase</code>	Set small-angle phase of observe transmitter, rf C or D

assign **Assign integer values**

Syntax: `assign(vi,vj)`
`codeint vi; /* real-time variable for starting value */`
`codeint vj; /* real-time variable for assigned value */`

Description: Sets `vj` equal to the integer value `vi`.

Arguments: `vi` and `vj` are real-time variables (`v1` to `v14`, `oph`, etc.).

Examples: `assign(v3,v2);`

Related:	<code>add</code>	Add integer values
	<code>dbl</code>	Double an integer value
	<code>decr</code>	Decrement an integer value
	<code>divn</code>	Divide integer values
	<code>hlv</code>	Half the value of an integer
	<code>incr</code>	Increment an integer value
	<code>mod2</code>	Find integer value modulo 2
	<code>mod4</code>	Find integer value modulo 4
	<code>modn</code>	Find integer value modulo n
	<code>mult</code>	Multiply integer values
	<code>sub</code>	Subtract integer values

B**blankingoff** **Unblank amplifier channels and turn amplifiers on**

Applicability: *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems only.

Syntax: `blankingoff()`

Description: Unblanks, or enables, both amplifier channels.

Related: `blankingon` Blank amplifier channels and turn amplifiers off

blankingon **Blank amplifier channels and turn amplifiers off**

Applicability: *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems only.

Syntax: `blankingon()`

Description: Blanks, or disables, both amplifier channels.

Related: `blankingoff` Unblank amplifier channels and turn amplifiers on

blankoff **Stop blanking observe or decoupler amplifier (obsolete)**

Description: No longer in VNMR. The `blankoff` statement is replaced by the statements `obsunblank`, `decunblank`, `dec2unblank`, and `dec3unblank`.

Related:	<code>decunblank</code>	Unblank amplifier associated with first decoupler
	<code>dec2unblank</code>	Unblank amplifier associated with second decoupler
	<code>dec3unblank</code>	Unblank amplifier associated with third decoupler
	<code>obsunblank</code>	Unblank amplifier associated with observe transmitter

blankon	Start blanking observe or decoupler amplifier (obsolete)	
Description:	No longer in VNMR. The <code>blankon</code> statement is replaced by the statements <code>obsblank</code> , <code>decblank</code> , <code>dec2blank</code> , and <code>dec3blank</code> .	
Related:	<code>decblank</code>	Blank amplifier associated with first decoupler
	<code>dec2blank</code>	Blank amplifier associated with second decoupler
	<code>dec3blank</code>	Blank amplifier associated with third decoupler
	<code>obsblank</code>	Blank amplifier associated with observe transmitter

C

clearapdatatable **Zero all data in acquisition processor memory**

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `clearapdatatable()`

Description: Zeroes the acquired data table at times other than at the start of the execution of a pulse sequence, when the data table is automatically zeroed. This statement is generally not needed.

create_delay_list **Create table of delays**

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

```
Syntax: create_delay_list(list, nvals, list_number)
double *list;          /* pointer to list of delays */
int nvals;             /* number of values in list */
int list_number;      /* number 0-255 for each list */
```

Description: Stores global lists of delays that can be accessed with a real-time variable or table element for dynamic setting in pulse sequences. The lists need to be created in order starting from 0 using the `list_number` argument, or by setting the `list_number` argument to `-1`, which makes the software allocate and create the next free list and give the list number as a return value. Each list must have a unique and sequential `list_number`. There can be a maximum of 256 lists, depending on the size of the lists. The lists are stored in data memory and compete for space with the acquisition data for each array element. If a list is created, the return value is the number of the list (0 to 255); if an error occurs, the return value is negative.

`create_delay_list` creates what is called a global list. Global lists are different from AP tables in that the lists are sent down to the acquisition console when the experiment starts up and are accessible until the experiment completes. In working with arrayed experiments, be careful when using a `-1` in the `list_number` argument because a list will be created for *each* array element. In this case, a list parameter can be created as an arrayed parameter with protection bit 8 (256) set. To read in the values of this type of parameter, use the `getarray` statement. To ensure that the list is only created once, check the global array counter variable `ix`, and only call `create_delay_list` to create the list when it equals 1. An example is shown below.

Arguments: `list` is a pointer to a list of delays.
`nvals` is the number of values in the list.

list_number -1 or a unique number from 0 to 255 for each list.

```

Examples: pulsequence()
{
    /* Declare static to save between calls */
    static int list1, list2;
    int i, n;
    double delay1[1024], delay2[1024];

    n = 1024;
    if (ix == 1) {
        for (i=0; i<n; i++) {
            ... /* Initialize delay1 & delay2 arrays */
        }
        /* First, list1 is set to 0 */
        list1 = create_delay_list(delay1,n,0);
        /* This is list #1 */
        create_freq_list(freqs,nfreqs,OBSch,1);
        /* This is list #2 */
        create_offset_list(freqs,nfreqs,OBSch,2);
        /* Next, list2 is set to 3 */
        list2 = create_delay_list(delay2,n,-1);
    }
    ...
    vdelay_list(list2,v5); /* Use v5 from list2 */
    vfreq(1,v2);          /* Use v2 from list #1 */
    voffset(2,v1);       /* Use v1 from list #2 */
    vdelay_list(list1,v1); /* Use v1 from list1 */
    ...
}

```

Related:	<code>create_freq_list</code>	Create table of frequencies
	<code>create_offset_list</code>	Create table of frequency offsets
	<code>delay</code>	Delay for a specified time
	<code>getarray</code>	Retrieves all values of an arrayed parameter
	<code>vdelay</code>	Select delay from table

create_freq_list **Create table of frequencies**

Applicability: Not applicable on *MERCURY* and *GEMINI 2000*.

Syntax: `create_freq_list(list,nvals,device,list_number)`
 double *list; /* pointer to list of frequencies */
 int nvals; /* number of values in list */
 int device; /* OBSch, DECch, DEC2ch, or DEC3ch */
 int list_number; /* number 0-255 for each list */

Description: Stores global lists of frequencies that can be accessed with a real-time variable or table element for dynamic setting of frequencies. Frequency lists use frequencies in MHz (such as from `sfrq`, `dfrq`). The lists need to be created in order starting from 0 using the `list_number` argument, or by setting the `list_number` argument to -1, which makes the software allocate and create the next free list and give the list number as a return value. Each list must have a unique and sequential `list_number`. There can be a maximum of 256 lists depending on the size of the lists. The lists are stored in data memory and compete for space with the acquisition data for each array element. If a list is

created, the return value is the number of the list (0 to 255); if an error occurs, the return value is negative.

`create_freq_list` creates what is called a global list. Global lists are different from AP tables in that the lists are sent down to the acquisition console when the experiment starts up and are accessible until the experiment completes. In working with arrayed experiments, be careful when using a `-1` in the `list_number` argument because a list will be created for *each* array element. In this case, a list parameter can be created as an arrayed parameter with protection bit 8 (256) set. To read in the values of this type of parameter, use the `getarray` statement. To ensure that the list is only created once, check the global array counter variable `ix`, and only call `create_freq_list` to create the list when it equals 1. An example is shown in the entry for the `create_delay_list` statement.

Arguments: `list` is a pointer to a list of frequencies.

`nvals` is the number of values in the list.

`device` is `OBSch` (observe transmitter) or `DECch` (first decoupler). For the `UNITYINOVA` and `UNITYplus` only, `device` can also be `DEC2ch` (second decoupler) or `DEC3ch` (third decoupler).

`list_number` is `-1` or a unique number from 0 to 255 for each list created.

Examples: See the example for the `create_delay_list` statement.

Related:	<code>create_delay_list</code>	Create table of delays
	<code>create_offset_list</code>	Create table of frequency offsets
	<code>getarray</code>	Retrieves all values of an arrayed parameter
	<code>delay</code>	Delay for a specified time
	<code>vfreq</code>	Select frequency from table

`create_offset_list` Create table of frequency offsets

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

```
Syntax: create_offset_list(list,nvals,device,list_number)
double *list;      /* pointer to list of frequency offsets */
int nvals;         /* number of values in list */
int device;        /* OBSch, DECch, DEC2ch, or DEC3ch */
int list_number;  /* number 0-255 for each list */
```

Description: Stores global lists of frequencies that can be accessed with a real-time variable or table element for dynamic setting of frequency offsets. Offset lists define lists of frequency offsets in Hz (such as from `tof`, `dof`). Imaging pulse sequences typically use offset lists, not frequency lists. The lists need to be created in order starting from 0 using the `list_number` argument, or by setting the `list_number` argument to `-1`, which makes the software allocate and create the next free list and give the list number as a return value. Each list must have a unique and sequential `list_number`. There can be a maximum of 256 lists depending on the size of the lists. The lists are stored in data memory and compete for space with the acquisition data for each array element. If a list is created, the return value is the number of the list (0 to 255); if an error occurs, the return value is negative.

`create_offset_list` creates what is called a global list. Global lists are different from AP tables in that the lists are sent down to the acquisition console when the experiment starts up and are accessible until the experiment completes. In working with arrayed experiments, be careful when using a `-1` in the `list_number` argument because a list will be created for *each* array

element. In this case, a list parameter can be created as an arrayed parameter with protection bit 8 (256) set. To read in the values of this type of parameter, use the `getarray` statement. To ensure that the list is only created once, check the global array counter variable `ix`, and only call `create_offset_list` to create the list when it equals 1. An example is shown in the entry for the `create_delay_list` statement.

- Arguments: `list` is a pointer to a list of frequency offsets.
`nvals` is the number of values in the list.
`device` is `OBSch` (observe transmitter) or `DECch` (first decoupler). For the `UNITYINOVA` and `UNITYplus` only, `device` can also be `DEC2ch` (second decoupler) or `DEC3ch` (third decoupler).
`list_number` is `-1` or a unique number from 0 to 255 for each list created.
- Examples: See the example for the `create_delay_list` statement.
- Related: `create_delay_list` Create table of delays
`create_freq_list` Create table of frequencies
`getarray` Retrieves all values of an arrayed parameter
`delay` Delay for a specified time
`voffset` Select frequency offset from table

D

dbl**Double an integer value**

Syntax: `dbl(vi,vj)`
`codeint vi; /* variable for starting value */`
`codeint vj; /* variable for twice starting value */`

Description: Sets `vj` equal to twice the integer value of `vi`.

Arguments: `vi` and `vj` are real-time variables (`v1` to `v14`, `oph`, etc.).

Examples: `dbl(v1,v2);`

Related: `add` Add integer values
`assign` Assign integer values
`decr` Decrement an integer value
`divn` Divide integer values
`hlv` Half the value of an integer
`incr` Increment an integer value
`mod2` Find integer value modulo 2
`mod4` Find integer value modulo 4
`modn` Find integer value modulo n
`mult` Multiply integer values
`sub` Subtract integer values

dcphase**Set decoupler phase (obsolete)**

Description: No longer supported. Replace `dcphase` statements with the `decphase` statement.

Related: `decphase` Set phase of first decoupler

dcplrphase Set small-angle phase of 1st decoupler, rf type C or D

Applicability: Systems using a first decoupler with rf type C or D and *MERCURY-VX* and *MERCURY*. (*GEMINI 2000* system decouplers are rf type F and E).

Syntax: `dcplrphase(multiplier)`
`codeint multiplier; /* real-time phase step multiplier */`

Description: Sets first decoupler phase in step size units set by the `stepsize` statement. The small-angle phaseshift is a product of `multiplier` and the step size. If `stepsize` has not been used, default step size is 90°.

If the product of the step size set by the `stepsize` statement and `multiplier` is greater than 90°, the sub-90° part is set by `dcplrphase`. Only on systems with an Output board are carryovers that are multiples of 90° automatically saved and added in at the time of the next 90° phase selection (such as at the time of the next `pulse` or `decpulse`). On systems with a Data Acquisition Controller board, a Pulse Sequence Controller board, or an Acquisition Controller board, this is done by `dcplrphase` (see the description section of the `acquire` statement for further information about these boards).

Unlike `decphase`, `dcplrphase` is needed any time the first decoupler phase shift is to be set to a value not a multiple of 90°. `decphase` sets quadrature phase shift only, which is rarely needed.

Arguments: `multiplier` is a small-angle phaseshift multiplier for the first decoupler. The value must be a real-time variable (`v1` to `v14`, `oph`, etc.) or real-time constant (zero, one, etc.).

Examples: `dcplrphase(zero);`

Related:	<code>dcplr2phase</code>	Set small-angle phase of second decoupler, rf type C or D
	<code>dcplr3phase</code>	Set small-angle phase of third decoupler, rf type C or D
	<code>decphase</code>	Set quadrature phase of first decoupler
	<code>stepsize</code>	Set small-angle phase step size, rf type C or D
	<code>xmtrphase</code>	Set small-angle phase of obs. transmitter, rf type C

dcplr2phase Set small-angle phase of 2nd decoupler, rf type C or D

Applicability: Systems using a second decoupler with rf type C or D.

Syntax: `dcplr2phase(multiplier)`
`codeint multiplier; /* real-time phase step multiplier */`

Description: Sets second decoupler phase in step size units set by the `stepsize` statement. The small-angle phaseshift is a product of `multiplier` and the step size. If `stepsize` has not been used, the default step size is 90°.

If the product of the step size set by the `stepsize` statement and `multiplier` is greater than 90°, the sub-90° part is set by `dcplr2phase`. Only on systems with an Output board are carryovers that are multiples of 90° are automatically saved and added in at the time of the next 90° phase selection (such as at the time of the next `pulse` or `dec2pulse`). On systems with a Data Acquisition Controller board, a Pulse Sequence Controller board, or an Acquisition Controller board, this is done by `dcplr2phase` (see the description section of the `acquire` statement for further information about these boards).

Unlike `dec2phase`, `dcplr2phase` is needed any time the second decoupler phase shift is to be set to a value that is not a multiple of 90°. `dec2phase` sets quadrature phase shift only, which is rarely need.

Arguments: `multiplier` is a small-angle phaseshift multiplier for the second decoupler. The value must be a real-time variable (`v1` to `v14`, `oph`, etc.) or real-time constant (`zero`, `one`, etc.).

Examples: `dcplr2phase(zero) ;`

Related: `dcplrphase` Set small-angle phase of first decoupler, rf type C or D
`dec2phase` Set quadrature phase of second decoupler
`stepsize` Set small-angle phase step size, rf type C or D
`xmtrphase` Set small-angle phase of obs. transmitter, rf type C

dcplr3phase Set small-angle phase of 3rd decoupler, rf type C or D

Applicability: Systems using a third decoupler with rf type C or D.

Syntax: `dcplr3phase(multiplier)`
`codeint multiplier; /* multiplies phase step */`

Description: Sets the third decoupler phase in units set by the `stepsize` statement. If `stepsize` has not been used, the default step size is 90°. The small-angle phaseshift is a product of `multiplier` and the preset `stepsize`. The full small-angle phase is set by `dcplr3phase`.

Unlike `dec3phase`, `dcplr3phase` is needed any time the third decoupler phase shift is to be set to a value that is not a multiple of 90°. `dec3phase` sets quadrature phase shift only, which is rarely needed.

Arguments: `multiplier` is a small-angle phaseshift multiplier for the third decoupler. The value must be a real-time variable (`v1` to `v14`, `oph`, etc.) or real-time constant (`zero`, `one`, etc.).

Examples: `dcplr2phase(zero) ;`

Related: `dcplrphase` Set small-angle phase of first decoupler, rf type C or D
`dec3phase` Set quadrature phase of third decoupler
`stepsize` Set small-angle phase step size, rf type C or D
`xmtrphase` Set small-angle phase of obs. transmitter, rf type C

decblank Blank amplifier associated with first decoupler

Applicability: All systems with linear amplifiers, except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `decblank()`

Description: Disables the amplifier for the first decoupler. This is generally used after a call to `decunblank`.

Related: `decunblank` Unblank amplifier associated with first decoupler
`obsblank` Blank amplifier associated with observe transmitter
`obsunblank` Unblank amplifier associated with observe transmitter
`rcvloff` Turn off receiver
`rcvron` Turn on receiver

dec2blank Blank amplifier associated with second decoupler

Applicability: All systems with linear amplifiers.

Syntax: `dec2blank()`

Description: Disables the amplifier for the second decoupler. This is generally used after a call to `dec2unblank`.

Related: `dec2unblank` Unblank amplifier associated with second decoupler
`rcvroff` Turn off receiver
`rcvron` Turn on receiver

`dec3blank` Blank amplifier associated with third decoupler

Applicability: UNITY*INOVA* and UNITY*plus* systems with third decoupler.

Syntax: `dec3blank ()`

Description: Disables the amplifier for the third decoupler. This is generally used after a call to `dec3unblank`.

Related: `dec3unblank` Unblank amplifier associated with third decoupler
`rcvroff` Turn off receiver
`rcvron` Turn on receiver

`declvloff` Return first decoupler back to “normal” power

Syntax: `declvloff ()`

Description: Switches the decoupler power to the power level set by the appropriate parameters defined by the amplifier type: `dhp` for class C amplifiers or `dpwr` for linear amplifiers. If `dhp= 'n'`, `declvloff` has no effect on systems with class C amplifiers but still functions for systems with linear amplifiers. (On *GEMINI 2000* systems, `dhp= 'n'` has no meaning and the power level is reversed from `declvlon`.)

Related: `declvlon` Turn on first decoupler to full power
`power` Change transmitter or decoupler power, lin. amp. sys.
`pwr` Change transmitter or decoupler fine power
`rlpower` Change transmitter or decoupler power, lin. amp. sys.
`rlpwr` Set transmitter or decoupler fine power

`declvlon` Turn on first decoupler to full power

Syntax: `declvlon ()`

Description: Switches the first decoupler power level between the power level set by the high-power parameter(s) to the *full* output of the decoupler. If `dhp= 'n'`, `declvloff` has no effect on systems with class C amplifiers but still functions for systems with linear amplifiers. (On *GEMINI 2000* systems, `dhp= 'n'` has no meaning. On *GEMINI 2000* broadband systems, `declvlon` switches to `pplvl` (high) from `dpwr` (low), or on *GEMINI 2000* $^1\text{H}/^{13}\text{C}$ systems to full pulse power from `dhp`).

If `declvlon` is used, make sure `declvloff` is used prior to time periods in which normal, controllable power levels are desired, such as prior to acquisition. Use full decoupler power only for decoupler pulses or for solids applications.

Related: `declvloff` Return first decoupler back to “normal” power
`power` Change transmitter or decoupler power, lin. amp. sys.
`pwr` Change transmitter or decoupler fine power
`rlpower` Change transmitter or decoupler power, lin. amp. sys.
`rlpwr` Set transmitter or decoupler fine power

decoff **Turn off first decoupler**

Syntax: `decoff ()`

Description: Explicitly gates off the first decoupler in the pulse sequence.

Related: `decon` Turn on first decoupler
`dec2off` Turn off second decoupler
`dec3off` Turn off third decoupler

dec2off **Turn off second decoupler**

Applicability: Systems with a second decoupler.

Syntax: `dec2off ()`

Description: Explicitly gates off the second decoupler in the pulse sequence.

Related: `dec2on` Turn on second decoupler

dec3off **Turn off third decoupler**

Applicability: *UNITYINOVA* and *UNITYplus* systems with a third decoupler.

Syntax: `dec3off ()`

Description: Explicitly gates off the third decoupler in the pulse sequence.

Related: `dec3on` Turn on third decoupler

decoffset **Change offset frequency of first decoupler**

Syntax: `decoffset (frequency)`
`double frequency; /* offset in Hz */`

Description: Changes the offset frequency of the first decoupler (parameter `dof`). It is functionally the same as `offset (frequency, DODEV)`.

Arguments: `frequency` is the offset frequency desired, in hertz.

Examples: `decoffset (dof1) ;`

Related: `dec2offset` Change offset frequency of second decoupler
`dec3offset` Change offset frequency of third decoupler
`obsoffset` Change offset frequency of observe transmitter
`offset` Change offset frequency of transmitter or decoupler

dec2offset **Change offset frequency of second decoupler**

Syntax: `dec2offset (frequency)`
`double frequency; /* offset frequency in Hz */`

Description: Changes the offset frequency of the second decoupler (parameter `dof2`). It is functionally the same as `offset (frequency, DO2DEV)`.

Arguments: `frequency` is the offset frequency desired, in hertz.

Examples: `dec2offset (dof2) ;`

Related: `decoffset` Change offset frequency of first decoupler
`dec3offset` Change offset frequency of third decoupler
`obsoffset` Change offset frequency of observe transmitter
`offset` Change offset frequency of transmitter or decoupler

dec3offset Change offset frequency of third decoupler

Syntax: `dec3offset (frequency)`
`double frequency; /* offset frequency in Hz */`

Description: Changes the offset frequency of the third decoupler (parameter dof3). It is functionally the same as `offset (frequency, DO3DEV)`.

Arguments: `frequency` is the offset frequency desired, in hertz.

Examples: `dec3offset (do3) ;`

Related: `decoffset` Change offset frequency of first decoupler
`dec2offset` Change offset frequency of second decoupler
`obsoffset` Change offset frequency of observe transmitter
`offset` Change offset frequency of transmitter or decoupler

dec4offset Change offset frequency of fourth decoupler

Applicability: ^{UNITY}*INOVA* systems with a deuterium decoupler channel as the fourth decoupler.

Syntax: `dec4offset (frequency)`
`double frequency; /* offset frequency in Hz */`

Description: Changes the offset frequency of the fourth decoupler (parameter dof4). It is functionally the same as `offset (frequency, DO4DEV)`.

Arguments: `frequency` is the offset frequency desired, in hertz.

Examples: `dec4offset (do4) ;`

Related: `decoffset` Change offset frequency of first decoupler
`dec2offset` Change offset frequency of second decoupler
`obsoffset` Change offset frequency of observe transmitter
`offset` Change offset frequency of transmitter or decoupler
`rftype` Type of rf generation

decon Turn on first decoupler

Syntax: `decon ()`

Description: Explicitly gates on the first decoupler in the pulse sequence. First decoupler gating is handled automatically by the statements `declvloff`, `declvlon`, `decpulse`, `decrpulse`, `decshaped_pulse`, `decspinlock`, `simpulse`, `sim3pulse`, `simshaped_pulse`, and `sim3shaped_pulse`. `decprgon` generally needs to be enabled with an explicit `decon` statement and followed by a `decoff` call.

Related: `decoff` Turn off first decoupler
`dec2on` Turn on second decoupler
`dec3on` Turn on third decoupler

dec2on Turn on second decoupler

Applicability: Systems with a second decoupler.

Syntax: `dec2on ()`

Description: Explicitly gates on the second decoupler in the pulse sequence. Second decoupler gating is handled automatically by the statements `dec2rgpulse`, `dec2shaped_pulse`, `dec2spinlock`, `sim3pulse`, and `sim3shaped_pulse`.

`dec2prgon` generally needs to be enabled with an explicit `dec2on` statement and followed by a `dec2off` call.

Related: `dec2off` Turn off second decoupler

dec3on Turn on third decoupler

Applicability: UNITY *INOVA* and UNITY *plus* systems with a third decoupler.

Syntax: `dec3on ()`

Description: Explicitly gates on the third decoupler in the pulse sequence. Third decoupler gating is handled automatically by the statements `dec3rgpulse`, `dec3shaped_pulse`, and `dec3spinlock`

`dec3prgon` generally needs to be enabled with an explicit `dec3on` statement and followed by a `dec3off` call.

Related: `dec3off` Turn off third decoupler

decphase Set quadrature phase of first decoupler

Syntax: `decphase (phase)`
`codeint phase; /* real-time variable for quad. phase */`

Description: Sets quadrature phase (multiple of 90°) for the first decoupler rf. `decphase` is syntactically and functionally equivalent to `txphase` and is useful for a decoupler pulse in all cases where `txphase` is useful for a transmitter pulse.

Arguments: `phase` is the quadrature phase for the first decoupler rf. The value must be a real-time variable (`v1` to `v14`, `oph`, `ct`, etc.).

Examples: `decphase (v4) ;`

Related: `dcplrphase` Set small-angle phase of first decoupler, rf type C or D
`dec2phase` Set quadrature phase of second decoupler
`dec3phase` Set quadrature phase of third decoupler
`txphase` Set quadrature phase of observe transmitter

dec2phase Set quadrature phase of second decoupler

Applicability: Systems with a second decoupler.

Syntax: `dec2phase (phase)`
`codeint phase; /* real-time variable for quad. phase */`

Description: Sets quadrature phase (multiple of 90°) for the second decoupler rf.

Arguments: `phase` is the quadrature phase for the second decoupler rf. The value must be a real-time variable (`v1` to `v14`, `oph`, `ct`, etc.).

Examples: `dec2phase (v9) ;`

Related: `dcplr2phase` Set small-angle phase of second decoupler, rf type C or D
`decphase` Set quadrature phase of first decoupler

dec3phase Set quadrature phase of third decoupler

Applicability: UNITY *INOVA* and UNITY *plus* systems with a third decoupler.

Syntax: `dec3phase (phase)`
`codeint phase; /* real-time variable for quad. phase */`

Description: Sets quadrature phase (multiple of 90°) for the third decoupler rf.

Arguments: phase is the quadrature phase for the third decoupler rf. The value must be a real-time variable (v1 to v14, oph, ct, etc.).

Examples: `dec3phase(v9);`

Related: `dcplr3phase` Set small-angle phase of third decoupler, rf type C or D
`decphase` Set quadrature phase of first decoupler

dec4phase Set quadrature phase of fourth decoupler

Applicability: ^{UNITY}INOVA systems with a deuterium decoupler channel as the fourth decoupler.

Syntax: `dec4phase(phase)`
`codeint phase; /* real-time variable for quad. phase */`

Description: Sets quadrature phase (multiple of 90°) for the fourth decoupler rf.

Arguments: phase is the quadrature phase for the third decoupler rf. The value must be a real-time variable (v1 to v14, oph, ct, etc.).

Examples: `dec4phase(v9);`

Related: `rfstype` Type of rf generation
`decphase` Set quadrature phase of first decoupler

decpower Change first decoupler power level, linear amp. systems

Applicability: Systems with linear amplifiers.

Syntax: `decpower(power)`
`double power; /* new power level for DODEV */`

Description: Changes the first decoupler power. It is functionally the same as `rlpower(value, DODEV)`.

Arguments: power sets the power level by assuming values from 0 (minimum power) to 63 (maximum power) on channels with a 63-dB attenuator, or from -16 (minimum power) to 63 (maximum power) on channels with a 79-dB attenuator.

CAUTION: On systems with linear amplifiers, be careful when using values of `decpower` greater than 49 (about 2 watts). Performing continuous decoupling or long pulses at power levels greater than this can result in damage to the probe. Use `config` to set a safety maximum for parameters `tpwr`, `dpwr`, `dpwr2`, and `dpwr3`.

Related: `dec2power` Change second decoupler power, linear amplifier systems
`dec3power` Change third decoupler power, linear amplifier systems
`obspower` Change observe transmitter power, linear amplifier systems
`rlpower` Change power level, linear amplifier systems

dec2power Change second decoupler power level, linear amp. systems

Applicability: Systems with a second decoupler.

Syntax: `dec2power(power)`
`double power; /* new power level for DO2DEV */`

Description: Changes the second decoupler power. It is functionally the same as `rlpower(value, DO2DEV)`.

Arguments: `power` sets the power level by assuming values from 0 (minimum power) to 63 (maximum power) on channels with a 63-dB attenuator, or from -16 (minimum power) to 63 (maximum power) on channels with a 79-dB attenuator.

Related: `decpower` Change first decoupler power, linear amplifier systems
`dec3power` Change third decoupler power, linear amplifier systems
`obspower` Change observe transmitter power, linear amplifier systems
`rlpower` Change power level, linear amplifier systems

dec3power Change third decoupler power level, linear amp. systems

Applicability: UNITY *INOVA* and UNITY *plus* systems with a third decoupler.

Syntax: `dec3power (power)`

```
double power; /* new power level for DO3DEV */
```

Description: Changes the third decoupler power. It is functionally the same as `rlpower (value, DO3DEV)`.

Arguments: `power` sets the power level by assuming values from 0 (minimum power) to 63 (maximum power) on channels with a 63-dB attenuator, or from -16 (minimum power) to 63 (maximum power) on channels with a 79-dB attenuator.

Related: `decpower` Change first decoupler power, linear amplifier systems
`dec2power` Change second decoupler power, linear amplifier systems
`obspower` Change observe transmitter power, linear amplifier systems
`rlpower` Change power level, linear amplifier systems

dec4power Change fourth decoupler power level, linear amp. systems

Applicability: UNITY *INOVA* systems with a deuterium decoupler channel as the fourth decoupler.

Syntax: `dec4power (power)`

```
double power; /* new power level for DO4DEV */
```

Description: Changes the third decoupler power. It is functionally the same as `rlpower (value, DO4DEV)`.

Arguments: `power` sets the power level by assuming values from 0 (minimum power) to 63 (maximum power).

Related: `decpower` Change first decoupler power, linear amplifier systems
`dec2power` Change second decoupler power, linear amplifier systems
`obspower` Change observe transmitter power, linear amplifier systems
`rlpower` Change power level, linear amplifier systems
`rftype` Type of rf generation

decprgoff End programmable decoupling on first decoupler

Applicability: Systems with a waveform generator on rf channel for the first decoupler.

Syntax: `decprgoff ()`

Description: Terminates any waveform-generator-controlled programmable decoupling on the first decoupler started by the `decprgon` statement.

Related: `decprgon` Start programmable decoupling on first decoupler
`dec2prgoff` End programmable decoupling on second decoupler
`dec3prgoff` End programmable decoupling on third decoupler

dec2prgoff End programmable decoupling on second decoupler

Applicability: Systems with a waveform generator on rf channel for the second decoupler.

Syntax: `dec2prgoff()`

Description: Terminates any waveform-generator-controlled programmable decoupling on the second decoupler set by the `dec2prgon` statement.

Related: `dec2prgon` Start programmable decoupling on second decoupler

dec3prgoff End programmable decoupling on third decoupler

Applicability: UNITY*INOVA* and UNITY*plus* systems with a waveform generator on rf channel with the third decoupler.

Syntax: `dec3prgoff()`

Description: Terminates any waveform-generator-controlled programmable decoupling on the third decoupler set by the `dec3prgon` statement.

Related: `dec3prgon` Start programmable decoupling on third decoupler

decprgon Start programmable decoupling on first decoupler

Applicability: Systems with a waveform generator on rf channel for the first decoupler.

Syntax: `decprgon(pattern, 90_pulselength, tipangle_resoln)`

```
char *pattern;          /* name of .DEC file */
double 90_pulselength; /* 90°-deg pulse length in sec */
double tipangle_resoln; /* tip-angle resolution */
```

Description: Executes programmable decoupling on the first decoupler under waveform generator control, and returns the number of 50-ns ticks (as an integer value) in one cycle of the decoupling pattern. Explicit gating of the first decoupler with `decon` and `decoff` is generally required. Arguments can be variables (which require the appropriate `getval` and `getstr` statements) to permit changes by the parameters (see the second example).

Arguments: `pattern` is the name of the text file in the `shapelib` directory that stores the decoupling pattern (leave off the `.DEC` file extension).

`90_pulselength` is the pulse duration, in seconds, for a 90° tip angle on the first decoupler.

`tipangle_resoln` is the resolution, in tip-angle degrees, to which the decoupling pattern is stored in the waveform generator.

Examples:

```
decprgon("garp1", 1/dmf, 1.0);
decprgon(modtype, pwx90, dres);
n50ns_ticks = decprgon("waltz16", 1/dmf, 90.0);
```

Related: `decprgoff` End programmable decoupling on first decoupler
`dec2prgon` Start programmable decoupling on second decoupler
`dec3prgon` Start programmable decoupling on third decoupler
`obsprgon` Start programmable control of obs. transmitter

dec2prgon Start programmable decoupling on second decoupler

Applicability: Systems with a waveform generator on rf channel for the second decoupler.

Syntax: `dec2prgon(pattern, 90_pulselength, tipangle_resoln)`

```
char *pattern;          /* name of .DEC text file */
double 90_pulselength; /* 90°-deg pulse length in sec */
```

```
double tipangle_resoln; /* tip-angle resolution */
```

Description: Executes programmable decoupling on second decoupler under waveform generator control, and returns the number of 50-ns ticks (as an integer value) in one cycle of the decoupling pattern. Explicit gating of the second decoupler with `dec2on` and `dec2off` is generally required. Arguments can be variables (which require the appropriate `getval` and `getstr` statements) to permit changes by the parameters (see the second example below).

Arguments: `pattern` is the name of the text file in the `shapelib` directory that stores the decoupling pattern (leave off the `.DEC` file extension).

`90_pulselength` is the pulse duration, in seconds, for a 90° tip angle on the second decoupler.

`tipangle_resoln` is the resolution, in tip-angle degrees, to which the decoupling pattern is stored in the waveform generator.

Examples: (1) `dec2prgon("waltz16",1/dmf2,90.0);`
 (2) `dec2prgon(modtype,pwx290,dres2);`
`n50ns_ticks=dec2prgon("garp1",1/dmf2,1.0);`

Related: `decprgon` Start programmable decoupling on first decoupler
`dec2prgoff` End programmable decoupling on second decoupler
`obsprgon` Start programmable control of obs. transmitter

dec3prgon Start programmable decoupling on third decoupler

Applicability: UNITY*INOVA* and UNITY*plus* systems with a waveform generator on rf channel for the third decoupler.

Syntax: `dec3prgon(pattern,90_pulselength,tipangle_resoln)`
`char *pattern; /* name of .DEC text file */`
`double 90_pulselength; /* 90-deg pulse length in sec */`
`double tipangle_resoln; /* tip-angle resolution */`

Description: Executes programmable decoupling on third decoupler under waveform generator control. It returns the number of 50-ns ticks (as an integer value) in one cycle of the decoupling pattern. Explicit gating of the third decoupler with `dec3on` and `dec3off` is generally required. Arguments can be variables (which require the appropriate `getval` and `getstr` statements) to permit changes by parameters (see second example below).

Arguments: `pattern` is the name of the text file in the `shapelib` directory that stores the decoupling pattern (leave off the `.DEC` file extension).

`90_pulselength` is the pulse duration, in seconds, for a 90° tip angle on the third decoupler.

`tipangle_resoln` is the resolution, in tip-angle degrees, to which the decoupling pattern is stored in the waveform generator.

Examples: (1) `dec3prgon("waltz16",1/dmf3,90.0);`
 (2) `dec3prgon(modtype,pwx390,dres3);`
`n50ns_ticks = dec3prgon("garp1",1/dmf3,1.0);`

Related: `decprgon` Start programmable decoupling on first decoupler
`dec2prgoff` End programmable decoupling on second decoupler
`obsprgon` Start programmable control of obs. transmitter

decpulse **Pulse first decoupler transmitter with amplifier gating**

Syntax: `decpulse(width,phase)`
`double width; /* width of pulse in sec */`
`codeint phase; /* real-time variable for phase of pulse */`

Description: Pulses the first decoupler at its current power level. The amplifier is gated off during decoupler pulses as it is during observe pulses. The amplifier gating times (see *RG1* and *RG2* for **decrgpulse**) are internally set to zero for this statement. `dmm` should be set to 'c' during any period of time in which decoupler pulses occur.

Arguments: `width` is the duration of the pulse, in seconds.
`phase` is the phase of the pulse. The value must be a real-time variable (`v1` to `v14`, etc.) or a real-time constant (`zero`, `one`, etc.).

Examples: `decpulse(pp,v3);`
`decpulse(2.0*pp,zero);`

Related: **decrgpulse** Pulse decoupler transmitter with amplifier gating
idecpulse Pulse the decoupler transmitter with IPA
rgpulse Pulse observe transmitter with amplifier gating
simpulse Pulse observe, decoupler channels simultaneously
sim3pulse Simultaneous pulse on 2 or 3 rf channels

decpwr **Set first decoupler high-power level, class C amplifier**

Applicability: All systems (except for the *GEMINI 2000*) with class C amplifiers.

Syntax: `decpwr(level)`
`double level; /* new power level for DODEV channel */`

Description: Changes the first decoupler high-power level to the value specified. To reset the power back to the “standard” `dhp` level, use `decpwr(dhp)`.

Switching between low power decoupling (`dhp='n'`) and high power decoupling (`dhp=x`), as well as switching between different levels of low power decoupling, uses relays whose switching time is about 10 ms and are not provided for in the standard pulse sequence capability. Neither function should prove necessary because extremely low levels of decoupling are provided for in `dhp` mode by using very small (0 to 30) values of `dhp`.

Arguments: `level` specifies the decoupler high-power level, from 0 (lowest) to 255 (full power). These values in this range increase monotonically but are neither linear nor logarithmic

Examples: `decpwr(255.0);`
`decpwr(level1);`

Related: **declvloff** Return first decoupler back to “normal” power

decpwrf **Set first decoupler fine power**

Applicability: Systems with fine power control on the first decoupler. Not available on *MERCURY-VX*, *MERCURY*, or *GEMINI 2000*.

Syntax: `decpwrf(power)`
`double power; /* new fine power value for DODEV */`

Description: Changes first decoupler fine power. It is functionally the same as **rlpwrf**(`value`, `DODEV`).

Arguments: `power` is the fine power desired.

Examples: `decpwr(4.0);`

Related: `dec2pwr` Set second decoupler fine power
`dec3pwr` Set third decoupler fine power
`obspwr` Set observe transmitter fine power
`rlpwr` Set transmitter or decoupler fine power

dec2pwr Set second decoupler fine power

Applicability: Systems with fine power control on the second decoupler.

Syntax: `dec2pwr(power)`
`double power; /* new fine power value for DO2DEV */`

Description: Changes the second decoupler fine power. It is functionally the same as `rlpwr(value,DO2DEV)`.

Arguments: `power` is the fine power desired.

Examples: `dec2pwr(4.0);`

Related: `decpwr` Set first decoupler fine power
`dec3pwr` Set third decoupler fine power
`obspwr` Set observe transmitter fine power
`rlpwr` Set transmitter or decoupler fine power

dec3pwr Set third decoupler fine power

Applicability: UNITY*INOVA* and UNITY*plus* systems with fine power control on the third decoupler.

Syntax: `dec3pwr(power)`
`double power; /* new fine power value for DO3DEV */`

Description: Changes third decoupler fine power. It is functionally the same as `rlpwr(value,DO3DEV)`.

Arguments: `power` is the fine power desired.

Examples: `dec3pwr(4.0);`

Related: `decpwr` Set first decoupler fine power
`dec2pwr` Set second decoupler fine power
`obspwr` Set observe transmitter fine power
`rlpwr` Set transmitter or decoupler fine power

decr Decrement an integer value

Syntax: `decr(vi)`
`codeint vi; /* real-time variable for starting value */`

Description: Decrements integer value `vi` by 1 (i.e., `vi=vi-1`).

Arguments: `vi` is a real-time variable (`v1` to `v14`, `oph`, etc.).

Examples: `decr(v5);`

Related: `add` Add integer values
`assign` Assign integer values
`dbl` Double an integer value
`divn` Divide integer values
`hlv` Half the value of an integer
`incr` Increment an integer value
`mod2` Find integer value modulo 2

<code>mod4</code>	Find integer value modulo 4
<code>modn</code>	Find integer value modulo n
<code>mult</code>	Multiply integer values
<code>sub</code>	Subtract integer values

decrgpulse Pulse first decoupler with amplifier gating

Syntax: `decrgpulse(width, phase, RG1, RG2)`
`double width; /* width of pulse in sec */`
`codeint phase; /* real-time variable for phase */`
`double RG1; /* gating delay before pulse in sec */`
`double RG2; /* gating delay after pulse in sec */`

Description: Syntactically equivalent to `rgpulse` statement and functionally equivalent to `rgpulse` with two exceptions. First, the first decoupler (instead of the transmitter) is pulsed at its current power level. Second, if `homo= 'n'`, the slow gate (about 100-ns switching time on *UNITYplus* systems, 1 to 3 μ s switching time on other systems, `homo` not available on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems) on the first decoupler board is always open and therefore need not be switched open during *RG1*. In contrast, if `homo= 'y'`, the slow gate on the first decoupler board is normally closed and must therefore be allowed sufficient time during *RG1* to switch open.

For systems with linear amplifiers, *RG1* for a decoupler pulse is important from the standpoint of amplifier stabilization under the following conditions: t_n, d_n equal $\{^3\text{H}, ^1\text{H}, ^{19}\text{F}\}$ (high-band nuclei, ^3H does not apply to *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems), or t_n, d_n less than or equal to ^31P (low-band nuclei). For these conditions, the “decoupler” amplifier module is placed in *pulse* mode, in which it remains blanked as long as the receiver is on. In this mode, *RG1* must be sufficiently long to allow the amplifier to stabilize after blanking is removed: 5 to 10 μ s (2 μ s typical for *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*) for high-band nuclei and 10 to 20 μ s (2 μ s typical for *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*) for low-band nuclei. Solids require at least 1.5 μ s. On 500-MHz systems that use the ENI-5100 class A amplifier for low-band nuclei on the observe channel, *RG1* should be 40–60 μ s.

If the t_n nucleus and the d_n nucleus are in different bands (e.g., t_n is ^1H and d_n is ^{13}C), the “decoupler” amplifier module is placed in the *cw* mode, in which it is always unblanked regardless of the state of the receiver. In this mode *RG1* is unimportant with respect to amplifier stabilization prior to the decoupler pulse.

Arguments: `width` is the duration, in seconds, of the decoupler transmitter pulse.
`phase` is the phase of the pulse. It must be a real-time variable (`v1` to `v14`, etc.) or a real-time constant (`zero`, `one`, etc.).
`RG1` is the time, in seconds, before the start of the pulse that the amplifier is gated off.
`RG2` is the time, in seconds, after the end of the pulse that the amplifier is gated on.

Examples: `decrgpulse(pp, v3, rof1, rof2);`
`decrgpulse(pp, zero, 1.0e-6, 0.2e-6);`

Related: `decpulse` Pulse first decoupler with amplifier gating
`dec2rgpulse` Pulse second decoupler with amplifier gating
`dec3rgpulse` Pulse third decoupler with amplifier gating

<code>idecpulse</code>	Pulse first decoupler transmitter with IPA
<code>idecrgpulse</code>	Pulse first decoupler with amplifier gating and IPA
<code>irgpulse</code>	Pulse observe transmitter with IPA
<code>rgpulse</code>	Pulse observe transmitter with amplifier gating
<code>simpulse</code>	Pulse observe, decoupler channels simultaneously
<code>sim3pulse</code>	Simultaneous pulse on 2 or 3 rf channels

dec2rgpulse Pulse second decoupler with amplifier gating

Applicability: Systems with a second decoupler.

Syntax: `dec2rgpulse(width, phase, RG1, RG2)`

```
double width;          /* width of pulse in sec */
codeint phase;        /* real-time variable for phase */
double RG1;           /* gating delay before pulse in sec */
double RG2;           /* gating delay after pulse in sec */
```

Description: Performs an explicit amplifier-gated pulse on the second decoupler (DO2DEV).

Arguments: `width` is the duration, in seconds, of the pulse.

`phase` is the phase of the pulse. It must be a real-time variable (`v1` to `v14`, etc.) or a real-time constant (`zero`, `one`, etc.).

`RG1` is the delay, in seconds, between gating the amplifier on and gating the rf transmitter on (the phaseshift occurs at the beginning of this delay). `RG1` is important for amplifier stabilization under the same conditions as described for `decrpulse`.

`RG2` is the delay, in seconds, between gating the rf transmitter off and gating the amplifier off. `homo` has no effect on the gating on the second decoupler board. On ^{UNITY}*INOVA* and *UNITYplus*, `homo2` controls gating of second decoupler rf.

Examples: `dec2rgpulse(p1, v10, rof1, rof2);`

Related:	<code>decpulse</code>	Pulse first decoupler with amplifier gating
	<code>decrpulse</code>	Pulse first decoupler with amplifier gating
	<code>idecpulse</code>	Pulse first decoupler with IPA
	<code>rgpulse</code>	Pulse observe transmitter with amplifier gating
	<code>simpulse</code>	Pulse observe, decoupler channels simultaneously
	<code>sim3pulse</code>	Simultaneous pulse on 2 or 3 rf channels

dec3rgpulse Pulse third decoupler with amplifier gating

Applicability: ^{UNITY}*INOVA* and *UNITYplus* systems with a third decoupler.

Syntax: `dec3rgpulse(width, phase, RG1, RG2)`

```
double width;          /* width of pulse in sec */
codeint phase;        /* real-time variable for phase */
double RG1;           /* gating delay before pulse in sec */
double RG2;           /* gating delay after pulse in sec */
```

Description: Performs an explicit amplifier-gated pulse on the third decoupler (DO3DEV).

Arguments: `width` is the duration, in seconds, of the pulse.

`phase` is the phase of the pulse. It must be a real-time variable (`v1` to `v14`, etc.) or a real-time constant (`zero`, `one`, etc.).

`RG1` is the delay, in seconds, between gating the amplifier on and gating the rf transmitter on (the phaseshift occurs at the beginning of this delay). `RG1` is important for amplifier stabilization under the same conditions as described for `decrpulse`.

RG2 is the delay, in seconds, between gating the rf transmitter off and gating the amplifier off. homo has no effect on the gating on the third decoupler board. On UNITY*INOVA* and UNITY*plus*, homo3 controls gating of third decoupler rf.

Examples: `dec3rgpulse(p1,v10,rof1,rof2);`

Related: **decpulse** Pulse first decoupler with amplifier gating
decrpulse Pulse first decoupler with amplifier gating
idecpulse Pulse first decoupler with IPA
rgpulse Pulse observe transmitter with amplifier gating
simpulse Pulse observe, decoupler channels simultaneously
sim3pulse Simultaneous pulse on 2 or 3 rf channels

dec4rgpulse Pulse fourth decoupler with amplifier gating

Applicability: UNITY*INOVA* systems with a deuterium decoupler channel as the fourth decoupler.

Syntax: `dec4rgpulse(width,phase,RG1,RG2)`
`double width; /* width of pulse in sec */`
`codeint phase; /* real-time variable for phase */`
`double RG1; /* gating delay before pulse in sec */`
`double RG2; /* gating delay after pulse in sec */`

Description: Performs an explicit amplifier-gated pulse on the fourth decoupler (DO4DEV).

Arguments: width is the duration, in seconds, of the pulse.

phase is the phase of the pulse. It must be a real-time variable (v1 to v14, etc.) or a real-time constant (zero, one, etc.).

RG1 is the delay, in seconds, between gating the amplifier on and gating the rf transmitter on (the phaseshift occurs at the beginning of this delay). RG1 is important for amplifier stabilization under the same conditions as described for **decrpulse**.

RG2 is the delay, in seconds, between gating the rf transmitter off and gating the amplifier off.

Examples: `dec4rgpulse(p1,v10,rof1,rof2);`

Related: **decpulse** Pulse first decoupler with amplifier gating
decrpulse Pulse first decoupler with amplifier gating
idecpulse Pulse first decoupler with IPA
rgpulse Pulse observe transmitter with amplifier gating
simpulse Pulse observe, decoupler channels simultaneously
sim3pulse Simultaneous pulse on 2 or 3 rf channels

decshaped_pulse Perform shaped pulse on first decoupler

Applicability: UNITY*INOVA* and UNITY*plus* systems, or systems with waveform generator on rf channel for the first decoupler.

Syntax: `decshaped_pulse(pattern,width,phase,RG1,RG2)`
`char *pattern; /* name of .RF text file */`
`double width; /* width of pulse in sec */`
`codeint phase; /* real-time variable for phase */`
`double RG1; /* gating delay before pulse in sec */`
`double RG2; /* gating delay after pulse in sec */`

Description: Performs a shaped pulse on the first decoupler. If a waveform generator is configured on the channel, it is used; otherwise, the linear attenuator and the

small-angle phase shifter are used to effectively perform an `apshaped_decpulse` statement.

When using the waveform generator, the shapes are downloaded into the waveshaper before the start of an experiment. When `decshaped_pulse` is called, the shape is addressed and started. The minimum pulse length is 0.2 μ s. The overhead at the start and end of the shaped pulse varies:

- `UNITYINOVA`: 1 μ s (start), 0 (end)
- `UNITYplus`: 5.75 μ s (start), 0 (end)
- System with Acquisition Controller board: 10.75 μ s (start), 4.3 μ s (end)
- System with Output board: 10.95 μ s (start), 4.5 μ s (end)

If the length is less than 0.2 μ s, the pulse is not executed and there is no overhead.

When using the linear attenuator and the small-angle phase shifter to generate a shaped pulse, the `decshaped_pulse` statement creates AP tables on the fly for amplitude and phase. *It also uses the real-time variables `v12` and `v13` to control the execution of the shape.* It does not use AP table variables. For timing and more information, see the description of `apshaped_decpulse`. Note that if using AP tables with shapes that have a large number of points, the FIFO can become overloaded with words generating the pulse shape and FIFO Underflow errors can result.

Arguments: `pattern` is the name of a text file in the `shapelib` directory that stores the rf pattern (leave off the `.RF` file extension).

`width` is the duration, in seconds, of the pulse.

`phase` is the phase of the pulse. It must be a real-time variable (`v1` to `v14`, etc.) or a real-time constant (`zero`, `one`, etc.)

`RG1` is the delay, in seconds, between gating the amplifier on and gating the first decoupler on (the phaseshift occurs at the beginning of this delay).

`RG2` is the delay, in seconds, between gating the first decoupler off and gating the amplifier off.

Examples: `decshaped_pulse("sinc",p1,v5,rof1,rof2);`

Related:	<code>apshaped_decpulse</code>	First decoupler pulse shaping via AP bus
	<code>dec2shaped_pulse</code>	Perform shaped pulse on second decoupler
	<code>dec3shaped_pulse</code>	Perform shaped pulse on third decoupler
	<code>shaped_pulse</code>	Perform shaped pulse on observe transmitter
	<code>simshaped_pulse</code>	Simultaneous two-pulse shaped pulse
	<code>sim3shaped_pulse</code>	Simultaneous three-pulse shaped pulse

`dec2shaped_pulse` Perform shaped pulse on second decoupler

Applicability: Systems with a waveform generator on rf channel for the second decoupler.

Syntax: `dec2shaped_pulse(pattern,width,phase,RG1,RG2)`

```
char *pattern; /* name of .RF text file */
double width; /* width of pulse in sec */
codeint phase; /* real-time variable for phase */
double RG1; /* gating delay before pulse in sec */
double RG2; /* gating delay after pulse in sec */
```

Description: Performs a shaped pulse on the second decoupler. If a waveform generator is configured on the channel, it is used; otherwise, the linear attenuator and the

small-angle phase shifter are used to effectively perform an `apshaped_dec2pulse` statement.

When using the waveform generator, the shapes are downloaded into the waveshaper before the start of an experiment. When `dec2shaped_pulse` is called, the shape is addressed and started. The minimum pulse length is 0.2 μ s. The overhead at the start and end of the shaped pulse varies:

- `UNITYINOVA`: 1 μ s (start), 0 (end)
- `UNITYplus`: 5.75 μ s (start), 0 (end)
- System with Acquisition Controller board: 10.75 μ s (start), 4.3 μ s (end)
- System with Output board: 10.95 μ s (start), 4.5 μ s (end)

If the length is less than 0.2 μ s, the pulse is not executed and there is no overhead.

When using the linear attenuator and the small-angle phase shifter to generate a shaped pulse, the `dec2shaped_pulse` statement creates AP tables on the fly for amplitude and phase. *It also uses the real-time variables `v12` and `v13` to control the execution of the shape.* It does not use AP table variables. For timing and more information, see the description of `apshaped_dec2pulse`. Note that if using AP tables with shapes that have a large number of points, the FIFO can become overloaded with words generating the pulse shape and `FIFO Underflow` errors can result.

Arguments: `pattern` is the name of a text file in the `shapelib` directory that stores the rf pattern (leave off the `.RF` file extension).

`width` is the duration, in seconds, of the pulse.

`phase` is the phase of the pulse. It must be a real-time variable (`v1` to `v14`, etc.) or a real-time constant (`zero`, `one`, etc.)

`RG1` is the delay, in seconds, between gating the amplifier on and gating the second decoupler on (the phaseshift occurs at the beginning of this delay).

`RG2` is the delay, in seconds, between gating the second decoupler off and gating the amplifier off.

Examples: `dec2shaped_pulse("gauss",p1,v9,rof1,rof2);`

Related:	<code>apshaped_dec2pulse</code>	Second decoupler pulse shaping via AP bus
	<code>decshaped_pulse</code>	Perform shaped pulse on first decoupler
	<code>shaped_pulse</code>	Perform shaped pulse on observe transmitter
	<code>sim3shaped_pulse</code>	Simultaneous three-pulse shaped pulse

`dec3shaped_pulse` Perform shaped pulse on third decoupler

Applicability: `UNITYINOVA` and `UNITYplus` systems.

Syntax: `dec3shaped_pulse(pattern,width,phase,RG1,RG2)`

```
char *pattern;    /* name of .RF text file */
double width;    /* width of pulse in sec */
codeint phase;   /* real-time variable for phase */
double RG1;     /* gating delay before pulse in sec */
double RG2;     /* gating delay after pulse in sec */
```

Description: Performs a shaped pulse on the third decoupler. If a waveform generator is configured on the channel, it is used; otherwise, the linear attenuator and the small-angle phase shifter are used to effectively perform an `apshaped_dec3pulse` statement.

When using the waveform generator, the shapes are downloaded into the waveshaper before the start of an experiment. When `dec3shaped_pulse` is called, the shape is addressed and started. The minimum pulse length is 0.2 μ s. The overhead at the start and end of the shaped pulse varies:

- `UNITYINOVA`: 1 μ s (start), 0 (end)
- `UNITYplus`: 5.75 μ s (start), 0 (end)
- System with Acquisition Controller board: 10.75 μ s (start), 4.3 μ s (end)
- System with Output board: 10.95 μ s (start), 4.5 μ s (end)

If the length is less than 0.2 μ s, the pulse is not executed and there is no overhead.

When using the linear attenuator and the small-angle phase shifter to generate a shaped pulse, the `dec3shaped_pulse` statement creates AP tables on the fly for amplitude and phase. *It also uses the real-time variables `v12` and `v13` to control the execution of the shape.* It does not use AP table variables. For timing and more information, see the description of `apshaped_dec3pulse`. Note that if using AP tables with shapes that have a large number of points, the FIFO can become overloaded with words generating the pulse shape and FIFO Underflow errors can result.

Arguments: `pattern` is the name of a text file in the `shapelib` directory that stores the rf pattern (leave off the `.RF` file extension).

`width` is the duration, in seconds, of the pulse.

`phase` is the phase of the pulse. It must be a real-time variable (`v1` to `v14`, etc.) or a real-time constant (`zero`, `one`, etc.).

`RG1` is the delay, in seconds, between gating the amplifier on and gating the third decoupler on (the phaseshift occurs at the beginning of this delay).

`RG2` is the delay, in seconds, between gating the third decoupler off and gating the amplifier off.

Examples: `dec3shaped_pulse("gauss", p1, v9, rof1, rof2);`

Related: `decshaped_pulse` Perform shaped pulse on first decoupler
`shaped_pulse` Perform shaped pulse on observe transmitter

decspinlock Set spin lock waveform control on first decoupler

Applicability: Systems with waveform generator on rf channel for the first decoupler.

Syntax: `decspinlock(pattern, 90_pulselength, tipangle_resoln, phase, ncycles)`

```
char *pattern;           /* name of .DEC text file */
double 90_pulselength;  /* 90 $\infty$ -deg pulse length in sec */
double tipangle_resoln; /* resolution of tip angle */
codeint phase;          /* phase of spin lock */
int ncycles;            /* number of cycles to execute */
```

Description: Executes a waveform-generator-controlled spin lock on the first decoupler, handling both rf gating and the mixing delay. Arguments can be variables (which require the appropriate `getval` and `getstr` statements) to permit changes via parameters (see the second example below).

Arguments: `pattern` is the name of the text file in the `shapelib` directory that stores the decoupling pattern (leave off the `.DEC` file extension).

`90_pulselength` is the pulse duration, in seconds, for a 90° tip angle.

`tipangle_resoln` is the resolution, in tip-angle degrees, to which the decoupling pattern is stored in the waveform generator.

`phase` is the phase of the spin lock. It must be a real-time variable (`v1` to `v14`, etc.) or a real-time constant (`zero`, `one`, etc.).

`ncycles` is the number of times the spin-lock pattern is to be executed.

Examples: `decspinlock("mlev16", p190, dres, v1, 30);`
`decspinlock(spinlk, pp90, dres, v1, cycles);`

Related: `dec2spinlock` Set spin lock waveform control on second decoupler
`dec3spinlock` Set spin lock waveform control on third decoupler
`spinlock` Set spin lock waveform control on obs. transmitter

dec2spinlock Set spin lock waveform control on second decoupler

Applicability: Systems with a waveform generator on rf channel for the second decoupler.

Syntax: `dec2spinlock(pattern, 90_pulselength,`
`tipangle_resoln, phase, ncycles)`
`char *pattern; /* name of .DEC text file */`
`double 90_pulselength; /* 90-deg pulse length of channel */`
`double tipangle_resoln; /* resolution of tip angle */`
`codeint phase; /* phase of spin lock */`
`int ncycles; /* number of cycles to execute */`

Description: Executes a waveform-generator-controlled spin lock on the second decoupler. Both the rf gating and the mixing delay are handled within this function. Arguments can be variables (which require the appropriate `getval` and `getstr` statements) to permit changes via parameters (see the second example below).

Arguments: `pattern` is the name of the text file in the `shapelib` directory that stores the decoupling pattern (leave off the `.DEC` file extension).

`90_pulselength` is the pulse duration, in seconds, for a 90° tip angle.

`tipangle_resoln` is the resolution, in tip-angle degrees, to which the decoupling pattern is stored in the waveform generator.

`phase` is the phase of the spin lock. It must be a real-time variable (`v1` to `v14`, etc.) or a real-time constant (`zero`, `one`, etc.).

`ncycles` is the number of times that the spin-lock pattern is to be executed.

Examples: (1) `dec2spinlock("mlev16", p290, dres2, v1, 42);`
(2) `dec2spinlock(lock2, pwx2, dres2, v1, cycles);`

Related: `decspinlock` Set spin lock waveform control on first decoupler
`spinlock` Set spin lock waveform control on obs. transmitter

dec3spinlock Set spin lock waveform control on third decoupler

Applicability: UNITY *INOVA* and UNITY *plus* systems with a waveform generator on rf channel for the third decoupler.

Syntax: `dec3spinlock(pattern, 90_pulselength,`
`tipangle_resoln, phase, ncycles)`
`char *pattern; /* name of .DEC text file */`
`double 90_pulselength; /* 90-deg pulse length of channel */`
`double tipangle_resoln; /* resolution of tip angle */`
`codeint phase; /* phase of spin lock */`
`int ncycles; /* number of cycles to execute */`

Description: Executes a waveform-generator-controlled spin lock on the third decoupler. Both the rf gating and the mixing delay are handled within this function. Arguments can be variables (which would need the appropriate `getval` and `getstr` statements) to permit changes via parameters (see the second example below).

Arguments: `pattern` is the name of the text file in the `shapelib` directory that stores the decoupling pattern (leave off the `.DEC` file extension).

`90_pulselength` is the pulse duration, in seconds, for a 90° tip angle.

`tipangle_resoln` is the resolution in tip-angle degrees to which the decoupling pattern is stored in the waveform generator.

`phase` is the phase of the spin lock. It must be a real-time variable (`v1` to `v14`, etc.) or a real-time constant (`zero`, `one`, etc.).

`ncycles` is the number of times that the spin-lock pattern is to be executed.

Examples:

```
dec3spinlock("mlev16",p390,dres3,v1,42);
dec3spinlock(lock2,pwx2,dres3,v1,cycles);
```

Related: `decspinlock` Set spin lock waveform control on first decoupler
`spinlock` Set spin lock waveform control on observe transmitter

decstepsize Set step size for first decoupler

Applicability: All systems except the *GEMINI 2000*.

Syntax:

```
decstepsize(step_size)
double step_size; /* phase step size of DODEV */
```

Description: Sets the step size of the first decoupler. It is functionally the same as `stepsize(base,DODEV)`.

Arguments: `step_size` is the phase step size desired and is a real number or a variable.

Examples:

```
decstepsize(30.0);
```

Related: `dec2stepsize` Set step size of second decoupler
`dec3stepsize` Set step size of third decoupler
`obsstepsize` Set step size of observe transmitter
`stepsize` Set small-angle phase step size, rf type C or D

dec2stepsize Set step size for second decoupler

Applicability: Systems with a second decoupler.

Syntax:

```
dec2stepsize(step_size)
double step_size; /* phase step size of DO2DEV */
```

Description: Sets the step size of the first decoupler. This statement is functionally the same as `stepsize(base,DO2DEV)`.

Arguments: `step_size` is the phase step size desired and is a real number or a variable.

Examples:

```
dec2stepsize(30.0);
```

Related: `decstepsize` Set step size of first decoupler
`dec3stepsize` Set step size of third decoupler
`obsstepsize` Set step size of observe transmitter
`stepsize` Set small-angle phase step size, rf type C or D

dec3stepsize Set step size for third decoupler

Applicability: UNITY*INOVA* and UNITY*plus* systems with a third decoupler.

Syntax: `dec3stepsize(step_size)`
`double step_size; /* phase step size of DO3DEV */`

Description: Sets the step size of the third decoupler. This statement is functionally the same as `stepsize(base, DO3DEV)`.

Arguments: `step_size` is the phase step size desired and is a real number or a variable.

Examples: `dec3stepsize(30.0);`

Related: `decstepsize` Set step size of first decoupler
`dec2stepsize` Set step size of second decoupler
`obsstepsize` Set step size of observe transmitter
`stepsize` Set small-angle phase step size, rf type C or D

decunblank Unblank amplifier associated with first decoupler

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `decunblank()`

Description: Explicitly enables the amplifier for the first decoupler. This overwrites the implicit blanking and unblanking of the amplifier before and after pulses. `decunblank` is generally followed by a call to `decblank`.

Related: `decblank` Blank amplifier associated with first decoupler
`obsblank` Blank amplifier associated with observe transmitter
`obsunblank` Unblank amplifier associated with observe transmitter
`rcvloff` Turn off receiver
`rcvron` Turn on receiver

dec2unblank Unblank amplifier associated with second decoupler

Applicability: Systems with a second decoupler.

Syntax: `dec2unblank()`

Description: Explicitly enables the amplifier for the second decoupler. This overwrites the implicit blanking and unblanking of the amplifier before and after pulses. `dec2unblank` is generally followed by a call to `dec2blank`.

Related: `dec2blank` Blank amplifier associated with second decoupler
`rcvloff` Turn off receiver
`rcvron` Turn on receiver

dec3unblank Unblank amplifier associated with third decoupler

Applicability: UNITY*INOVA* and UNITY*plus* systems with a third decoupler.

Syntax: `dec3unblank()`

Description: Explicitly enables the amplifier for the third decoupler. This overwrites the implicit blanking and unblanking of the amplifier before and after pulses. `dec3unblank` is generally followed by a call to `dec3blank`.

Related: `dec3blank` Blank amplifier associated with third decoupler
`rcvloff` Turn off receiver
`rcvron` Turn on receiver

delay **Delay for a specified time**

Syntax: `delay(time)`
`double time; /* delay in sec */`

Description: Sets a delay for a specified number of seconds.

Arguments: `time` specifies the delay, in seconds.

Examples: `delay(d1);`
`delay(d2/2.0);`

Related: `dps_show` Draw delay or pulses in a sequence for graphical display
`hsdelay` Delay specified time with possible homospoil pulse
`idelay` Delay for a specified time with IPA
`incdelay` Real time incremental delay
`initdelay` Initialize incremental delay
`vdelay` Delay with fixed timebase and real time count

dhpflag **Switch decoupling from low-power to high-power**

Applicability: On all systems with class C amplifiers, except the *GEMINI 2000*.

Syntax: `dhpflag`

Description: Switches the system from low-power to high-power decoupling; e.g.,
`dhpflag=TRUE` (correct use of upper and lower case letters is necessary).

Values: `TRUE`; switches the system to high-power decoupling.
`FALSE`; switches the system to low-power decoupling.

Related: `status` Draw delay or pulses in a sequence for graphical display

divn **Divide integer values**

Syntax: `divn(vi,vj,vk)`
`codeint vi; /* real-time variable for dividend */`
`codeint vj; /* real-time variable for divisor */`
`codeint vk; /* real-time variable for quotient */`

Description: Sets the integer value `vk` equal to `vi` divided by `vj`. Any remainder is ignored.

Arguments: `vi` is the dividend, `vj` is the divisor, and `vk` is the quotient. All three are real-time variables (`v1` to `v14`, `oph`, etc.).

Examples: `divn(v2,v3,v4);`

Related: `add` Add integer values
`assign` Assign integer values
`dbl` Double an integer value
`decr` Decrement an integer value
`hlv` Half the value of an integer
`incr` Increment an integer value
`mod2` Find integer value modulo 2
`mod4` Find integer value modulo 4
`modn` Find integer value modulo n
`mult` Multiply integer values
`sub` Subtract integer values

dps_off **Turn off graphical display of statements**

Syntax: `dps_off()`

Examples: Turns off dps display of statements. Pulse statements following `dps_off` are not shown in the graphical display.

Related: `dps_on` Turn on graphical display of statements
`dps_show` Draw delay or pulses in a sequence for graphical display
`dps_skip` Skip graphical display of next statement

dps_on Turn on graphical display of statements

Syntax: `dps_on ()`

Description: Turns on dps display of statements. Pulse statements following `dps_on` are shown in the graphical display.

Related: `dps_off` Turn off graphical display of statements
`dps_show` Draw delay or pulses in a sequence for graphical display
`dps_skip` Skip graphical display of next statement

dps_show Draw delay or pulses in a sequence for graphical display

Syntax: (1) `dps_show("delay",time)`

```
double time;          /* delay in sec */
```

Syntax: (2) `dps_show("pulse",channel,label,width)`

```
char *channel;        /* "obs", "dec", "dec2", or "dec3" */
char *label;          /* text label selected by user */
double width;         /* pulse length in sec */
```

Syntax: (3) `dps_show("shape_pulse",channel,label,width)`

```
char *channel;        /* "obs", "dec", "dec2", or "dec3" */
char *label;          /* text label selected by user */
double width;         /* pulse length in sec */
```

Syntax: (4) `dps_show("simpulse",label_of_obs,width_of_obs,
label_of_dec,width_of_dec)`

```
char *label_of_obs;   /* text label selected by user */
double width_of_obs; /* pulse length in sec */
char *label_of_dec;   /* text label selected by user */
double width_of_dec; /* pulse length in sec */
```

Syntax: (5) `dps_show("simshaped_pulse",label_of_obs,
width_of_obs,label_of_dec,width_of_dec)`

```
char *label_of_obs;   /* text label selected by user */
double width_of_obs; /* pulse length in sec */
char *label_of_dec;   /* text label selected by user */
double width_of_dec; /* pulse length in sec */
```

Syntax: (6) `dps_show("sim3pulse",label_of_obs,width_of_obs,
label_of_dec,width_of_dec,label_of_dec2,
width_of_dec2)`

```
char *label_of_obs;   /* text label selected by user */
double width_of_obs; /* pulse length in sec */
char *label_of_dec;   /* text label selected by user */
double width_of_dec; /* pulse length in sec */
char *label_of_dec2;  /* text label selected by user */
double width_of_dec2; /* pulse length in sec */
```

Syntax: (7) `dps_show("sim3shaped_pulse",label_of_obs,
width_of_obs,label_of_dec,width_of_dec,
label_of_dec2,width_of_dec2)`

```
char *label_of_obs;   /* text label selected by user */
double width_of_obs; /* pulse length in sec */
```

```

char *label_of_dec;    /* text label selected by user */
double width_of_dec;  /* pulse length in sec */
char *label_of_dec2;  /* text label selected by user */
double width_of_dec2; /* pulse length in sec */

```

Syntax: (8) `dps_show("zgradpulse",value,delay)`

```

double value;    /* amplitude of gradient on z channel */
double delay;    /* length of gradient in sec */

```

Syntax: (9) `dps_show("rgradient",channel,value)`

```

char channel;    /* 'X', 'x', 'Y', 'y', 'Z', or 'z' */
double value;    /* amplitude of gradient amplifier */

```

Syntax: (10) `dps_show("vgradient",channel,intercept, slope,mult)`

```

char channel;    /* gradient channel 'x', 'y' or 'z' */
int intercept;   /* initial gradient level */
int slope;       /* gradient increment */
codeint mult;    /* real-time variable */

```

Syntax: (11) `dps_show("shapedgradient",pattern,width,amp, channel,loops,wait)`

```

char *pattern;   /* name of shape text file */
double width;    /* length of pulse */
double amp;      /* amplitude of pulse */
char channel;    /* gradient channel 'x', 'y', or 'z' */
int loops;       /* number of loops */
int wait;        /* WAIT or NOWAIT */

```

Syntax: (12) `dps_show("shaped2Dgradient",pattern,width,amp, channel,loops,wait,tag)`

```

char *pattern;   /* name of shape text file */
double width;    /* length of pulse */
double amp;      /* amplitude of pulses */
char channel;    /* gradient channel 'x', 'y', or 'z' */
int loops;       /* number of loops */
int wait;        /* WAIT or NOWAIT */
int tag;         /* unique number for gradient element */

```

Description: Draws for `dps` graphical display the pulses, lines, and labels related to the statement (if it exists) given as the first argument.

- Syntax 1 draws a line to represent a delay.
- Syntax 2 draws a pulse picture and display a label underneath the picture.
- Syntax 3 draws the picture of a shaped pulse and displays a label underneath the picture.
- Syntax 4 draws observe and decoupler pulses at the same time.
- Syntax 5 draws a shaped pulse for observe and decoupler channels at the same time.
- Syntax 6 draws observe, decoupler, and second decoupler pulses at the same time.
- Syntax 7 draws a shaped pulse for observe, decoupler, and the second decoupler channels at the same time.
- Syntax 8 draws a pulse on the z channel.
- Syntax 9 draws a pulse on the specified channel.
- Syntax 10 draws a gradient picture.
- Syntax 11 draws a shaped pulse on a specified channel.

- Syntax 12 draws a shaped pulse on a specified channel. For an explanation of the arguments (delay, shapedpulse, etc.), see the corresponding entry in this reference.

Examples:

```
dps_show("delay",d1);
dps_show("pulse","obs","obspulse",p1);
dps_show("pulse","dec","pw",pw);
dps_show("shaped_pulse","obs","shaped",p1*2);
dps_show("shaped_pulse","dec2","gauss",pw);
dps_show("simpulse","obs_pulse",p1,"dec_pulse",p2);
dps_show("simshaped_pulse","gauss",p1,"gauss",p2);
dps_show("sim3pulse","p1",p1,"p2",p2,"p1*2",p1*2);
dps_show("zgradpulse",123.0,d1);
dps_show("rgradient","x",1234.0);
dps_show("vgradient","x",0,2000,v10);
dps_show("shapedgradient","sinc",1000.0,3000.0, \
'y',1,NOWAIT);
dps_show("shaped2Dgradient","square",1000.0, \
3000.0,'y',0,NOWAIT,1);
```

Related:	delay	Delay for a specified time
	dps_off	Turn off graphical display of statements
	dps_on	Turn on graphical display of statements
	dps_skip	Skip graphical display of next statement
	pulse	Pulse observe transmitter with amplifier gating
	rgradient	Set gradient to specified level
	shaped_pulse	Perform shaped pulse on observe transmitter
	shapedgradient	Generate shaped gradient pulse
	shaped2Dgradient	Generate arrayed shaped gradient pulse
	simpulse	Pulse observe and decouple channels simultaneously
	sim3pulse	Pulse simultaneously on 2 or 3 rf channels
	simshaped_pulse	Perform simultaneous two-pulse shaped pulse
	sim3shaped_pulse	Perform a simultaneous three-pulse shaped pulse
	vgradient	Set gradient to a level determined by real-time math
	zgradpulse	Create a gradient pulse on the z channel

dps_skip **Skip graphical display of next statement**

Syntax: `dps_skip()`

Description: Skips dps display of the next statement. The statement following `dps_skip` is not shown in the graphical display.

Related:	dps_off	Turn off graphical display of statements
	dps_on	Turn on graphical display of statements
	dps_show	Draw delay or pulses for graphical display of a sequence

E

elsenz **Execute succeeding statements if argument is nonzero**

Syntax: `(1) elsenz(vi)`

`codeint vi; /* real-time variable tested as 0 or not */`

Syntax: (2) `elsenz(n)`
`int n; /* 1, 2, or 3: same as corresponding ifzero */`

Description: Placed between the `ifzero` and `endif` statements to execute succeeding statements if `vi` is nonzero. The `elsenz` statement can be omitted if it is not desired. It is also not necessary for any statements to appear between the `ifzero` and the `elsenz`, or between the `elsenz` and the `endif` statements.
 Syntax 1 is used with ^{UNITY}*INOVA*, *MERCURY-VX*, *MERCURY*, *UNITYplus*, *UNITY*, and *VXR-S* systems.
 Syntax 2 is used with *GEMINI 2000* systems.

Arguments: `vi` is a real-time variable (`v1` to `v14`, `oph`, etc.) tested for either being zero or non-zero.

`n` is the same value (1, 2, or 3) as used in the corresponding `ifzero` statement.

Examples: `elsenz(v2);`
`elsenz(1);`

Related: `endif` End ifzero statement
`ifzero` Execute succeeding statements if argument is zero

endhardloop End hardware loop

Applicability: All systems except the *GEMINI 2000* and any system equipped with the Output board, Part. No. 00-953520-0#, where # is from 0 to 4.

Syntax: `endhardloop()`

Description: Ends a hardware loop that was started by the `starthardloop` statement.

Related: `acquire` Explicitly acquire data
`starthardloop` Start hardware loop

endif End execution started by ifzero or elsenz

Syntax: (1) `endif(vi)`
`codeint vi; /* real-time variable to test if 0 or not */`
 (2) `endif(n)`
`int n; /* 1, 2, or 3: same as corresponding ifzero */`

Description: Ends conditional execution started by the `ifzero` and `elsenz` statements.
 Syntax 1 is used with ^{UNITY}*INOVA*, *MERCURY-VX*, *MERCURY*, *UNITYplus*, *UNITY*, and *VXR-S* systems.
 Syntax 2 is used with *GEMINI 2000* systems.

Arguments: `vi` is a real-time variable (`v1` to `v14`, `oph`, etc.) that is tested for either being zero or non-zero.

`n` is the same value (1, 2, or 3) as used in the corresponding `ifzero` statement.

Examples: `endif(v4);`
`endif(2);`

Related: `elsenz` Execute succeeding statements if argument is nonzero
`ifzero` Execute succeeding statements if argument is zero

endloop End loop

Syntax: (1) `endloop(index)`
`codeint index; /* real-time variable */`

```
(2) endloop(n)
int n;          /* 1, 2, 3: same as corresponding loop */
```

Description: Ends a loop that was started by a **loop** statement.

Syntax 1 is used with ^{UNITY}*INOVA*, *MERCURY-VX*, *MERCURY*, *UNITYplus*, *UNITY*, and *VXR-S* systems.

Syntax 2 is used with *GEMINI 2000* systems.

Arguments: *index* is a real-time variable used as a temporary counter to keep track of the number of times through the loop. It must not be altered by any statements within the loop.

n is the same value (1, 2, or 3) as used in the corresponding **loop** statement.

Examples: `endloop(v2);`
`endloop(2);`

Related: **loop** Start loop

endmsloop **End multislice loop**

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `endmsloop(state, apv2)`
`char state; /* compressed or standard */`
`codeint apv2; /* current counter value */`

Description: Ends a loop that was started by a **msloop** statement.

Arguments: *state* is either 'c' to designate the compressed mode, or 's' to designate the standard arrayed mode. It should be the same value that was in the *state* argument in the **msloop** loop that it is ending.

apv2 is a real-time variable that holds the current counter value. This variable should be the same variable that was in the *apv2* counter variable in the **msloop** loop that it is ending.

Examples: `endmsloop(seqcon[1], v12);`

Related: **msloop** Multislice loop
endloop End loop
endpeloop End phase-encode loop

endpeloop **End phase-encode loop**

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `endpeloop(state, apv2)`
`char state; /* compressed or standard */`
`codeint apv2; /* current counter value */`

Description: Ends a loop that was started by a **peloop** statement.

Arguments: *state* is either 'c' to designate the compressed mode, or 's' to designate the standard arrayed mode. It should be the same value that was in the *state* argument in the **peloop** loop that it is ending.

apv2 is a real-time variable that holds the current counter value. This variable should be the same variable that was in the *apv2* counter variable in the **peloop** loop that it is ending.

Examples: `endpeloop(seqcon[1], v12);`

Related: **peloop** Phase-encode loop

<code>endloop</code>	End loop
<code>endmsloop</code>	End multi-slice loop

G

gate **Device gating (obsolete)**

Description: Not supported. Replace `gate` statements as follows:

```
gate(DECUPLR, TRUE) by a decon() statement.
gate(DECUPLR, FALSE) by a decoff() statement.
gate(DECUPLR2, TRUE) by a dec2on() statement.
gate(DECUPLR2, FALSE) by a dec2off() statement.
gate(RXOFF, TRUE) by a rcvroff() statement.
gate(RXOFF, FALSE) by a rcvron() statement.
gate(TXON, FALSE) by a xmtroff() statement.
gate(TXON, TRUE) by a xmtron() statement.
```

getarray **Get arrayed parameter values**

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `number=getarray(parname, array)`

```
char *parname;            /* parameter name */
double array[];         /* starting address of array */
```

Description: Retrieves all values of an arrayed parameter from the parameter set. It performs a `sizeof` on the array address to check for the maximum number of statements that the array can hold. The number of statements in the arrayed parameter `parname` is determined and returned by `getarray` as an integer. This statement is very useful when reading in parameter values for a global list of PSG statements such as `poffset_list` and `position_offset_list`.

When creating an acquisition parameter array that will be treated as lists, protection bit 8 (256) is set if the parameter is not to be treated as an arrayed acquisition parameter. An example of the `pss` parameter when compressing slice select portion of the acquisition is `create(pss, real)`
`setprotect(pss, on, 256)`

Arguments: `number` is an integer return argument that holds the number of values in `parname`.

`parname` is a numeric parameter, either arrayed or single value.

`array` is the starting address of an array of doubles.

Examples:

```
double upss[256];            /* declare array upss */
int uns;
uns = getarray(upss, upss); /* get values from upss */
poffset_list(upss, gss, uns, v12);
```

Related:	<code>create_delay_list</code>	Create table of delays
	<code>create_freq_list</code>	Create table of frequencies
	<code>create_offset_list</code>	Create table of offsets
	<code>poffset_list</code>	Set frequency from position list
	<code>position_offset_list</code>	Set frequency from position list

getelem Retrieve an element from an AP table

Applicability: All systems except the *GEMINI 2000*.

Syntax:

```
getelem(table, AP_index, AP_dest)
codeint table;          /* table variable */
codeint AP_index;      /* variable for index to element */
codeint AP_dest;      /* variable for destination */
```

Description: Gets an element from an AP table. The element is identified by an index.

Arguments: `table` specifies the name of the table (t1 to t60).

`AP_index` is an AP variable (v1 to v14, oph, ct, bsctr, or ssctr) that contains the index of the desired table element. Note that the first element of an AP table has an index of 0. For tables for which the autoincrement feature is set, the `AP_index` argument is ignored and can be set to any AP variable name; each element in such a table is by definition always accessed sequentially.

`AP_dest` is an AP variable (v1 to v14 and oph) into which the retrieved table element is placed.

Examples:

```
getelem(t25, ct, v1);
```

Related:	loadtable	Load AP table elements from table text file
	setautoincrement	Set autoincrement attribute for an AP table
	setdivnfactor	Set divn-return attribute and divn-factor for AP table
	setreceiver	Associate the receiver phase cycle with an AP table
	settable	Store an array of integers in a real-time AP table

getorientation Read image plane orientation

Applicability: Systems with imaging or PFG modules. Not applicable to *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems.

Syntax:

```
<error_return => getorientation(&char1, &char2, \
    &char3, search_string)
char *char1, *char2, *char3; /* program variable pointers */
char *search_string;        /* pointer to search string */
```

Description: Reads in and processes the value of a string parameter used typically for control of magnetic field gradients. The source of the string value is typically a user-created parameter available in the current parameters of the experiment used to initiate acquisition.

Arguments: `error_return` can contain the following values:

- `error_return` is set to zero if `getorientation` was successful in finding the parameter given in `search_string` and reading in the value of that parameter.
- `error_return` is set to -1 if `search_string` was not empty but it did not contain the correct characters.
- `error_return` is set to a value greater than zero if the procedure failed or if the string value is made up of characters other than n, x, y, and z.

`char1`, `char2`, and `char3` are user-created program variables of type `char` (single characters). The address operator (&) is used with these arguments to pass the address, rather than the values of these variables, to `getorientation`.

`search_string` is a literal string that `getorientation` will search for in the VNMR parameter set, i.e., the parameter name. For example, if `search_string="orient"`, the value of parameter `orient` will be

accessed. The value of the parameter should not exceed three characters and should only be made up of characters from the set n, x, y, and z.

The message `can't find variable in tree aborts getorientation`. This means there is no string associated with `search_string` or the parameter name cannot be found.

Examples: (1) `pulsesequence()`

```
{
...
char phase,read,slice;
...
getorientation(&read,&phase,&slice,"orient");
...
}
```

(2) `pulsesequence()`

```
{
...
char rd, ph, sl;
int error;
...
error=getorientation(&rd,&ph,&sl,"ort");
...
}
```

Related: `shapedvgradient` Dynamic variable shaped gradient function
`rgradient` Set gradient to specified level
`vgradient` Dynamic variable gradient function

getstr Look up value of string parameter

Syntax: `getstr(parameter_name, internal_name)`
`char *parameter_name; /* name of parameter */`
`char *internal_name; /* parameter value buffer name */`

Description: Looks up the value of the string parameter `parameter_name` in the current experiment parameter list and introduces it into the pulse sequence in the variable `internal_name`. If `parameter_name` is not found in the current experiment parameter list, `internal_name` is set to the null string and PSG produces a warning message.

Arguments: `parameter_name` is a string parameter.

`internal_name` is any legitimate C variable name defined at the beginning of the pulse sequence as an array of type `char` with dimension `MAXSTR`.

Examples: `getstr("xpol",xpol);`

Related: `getval` Look up value of numeric parameter

getval Look up value of numeric parameter

Syntax: `internal_name = getval(parameter_name)`
`char *parameter_name; /* name of parameter */`

Description: Looks up the value of the numeric parameter `parameter_name` in the current experiment parameter list and introduces it into the pulse sequence in the variable `internal_name`. If `parameter_name` is not found in the current experiment parameter list, `internal_name` is set to zero and PSG produces a warning message.

Arguments: `parameter_name` is a numeric parameter.
`internal_name` can be any legitimate C variable name that has been defined at the beginning of the pulse sequence as type double.

Examples: `J=getval("J");`
`acqtime=getval("at");`
`delay(getval("mix"));`

Related: `getstr` Look up value of string parameter

G_Delay **Generic delay routine**

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `G_Delay(DELAY_TIME, d1,`
`SLIDER_LABEL, NULL,`
`SLIDER_SCALE, 1,`
`SLIDER_MAX, 60,`
`SLIDER_MIN, 0,`
`SLIDER_UNITS, 1.0,`
`0);`

Description: See the section “[Generic Pulse Routine](#),” page 121.

G_Offset **Frequency offset routine**

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `G_Offset(OFFSET_DEVICE, TODEV,`
`OFFSET_FREQ, tof,`
`SLIDER_LABEL, NULL,`
`SLIDER_SCALE, 0,`
`SLIDER_MAX, 1000,`
`SLIDER_MIN, -1000,`
`SLIDER_UNITS, 0,`
`0);`

Description: See the section “[Frequency Offset Subroutine](#),” page 122.

G_Power **Fine power routine**

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `G_Power(POWER_VALUE, tpwrf,`
`POWER_DEVICE, TODEV,`
`SLIDER_LABEL, NULL,`
`SLIDER_SCALE, 1,`
`SLIDER_MAX, 4095,`
`SLIDER_MIN, 0,`
`SLIDER_UNITS, 1.0,`
`0);`

Description: See the section “[Fine Power Subroutine](#),” page 125.

G_Pulse **Generic pulse routine**

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

```
Syntax: G_Pulse(PULSE_WIDTH,      pw,
               PULSE_PRE_ROFF,   rof1,
               PULSE_POST_ROFF,  rof2,
               PULSE_DEVICE,     TODEV,
               SLIDER_LABEL,     NULL,
               SLIDER_SCALE,     1,
               SLIDER_MAX,       1000,
               SLIDER_MIN,       0,
               SLIDER_UNITS,     1e-6,
               PULSE_PHASE,     oph,
               0);
```

Description: See “[Generic Pulse Routine](#),” page 121.

H

hdwshiminit **Initialize next delay for hardware shimming**

Applicability: ^{UNITY}*INOVA* systems

Syntax: `hdwshiminit()`

Description: Enables hardware shimming during the following delay or during the following presaturation pulse, defined as a power level change followed by pulse. `hdwshiminit` is not necessary for the first delay or presaturation pulse in a pulse sequence, which is automatically enabled for hardware shimming.

Examples:

```
hdwshiminit();
delay(d2);
/*hardware shim during d2 if hdwshim='y'*/

hdwshiminit();
obspower(satpwr);
rgpulse(satdly,v5, rof1, rof2);
/*hardware shim during satdly if hdwshim='p'*/
```

Related: [delay](#) Delay for a specified time

hlv **Find half the value of an integer**

Syntax:

```
hlv(vi,vj)
codeint vi; /* real-time variable for starting value */
codeint vj; /* real-time variable for 1/2 starting value */
```

Description: Sets `vj` equal to the integer part of one-half of `vi`.

Arguments: `vi` is the starting value, and `vj` is the integer part of one-half of the starting value. Both arguments must be real-time variables (`v1` to `v14`, `oph`, etc.).

Examples:

```
hlv(v2,v5);
```

Related: [add](#) Add integer values
[assign](#) Assign integer values
[dbl](#) Double an integer value
[decr](#) Decrement an integer value
[divn](#) Divide integer values
[incr](#) Increment an integer value

<code>mod2</code>	Find integer value modulo 2
<code>mod4</code>	Find integer value modulo 4
<code>modn</code>	Find integer value modulo n
<code>mult</code>	Multiply integer values
<code>sub</code>	Subtract integer values

hsdelay **Delay specified time with possible homospoil pulse**

Syntax: `hsdelay(time)`
`double time; /* delay in sec */`

Description: Sets a delay for a specified number of seconds. If the homospoil parameter `hs` is set appropriately (see the definition of `status`), `hsdelay` inserts a homospoil pulse of length `hst` sec at the beginning of the delay.

Although the *GEMINI 2000* does not support homospoil, *GEMINI 2000* systems support `hsdelay` for compatibility with other systems.

Arguments: `time` specifies the length of the delay, in seconds.

Examples: `hsdelay(d1);`
`hsdelay(1.5e-3);`

Related:	<code>delay</code>	Delay for a specified time
	<code>idelay</code>	Delay for a specified time with IPA
	<code>incdelay</code>	Real time incremental delay
	<code>initdelay</code>	Initialize incremental delay
	<code>vdelay</code>	Delay with fixed timebase and real time count

I

idecpulse **Pulse first decoupler transmitter with IPA**

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `idecpulse(width, phase, label)`
`double width; /* pulse width in sec */`
`codeint phase; /* real-time variable for phase */`
`char *label; /* slider label in acqi */`

Description: Functions the same as the `decpulse` statement but generates interactive parameter adjustment (IPA) information when `gf` or `go('acqi')` is typed. `idecpulse` is the same as `decpulse` if `go` is typed.

Arguments: `width` is the duration, in seconds, of the pulse.

`phase` is the phase of the pulse. It must be a real-time variable (`v1` to `v14`, `oph`, etc.) or a real-time constant (`zero`, `one`, etc.).

`label` is the short character string to be given to the slider when displayed in the Acquisition window (`acqi` program).

Examples: `idecpulse(pp, v1, "decpul");`
`idecpulse(pp, v2, "pp");`

Related: `decpulse` Pulse the decoupler transmitter

idecrgpulse Pulse first decoupler with amplifier gating and IPA

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `idecrgpulse(width,phase,RG1,RG2,label)`
`double width; /* pulse width in sec */`
`codeint phase; /* real-time variable for phase */`
`double RG1; /* gating delay before pulse in sec */`
`double RG2; /* gating delay after pulse in sec */`
`char *label; /* slider label in acqi */`

Description: Works similar to the `decrgpulse` statement but generates interactive parameter adjustment (IPA) information when `gf` or `go('acqi')` is typed. `idecrgpulse` is the same as `decrgpulse` if `go` is typed.

Arguments: `width` is the duration, in seconds, of the decoupler transmitter pulse.
`phase` sets the decoupler transmitter phase. The value must be a real-time variable.
`RG1` is the time, in seconds, that the amplifier is gated on prior to the start of the pulse.
`RG2` is the time, in seconds, that the amplifier is gated off after the end of the pulse.
`label` is the short character string to be given to the slider when displayed in the Acquisition window (`acqi` program).

Examples: `idecrgpulse(pp,v5,rof1,rof2,"decpul");`
`idecrgpulse(pp,v4,rof1,rof2,"pp");`

Related: `decrgpulse` Pulse decoupler transmitter with amplifier gating

idelay Delay for a specified time with IPA

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `idelay(time,label)`
`double time; /* delay in sec */`
`char *label; /* slider label in acqi */`

Description: Works similar to the `delay` statement but generates interactive parameter adjustment (IPA) information when `gf` or `go('acqi')` is entered. `idelay` is the same as `delay` if `go` is entered.

Arguments: `time` is the length of the delay, in seconds.
`label` is the short character string to be given to the slider when displayed in the Acquisition window (`acqi` program).

Examples: `idelay(d1,"delay");`
`idelay(d1,"d1");`

Related: `delay` Delay for a specified time

ifzero Execute succeeding statements if argument is zero

Syntax: (1) `ifzero(vi)`
`codeint vi; /* real-time variable to check for zero */`
(2) `ifzero(n,vi)`
`int n; /* 1-3: must correspond to elsenz, endif */`
`codeint vi; /* real-time variable to check for zero */`

Description: Executes succeeding statements if `vi` is zero. If `vi` is non-zero and an `elsenz` statement exits before the next `endif` statement, execution moves to the

elsenz statement. Conditional execution ends when the **endif** statement is reached. It is not necessary for any statements to appear between the **ifzero** and the **elsenz** or between the **elsenz** and the **endif** statements.

Syntax 1 is used with ^{UNITY}*INOVA*, *MERCURY-VX*, *MERCURY*, *UNITYplus*, *UNITY*, and *VXR-S* systems.

Syntax 2 is used with *GEMINI 2000* systems.

Arguments: *vi* is a real-time variable (*v1* to *v14*, *oph*, etc.) that is tested for being either zero or non-zero.

n is the same value (1, 2, or 3) as used in the corresponding **elsenz** or **endif** statements.

```
Examples: mod2(ct,v1);          /* v1=010101... */
          ifzero(v1);        /* test if v1 is zero */
          pulse(pw,v2);      /* execute if v1 is zero */
          delay(d3);         /* execute if v1 is zero */
          elsenz(v1);        /* test if v1 is non-zero */
          pulse(2.0*pw,v2);  /* execute if v1 is non-zero */
          delay(d3/2.0);     /* execute if v1 is non-zero */
          endif(v1);         /* end conditional execution */
```

Related:	elsenz	Execute succeeding statements if argument is nonzero
	endif	End ifzero statement
	initval	Initialize real-time variable to specified value

incdelay **Set real-time incremental delay**

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `incdelay(count, index)`
`codeint count; /* real-time variable */`
`int index; /* time increment: DELAY1, DELAY2, etc. */`

Description: Enables real-time incremental delays. Before **incdelay** can be used to set a delay, an associated **initdelay** statement must be executed to initialize the time increment and delay index.

Arguments: *count* is a real-time variable (*ct*, *v1* to *v14*, etc.) that multiplies the *time_increment* (initialized by the **initdelay** statement) to set the delay time.

index is *DELAY1*, *DELAY2*, *DELAY3*, *DELAY4*, or *DELAY5*. It identifies which time increment is being multiplied by *count* to equal the delay.

```
Examples: incdelay(ct, DELAY1);
          incdelay(v3, DELAY2);
```

Related:	delay	Delay for a specified time
	hsdelay	Delay with possible homospoil pulse
	idelay	Delay for a specified time with IPA
	initdelay	Initialize incremental delay
	vdelay	Delay with fixed timebase and real time count

incgradient **Generate dynamic variable gradient pulse**

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `incgradient(channel, base, incl, inc2, inc3, mult1, \`
`mult2, mult3)`
`char channel; /* gradient 'x', 'y', or 'z' */`

```

int base;                /* base value */
int inc1,inc2,inc3;     /* increments */
codeint mult1,mult2,mult3; /* multipliers */

```

Description: Provides a dynamic variable gradient pulse controlled using the AP math functions. It drives the chosen gradient to the level defined by the formula:

$$\text{level} = \text{base} + \text{inc1} * \text{mult1} + \text{inc2} * \text{mult2} + \text{inc3} * \text{mult3}$$

with increments `inc1`, `inc2`, `inc3` and multipliers `mult1`, `mult2`, `mult3`.

The range of the gradient level is -2047 to $+2047$ if the gradients are run through the DAC board, and -32767 to $+32767$ if the gradient waveform generator package is installed. If the requested level lies outside the legal range, it is clipped at the appropriate boundary value. Note that, while each variable in the `level` formula must fit in a 16-bit integer, partial sums and products in the calculation are done with double-precision 32-bit integers.

The action of the gradient after the use of the `incgradient` statement is controlled by the gradient power supply and optional gradient compensation boards. The gradient level is ramped at the maximum slew rate to the value requested by `incgradient`. This fact becomes a concern when using the `incgradient` statement in a loop with a delay statement to produce a modulated gradient. The delay statement should be sufficiently long so as to allow the gradient to reach the assigned value, that is,

$$\text{delay} \geq \frac{|\text{new_level} - \text{old_level}|}{\text{full_scale}} \times \text{risetime}$$

The following error messages are possible:

- `Bad gradient specified: channel` is caused by the channel character evaluating to other than 'x', 'y', or 'z'; or by being a string.
- `mult[i] illegal RT variable: multiplier_i` is caused by `mult1`, `mult2`, or `mult3` having a value other than a AP math variable, `v1` to `v14`.

Arguments: `channel` is an expression that evaluates to the character 'x', 'y', or 'z'. (do not confuse characters 'x', 'y' and 'z' with strings "x", "y" and "z".)

`base` and `inc1`, `inc2`, `inc3` are the base value and increments used in the formula for determining the gradient level.

`mult1`, `mult2`, `mult3` are the multipliers used in the gradient level formula. These arguments should be AP math variables, `v1` to `v14`. Note that AP tables (`t1` to `t60`) are *not* allowed in this statement.

Examples: See the program `inctst.c`

Related:	<code>getorientation</code>	Read image plane orientation
	<code>rgradient</code>	Set gradient to specified level
	<code>shapedgradient</code>	Provide shaped gradient pulse to gradient channel
	<code>shaped2Dgradient</code>	Generate arrayed shaped gradient pulse
	<code>shapedvgradient</code>	Generate dynamic variable shaped gradient pulse
	<code>vgradient</code>	Generate dynamic variable gradient pulse

incr Increment an integer value

Syntax: `incr(vi)`
`codeint vi; /* real-time variable to increment */`

Description: Increments by 1 the integer value given by `vi` (i.e., `vi=vi+1`).

Arguments: `vi` is the integer to be incremented, It must be a real-time variable (`v1` to `v14`, `oph`, etc.).

Examples: `incr(v4);`

Related:

<code>add</code>	Add integer values
<code>assign</code>	Assign integer values
<code>dbl</code>	Double an integer value
<code>decr</code>	Decrement an integer value
<code>divn</code>	Divide integer values
<code>hlv</code>	Half the value of an integer
<code>mod2</code>	Find integer value modulo 2
<code>mod4</code>	Find integer value modulo 4
<code>modn</code>	Find integer value modulo n
<code>mult</code>	Multiply integer values
<code>sub</code>	Subtract integer values

indirect **Set indirect detection**

Applicability: No longer useful to any system using VNMR 5.2 or later.

Syntax: `indirect()`

Description: Starting with VNMR 5.2, if `tn` is 'H1' and `dn` is not 'H1', the software automatically uses the decoupler as the observe channel and the broadband channel as the decoupler channel.

init_rfpattern **Create rf pattern file**

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `init_rfpattern(pattern, rfpattern_struct, nsteps)`

```
char *pattern;           /* name of .RF text file */
RFpattern *rfpattern_struct; /* pointer to struct RFpattern */
int nsteps;             /* number of steps in pattern */
typedef struct _RFpattern {
    double phase;       /* phase of pattern step */
    double amp;        /* amplitude of pattern step */
    double time;       /* length of pattern step in sec */
} RFpattern
```

Description: Creates and defines rf patterns within a pulse sequence. The patterns can be created by any algorithm as long as each pattern step is correctly put into the `rfpattern_struct` argument. The number of steps in the pattern also has to be furnished as an argument. `init_rfpattern` saves the created pattern as a pattern file (with the suffix `.RF` appended to the name) in the user's `shapelib` directory. This statement does not have any return value.

Arguments: `pattern` is the name of the pattern file (without the `.RF` suffix).

`rfpattern_struct` is the rf structure that contains the pattern.

`nsteps` is the number of steps in the pattern.

Examples:

```
#include "standard.h"
pulsesequance()
{
    int nsteps;
    RFpattern pulse1[512], pulse2[512];
    Gpattern gshape[512];
    ...
```

```

nsteps = 0;
for (j=0; j<256; j++) {
    pulse1[j].phase = (double)j*0.5;
    pulse1[j].amp = (double)j*2;
    pulse1[j].time = 1.0;
    nsteps = nsteps +1;
}
init_rfpattern(plpat,pulse1,nsteps);
nsteps = 512;
for (j=0; j<nsteps; j++) {
    gshape[j].amp = 32767.0*sin((double)j/50.0);
    gshape[j].time = 1.0;
}
init_gradpattern("gpat",gshape,nsteps);
...
shaped_pulse(plpat,pl,vl,rofl,rofl);
...
shapedgradient("gpat",.01, 16000.0, 'z', 1, WAIT);
...
}

```

Related:	<code>init_gradpattern</code>	Create gradient pattern file
	<code>pulse</code>	Pulse observe transmitter with amplifier gating
	<code>shaped_pulse</code>	Perform shaped pulse on observe transmitter
	<code>shapedgradient</code>	Provide shaped gradient pulse to gradient channel
	<code>simpulse</code>	Pulse observe and decouple channels simultaneously
	<code>simshaped_pulse</code>	Perform simultaneous two-pulse shaped pulse

`init_gradpattern` Create gradient pattern file

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `init_gradpattern(pattern_name,gradpat_struct,nsteps)`
char *pattern; /* name of .GID pattern file */
Gpattern *gradpat_struct; /* pointer to struct Gpattern */
int nsteps; /* number of steps in pattern */
typedef struct _Gpattern{
double amp; /* amplitude of pattern step */
double time; /* pattern step length in sec */
} Gpattern

Description: Creates and defines gradient patterns within a pulse sequence. The patterns can be created by any algorithm as long as each pattern step is correctly put into the `gradpat_struct` argument. The number of steps in the pattern also has to be furnished as an argument. `init_gradpattern` saves the created pattern as a pattern file (with a `.GRD` suffix is appended to the name) in the user's `shapelib` directory. This statement has no return value.

Arguments: `pattern` is the name of the pattern file (without the `.GRD` suffix).
`gradpat_struct` is the gradient structure that contains the pattern.
`nsteps` is the number of steps in the pattern.

Examples: See the example for the `init_rfpattern` statement.

Related:	<code>pulse</code>	Pulse observe transmitter with amplifier gating
	<code>shaped_pulse</code>	Perform shaped pulse on observe transmitter
	<code>simpulse</code>	Pulse observe and decouple channels simultaneously
	<code>simshaped_pulse</code>	Perform simultaneous two-pulse shaped pulse

init_vscan Initialize real-time variable for vscan statement

Applicability: Systems with imaging capability.

Syntax: `init_vscan(vi,number_points)`
`codeint vi; /* variable to initialize */`
`double number_points; /* number of points to acquire */`

Description: Initializes a real-time AP math variable for use with the **vscan** statement. `init_vscan` has no return value.

Arguments: `vi` is an AP math variable (`v1` to `v14`). Its range is 1 to 32767.
`number_points` is the number of points to acquire in the scan. This is not limited to one acquisition but can be the sum of multiple acquires.

Examples: See the example used in the entry for **vscan**.

Related: **vscan** Dynamic variable scan function

initdelay Initialize incremental delay

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `initdelay(time_increment,index)`
`double time_increment; /* time increment in sec */`
`int index; /* time increment: DELAY1, etc. */`

Description: Initializes a time increment delay and its associated delay index. This statement must be executed before an **incdelay** statement can set an incremental delay. A maximum of five incremental delays (set by the `index` argument) can be defined in one pulse sequence.

Arguments: `time_increment` is the time increment, in seconds, that is multiplied by the count argument (set in the **incdelay** statement) for the delay time.
`index` is `DELAY1`, `DELAY2`, `DELAY3`, `DELAY4`, or `DELAY5`, and identifies which time increment is being initialized.

Examples: `initdelay(1.0/sw,DELAY1);`
`initdelay(1.0/sw1,DELAY2);`

Related: **delay** Delay for a specified time
hsdelay Delay with possible homospoil pulse
idelay Delay for a specified time with IPA
incdelay Real time incremental delay
vdelay Delay with fixed timebase and real time count

initparms_sis Initialize parameters for spectroscopy imaging sequences

Applicability: Systems with imaging capability; however, this statement will be obsoleted in future versions of VNMR.

Syntax: `void initparms_sis()`

Description: Sets the default state of the receiver to ON so that the receiver is enabled for explicit acquisitions. The original purpose of `initparms_sis` was to initialize the standard imaging parameters in imaging sequences, but starting with VNMR 5.3, initialization of these parameters has been folded into PSG.

Examples: `/* To upgrade older SIS sequences for Vnmr 5.1+: */`
`/* insert initparms_sis() after the variable */`
`/* declarations and update 'griserate' variable. */`
`...`
`/* EXTERNAL TRIGGER */`

```

double rcvry,hold;
initparms_sis();
griserate = trise/gradstepsz;
/**[3.2] PARAMETER READ IN FROM EXPERIMENT *****/
...

```

initval Initialize a real-time variable to specified value

Syntax: `initval(number,vi)`

```

double number;      /* value to use for initialization */
codeint vi;         /* variable to be initialized */

```

Description: Initializes a real-time variable with a real number. The real number input is rounded off and placed in the variable `vi`. Unlike `add`, `sub`, etc., `initval` is executed *once and only once* at the start of a non-arrayed 1D experiment or at the start of each increment in an n -dimensional or an arrayed experiment, not at the start of each transient; this must be taken into account in pulse sequence programming, as seen in the example below.

Arguments: `number` is the real number, from -32768.0 to 32767.0 , to be placed in the real-time variable. Entering a value less than -32768.0 (after rounding off) results in using -32768 , and entering a value greater than 32767.0 (after rounding off) results in using 32767 .

`vi` is the real-time variable (`v1` to `v14`, etc.) to be initialized

Examples: (1) `initval(nt,v8);`
 (2) `ifzero(ct);`
 `assign(v8,v7);`
 `elsenz(ct);`
 `decr(v7);`
 `endif(ct);`

Related: `elsenz` Execute succeeding statements if argument is nonzero
`ifzero` Execute succeeding statements if argument is zero
`loop` Start loop

iobspulse Pulse observe transmitter with IPA

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `iobspulse(label)`

```

char *label;      /* slider label in acqi */

```

Description: Functions the same as `obspulse` except `iobspulse` generates interactive parameter adjustment (IPA) information when `gf` or `go` (' `acqi` ') is entered. If `go` is entered, `iobspulse` is the same as `obspulse`.

Arguments: `label` is the short character string to be given to the slider when displayed in the Acquisition window (`acqi` program).

Examples: `iobspulse("pulse");`
`iobspulse("pw");`

Related: `obspulse` Pulse observe transmitter with amplifier gating

ioffset Change offset frequency with IPA

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `ioffset(frequency,device,label)`

```
double frequency;      /* offset frequency */
int device;            /* OBSch, DECch, DEC2ch, or DEC3ch */
char *label;          /* slider label in acqi */
```

Description: Functions the same as **offset** except that **ioffset** generates interactive parameter adjustment (IPA) information when **gf** or **go** ('acqi') is entered. If **go** is entered, **ioffset** is the same as **offset**.

Arguments: **frequency** is the new offset frequency of the device specified.

device is **OBSch** (observe transmitter) or **DECch** (first decoupler). For the UNITY**INOVA** and **UNITYplus** only, **device** can also be **DEC2ch** (second decoupler) or **DEC3ch** (third decoupler).

label is the short character string to be given to the slider when displayed in the Acquisition window (**acqi** program).

Examples: `ioffset(tof,OBSch,"tof");`

Related: **offset** Change offset frequency of transmitter or decoupler

ipulse Pulse observe transmitter with IPA

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `ipulse(width,phase,label)`

```
double width;          /* pulse length in sec */
codeint phase;        /* real-time variable for phrase */
char *label;          /* slider label in acqi */
```

Description: Functions the same as **pulse**(width,phase) statement except that **ipulse** generates interactive parameter adjustment (IPA) information when **gf** or **go** ('acqi') is entered. If **go** is entered, **ipulse** is the same as **pulse**.

Arguments: **width** specifies the duration, in seconds, of the pulse.

phase sets the phase of the pulse. The value must be a real-time variable (v1 to v14, oph, etc.).

label is the short character string to be given to the slider when displayed in the Acquisition window (**acqi** program).

Examples: `ipulse(pw,v4,"pulse");`
`ipulse(pw,v5,"pw");`

Related: **pulse** Pulse observe transmitter with amplifier gating

ipwrf Change transmitter or decoupler fine power with IPA

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `ipwrf(power,device,label)`

```
double power;         /* new fine power level */
int device;           /* OBSch, DECch, DEC2ch, DEC3ch */
char *label;         /* slider label in acqi */
```

Description: Functions the same as **rlpwrf** statement except that **ipwrf** generates interactive parameter adjustment (IPA) information when **gf** or **go** ('acqi') is entered. If **go** is entered, **ipwrf** is ignored by the pulse sequence; use **rlpwrf** for this purpose. Do not execute **rlpwrf** and **ipwrf** together because they cancel each other's effect.

Arguments: **power** is the new fine power level. It can range from 0.0 to 4095.0 (60 dB on UNITY**INOVA** and **UNITYplus**, about 6 dB on other systems).

`device` is OBSch (observe transmitter) or DECch (first decoupler). For the `UNITYINOVA` and `UNITYplus` only, `device` can also be DEC2ch (second decoupler) or DEC3ch (third decoupler).

`label` is the short character string to be given to the slider when displayed in the Acquisition window (`acqi` program).

Examples: `ipwrf(power,OBSch,"fpower");`
`ipwrf(2000.0,DECch,"dpwrf");`

Related: `rlpwrf` Set transmitter or decoupler fine power

ipwrm Change transmitter or decoupler lin. mod. power with IPA

Applicability: All systems except `MERCURY-VX`, `MERCURY`, and `GEMINI 2000`.

Syntax: `ipwrm(value,device,label)`

```
double value;      /* new linear modulator power level */
int device;       /* OBSch, DECch, DEC2ch, or DEC3ch */
char *label;     /* slider label in acqi */
```

Description: Functions the same as `rlpwrm` statement except that `ipwrm` generates interactive parameter adjustment (IPA) information when `gf` or `go('acqi')` is entered. If `go` is entered, `ipwrm` is ignored by the pulse sequence; use `rlpwrm` for this purpose. Do not execute `rlpwrm` and `ipwrm` together as they cancel each other's effect.

Arguments: `value` is the new linear modulator power level. It can range from 0.0 to 4095.0 (60 dB on `UNITYINOVA` and `UNITYplus`, about 6 dB on other systems).

`device` is OBSch (observe transmitter) or DECch (first decoupler). On the `UNITYINOVA` and `UNITYplus` only, `device` can also be DEC2ch (second decoupler) or DEC3ch (third decoupler).

`label` is the short character string to be given to the slider when displayed in the Acquisition window (`acqi` program).

Examples: `ipwrm(power,OBSch,"fpower");`
`ipwrm(2000.0,DECch,"dpwrm");`

Related: `rlpwrm` Set transmitter or decoupler linear modulator power

irgpulse Pulse observe transmitter with IPA

Applicability: All systems except `MERCURY-VX`, `MERCURY`, and `GEMINI 2000`.

Syntax: `irgpulse(width,phase,RG1,RG2,label)`

```
double width;     /* pulse length in sec */
codeint phase;   /* real-time variable for phase */
double RG1;      /* gating delay before pulse in sec */
double RG2;      /* gating delay after pulse in sec */
char *label;     /* slider label in acqi */
```

Description: Functions the same as the `rgpulse` statement except that `irgpulse` generates interactive parameter adjustment (IPA) information when `gf` or `go('acqi')` is entered. If `go` is entered, `irgpulse` is the same as `rgpulse`.

Arguments: `width` specifies the duration, in seconds, of the observe transmitter pulse.

`phase` sets the observe transmitter phase. It must be a real-time variable.

`RG1` is the time, in seconds, the amplifier is gated on prior to the start of the pulse.

RG2 is the time, in seconds, the amplifier is gated off after the end of the pulse.
label is the short character string to be given to the slider when displayed in the Acquisition window (acqi program).

Examples: `irgpulse(pw,v3,rof1,rof2,"rgpul");`
`irgpulse(pw,v7,rof1,rof2,"pw");`

Related: `rgpulse` Pulse observe transmitter with amplifier gating

L

lk_hold Set lock correction circuitry to hold correction

Applicability: *UNITYINOVA*, *MERCURY-VX*, *MERCURY*, and *UNITYplus* systems only.

Syntax: `lk_hold()`

Description: Makes the lock correction circuitry hold the correction to the z0 constant, thereby ignoring any influence on the lock signal such as gradient or pulses at ²H frequency. The correction remains in effect until the statement `lk_sample` is called or until the end of an experiment. If an acquisition is aborted, the lock correction circuitry will be reset to sample the lock signal.

Related: `lk_sample` Set lock correction circuitry to sample lock signal

lk_sample Set lock correction circuitry to sample lock signal

Applicability: *UNITYINOVA*, *MERCURY-VX*, *MERCURY*, and *UNITYplus* systems only.

Syntax: `lk_sample()`

Description: Makes the lock correction circuitry continuously sample the lock signal and correct z0 with the time constant as set by the parameter `lockacqtc`. The correction remains in effect until the statement `lk_hold` is called.

Related: `lk_hold` Set lock correction circuitry to hold correction

loadtable Load AP table elements from table text file

Applicability: All systems except the *GEMINI 2000*.

Syntax: `loadtable(file)`
`char *file; /* name of table file */`

Description: Loads AP table elements from a table file (a UNIX text file). It can be called multiple times within a pulse sequence but make sure that the same table name is not used more than once within all the table files accessed by the sequence. Table values can be greater than, equal to, or less than zero.

Arguments: `file` is the name of a table file in a user's private `tablib` or in the system `tablib`.

Examples: `loadtable("tabletest");`

Related: `getelem` Retrieve an element from an AP table
`setautoincrement` Set autoincrement attribute for an AP table
`setdivnfactor` Set divn-return attribute and divn-factor for AP table
`setreceiver` Associate the receiver phase cycle with an AP table
`settable` Store an array of integers in a real-time AP table

loop	Start loop
Syntax:	(1) <code>loop(count, index)</code> <code>codeint count /* number of times to loop */</code> <code>codeint index /* real-time variable to use during loop */</code>
Syntax:	(2) <code>loop(n, count, index)</code> <code>int n; /* 1, 2, 3: same as corresponding endloop */</code> <code>double count /* number of times to loop */</code> <code>int index /* real-time variable to use during loop */</code>
Description:	Starts a loop to execute statements within the pulse sequence. The loop is ended by the <code>endloop</code> statement. Syntax 1 is used with ^{UNITY} <i>INOVA</i> , <i>MERCURY-VX</i> , <i>MERCURY</i> , <i>UNITYplus</i> , <i>UNITY</i> , and <i>VXR-S</i> systems. Syntax 2 is used with <i>GEMINI 2000</i> systems.
Arguments:	<code>count</code> is a real-time variable used to specify the number of times through the loop. <code>count</code> can be any positive number, including zero. <code>index</code> is a real-time variable used as a temporary counter to keep track of the number of times through the loop. The value must not be altered by any statements within the loop. <code>n</code> is the same value (1, 2, or 3) as used in the corresponding <code>endloop</code> statement.
Examples:	(1) <code>initval(5.0, v1); /* set first loop count */</code> <code>loop(v1, v10);</code> <code>dbl(ct, v2); /* set second loop count */</code> <code>loop(v2, v9);</code> <code>rgpulse(p1, v1, 0.0, 0.0);</code> <code>endloop(v9);</code> <code>delay(d2);</code> <code>endloop(v10);</code> (2) <code>loop(2, 5.0, v9);</code>
Related:	<code>initval</code> Initialize real-time variable to specified value <code>endloop</code> End loop <code>msloop</code> Multislice loop

M

magradient	Simultaneous gradient at the magic angle
Applicability:	Not applicable on <i>MERCURY-VX</i> , <i>MERCURY</i> , and <i>GEMINI 2000</i> .
Syntax:	<code>magradient(gradlvl)</code> <code>double gradlvl; /* gradient amplitude in G/cm */</code>
Description:	Applies a simultaneous gradient on the <i>x</i> , <i>y</i> , and <i>z</i> axes at the magic angle to B_0 . Information from a gradient table is used to scale and set values correctly. The gradients are left at the given levels until they are turned off. To turn off the gradients, add another <code>magradient</code> statement with <code>gradlvl</code> set to zero or insert the statement <code>zero_all_gradients</code> .
Arguments:	<code>gradlvl</code> is the gradient amplitude, in gauss/cm.

Examples: `magradient(3.0);`
`pulse(pw, oph);`
`delay(0.001 - pw);`
`zero_all_gradients();`

Related: `magradpulse` Simultaneous gradient pulse at the magic angle
`mashapedgradient` Simultaneous shaped gradient at the magic angle
`mashapedgradpulse` Simultaneous shaped gradient pulse at the magic angle
`vagradient` Variable angle gradient
`vagradpulse` Variable angle gradient pulse
`vashapedgradient` Variable angle shaped gradient
`vashapedgradpulse` Variable angle shaped gradient pulse
`zero_all_gradients` Zero all gradients

magradpulse Gradient pulse at the magic angle

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `magradpulse(gradlvl, gradtime)`
`double gradlvl; /* gradient amplitude in G/cm */`
`double gradtime; /* gradient time in sec */`

Description: Applies a simultaneous gradient pulse on the *x*, *y*, and *z* axes at the magic angle to B_0 . Information from a gradient table is used to scale and set values correctly. `magradpulse` differs from `magradient` in that the gradients are turned off after `gradtime` seconds. Use `magradpulse` if there are no other actions while the gradients are on. `magradient` is used if there are actions to be performed while the gradients are on.

Arguments: `gradlvl` is the gradient pulse amplitude, in gauss/cm.
`gradtime` is the time, in seconds, to apply the gradient.

Examples: `magradpulse(3.0, 0.001);`

Related: `magradient` Simultaneous gradient at the magic angle
`mashapedgradient` Simultaneous shaped gradient at the magic angle
`mashapedgradpulse` Simultaneous shaped gradient pulse at the magic angle
`vagradient` Variable angle gradient
`vagradpulse` Variable angle gradient pulse
`vashapedgradient` Variable angle shaped gradient
`vashapedgradpulse` Variable angle shaped gradient pulse
`zero_all_gradients` Zero all gradients

mashapedgradient Simultaneous shaped gradient at the magic angle

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `mashapedgradient(pattern, gradlvl, gradtime, theta, \`
`phi, loops, wait)`
`char *pattern; /* name of gradient shape text file */`
`double gradlvl; /* gradient amplitude in G/cm */`
`double gradtime; /* gradient time in seconds */`
`double theta; /* angle from z axis in degrees */`
`double phi; /* angle of rotation in degrees */`
`int loops; /* number of waveform loops */`
`int wait; /* WAIT or NOWAIT*/`

Description: Applies a simultaneous gradient with shape `pattern` and amplitude `gradlvl` on the *x*, *y*, and *z* axes at the magic angle to B_0 . Information is used

from a gradient table to scale and set the values correctly. `mashapedgradient` leaves the gradients at the given levels until they are turned off. To turn off the gradients, add another `mashapedgradient` statement with `gradlvl` set to zero or include the `zero_all_gradients` statement.

`mashapedgradpulse` differs from `mashapedgradient` in that the gradients are turned off after `gradtime` seconds. `mashapedgradient` is used if there are actions to be performed while the gradients are on.

`mashapedgradpulse` is best when there are no other actions required while the gradients are on.

Arguments: `pattern` is the name of a text file describing the shape of the gradient. The text file is located in `$vnmrsystem/shapelib` or in the user directory `$vnmruser/shapelib`.

`gradlvl` is the gradient amplitude, in gauss/cm.

`gradtime` is the gradient application time, in seconds.

`theta` defines the angle, in degrees, from the z axis.

`phi` defines the angle of rotation, in degrees, about the xy plane.

`loops` is a value from 0 to 255 to loop the selected waveform. Gradient waveforms on ^{UNITY}*INOVA* systems do not use this field, and `loops` is set to 0 on ^{UNITY}*INOVA* systems.

`wait` is a keyword, either `WAIT` or `NOWAIT`, that selects whether or not a delay is inserted to wait until the gradient is completed before executing the next statement.

Examples:

```
mashapedgradient("ramp_hold", 3.0, trise, 0, NOWAIT);
pulse(pw, oph);
delay(0.001-pw-2*trise);
mashapedgradient("ramp_down", 3.0, trise, 0, NOWAIT);
```

Related:	<code>magradient</code>	Simultaneous gradient at the magic angle
	<code>magradpulse</code>	Simultaneous gradient pulse at the magic angle
	<code>mashapedgradpulse</code>	Simultaneous shaped gradient pulse at the magic angle
	<code>vagradient</code>	Variable angle gradient
	<code>vagradpulse</code>	Variable angle gradient pulse
	<code>vashapedgradient</code>	Variable angle shaped gradient
	<code>vashapedgradpulse</code>	Variable angle shaped gradient pulse
	<code>zero_all_gradients</code>	Zero all gradients

mashapedgradpulse Simultaneous shaped gradient pulse at the magic angle

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax:

```
mashapedgradpulse(pattern, gradlvl, gradtime, theta, phi)
char *pattern;          /* name of gradient shape text file */
double gradlvl;        /* gradient amplitude in G/cm */
double gradtime;       /* gradient time in sec */
double theta;          /* angle from z axis in degrees */
double phi;            /* angle of rotation in degrees */
```

Description: Applies a simultaneous gradient with shape `pattern` and amplitude `gradlvl` on the x , y , and z axes at the magic angle to B_0 . `mashapedgradpulse` assumes that the gradient pattern zeroes the gradients at its end and so it does not explicitly zero the gradients. Information from a gradient table is used to scale and set values correctly.

`mashapedgradpulse` is used if there are no other actions required when the gradients are on. `mashapedgradient` is used if there are actions to be performed while the gradients are on.

Arguments: `pattern` is the name of a text file describing the shape of the gradient. The text file is located in `$vnmrsystem/shapelib` or in the user directory `$vnmruser/shapelib`.

`gradlvl` is the gradient amplitude, in gauss/cm.

`gradtime` is the gradient application time, in seconds.

`theta` defines the angle, in degrees, from the *z* axis

`phi` defines the angle of rotation, in degrees, about the *xy* plane.

Examples: `mashapedgradpulse("hsine", 3.0, 0.001);`

Related:	<code>magradient</code>	Simultaneous gradient at the magic angle
	<code>magradpulse</code>	Simultaneous gradient pulse at the magic angle
	<code>mashapedgradient</code>	Simultaneous shaped gradient at the magic angle
	<code>vagradient</code>	Variable angle gradient
	<code>vagradpulse</code>	Variable angle gradient pulse
	<code>vashapedgradient</code>	Variable angle shaped gradient
	<code>vashapedgradpulse</code>	Variable angle shaped gradient pulse
	<code>zero_all_gradients</code>	Zero all gradients

mod2 Find integer value modulo 2

Syntax: `mod2(vi, vj)`
`codeint vi; /* variable for starting value */`
`codeint vj; /* variable for result */`

Description: Sets the value of `vj` equal to `vi` modulo 2.

Arguments: `vi` is the starting integer value and `vj` is the value of `vi` modulo 2 (the remainder after `vi` is divided by 2). Both arguments must be real-time variables (`v1` to `v14`, etc.).

Examples: `mod2(v3, v5);`

Related:	<code>add</code>	Add integer values
	<code>assign</code>	Assign integer values
	<code>dbl</code>	Double an integer value
	<code>decr</code>	Decrement an integer value
	<code>divn</code>	Divide integer values
	<code>hlv</code>	Half the value of an integer
	<code>incr</code>	Increment an integer value
	<code>mod4</code>	Find integer value modulo 4
	<code>modn</code>	Find integer value modulo n
	<code>mult</code>	Multiply integer values
	<code>sub</code>	Subtract integer values

mod4 Find integer value modulo 4

Syntax: `mod4(vi, vj)`
`codeint vi; /* variable for starting value */`
`codeint vj; /* variable for result */`

Description: Sets the value of `vj` equal to `vi` modulo 4.

Arguments: v_i is the starting integer value and v_j is the value of v_i modulo 4 (the remainder after v_i is divided by 4). Both arguments must be real-time variables (v_1 to v_{14} , etc.).

Examples: `mod4(v3, v5);`

Related: `mod2` Find integer value modulo 2
`modn` Find integer value modulo n

modn Find integer value modulo n

Syntax: `modn(vi, vj, vk)`
`codeint vi; /* real-time variable for starting value */`
`codeint vj; /* real-time variable for modulo number */`
`codeint vk; /* real-time variable for result */`

Description: Sets the value of vk equal to v_i modulo v_j .

Arguments: v_i is the starting integer value, v_j is the modulo value, and vk is v_i modulo v_j (the remainder after v_i is divided by v_j). All arguments must be real-time variables (v_1 to v_{14} , etc.).

Examples: `modn(v3, v5, v4);`

Related: `mod2` Find integer value modulo 2
`mod4` Find integer value modulo 4

msloop Multislice loop

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `msloop(state, max_count, apv1, apv2)`
`char state; /* compressed or standard */`
`double max_count; /* initializes apv1 */`
`codeint apv1; /* maximum count */`
`codeint apv2; /* current counter value */`

Description: Provides a sequence-switchable loop that can use real-time variables in what is known as a compressed loop or it can use the standard arrayed features of PSG. In imaging sequences, `msloop` uses the second character of the `seqcon` string parameter (`seqcon[1]`) for the `state` argument. `msloop` is used in conjunction with `endmsloop`.

Arguments: `state` is either 'c' to designate the compressed mode, or 's' to designate the standard arrayed mode.

`max_count` initializes `apv1`. If `state` is 'c', this value should equal the number of slices. If `state` is 's', this value should be 1.0.

`apv1` is real-time variable that holds the maximum count.

`apv2` is a real-time variable that holds the current counter value. If `state` is 'c', `apv2` counts from 0 to `max_count-1`. If `state` is 's', `apv2` is set to zero.

Examples: `msloop(seqcon[1], ns, v11, v12);`
`...`
`poffset_list(pss, gss, ns, v12);`
`...`
`acquire(np, 1.0/sw);`

```

    ...
    endmsloop(seqcon[1],v12);

```

Related: **endmsloop** End multislice loop
loop Start loop
peloop Phase-encode loop

mult Multiply integer values

Syntax: `mult(vi,vj,vk)`

```

codeint vi; /* real-time variable for first factor */
codeint vj; /* real-time variable for second factor */
codeint vk; /* real-time variable for product */

```

Description: Sets the value of `vk` equal to the product of the integer values `vi` and `vj`.

Arguments: `vi` is an integer value, `vj` is another integer value, and `vk` is the product of `vi` and `vj`. All arguments must be real-time variables (`v1` to `v14` etc.).

Examples: `mult(v3,v5,v4);`

Related: **add** Add integer values
assign Assign integer values
dbl Double an integer value
decr Decrement an integer value
divn Divide integer values
hlf Half the value of an integer
incr Increment an integer value
mod2 Find integer value modulo 2
mod4 Find integer value modulo 4
modn Find integer value modulo n
sub Subtract integer values

O

obl_gradient Execute an oblique gradient

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `obl_gradient(level1,level2,level3)`

```

double level1,level2,level3; /* gradient values in G/cm */

```

Description: Defines an oblique gradient with respect to the magnet reference frame. This statement is basically the same as the statement **oblique_gradient** except that **obl_gradient** uses the parameters `psi`, `phi`, and `theta` in the parameter set rather than setting them directly. It has no return value.

The pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: `level1`, `level2`, `level3` are gradient values, in gauss/cm.

Examples: `obl_gradient(0.0,0.0,gss);`
`obl_gradient(gro,0.0,0.0);`

Related: **oblique_gradient** Execute an oblique gradient

oblique_gradient Execute an oblique gradient

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

```
Syntax: oblique_gradient(level1,level2,level3,psi,phi,theta)
double level1,level2,level3; /* gradient values in G/cm */
double psi,phi,theta;      /* Euler angles in degrees */
```

Description: Defines an oblique gradient with respect to the magnet reference frame. It has no return value. The gradient amplitudes (*level1*, *level2*, *level3*) are put through a coordinate transformation matrix using *psi*, *phi*, and *theta* to determine the actual *x*, *y*, and *z* gradient levels. These are then converted into DAC values and set with their corresponding *gradient* statements. For more coordinate system information, refer to the manual *User Guide: Imaging*.

The pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: *level1*, *level2*, *level3* are gradient values, in gauss/cm.
psi is an Euler angle, in degrees, with a range of -90 to +90.
phi is an Euler angle, in degrees, with the range of -180 to +180.
theta is an Euler angle, in degrees, with the range -90 to +90.

Examples: `oblique_gradient(gvox1,0,0,vpsi,vphi,vtheta);`

Related: `obl_gradient` Execute an oblique gradient

obl_shapedgradient Execute a shaped oblique gradient

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, or *GEMINI 2000*.

```
Syntax: obl_shapedgradient(pat1,pat2,pat3,width,lv11, \
    lv12,lv13,loops,wait)
char *pat1,*pat2,*pat3; /* names of gradient shapes */
double width;          /* gradient length in sec */
double lv11,lv12,lv13; /* gradient values in G/cm */
int loops;             /* times to loop waveform */
int wait;              /* WAIT or NOWAIT */
```

Description: Defines a shaped oblique gradient with respect to the magnet reference frame. It is basically the same as the `oblique_shapedgradient` statement except that `obl_shapedgradient` uses the parameters *psi*, *phi*, and *theta* in the parameter set rather than setting them directly.

The pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: *pat1*, *pat2*, *pat3* are names of gradient shapes. (Note that the VNMR 5.1 and 5.2 software releases used only one pattern in the argument list.)

width is the length of the gradient, in seconds.

level1, *level2*, *level3* are gradient values, in gauss/cm.

loops is the number of times, from 1 to 255, to loop the waveform.

wait is a keyword, either `WAIT` or `NOWAIT`, that selects whether or not a delay is inserted to stop until the gradient has completed before executing the next statement.

Examples: `obl_shapedgradient("ramp_hold","",",",trise,gro, \
 0.0,0.0,1,NOWAIT);`

Related: `oblique_shapedgradient` Execute a shaped oblique gradient

oblique_shapedgradient **Execute a shaped oblique gradient**

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, or *GEMINI 2000*.

```
Syntax: oblique_shapedgradient(pat1,pat2,pat3,width, \
      lvl1,lvl2,lvl3,psi,phi,theta,loops,wait)
char *pat1,*pat2,*pat3; /* names of gradient shapes */
double width; /* gradient length in sec */
double lvl1,lvl2,lvl3; /* gradient values in G/cm */
double psi,phi,theta; /* Euler angles in degrees */
int loops; /* times to loop waveform */
int wait; /* WAIT or NOWAIT */
```

Description: Defines a shaped oblique gradient with respect to the magnet reference frame. The gradient patterns (*pat1*, *pat2*, *pat3*) and the gradient amplitudes (*lvl1*, *lvl2*, *lvl3*) are put through a coordinate transformation matrix using *psi*, *phi*, and *theta* to determine the actual *x*, *y*, and *z* gradient levels.

pat1 and *lvl1* correspond to the logical read-out axis.

pat2 and *lvl2* correspond to the logical phase-encode axis.

pat3 and *lvl3* correspond to the logical slice-select axis.

Patterns are read in; scaled according to their respective amplitudes; rotated into *x*, *y*, and *z* patterns; rescaled; converted to DAC values; and written out to temporary files *shapedgradient_x*, *shapedgradient_y*, and *shapedgradient_z* in the user's *shapelib* directory; and set with their corresponding *shapedgradient* statements. If an axis does not have a pattern, use empty quotes ("") to indicate a null pattern. The patterns *must* have the same number of points, or an integral multiple number of points.

The pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: *pat1*, *pat2*, *pat3* are names of gradient shapes. (Note that the VNMR 5.1 and 5.2 software releases used only one pattern in the argument list.)

width is the length of the gradient, in seconds.

lvl1, *lvl2*, *lvl3* are gradient values, in gauss/cm.

psi is an Euler angle, in degrees, with a range of -90 to $+90$.

phi is an Euler angle, in degrees, with the range -180 to $+180$.

theta is an Euler angle, in degrees, with the range -90 to $+90$.

loops is the number of times, from 1 to 255, to loop the waveform.

wait is a keyword, either *WAIT* or *NOWAIT*, that selects whether or not a delay is inserted to stop until the gradient has completed before executing the next statement.

WAIT or *NOWAIT* adds extra pulse sequence programming flexibility for imaging experiments. It allows performing other pulse sequence events during the gradient pulse. Because *oblique_shapedgradient* "talks" to the *x*, *y*, and *z* gradient axes, *NOWAIT* cannot be used to produce simultaneous oblique gradient pulses, even if they are orthogonal. In the following example,

```
oblique_shapedgradient(patx,tdelta,gdiff,0.0,0.0, \
  0.0,0.0,0.0, 1,NOWAIT);
oblique_shapedgradient(paty,tdelta 0.0,gdiff,0.0 \
  0.0,0.0,0.0, 1,NOWAIT);
oblique_shapedgradient(patz,tdelta,0.0,0.0,gdiff, \
  0.0,0.0,0.0, 1,WAIT);
```

the first two function calls set up all three gradients. In both cases, after a few microseconds, the gradient hardware is reset by the third function call, which is the only call fully executed. Even though the third call is executed, expect negative side-effects from the first two “suppressed” calls.

Examples: `oblique_shapedgradient("ramp_hold", "", "", trise, \ gvox1, 0, 0, vpsi, vphi, vtheta, 1, NOWAIT);`

Related: `obl_shapedgradient` Execute a shaped oblique gradient

obsblank Blank amplifier associated with observe transmitter

Syntax: `obsblank()`

Description: Disables the amplifier for the observe transmitter. This statement is generally used after a call to `obsunblank`.

Related: `decunblank` Unblank amplifier associated with first decoupler
`obsunblank` Unblank amplifier associated with observe transmitter
`rcvloff` Turn off receiver
`rcvron` Turn on receiver

obsoffset Change offset frequency of observe transmitter

Syntax: `obsoffset(frequency)`
`double frequency; /* offset frequency */`

Description: Changes the offset frequency, in Hz, of the observe transmitter (parameter `tof`). It is functionally the same as `offset(frequency, OBSch)`.

- For systems with rf types A or B, the frequency typically changes between 10 to 30 μ s, but 100 μ s is automatically inserted into the sequence by the `offset` statement so that the time duration of `offset` is constant and not frequency-dependent.
- For systems with rf type C, which necessarily have PTS frequency synthesizers, the frequency shift time is 15.05 μ s for standard, non-latching synthesizers and 21.5 μ s for the latching synthesizers with the overrange/under-range option.
- For systems with rf type D (UNITYplus), the frequency shift time is 14.95 μ s (latching with or without over-range). No 100- μ s delay is inserted into the sequence by the `offset` statement. Offset frequencies are not returned automatically to their “normal” values before acquisition; this must be done explicitly, as in the example below.
- For the UNITYINOVA, the frequency shift is 4 μ s.
- For the MERCURY-VX and MERCURY, this statement inserts a 86.4- μ s delay, although the actual switching of the frequency takes 1 μ s.
- For the GEMINI 2000 (rf types F or E): on broadband systems, only the decoupler can be shifted (8.6 μ s); on $^1\text{H}/^{13}\text{C}$ systems, observe (6.48 μ s), decoupler (8.6 μ s), and homodecoupler (8.6 μ s) can be set.
- For systems with the Output board (and only those systems), all `offset` statements by default are preceded internally by a 0.2- μ s delay (see the `apovrride` statement for more details).

Arguments: `frequency` is the offset frequency desired for the observe channel.

Examples: `obsoffset(to);`

Related: `decoffset` Change offset frequency of first decoupler
`dec2offset` Change offset frequency of second decoupler
`dec3offset` Change offset frequency of third decoupler
`offset` Change offset frequency of transmitter or decoupler

obspower Change observe transmitter power level, lin. amp. systems

Applicability: Systems with linear amplifiers.

Syntax: `obspower(power)`
`double power; /* new coarse power level */`

Description: Changes observe transmitter power. This statement is functionally the same as `rlpower(value, OBSch)`.

Arguments: `power` sets the power level by assuming values from 0 (minimum power) to 63 (maximum power) on channels with a 63-dB attenuator or from -16 (minimum power) to 63 (maximum power) on channels with a 79-dB attenuator.

CAUTION: On systems with linear amplifiers, be careful when using values of `obspower` greater than 49 (about 2 watts). Performing continuous decoupling or long pulses at power levels greater than this can result in damage to the probe. Use `config` to set a safety maximum for the `tpwr`, `dpwr`, `dpwr2`, and `dpwr3` parameters.

Related: `decpower` Change first decoupler power, linear amplifier systems
`dec2power` Change second decoupler power, linear amplifier systems
`dec3power` Change third decoupler power, linear amplifier systems
`rlpower` Change power level, linear amplifier systems

obsprgoff End programmable control of observe transmitter

Applicability: Systems with a waveform generator on the observe transmitter channel.

Syntax: `obsprgoff()`

Description: Terminates any programmable phase and amplitude control on the observe transmitter started by the `obsprgon` statement under waveform generator control.

Related: `obsprgon` Start programmable control of observe transmitter

obsprgon Start programmable control of observe transmitter

Applicability: Systems with a waveform generator on the observe transmitter channel.

Syntax: `obsprgon(pattern, 90_pulselength, tipangle_resoln)`
`char *pattern; /* name of .DEC text file */`
`double 90_pulselength; /* 90-deg pulse length, in sec */`
`double tipangle_resoln; /* tip-angle resolution */`

Description: Executes programmable phase and amplitude control on the observe transmitter under waveform generator control. It returns the number of 50-ns ticks (as an integer value) in one cycle of the decoupling pattern. Explicit gating of the observe transmitter with `xmtron` and `xmtroff` is generally required. Arguments can be variables (which requires appropriate `getval` and `getstr` statements) to permit changes via parameters (see second example below).

Arguments: `pattern` is the name of the text file (without the `.DEC` file suffix) in the `shapelib` directory that stores the decoupling pattern.

`90_pulselength` is the pulse duration, in seconds, for a 90° tip angle on the observe transmitter.

`tipangle_resoln` is the resolution in tip-angle degrees to which the decoupling pattern is stored in the waveform generator.

Examples: `obsprgon("waltz16",pw90,90.0);`
`obsprgon("modulation",pp90,dres);`

Related: `decprgon` Start programmable decoupling on first decoupler
`dec2prgon` Start programmable decoupling on second decoupler
`obsprgoff` End programmable control of observe transmitter

obspulse Pulse observe transmitter with amplifier gating

Syntax: `obspulse()`

Description: A special case of the `rgpulse(width,phase,RG1,RG2)` statement, in which `width` is preset to `pw` and `phase` is preset to `oph`. Thus, `obspulse` is exactly equivalent to `rgpulse(pw,oph,rof1,rof2)`. Note that `obspulse` has nothing whatsoever to do with data acquisition, despite its name. Except in special cases, data acquisition begins at the end of the pulse sequence.

Related: `iobspulse` Pulse observe transmitter with IPA
`ipulse` Pulse observe transmitter with IPA
`irgpulse` Pulse observe transmitter with IPA
`pulse` Pulse observe transmitter with amplifier gating
`rgpulse` Pulse observe transmitter with amplifier gating
`simpulse` Pulse observe, decoupler channels simultaneously
`sim3pulse` Simultaneous pulse on 2 or 3 rf channels

obsprwf Set observe transmitter fine power

Applicability: Systems with fine power control. Not available on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems.

Syntax: `obsprwf(power)`
`double power; /* new fine power level for OBSch */`

Description: Changes observe transmitter fine power. This statement is functionally the same as `rlprwf(value,OBSch)`.

Arguments: `value` is the fine power desired.

Examples: `obsprwf(4.0);`

Related: `decprwf` Set first decoupler fine power
`dec2prwf` Set second decoupler fine power
`dec3prwf` Set third decoupler fine power
`rlprwf` Set transmitter or decoupler fine power

obsstepsize Set step size for observe transmitter

Applicability: All systems except the *GEMINI 2000*.

Syntax: `obsstepsize(step_size)`
`double step_size; /* small-angle phase step size */`

Description: Sets the step size of the observe transmitter. This statement is functionally the same as `stepsize(base,OBSch)`.

Arguments: `step_size` is the phase step size desired and is a real number or a variable.

Examples: `obsstepsize(30.0);`

Related: `decstepsize` Set step size of first decoupler
`dec2stepsize` Set step size of second decoupler
`dec3stepsize` Set step size of third decoupler
`stepsize` Set small-angle phase step size, rf type C or D

obsunblank Unblank amplifier associated with observe transmitter

Syntax: `obsunblank()`

Description: Explicitly enables the amplifier for the observe transmitter. `obsunblank` is generally followed by a call to `obsblank`.

Related: `decblank` Blank amplifier associated with first decoupler
`decunblank` Unblank amplifier associated with first decoupler
`obsblank` Blank amplifier associated with observe transmitter
`rcvroff` Turn off receiver
`rcvron` Turn on receiver

offset Change offset frequency of transmitter or decoupler

Applicability: This statement will be eliminated in future versions of VNMR software. Although it is still functional, you should not write any new pulse sequences using it and should replace it in existing sequences with `obsoffset`, `decoffset`, `dec2offset`, or `dec3offset`, as appropriate.

Syntax: `offset(frequency,device)`

```
double frequency; /* frequency offset */
int device; /* OBSch, DECch, DEC2ch, or DEC3ch */
```

Description: Changes the offset frequency of the observe transmitter (parameter `tof`), first decoupler (`dof`), second decoupler (`dof2`), or third decoupler (`dof3`).

Arguments: `frequency` is the offset frequency desired.
`device` is `OBSch` (observe transmitter) or `DECch` (first decoupler). For the UNITY*INOVA* and *UNITYplus* only, `device` can also be `DEC2ch` (second decoupler) or `DEC3ch` (third decoupler).

Examples: `offset(dof2,DECch);`
`offset(tof,OBSch);`
`delay(d2);`
`offset(tof,OBSch);`

Related: `decoffset` Change offset frequency of first decoupler
`dec2offset` Change offset frequency of second decoupler
`dec3offset` Change offset frequency of third decoupler
`obsoffset` Change offset frequency of observe transmitter
`ioffset` Change offset frequency with IPA

P

pe_gradient Oblique gradient with phase encode in one axis

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `pe_gradient(stat1,stat2,stat3,step2,vmult2)`
`double stat1,stat2,stat3; /* static gradient components */`
`double step2; /* variable gradient stepsize */`
`codeint vmult2; /* real-time math variable */`

Description: Sets static oblique gradient levels plus one oblique phase encode gradient. The phase encode gradient is associated with the second axis of the logical frame. This corresponds to the convention read, phase, slice for the functions of the logical frame axes. This statement is the same as `phase_encode_gradient` except the Euler angles are read from the default set for imaging. `lim2` is automatically set to half the `nv` (number of views) where `nv` is usually the number of phase encode steps.

Pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: `stat1, stat2, stat3` are values, in gauss/cm, of the components for the static portion of the gradient in the logical reference frame.

`step2` is the value, in gauss/cm, of the component for the step size change in the variable portion of the gradient.

`vmult2` is a real-time math variable (`v1` to `v14`, `ct`, `zero`, `one`, `two`, `three`) or reference to AP tables (`t1` to `t60`), whose associated values vary dynamically in a manner controlled by the user.

Examples: `pe_gradient(0.0, -sgpe*nv/2.0, gss, sgpe, v6);`

Related: `phase_encode_gradient` Oblique gradient with phase encode in 1 axis

pe2_gradient Oblique gradient with phase encode in two axes

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `pe2_gradient(stat1,stat2,stat3,step2,step3, \`
`vmult2,vmult3)`
`double stat1,stat2,stat3; /* static gradient components */`
`double step2,step3; /* variable gradient stepsize */`
`codeint vmult2,vmult /* real-time math variables */`

Description: Sets only two oblique phase encode gradients; otherwise, `pe2_gradient` is the same as `pe3_gradient`.

Pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: `stat1, stat2, stat3` are values, in gauss/cm, of the components for the static portion of the gradient in the logical reference frame.

`step2, step3` are values, in gauss/cm, of the components for the step size change in the variable portion of the gradient.

`vmult2, vmult3` are real-time math variables (`v1` to `v14`, `ct`, `zero`, `one`, `two`, `three`) or references to AP tables (`t1` to `t60`), whose associated values vary dynamically in a manner controlled by the user.

Examples: `pe2_gradient(gro, sgpe*nv/2.0, sgpe2*nv2/2.0, sgpe, \`
`sgpe2, v6, v8);`

Related: `pe3_gradient` Oblique gradient with phase encode in 3 axes

pe3_gradient Oblique gradient with phase encode in three axes

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `pe3_gradient(stat1,stat2,stat3,step1,step2, \
step3,vmult1,vmult2,vmult3)
double stat1,stat2,stat3; /* static gradient components */
double step1,step2,step3; /* gradient step sizes */
codeint vmult1,vmult2,vmult3; /* real-time variables */`

Description: Sets three oblique phase encode gradients. This statement is the same as `phase_encode3_gradient` except the Euler angles are read from the default set for imaging. `lim1`, `lim2`, and `lim3` are set to $nv/2$, $nv/2$, and $nv/2$, respectively.

Pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: `stat1`, `stat2`, `stat3` are values, in gauss/cm, of the components for the static portion of the gradient in the logical reference frame.

`step1`, `step2`, `step3` are values, in gauss/cm, of the components for the step size change in the variable portion of the gradient.

`vmult1`, `vmult2`, `vmult3` are real-time math variables (`v1` to `v14`, `ct`, `zero`, `one`, `two`, `three`) or references to AP tables (`t1` to `t60`) whose associated values vary dynamically in a manner controlled by the user.

Examples: `pe3_gradient(gro,sgpe*nv/2.0,sgpe2*nv/2.0,0.0, \
sgpe,sgpe2,zero,v6,v8);`

Related: `phase_encode3_gradient` Oblique gradient with phase encode in 3 axes

pe_shapedgradient Oblique shaped gradient with phase encode in one axis

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `pe_shapedgradient(pattern,width,stat1,stat2, \
stat3,step2,vmult2,wait,tag)
char *pattern; /* name of gradient shape file */
double width; /* width of gradient in sec */
double stat1,stat2,stat3; /* static gradient components */
double step2; /* variable gradient step size */
codeint vmult2; /* real-time math variable */
int wait; /* WAIT or NOWAIT */
int tag; /* tag to a gradient element */`

Description: Sets a static oblique shaped gradient plus one oblique phase encode shaped gradient. This is same as `phase_encode_shapedgradient` except in `pe_shapedgradient` the Euler angles are read from the default set for imaging. `lim2` is automatically set to $nv/2$, where `nv` is usually the number of phase encode steps.

Pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: `pattern` is the name of a gradient shape file.

`width` is the length, in seconds, of the gradient.

`stat1`, `stat2`, `stat3` are values, in gauss/cm, of the components for the static portion of the gradient in the logical reference frame.

`step2` is the value, in gauss/cm, of the component for the step size change in the variable portion of the gradient.

`vmult2` is a real-time math variable (`v1` to `v14`, `ct`, `zero`, `one`, `two`, `three`) or reference to AP tables (`t1` to `t60`) whose associated values vary dynamically in a manner controlled by the user.

`wait` is a keyword, either `WAIT` or `NOWAIT`, that selects whether or not a delay is inserted to wait until the gradient has completed before executing the next statement.

`tag` is a unique integer that “tags” the gradient element from any other gradient elements used in the sequence. These tags are used for variable amplitude pulses.

Related: `phase_encode_shapedgradient` Oblique shaped gradient with PE on 1 axis

pe2_shapedgradient Oblique shaped gradient with phase encode in two axes

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

```
Syntax: pe2_shapedgradient(pattern,width,stat1,stat2, \
      stat3,step2,step3,vmult2,vmult3)
char *pattern;          /* name of gradient shape file */
double width;          /* length of gradient in sec */
double stat1,stat2,stat3; /* static gradient components */
double step2,step3;    /* variable gradient step size */
codeint vmult2,vmult3; /* real-time math variables */
```

Description: Sets two oblique phase encode shaped gradients; otherwise, this statement is the same as `pe3_shapedgradient`.

Pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: `pattern` is the name of a gradient shape file.

`width` is the length, in seconds, of the gradient.

`stat1`, `stat2`, `stat3` are values, in gauss/cm, of the components for the static portion of the gradient in the logical reference frame.

`step2`, `step3` are values, in gauss/cm, of the components for the step size change in the variable portion of the gradient.

`vmult2`, `vmult3` are real-time math variables (`v1` to `v14`, `ct`, `zero`, `one`, `two`, `three`) or references to AP tables (`t1` to `t60`) whose associated values vary dynamically in a manner controlled by the user.

Related: `pe3_shapedgradient` Oblique shaped gradient with phase encode in 3 axes

pe3_shapedgradient Oblique shaped gradient with phase encode in three axes

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

```
Syntax: pe3_shapedgradient(pattern,width,stat1,stat2, \
      stat3,step1,step2,step3,vmult1,vmult2,vmult3)
char *pattern;          /* name of gradient shape file */
double width;          /* width of gradient in sec */
double stat1,stat2,stat3; /* static gradient components */
double step1,step2,step3; /* var. gradient components */
codeint vmult1,vmult2,vmult3; /* real-time variables */
```

Description: Sets three oblique phase encode shaped gradients. This statement is the same as the statement `phase_encode3_shapedgradient` except the Euler angles are read from the default set for imaging. The `lim1`, `lim2`, and `lim3` arguments in `phase_encode3_shapedgradient` are set to $nv/2$, $nv2/2$, and $nv3/2$, respectively.

Pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: `pattern` is the name of a gradient shape file.
`width` is the length, in seconds, of the gradient.
`stat1, stat2, stat3` are values, in gauss/cm, of the components for the static portion of the gradient in the logical reference frame.
`step1, step2, step3` are values, in gauss/cm, of the components for the step size change in the variable portion of the gradient.
`vmult1, vmult2, vmult3` are real-time math variables (`v1` to `v14`, `ct`, `zero`, `one`, `two`, `three`) or references to AP tables (`t1` to `t60`) whose associated values vary dynamically in a manner controlled by the user.

Related: `phase_encode3_shapedgradient` Oblique sh. gradient with PE on 3 axes

peloop Phase-encode loop

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `peloop(state,max_count,apv1,apv2)`

```
char state;          /* compressed or standard */
double max_count;   /* initializes apv1 */
codeint apv1;       /* maximum count */
codeint apv2;       /* current counter value */
```

Description: Provides a sequence-switchable loop that can use real-time variables in what is known as a compressed loop, or it can use the standard arrayed features of PSG. In the imaging sequences it uses the third character of the `seqcon` string parameter `seqcon[2]` for the state argument. The statement is used in conjunction with the `endpeloop` statement.

`peloop` differs from `msloop` in how it sets the `apv2` variable in standard arrayed mode (state is 's'). In standard arrayed mode, `apv2` is set to `nth2D-1` if `max_count` is greater than zero. `nth2D` is a PSG internal counting variable for the second dimension. When in the compressed mode, `apv2` counts from zero to `max_count-1`.

Arguments: `state` is either 'c' to designate the compressed mode, or 's' to designate the standard arrayed mode.

`apv1` is a real-time variable that holds the maximum count.

`apv2` is a real-time variable that holds the current counter value. If `state` is 's' and `max_count` is greater than zero, `apv2` is set to `nth2D-1`; otherwise, it is set to zero.

Examples:

```
peloop(seqcon[2],nv,v5,v6);
msloop(seqcon[1],nv,v11,v12);
...
poffset_list(pss,gss,ns,v12);
...
pe_gradient(gror,-0.5*sgpe*nv,gssr,sgpe,v6);
...
acquire(np,1.0/sw);
...
endmsloop(seqcon[1],v12);
endpeloop(seqcon{2},v6);
```

Related: `endpeloop` End phase-encode loop
`loop` Start loop
`msloop` Multislice loop

phase_encode_gradient Oblique gradient with phase encode in one axis

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

```
Syntax: phase_encode_gradient(stat1,stat2,stat3,step2, \
      vmult2,lim2,ang1, ang2, ang3)
double stat1,stat2,stat3; /* static gradient components */
double step2; /* variable gradient stepsize */
codeint vmult2; /* real-time math variable */
double lim2; /* max. gradient value step */
double ang1,ang2,ang3; /* Euler angles in degrees */
```

Description: Sets static oblique gradient levels plus one oblique phase encode gradient. The phase encode gradient is associated with the second axis of the logical frame. This corresponds to the convention: read, phase, slice for the functions of the logical frame axes. It has no return value.

Pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: *stat1*, *stat2*, *stat3* are values, in gauss/cm, of the components for the static portion of the gradient in the logical reference frame.

step2 is the value, in gauss/cm, of the component for the step size change in the variable portion of the gradient.

vmult2 is a real-time math variable (*v1-v14*, *ct*, *zero*, *one*, *two*, *three*) or reference to AP tables (*t1* to *t60*), whose associated values vary dynamically in a manner controlled by the user.

lim2 is a value representing the dynamic step that will generate the maximum gradient value for each component. This provides error checking in pulse sequence generation and is normally *nv/2*.

ang1 is Euler angle *psi*, in degrees, with the range -90 to $+90$.

ang2 is Euler angle *phi*, in degrees, with the range -180 to $+180$.

ang3 is Euler angle *theta*, in degrees, with the range -90 to $+90$.

Related:	oblique_gradient	Execute an oblique gradient
	oblique_shapedgradient	Execute a shaped oblique gradient
	pe_gradient	Oblique gradient with PE on 1 axis
	phase_encode_shapedgradient	Oblique sh. gradient with PE on 1 axis
	phase_encode3_gradient	Oblique gradient with PE on 3 axes
	phase_encode3_shapedgradient	Oblique sh. gradient with PE on 3 axes

phase_encode3_gradient Oblique gradient with phase encode in three axes

Applicability: Not applicable on *MERCURY*, *MERCURY-VX*, and *GEMINI 2000*.

```
Syntax: phase_encode3_gradient(stat1,stat2,stat3, \
      step1,step2,step3,vmult1,vmult2,vmult3, \
      lim1,lim2,lim3,ang1,ang2,ang3)
double stat1,stat2,stat3; /* static gradient components */
double step1,step2,step3; /* var. gradient stepsize */
codeint vmult1,vmult2,vmult3; /* real-time variables */
double lim1,lim2,lim3; /* max. gradient value steps */
double ang1,ang2,ang3; /* Euler angles in degrees */
```

Description: Sets three oblique phase encode gradients. It has no return value.

Pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: `stat1, stat2, stat3` are values, in gauss/cm, of the components for the static portion of the gradient in the logical reference frame.

`step1, step2, step3` are values, in gauss/cm, of the components for the step size change in the variable portion of the gradient.

`vmult1, vmult2, vmult3` are real-time math variables (`v1` to `v14`, `ct`, `zero`, `one`, `two`, `three`) or references to AP tables (`t1` to `t60`) whose associated values vary dynamically in a manner controlled by the user.

`lim1, lim2, lim3` are values representing the dynamic step that will generate the maximum gradient value for each component. This provides error checking in pulse sequence generation and is normally $nv/2$.

`ang1` is Euler angle `psi`, in degrees, with the range -90 to $+90$.

`ang2` is Euler angle `phi`, in degrees, with the range -180 to $+180$.

`ang3` is Euler angle `theta`, in degrees, with the range -90 to $+90$.

Examples: `phase_encode3_gradient(0,0,0,0,0,2.0*gcrush/ne, \`
`zero,zero,v12,0,0,0,psi,phi,theta);`

Related: `pe3_gradient` Oblique gradient with PE in 3 axes
`phase_encode_shapedgradient` Oblique sh. gradient with PE on 1 axis
`phase_encode3_shapedgradient` Oblique sh. gradient with PE on 3 axes

phase_encode_shapedgradient Oblique shaped gradient with PE in one axis

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `phase_encode_shapedgradient(pattern,width, \`
`stat1,stat2,stat3,step2,vmult2,lim2, \`
`ang1,ang2,ang3,vloops,wait,tag)`

```
char *pattern;          /* name of gradient shape file */
double width;          /* width of gradient in sec */
double stat1,stat2,stat3; /* static gradient components */
double step2;          /* var. gradient step size */
codeint vmult2;        /* real-time math variable */
double lim2;           /* max. gradient value steps */
double ang1,ang2,ang3; /* Euler angles in degrees */
codeint vloops;        /* number of loops */
int wait;              /* WAIT or NOWAIT */
int tag;               /* tag to a gradient element */
```

Description: Sets static oblique shaped gradients plus one oblique phase encode shaped gradient. The phase encode gradient is associated with the second axis of the logical frame. This corresponds to the convention: read, phase, slice for the functions of the logical frame axes. One gradient shape is used for all three axes. It has no return value.

Pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: `pattern` is the name of a gradient shape file.

`width` is the length, in seconds, of the gradient.

`stat1, stat2, stat3` are values, in gauss/cm, of the components for the static portion of the gradient in the logical reference frame.

`step2` is the value, in gauss/cm, of the component for the step size change in the variable portion of the gradient.

`vmult2` is a real-time math variable (`v1` to `v14`, `ct`, `zero`, `one`, `two`, `three`) or reference to AP tables (`t1` to `t60`) whose associated values vary dynamically in a manner controlled by the user.

`lim2` is the value representing the dynamic step that will generate the maximum gradient value for the component. This provides error checking in pulse sequence generation and is normally `nv/2`.

`ang1` is the Euler angle `psi`, in degrees, with the range of -90 to $+90$.

`ang2` is the Euler angle `phi`, in degrees, with the range of -180 to $+180$.

`ang3` is the Euler angle `theta`, in degrees, with the range of -90 to $+90$.

`vloops` is a real-time math variable (`v1` to `v14`, `ct`, `zero`, `one`, `two`, `three`) or references to AP tables (`t1` to `t60`) that dynamically sets the number of times to loop the waveform.

`wait` is a keyword, either `WAIT` or `NOWAIT`, that selects whether or not a delay is inserted to wait until the gradient has completed before executing the next statement.

`tag` is a unique integer that “tags” the gradient element from any other gradient elements used in the sequence. These tags are used for variable amplitude pulses.

Related:	<code>oblique_gradient</code>	Execute an oblique gradient
	<code>oblique_shapedgradient</code>	Execute a shaped oblique gradient
	<code>pe_shapedgradient</code>	Oblique sh. gradient with PE in 1 axis
	<code>phase_encode3_shapedgradient</code>	Oblique sh. gradient with PE on 3 axes

`phase_encode3_shapedgradient` Oblique shaped gradient with PE in three axes

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `phase_encode3_shapedgradient(pattern,width, \`
`stat1,stat2,stat3,step1,step2,step3, \`
`vmult1,vmult2,vmult3,lim1,lim2,lim3, \`
`ang1,ang2,ang3,loops,wait)`

```
char *pattern;          /* name of gradient shape file */
double width;          /* width of gradient in sec */
double stat1,stat2,stat3; /* static gradient components */
double step1,step2,step3; /* var. gradient step sizes */
codeint vmult1,vmult2,vmult3; /* real-time variables */
double lim1,lim2,lim3; /* max. gradient value steps */
double ang1,ang2,ang3; /* Euler angles in degrees */
int loops;             /* number of times to loop */
int wait;              /* WAIT or NOWAIT */
```

Description: Sets three oblique phase encode shaped gradient. Note that this statement has a `loops` argument that is an integer, as opposed to the `vloops` argument in `phase_encode_shapedgradient`. It has no return value.

Pulse sequence generation aborts if the DACs on a particular gradient are overrun after the angles and amplitude have been resolved.

Arguments: `pattern` is the name of the gradient shape file.

`width` is the length, in seconds, of the gradient.

`stat1`, `stat2`, `stat3` are values, in gauss/cm, of the components for the static portion of the gradient in the logical reference frame.

`step1`, `step2`, `step3` are values, in gauss/cm, of the components for the step size change in the variable portion of the gradient.

`vmult1`, `vmult2`, `vmult3` are real-time math variables (`v1` to `v14`, `ct`, `zero`, `one`, `two`, `three`) or references to AP tables (`t1` to `t60`) whose associated values vary dynamically in a manner controlled by the user.

`lim1`, `lim2`, `lim3` are values representing the dynamic step that will generate the maximum gradient value for each component. This provides error checking in pulse sequence generation and is normally `nv/2`.

`ang1` is the Euler angle `psi`, in degrees, with the range of -90 to $+90$.

`ang2` is the Euler angle `phi`, in degrees, with the range of -180 to $+180$.

`ang3` is the Euler angle `theta`, in degrees, with the range of -90 to $+90$.

`loops` is non-real-time integer value, from 1 to 255, that sets the number of times to loop the waveform.

`wait` is a keyword, either `WAIT` or `NOWAIT`, that selects whether or not a delay is inserted to wait until the gradient has completed before executing the next statement.

Related:	<code>pe3_shapedgradient</code>	Oblique sh. gradient with PE in 3 axes
	<code>phase_encode_shapedgradient</code>	Oblique sh. gradient with PE on 1 axis
	<code>phase_encode3_gradient</code>	Oblique gradient with PE in 3 axes

phaseshift **Set phase-pulse technique, rf type A or B**

Applicability: Systems with rf type A or B (*MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems are rf type E or F).

Syntax: `phaseshift(base,multiplier,device)`

```
double base;           /* base small-angle phase shift */
codeint multiplier;    /* real-time variable */
int device;            /* channel, TODEV or DODEV */
```

Description: Implements the “phase-pulse” technique.

Arguments: `base` is a real number, expression, or variable representing the base phase shift in degrees. Any value is acceptable.

`multiplier` is a real-time variable (`v1` to `v14`, `ct`, etc.). The value must be positive. The actual phase shift is $((base * multiplier) \bmod 360)$.

`device` is `TODEV` (observe transmitter) or `DODEV` (first decoupler).

Examples: `phaseshift(60.0,ct,TODEV);`
`phaseshift(-30.0,v1,DODEV);`

poffset **Set frequency based on position**

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `poffset(position,level)`

```
double position;      /* slice position in cm */
double level;         /* gradient level in G/cm */
```

Description: Sets the rf frequency from position and conjugate gradient values. `poffset` is functionally the same as `position_offset` except that `poffset` takes the value of `resfrq` from the `resto` parameter and always assumes the device is the observe transmitter device `TODEV`.

Arguments: `position` is the slice position, in cm.

level is the gradient level, in gauss/cm, used in the slice selection process.

Examples: `poffset(pss[0],gss);`

Related: `position_offset` Set frequency based on position

poffset_list Set frequency from position list

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `poffset_list(posarray,grad,nslices,apv1)`

```
double position_array[]; /* position values in cm */
double level;           /* gradient level in G/cm */
double nslices;        /* number of slices */
codeint vi;            /* variable or AP table */
```

Description: Sets the rf frequency from a position list, conjugate gradient value, and dynamic math selector. `poffset_list` is functionally the same as `position_offset_list` except that `poffset_list` takes the value of `resfrq` from the `resto` parameter, assumes the device is the observe transmitter device `OBSch`, and assumes that the list number is zero.

Arguments: `position_array` is a list of position values, in cm.

level is the gradient level, in gauss/cm, used in the slice selection process.

nslices is the number of slices or position values.

vi is a dynamic real-time variable (v1 to v14) or AP table (t1 to t60).

Examples: `poffset_list(pss,gss,ns,v8);`

Related: `getarray` Retrieves all values of an arrayed parameter
`position_offset_list` Set frequency from position list

position_offset Set frequency based on position

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `position_offset(pos,grad,resfrq,device)`

```
double pos;           /* slice position in cm */
double grad;         /* gradient level in G/cm */
double resfrq;       /* resonance offset in Hz */
int device;          /* OBSch, DECch, DEC2ch, or DEC3ch */
```

Description: Sets the rf frequency from position and conjugate gradient values. It has no return value.

Arguments: `pos` is the slice position, in cm.

`grad` is the gradient level, in gauss/cm, used in the slice selection process.

`resfrq` is the resonance offset value, in Hz, for the nucleus of interest.

`device` is `OBSch` (observe transmitter) or `DECch` (first decoupler). For the *UNITYINOVA* and *UNITYplus* only, `device` can also be `DEC2ch` (second decoupler) or `DEC3ch` (third decoupler).

Examples: `position_offset(pos1,gvox1,resto,OBSch);`

Related: `poffset` Set frequency based on position
`position_offset_list` Set frequency from position list

position_offset_list Set frequency from position list

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `position_offset_list(posarray,grad,nslices, \`
`resfrq,device,list_number,apv1)`
`double posarray[]; /* position values in cm */`
`double level; /* gradient level in G/cm */`
`double nslices; /* number of slices */`
`double resfrq; /* resonance offset in Hz */`
`int device; /* OBSch, DECch, DEC2ch, or DEC3ch */`
`int list_number; /* number for global list */`
`codeint vi; /* real-time variable or AP table */`

Description: Sets the rf frequency from a position list, conjugate gradient value, and dynamic math selector. The dynamic math selector (`apv1`) holds the index for required slice offset value as stored in the array. The arrays provided to this statement must count zero up; that is, `array[0]` must have the first slice position and `array[ns-1]` the last. It has no return value.

Arguments: `position_array` is a list of position values, in cm.
`level` is the gradient level, in gauss/cm, used in the slice selection process.
`nslices` is the number of slices or position values.
`resfrq` is the resonance offset, in Hz, for the nucleus of interest.
`device` is OBSch (observe transmitter) or DECch (first decoupler). For the UNITY*INOVA* and UNITY*plus* only, `device` can also be DEC2ch (second decoupler) or DEC3ch (third decoupler).
`list_number` is a value for identifying a global list. The first global list must begin at zero and each created list must be incremented by one.
`vi` is a dynamic real-time variable (`v1` to `v14`) or AP table (`t1` to `t60`).

Related: `getarray` Retrieves all values of an arrayed parameter
`poffset_list` Set frequency from position list
`position_offset` Set frequency based on position

power Change power level, linear amplifier systems

Applicability: Systems with linear amplifiers. Not available on *GEMINI 2000* systems. Use of statements `obspower`, `decpower`, `dec2power`, or `dec3power`, as appropriate, is preferred.

Syntax: `power(power,device)`
`int power; /* new value for coarse power control */`
`int device; /* OBSch, DECch, DEC2ch, or DEC3ch */`

Description: Changes transmitter or decoupler power by assuming values of 0 (minimum power) to 63 (maximum power) on channels with a 63-dB attenuator or -16 (minimum power) to 63 (maximum power) on channels with a 79-dB attenuator. On systems with an Output board, by default, `power` statements are preceded internally by a 0.2- μ s delay (see the `apovrride` statement for more details).

Arguments: `power` is the power desired. It must be stored in a real-time variable (`v1-v14`, etc.), which means it cannot be placed directly in the `power` statement. This allows the power to be changed in real-time or from pulse to pulse. Setting the `power` argument is most commonly done using `initval` (see example below). To avoid consuming a real-time variable, use the `rlpower` statement instead of the `power` statement.

`device` is OBSch (observe transmitter) or DECch (first decoupler). For the UNITY*INOVA* and UNITY*plus* only, `device` can also be DEC2ch (second decoupler) or DEC3ch (third decoupler).

CAUTION: On systems with linear amplifiers, be careful when using values of power greater than 49 (about 2 watts). Performing continuous decoupling or long pulses at power levels greater than this can result in damage to the probe. Use `config` to set a safety maximum for the `tpwr`, `dpwr`, `dpwr2`, and `dpwr3` parameters.

Examples:

```
pulsesequence( )
{
  double newpwr;
  newpwr=getval( "newpwr" );
  initval(newpwr, v2);
  power(v2, OBSch);
  ...
}
```

Related: `decpower` Change first decoupler power, linear amplifier systems
`dec2power` Change second decoupler power, linear amplifier systems
`dec3power` Change third decoupler power, linear amplifier systems
`initval` Initialize a real-time variable to a specified value
`obspower` Change observe transmitter power, linear amplifier systems
`pwrfl` Change transmitter or decoupler fine power
`rlpower` Change transmitter or decoupler power, linear amplifier
`rlpwrfl` Set transmitter or decoupler fine power

pulse Pulse observe transmitter with amplifier gating

Syntax:

```
pulse(width, phase)
double width; /* pulse length in sec */
codeint phase; /* real-time variable for phase */
```

Description: Turns on a pulse the same as the `rgpulse`(width, phase, RG1, RG2) statement, but with RG1 and RG2 set to the parameters `rof1` and `rof2`, respectively. Thus, `pulse` is a special case of `rgpulse` where the “hidden” parameters `rof1` and `rof2` remain “hidden.”

Arguments: `width` specifies the width of the observe transmitter pulse.
`phase` sets the phase and must be a real-time variable.

Examples:

```
pulse(pw, v2);
```

Related: `dps_show` Draw delay or pulses in a sequence for graphical display
`obspulse` Pulse observe transmitter with IPA
`ipulse` Pulse observe transmitter with IPA
`irgpulse` Pulse observe transmitter with IPA
`obspulse` Pulse observe transmitter with amplifier gating
`rgpulse` Pulse observe transmitter with amplifier gating
`simpulse` Pulse observe, decoupler channels simultaneously
`sim3pulse` Simultaneous pulse on 2 or 3 rf channels

pwrfl Change transmitter or decoupler fine power

Applicability: Systems with fine attenuators. Not available on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems.

Syntax:

```
pwrfl(power, device)
int power; /* new value for fine power control */
int device; /* OBSch, DECch, DEC2ch, or DEC3ch */
```

Description: Changes the fine power of the device specified by adjusting the optional fine attenuators. Do not execute `pwr f` and `ipwrf` together because they will cancel each other's effect.

Arguments: `power` is the fine power desired. It must be a real-time variable (`v1` to `v14`, etc.), which means it cannot be placed directly in the `pwr f` statement. It can range from 0 to 4095 (60 dB on `UNITYINOVA` and `UNITYplus`, about 6 dB on other systems).

`device` is `OBSch` (observe transmitter) or `DECch` (first decoupler). On the `UNITYINOVA` and `UNITYplus` only, `device` can also be `DEC2ch` (second decoupler) or `DEC3ch` (third decoupler).

Examples: `pwr f (v1 , OBSch) ;`

Related:

<code>ipwrf</code>	Change transmitter or decoupler fine power
<code>power</code>	Change transmitter or decoupler power, linear amp. system
<code>rlpwr f</code>	Set transmitter or decoupler fine power

pwr m Change transmitter or decoupler linear modulator power

Applicability: `UNITYINOVA` and `UNITYplus` systems only. Use of statements `obspwrf`, `decpwrf`, `dec2pwrf`, or `dec3pwrf`, as appropriate, is preferred.

Syntax: `pwr m (power , device)`

```
int power;          /* new value for fine power control */
int device;        /* OBSch, DECch, DEC2ch, or DEC3ch */
```

Description: Changes the linear modulator power of the device specified by adjusting the optional fine attenuators. Do not execute `pwr m` and `ipwrm` together because they will cancel each other's effect.

Arguments: `power` is the linear modulator power desired. It must be a real-time variable (`v1` to `v14`, etc.), which means the power level as an integer cannot be placed directly in the `pwr m` statement. `power` can range from 0 to 4095 (60 dB on `UNITYINOVA` and `UNITYplus`, about 6 dB on `UNITY` systems).

`device` is `OBSch` (observe transmitter) or `DECch` (first decoupler). For the `UNITYINOVA` and `UNITYplus` only, `device` can also be `DEC2ch` (second decoupler) or `DEC3ch` (third decoupler).

Examples: `pwr m (v1 , OBSch) ;`

Related:

<code>decpwrf</code>	Set first decoupler fine power
<code>dec2pwrf</code>	Set second decoupler fine power
<code>dec3pwrf</code>	Set third decoupler fine power
<code>ipwrf</code>	Change transmitter or decoupler fine power with IPA
<code>ipwrm</code>	Change transmitter or decoupler linear modulator power
<code>obspwrf</code>	Set observe transmitter fine power
<code>rlpwr m</code>	Set transmitter or decoupler linear modulator power

R

rcvroff Turn off receiver gate and amplifier blanking gate

Syntax: `rcvroff ()`

Description: On ^{UNITY}*INOVA* and *GEMINI 2000* systems, the receiver is normally off during the pulse sequence and is turned on only during acquisition. On other systems, `rcvloff` provides explicit receiver gating in the pulse sequence. The `rcvloff` statement also unblanks, or enables, the observe transmitter.

Receiver gating is normally controlled automatically by `decpulse`, `decrgpulse`, `dec2rgpulse`, `dec3rgpulse`, `obspulse`, `pulse`, and `rgpulse`. At the end of each of these statements, the receiver is automatically turned back on *if and only if the receiver has not been previously turned off explicitly by a `rcvloff` statement*. In all cases, the receiver is implicitly turned back on immediately prior to data acquisition.

Related: `rcvron` Turn on receiver gate and amplifier blanking gate
`recoff` Turn off receiver only
`recon` Turn on receiver only

rcvron Turn on receiver gate and amplifier blanking gate

Syntax: `rcvron()`

Description: On ^{UNITY}*INOVA* and *GEMINI 2000* systems, the receiver is normally off during the pulse sequence. It is turned on only during acquisition. On other systems, `rcvron` provides explicit receiver gating in the pulse sequence. The `rcvron` statement also blanks, or disables, the observe transmitter

Receiver gating is normally controlled automatically by `obspulse`, `pulse`, and `rgpulse` on *UNITYplus*, and *UNITY* systems, and by `decpulse`, `decrgpulse`, `dec2rgpulse`, and `dec3rgpulse` on *UNITY* systems. At the end of each of these statements, the receiver is automatically turned back on *if and only if the receiver has not been previously turned off explicitly by a `rcvloff` statement*. In all cases, the receiver is implicitly turned back on immediately prior to data acquisition.

Related: `rcvloff` Turn off receiver gate and amplifier blanking gate
`recoff` Turn off receiver gate only
`recon` Turn on receiver gate only

readuserap Read input from user AP register

Applicability: ^{UNITY}*INOVA* systems.

Syntax: `readuserap(vi)`
`codeint vi; /* index to value read in user AP register */`

Description: Reads input from user AP bus register 3 to a real-time variable. The user can then act on this information using real-time math and real time control statements while the pulse sequence is running. Register 3 is lines 1 to 8 of the USER AP connector J8212 on the Breakout panel on the rear of the left console cabinet. This register interfaces to a bidirectional TTL-compatible 8-bit buffer, which has a 100-ohm series resistor for circuit protection.

`readuserap` stops parsing acodes (acquisition codes) until the lines in the buffer have been read and the value placed in to the specified real-time variable. In order for the parser to parse and stuff more words into the FIFO before underflowing, the `readuserap` statement puts in a 500 μ s delay after reading the input. However, depending on what is to be done after reading the lines, a longer delay may be needed to avoid FIFO underflow.

If an error occurs in reading, a warning message is sent to the host and a value of -1 is returned to the real-time variable.

Arguments: `vi` is a real-time variable (`v1` to `v14`, etc.) that indexes a signed or unsigned number read from user AP register 3.

Examples:

```
/* Check a value read in from input register and */
/* execute a pulse if it is the expected value. */
double testval;
testval=getval(testval) /* set value to check */
initval(testval,v2);
loop(two,v1); /* reset below makes loop go */
  readuserap(v1); /* until expected value reads in */
  delay(d2);
  sub(v1,v2,v3);
  ifzero(v3);
    pulse(pw,oph);
    assign(one,v1);
  elsenz(v3)
    assign(zero,v1); /*reset counter*/
  endif(v3);
endloop(v1);
```

Related: `setuserap` Set user AP register
`vsetuserap` Set user AP register using real-time variable

recoff Turn off receiver gate only

Applicability: ^{UNITY}*INOVA* systems.

Syntax: `recoff()`

Description: On ^{UNITY}*INOVA* systems, receiver gating has been decoupled from amplifier blanking. The `recoff` statement is similar to the `rcvroff` statement in that it defaults the receiver off throughout the pulse sequence; however, unlike `rcvroff`, the `recoff` statement only affects the receiver gate and does not affect the amplifier blanking gate. In all cases, the receiver is turned off when applying pulses and turned on during acquisition. The default state of the receiver is off for ^{UNITY}*INOVA* systems (except for whole body systems and for imaging pulses sequences that have the `initparms_sis` statement at the beginning).

Related: `initparms_sis` Initialize parameters for spectroscopy imaging sequences
`rcvroff` Turn off receiver gate and amplifier blanking gate
`rcvron` Turn on receiver gate and amplifier blanking gate
`recon` Turn on receiver gate only

recon Turn on receiver gate only

Applicability: ^{UNITY}*INOVA* systems.

Syntax: `recon()`

Description: On ^{UNITY}*INOVA* systems, receiver gating has been decoupled from amplifier blanking. The `recoff` statement is similar to the `rcvron` statement in that it defaults the receiver on throughout the pulse sequence; however, unlike `rcvron`, the `recon` statement only affects the receiver gate and does not affect the amplifier blanking gate. In all cases, the receiver is turned off when applying pulses and turned on during acquisition. The default state of the receiver is off

for ^{UNITY}INNOVA systems (except for whole body systems and for imaging pulses sequences that have the `initparms_sis` statement at the beginning).

Related: `initparms_sis` Initialize parameters for spectroscopy imaging sequences
`rcvloff` Turn off receiver gate and amplifier blanking gate
`rcvron` Turn on receiver gate and amplifier blanking gate
`recoff` Turn off receiver gate only

rgpulse **Pulse observe transmitter with amplifier gating**

Syntax: `rgpulse(width, phase, RG1, RG2)`

```
double width;          /* length of pulse in sec */
codeint phase;        /* real-time variable for phase */
double RG1;           /* gate delay before pulse in sec */
double RG2;           /* gate delay after pulse in sec */
```

Description: Pulses the observe transmitter with amplifier gating. The amplifier is gated on prior to the start of the pulse by RG1 sec and gated off RG2 sec after the end of the pulse. The total length of this event is therefore not simply width, but width+RG1+RG2.

The amplifier gating times RG1 and RG2 may be specified explicitly. The parameters `rof1` and `rof2` are often used for these times. These parameters are normally “hidden” parameters, not displayed on the screen and entered by the user. Their values can be interrogated by entering the name of the parameter followed by a question mark (e.g., `rof1?`).

Arguments: `width` specifies the duration, in seconds, of the observe transmitter pulse.
`phase` sets the observe transmitter phase and must be a real-time variable.
`RG1` is the time, in seconds, the amplifier is gated on prior to the start of the pulse (typically 10 μ s for ¹H/¹⁹F, 40 μ s for other nuclei, and 2 μ s for the *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*).
`RG2` is the time, in seconds, before the amplifier is gated off after the end of the pulse (typically 10 μ s on the *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*, and about 10 to 20 μ s on other systems).

Examples: `rgpulse(pw, v1, rof1, rof2);`
`rgpulse(2.0*pw, v2, 1.0e-6, 0.2e-6);`

Related: `iobspulse` Pulse observe transmitter with IPA
`ipulse` Pulse observe transmitter with IPA
`irgpulse` Pulse observe transmitter with IPA
`obspulse` Pulse observe transmitter with amplifier gating
`pulse` Pulse observe transmitter with amplifier gating
`simpulse` Pulse observe, decoupler channels simultaneously
`sim3pulse` Simultaneous pulse on 2 or 3 rf channels

rgradient **Set gradient to specified level**

Applicability: Systems with imaging or PFG modules.

Syntax: `rgradient(channel, value)`

```
char channel;          /* gradient 'x', 'y', or 'z' */
double value;         /* amplitude of gradient amplifier */
```

Description: Sets the gradient current amplifier to specified value. In imaging, `rgradient` sets a gradient to a specified level in DAC units.

Arguments: `channel` specifies the gradient to set. It uses one of the characters 'X', 'x', 'Y', 'y', 'Z' or 'z'. In imaging, `channel` can be 'gread', 'gphase', or 'gslice'.

`value` specifies the gradient level by a real number (a DAC setting in imaging) from -4096.0 to 4095.0 for the Performa I PFG module, and from -32768.0 to 32767.0 for the Performa II PFG module.

Examples: `rgradient('z',1327.0);`

Related:	<code>dps_show</code>	Draw delay or pulses in a sequence for graphical display
	<code>getorientation</code>	Read image plane orientation
	<code>shapedgradient</code>	Generate shaped gradient
	<code>vgradient</code>	Set gradient to a level determined by real-time math
	<code>zgradpulse</code>	Create a gradient pulse on the z channel

rlpower **Change power level, linear amplifier systems**

Applicability: Systems with linear amplifiers. This statement is due to be eliminated in future versions of VNMR software. Although it is still functional, you should not write pulse sequences using it and should replace it in existing sequences with `obspower`, `decpower`, `dec2power`, or `dec3power`, as appropriate.

Syntax: `rlpower(power,device)`
`double power; /* new level for coarse power */`
`int device; /* OBSch, DECch, DEC2ch, or DEC3ch */`

Description: Changes transmitter or decoupler power the same as the power statement but avoids consuming a real-time variable for the value. On systems with the Output board (and only on these systems), by default, `rlpower` statements are preceded internally by a 0.2- μ s delay (see the `apovrride` statement for more details).

Arguments: `power` sets the power level by assuming values of 0 (minimum power) to 63 (maximum power) on channels with a 63-dB attenuator or -16 (minimum power) to 63 (maximum power) on channels with a 79-dB attenuator.

`device` is OBSch (observe transmitter) or DECch (first decoupler). For the UNITY INOVA and UNITYplus only, `device` can also be DEC2ch (second decoupler) or DEC3ch (third decoupler).

CAUTION: On systems with linear amplifiers, be careful when using values of `rlpower` greater than 49 (about 2 watts). Performing continuous decoupling or long pulses at power levels greater than this can result in damage to the probe. Use `config` to set a safety maximum for the `tpwr`, `dpwr`, `dpwr2`, and `dpwr3` parameters.

Examples: (1) `pulsesequence()`

```
{
double satpwr;
satpwr=getval("satpwr");
...
rlpower(satpwr,OBSch);
...
}
```

(2) `rlpower(63.0,OBSch);`

Related:	<code>decpower</code>	Change first decoupler power, linear amplifier systems
	<code>dec2power</code>	Change second decoupler power, linear amplifier systems
	<code>dec3power</code>	Change third decoupler power, linear amplifier systems

<code>obspower</code>	Change observe transmitter power, linear amplifier systems
<code>power</code>	Change transmitter or decoupler power, linear amp. sys.
<code>rlpwr</code>	Set transmitter or decoupler fine power

rlpwr **Set transmitter or decoupler fine power**

Applicability: Systems with fine power control. Not available on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems. This statement is due to be eliminated in future versions of VNMR software. Although it is still functional, you should not write any new pulse sequences using it and should replace it in existing sequences with `obspwr`, `decpwr`, `dec2pwr`, or `dec3pwr`, as appropriate.

Syntax: `rlpwr (power, device)`

```
double power;          /* new level for fine power */
int device;           /* OBSch, DECch, DEC2ch, or DEC3ch */
```

Description: Changes transmitter or decoupler fine power the same as the `pwr` statement, except `rlpwr` uses a real-number variable for the power level desired instead of consuming a real-time variable for the level.

Arguments: `power` is the fine power desired.

`device` is `OBSch` (observe transmitter) or `DECch` (first decoupler). For the *UNITY INOVA* and *UNITYplus* only, `device` can also be `DEC2ch` (second decoupler) or `DEC3ch` (third decoupler).

Examples: `rlpwr (4.0, OBSch) ;`

Related:	<code>decpwr</code>	Set first decoupler fine power
	<code>dec2pwr</code>	Set second decoupler fine power
	<code>dec3pwr</code>	Set third decoupler fine power
	<code>ipwr</code>	Change transmitter or decoupler fine power with IPA
	<code>obspwr</code>	Set observe transmitter fine power
	<code>power</code>	Change transmitter or decoupler power, lin. amp. sys.
	<code>pwr</code>	Change transmitter or decoupler fine power
	<code>rlpwr</code>	Set transmitter or decoupler fine power

rlpwr **Set transmitter or decoupler linear modulator power**

Applicability: *UNITY INOVA* and *UNITYplus* systems.

Syntax: `rlpwr (power, device)`

```
double power;          /* new level for lin. mod. power */
int device;           /* OBSch, DECch, DEC2ch, or DEC3ch */
```

Description: Changes transmitter or decoupler linear modulator power the same as the `pwr` statement, but to avoid using real-time variables, `rlpwr` uses a C variable of type double as the argument for the amount of change.

Arguments: `power` is the linear modulation (fine) power desired.

`device` is `OBSch` (observe transmitter), `DECch` (first decoupler), `DEC2ch` (second decoupler), or `DEC3ch` (third decoupler).

Examples: `rlpwr (4.0, OBSch) ;`

Related:	<code>ipwr</code>	Change transmitter or decoupler lin. mod. power with IPA
	<code>pwr</code>	Change transmitter or decoupler linear modulator power

rotorperiod **Obtain rotor period of MAS rotor**

Applicability: Systems with MAS (magic-angle spinning) rotor synchronization hardware.

Syntax: `rotorperiod(period)`
`codeint period; /* variable to hold rotor period */`

Description: Obtains the rotor period.

Arguments: `period` is a real-time variable into which is placed the rotor period as an integer in units of 100 ns. For example, for `rotorperiod(v4)`, if `v4` contains the value 1700, the rotor period is 170 μ s and the rotor speed is $1E+7 / 1700 = 5882$ Hz.

Examples: `rotorperiod(v4);`

Related: `rotorsync` Gated pulse sequence delay from MAS rotor position
`xgate` Gate pulse sequence from an external event

rotorsync Gated pulse sequence delay from MAS rotor position

Applicability: Systems with MAS (magic-angle spinning) rotor synchronization hardware.

Syntax: `rotorsync(rotations)`
`codeint rotations; /* variable for turns to wait */`

Description: Inserts a variable-length delay that allows synchronizing the execution of the pulse sequence with a particular orientation of the sample rotor. When the `rotorsync` statement is encountered, the pulse sequence is stopped until the number of rotor rotations has occurred.

Arguments: `rotations` is a real-time variable that specifies the number of rotor rotations to occur before restarting the pulse sequence.

Examples: `rotorsync(v6);`

Related: `rotorperiod` Obtain rotor period of MAS rotor
`xgate` Gate pulse sequence from an external event

S

setautoincrement Set autoincrement attribute for an AP table

Applicability: All systems except the *GEMINI 2000*.

Syntax: `setautoincrement(table)`
`codeint table; /* real-time table variable */`

Description: Sets the autoincrement attribute in an AP table. The index into the table is set to 0 at the start of an FID acquisition and is incremented after each access into the table. Tables using the autoincrement feature cannot be accessed within a hardware loop.

Arguments: `table` is the name of the table (`t1` to `t60`).

Examples: `setautoincrement(t9);`

Related: `getelem` Retrieve an element from an AP table
`loadtable` Load AP table elements from table text file
`setdivnfactor` Set divn-return attribute and divn-factor for AP table
`setreceiver` Associate the receiver phase cycle with an AP table
`settable` Store an array of integers in a real-time AP table

setdivnfactor Set divn-return attribute and divn-factor for AP table

Applicability: All systems except the *GEMINI 2000*.

Syntax: `setdivnfactor(table,divn_factor)`
`codeint table; /* real-time table variable */`
`int divn_factor; /* number to compress by */`

Description: Sets the divn-return attribute and divn-factor for an AP table. The actual index into the table is now set to (index/divn-factor). {0 1}2 is therefore translated by the *acquisition processor*, not by PSG (pulse sequence generation), into 0 0 1 1. The divn-return attribute results in a divn-factor-fold compression of the AP table at the level of the acquisition processor.

Arguments: `table` specifies the name of the table (t1 to t60).
`divn_factor` specifies the divn-factor for the table.

Examples: `setdivnfactor(t7,4);`

Related:	<code>getelem</code>	Retrieve an element from an AP table
	<code>loadtable</code>	Load AP table elements from table text file
	<code>setautoincrement</code>	Set autoincrement attribute for an AP table
	<code>setreceiver</code>	Associate the receiver phase cycle with an AP table
	<code>settable</code>	Store an array of integers in a real-time AP table

setreceiver Associate the receiver phase cycle with an AP table

Applicability: All systems except the *GEMINI 2000*.

Syntax: `setreceiver(table)`
`codeint table; /* real-time table variable */`

Description: Assigns the `ctth` element of a table to the receiver variable `oph`. If multiple `setreceiver` statements are used in a pulse sequence, or if the value of `oph` is changed by real-time math statements such as `assign`, `add`, etc., the last value of `oph` prior to the acquisition of data determines the value of the receiver phase.

Arguments: `table` specifies the name of the table (t1 to t60).

Examples: `setreceiver(t18);`

Related:	<code>getelem</code>	Retrieve an element from an AP table
	<code>loadtable</code>	Load AP table elements from table text file
	<code>setautoincrement</code>	Set autoincrement attribute for an AP table
	<code>setdivnfactor</code>	Set divn-return attribute and divn-factor for AP table
	<code>settable</code>	Store an array of integers in a real-time AP table

setstatus Set status of observe transmitter or decoupler transmitter

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `setstatus(channel,on,mode,sync,mod_freq)`
`int channel; /* OBSch, DECch, DEC2ch, or DEC3ch */`
`int on; /* TRUE (=on) or FALSE (=off) */`
`char mode; /* 'c', 'w', 'g', etc. */`
`int sync; /* TRUE (=synchronous) or FALSE */`
`double mod_freq; /* modulation frequency */`

Description: Sets the status of a transmitter independent of the `status` statement, thus overriding decoupler parameters such as `dm` and `dmm`. Since the `setstatus` statement is part of the pulse sequence, it has no effect when only an `su`

command is executed. It is the only way the observe transmitter can be modulated on ^{UNITY}*INOVA* and *UNITYplus* systems.

Arguments: `channel` is `OBSch` (observe transmitter), `DECch` (first decoupler), `DEC2ch` (second decoupler), or `DEC3ch` (third decoupler).

`on` is `TRUE` (turn on decoupler) or `FALSE` (turn off decoupler).

`mode` is one of the following values for a decoupler mode (for further information on decoupler modes, refer to the description of the `dmm` parameter in the manual *VNMR Command and Parameter Reference*):

- 'c' sets continuous wave (CW) modulation.
- 'f' sets fm-fm modulation (swept-square wave).
- 'g' sets GARP modulation.
- 'm' sets MLEV-16 modulation.
- 'n' sets noise modulation.
- 'p' sets programmable pulse modulation (i.e., waveform generation).
- 'r' sets square wave modulation.
- 'u' sets user-supplied modulation from external hardware.
- 'w' sets WALTZ-16 modulation.
- 'x' sets XY32 modulation.

On the ^{UNITY}*INOVA* and *UNITYplus*, 'c', 'f', 'g', 'm', 'p', 'r', 'u', 'w', and 'x' are available. On the *UNITY* and *VXR-S*, 'c', 'f', 'n', 'p' and 'w' are available.

`sync` is `TRUE` (decoupler is synchronous, on ^{UNITY}*INOVA* and *UNITYplus* systems only) or `FALSE` (decoupler is asynchronous).

`mod_freq` is the modulation frequency.

Examples:

```
setstatus(DECch, TRUE, 'w', FALSE, dmf);
setstatus(DEC2ch, FALSE, 'c', FALSE, dmf2);
```

Related: `status` Change status of decoupler and homospoil

settable Store an array of integers in a real-time AP table

Applicability: All systems except the *GEMINI 2000*.

Syntax:

```
settable(tablename, numelements, intarray)
codeint tablename; /* real-time table variable */
int numelements; /* number in array */
int *intarray; /* pointer to array of elements */
```

Description: Stores an integer array in a real-time AP table. The autoincrement or divn-return attributes can be subsequently associated with a table defined by `settable` by using `setautoincrement` and `setdivnfactor`.

Arguments: `table` is the name of the table (t1 to t60).

`number_elements` is the size of the table.

`intarray` is a C array that contains the table elements, which can range from -32768 to 32767. Before calling `settable`, this array must be predefined and predimensioned in the pulse sequence using C statements.

Examples:

```
settable(t1, 10, int_array);
```

Related: `getelem` Retrieve an element from an AP table
`loadtable` Load AP table elements from table text file

`setautoincrement` Set autoincrement attribute for an AP table
`setdivnfactor` Set divn-return attribute and divn-factor for AP table
`setreceiver` Associate the receiver phase cycle with an AP table

setuserap Set user AP register

Applicability: UNITY*INOVA* systems.

Syntax: `setuserap(value,register)`

```
real value;          /* value sent to user AP register */
int register;       /* AP bus register number: 0, 1, 2, or 3 */
```

Description: Sets a value in one of the four 8-bit AP bus registers that provide an output interface to user devices. The outputs of these registers go to the USER AP connectors J8212 and J8213, located on the back of the left console cabinet. These outputs have a 100-ohm series resistor for circuit protection.

Arguments: `value` is a signed or unsigned number (real or integer) to output to the specified user AP register. The number is truncated to an 8-bit byte.

`register` is the AP register number, mapped to output lines as follows:

- Register 0 is J8213, lines 9 to 16.
- Register 1 is J8213, lines 1 to 8.
- Register 2 is J8212, lines 9 to 16.
- Register 3 is J8212, lines 1 to 8.

Examples: `setuserap(127.0,0);`

Related: `readuserap` Read input from user AP register
`vsetuserap` Set user AP register using real-time variable

shapedpulse Perform shaped pulse on observe transmitter

Applicability: This statement is due to be eliminated in future versions of VNMR software. Although it is still functional, you should not write any new pulse sequences using it and should replace it in existing sequences with `shaped_pulse`, which functions exactly the same as `shapedpulse`.

shaped_pulse Perform shaped pulse on observe transmitter

Applicability: UNITY*INOVA* and UNITY*plus* systems, or systems with a waveform generator on the observe transmitter channel.

Syntax: `shaped_pulse(pattern,width,phase,RG1,RG2)`

```
char *pattern;      /* name of .RF text file */
double width;       /* width of pulse in sec */
codeint phase;      /* real-time variable for phase */
double RG1;         /* gating delay before pulse in sec */
double RG2;         /* gating delay after pulse in sec */
```

Description: Performs a shaped pulse on the observe transmitter. If a waveform generator is configured on the channel, it is used; otherwise, the linear attenuator and the small-angle phase shifter are used to effectively perform an `apshaped_pulse` statement.

When using the waveform generator, the shapes are downloaded into the waveshaper before the start of an experiment. When `shaped_pulse` is called, the shape is addressed and started. The minimum pulse length is 0.2 μ s. The overhead at the start and end of the shaped pulse varies with the system:

- ^{UNITY}*INOVA*: 1 μ s (start), 0 (end)
- *UNITYplus*: 5.75 μ s (start), 0 (end)
- System with Acquisition Controller board: 10.75 μ s (start), 4.3 μ s (end)
- System with Output board: 10.95 μ s (start), 4.5 μ s (end)

If the length is less than 0.2 μ s, the pulse is not executed and there is no overhead.

When using the linear attenuator and the small-angle phase shifter to generate a shaped pulse, the `shaped_pulse` statement creates AP tables on the fly for amplitude and phase. **It also uses the real-time variables `v12` and `v13` to control the execution of the shape.** It does not use AP table variables. For timing and more information, see the description of `apshaped_pulse`. Note that if using AP tables with shapes that have a large number of points, the FIFO can become overloaded with words generating the pulse shape and FIFO Underflow errors can result.

Arguments: `file` is the name of a text file in the `shapelib` directory that stores the rf pattern (leave off the `.RF` file extension).

`width` is the duration, in seconds, of the pulse on the observe transmitter.

`phase` is the phase of the pulse and must be a real-time variable.

`RG1` is the delay, in seconds, between gating the amplifier on and gating the observe transmitter on (the phase shift occurs at the beginning of this delay).

`RG2` is the delay, in seconds, between gating the observe transmitter off and gating the amplifier off.

Examples: `shaped_pulse("gauss",pw,v1,rof1,rof2);`

Related:	<code>apshaped_pulse</code>	Observe transmitter pulse shaping via AP bus
	<code>decshaped_pulse</code>	Shaped pulse on first decoupler
	<code>dec2shaped_pulse</code>	Shaped pulse on second decouple r
	<code>simshaped_pulse</code>	Simultaneous two-pulse shaped pulse
	<code>sim3shaped_pulse</code>	Simultaneous three-pulse shaped pulse

shapedgradient Generate shaped gradient pulse

Applicability: Systems with waveform generation on imaging or PFG module.

Syntax: `shapedgradient(pattern,width,amp,channel,loops,wait)`

```
char *pattern;      /* name of shape text file */
double width;      /* length of pulse */
double amp;        /* amplitude of pulse */
char channel;      /* gradient channel 'x', 'y', or 'z' */
int loops;         /* number of loops */
int wait;          /* WAIT or NOWAIT */
```

Description: Operates the selected gradient channel to provide a gradient pulse to the selected set of gradient coils. The pulse is created using a gradient waveform generator and has a pulse shape determined by the arguments `name`, `width`, `amp`, and `loops`. Unlike the shaped rf pulses, the shaped gradient leaves the gradients at the last value in the gradient pattern when the pulse completes.

Arguments: `pattern` is the name of a text file without a `.GRD` extension to describe the shape of the pulse. The text file with a `.GRD` extension should be located in `$vnmrsystem/shapelib` or in the users directory `$vnmruser/shapelib`.

`width` is the requested length of the pulse in seconds. The pulse length is affected by two factors: (1) the minimum time of every element in the `shape` file must be at least 10 μ s long, and (2) the time for every element must be a multiple of 50 ns. If the `width` of the pulse is less than 10 μ s times the number of steps in the `shape`, a warning message is generated. The shaped gradient software rounds each element to a multiple of 50 ns. If the requested width differs from the actual width by more than 2%, a warning message is displayed.

`amp` is a value that scales the amplitude of the pulse. Only the integer portion of the value is used and it ranges from 32767 to -32767 ; where 32767 is full scale and -32767 is negative full scale.

`channel` selects the gradient coil channel desired and should evaluate to the characters 'x', 'y', or 'z'. (Be sure not to confuse the characters 'x', 'y', or 'z' with the strings "x", "y", or "z".)

`loops` is a value, from 1 to 255, that allows the user to loop the selected waveform. Note that the given value is the number of loops to be executed and that the values 0 and 1 cause the pattern to execute once.

`wait` is a keyword, either `WAIT` or `NOWAIT`, that selects whether or not a delay is inserted to wait until the gradient is completed before executing the next statement. The total time it will wait is `width*loops`. If `loops` is supplied as 0, it will be counted as 1 when determining its total time.

```
Examples: shapedgradient("hsine",0.02,32767,'y',1,NOWAIT);
#include "standard.h"
#define POVR 1.2e-5 /* shaped pulse overhead=12 us */
pulsesequence()
{
...
for (i=-32000; i<=32000; i+16000)
{
shapedgradient("hsine",pw+d3+rx1+rx2,i,'x', \
1,NOWAIT);
shapedpulse("sinc",pw,oph,rx1,rx2);
delay(d3);
}
/* This step sets a square gradient from a low value */
/* to a high value while executing a shaped pulse */
/* and a delay during each gradient value. */
...
}
```

Related:	<code>dps_show</code>	Draw delay or pulses in a sequence for graphical display
	<code>rgradient</code>	Set gradient to a specified level
	<code>shapedgradient</code>	Provide shaped gradient pulse to gradient channel
	<code>shaped2Dgradient</code>	Arrayed shaped gradient function
	<code>vgradient</code>	Set gradient to a level determined by real-time math

shaped2Dgradient **Generate arrayed shaped gradient pulse**

Applicability: Systems with WFG on imaging or PFG module.

```
Syntax: shaped2Dgradient(pattern,width,amp,channel, \
loops,wait,tag)
char *pattern; /* name of pulse shape text file */
double width; /* length of pulse */
```

```

double amp;          /* amplitude of pulse */
char channel;       /* gradient channel 'x', 'y', or 'z' */
int loops;          /* number of loops */
int wait;           /* WAIT or NOWAIT */
int tag;            /* unique number for gradient element */

```

Description: Operates the selected gradient channel to provide a gradient pulse to the selected set of gradient coils. This statement is basically the same as the `shapedgradient` statement except that `shaped2Dgradient` is tailored to be used in pulse sequences where the amplitude is arrayed (imaging sequences). For sequences that array the amplitude, it does not use the amount of waveform generator memory that the `shapedgradient` statement uses, but there is a penalty in the amount of overhead time used in setting it up. The pulse is created using a gradient waveform generator and has a pulse shape determined by the name, width, amp, and loops arguments.

Arguments: `pattern` is the name of a text file without a `.GRD` extension that describes the shape of the pulse. The text file with a `.GRD` extension should be located in `$vnmrsystem/shapelib` or in the users directory `$vnmruser/shapelib`.

`width` is the requested length of the pulse in seconds. The width of the pulse is affected by two factors: (1) the minimum time of every element in the shape file must be at least 200 ns long, and (2) the time for every element must be a multiple of 50 ns. If the `width` of the pulse is less than 10 μ s times the number of steps in the shape, a warning message is generated. The shaped gradient software will round each element to a multiple of 50 ns. If the requested width differs from the actual width by more than 2%, a warning message is displayed.

`amp` is a value that scales the amplitude of the pulse. Only the integer portion of the value is used and it ranges from 32767 to -32767; where 32767 is full scale and -32767 is negative full scale.

`channel` selects the gradient coil channel desired and should evaluate to the characters 'x', 'y', or 'z'. (Be sure not to confuse the characters 'x', 'y', or 'z' with the strings "x", "y", or "z".)

`loops` is a value, from 1 to 255, that allows the user to loop the selected waveform. Note that the given value is the number of loops to be executed and that the values 0 and 1 cause the pattern to execute once. Due to a digital hardware bug affecting looping, patterns must be carefully constructed to achieve the desired results.

`wait` is a keyword, either `WAIT` or `NOWAIT`, that selects whether or not a delay is inserted to wait until the gradient is completed before executing the next element. The total time it will wait is `width*loops`.

`tag` is a unique integer that “tags” the gradient element from any other gradient elements used in the sequence.

Examples:

```

#include "standard.h"
pulsesequence( )
{
  ...
  shaped2Dgradient("hsine", d3, 0.0-gpe, 'x', 0, NOWAIT, 1);
  delay(d3);
  shaped2Dgradient("hsine", d4, gpe, 'y', 0, NOWAIT, 2);

```

```

...
}

```

Related:	<code>dps_show</code>	Draw delay or pulses in a sequence for graphical display
	<code>rgradient</code>	Set gradient to a specified level
	<code>shapedgradient</code>	Provide shaped gradient pulse to gradient channel
	<code>vgradient</code>	Set gradient to a level determined by real-time math

shapedincgradient **Generate dynamic variable gradient pulse**

Applicability: Systems with WFG on imaging or PFG module.

Syntax: `shapedincgradient(channel,pattern,width, \`
`a0,a1,a2,a3,x1,x2,x3,loops,wait)`
`char channel; /* gradient channel 'x', 'y', or 'z' */`
`char *pattern; /* name of pulse shape text file */`
`double width; /* length of pulse */`
`double a0,a1,a2,a3; /* coefficients to determine level */`
`codeint x1,x2,x3; /* variables to determine level */`
`int loops; /* number of loops */`
`int wait; /* WAIT or NOWAIT */`

Description: Provides a dynamic, variable shaped gradient pulse controlled using the AP math functions. The statement drives the chosen gradient with the specified pattern, scaled to the level defined by the formula:

$$\text{level} = a0 + a1*x1 + a2*x2 + a3*x3$$

The pulse is created using a gradient waveform generator and has a pulse shape determined by the `pattern`, `width`, and `loops` arguments, as well as the calculation of level.

Unlike the shaped rf pulses, the `shapedincgradient` will leave the gradients at the last value in the gradient pattern when the pulse completes. The range of the gradient level is -32767 to $+32767$. If the requested level lies outside the legal range, it is clipped at the appropriate boundary value. Note that, while each variable in the calculation of level must fit in a 16-bit integer, intermediate sums and products in the calculation are done with double precision, 32-bit integers.

The following error messages are possible:

- Machine configuration doesn't allow gradient patterns is displayed if this statement is used on a system without gradient waveshaping hardware.
- `shapedincgradient: x[i] illegal RT variable: xi` or `shapedincgradient: no match!` is displayed if the requested shape cannot be found or if a width of zero is specified.

Arguments: `channel` selects the gradient coil channel desired and should evaluate to the characters 'x', 'y', or 'z'. (Be careful not to confuse the characters 'x', 'y', or 'z' with the strings "x", "y", or "z".)

`pattern` is the name of a text file without a .GRD extension to describe the shape of the pulse. The text file with a .GRD extension should be located in `$vnmrsystem/shapelib` or in the users directory `$vnmruser/shapelib`.

`width` is the requested length of the pulse in seconds. The width of the pulse is affected by two factors: (1) the minimum time of every element in the shape file must be at least 10 μ s, and (2) the time for every element must be a multiple

of 50 ns. If the width of the pulse is less than 10 μ s times the number of steps in the shape), a warning message is generated. The `shapedincgradient` software will round each element to a multiple of 50 ns. If the requested width differs from the actual width by more than 2%, a warning message is displayed.

`a0`, `a1`, `a2`, `a3`, `x1`, `x2`, `x3` are values used in the calculation of “level.”

`loops` is a value, from 1 to 255, that allows the user to loop the selected waveform. Note that the given value is the number of loops to be executed and that the values 0 and 1 cause the pattern to execute once. Due to a digital hardware bug affecting looping, patterns must be carefully constructed to achieve the desired results.

`wait` is a keyword, either `WAIT` or `NOWAIT`, that selects whether or not a delay is inserted to wait until the gradient is completed before executing the next element. The total time it will wait is `width*loops`. If `loops` is supplied as 0, it will be counted as 1 when determining its total time.

Related:	<code>getorientation</code>	Read image plane orientation
	<code>rgradient</code>	Set gradient to a specified level
	<code>shapedgradient</code>	Provide shaped gradient pulse to gradient channel
	<code>shaped2Dgradient</code>	Generate arrayed shaped gradient pulse
	<code>vgradient</code>	Set gradient to a level determined by real-time math

shapedvgradient **Generate dynamic variable shaped gradient pulse**

Applicability: Systems with WFG on imaging or PFG module.

```
Syntax: shapedvgradient(pattern,width,amp_const, \
      amp_incr,amp_vmult,channel,vloops,wait,tag)
char *pattern;      /* name of pulse shape text file */
double width;      /* length of pulse */
double amp_const;  /* sets amplitude of pulse */
double amp_incr;   /* sets amplitude of pulse */
codeint amp_vmult; /* sets amplitude of pulse */
char channel;      /* gradient channel 'x', 'y', or 'z' */
codeint vloops;    /* variable for number of loops */
int wait;          /* WAIT or NOWAIT */
int tag;           /* unique number for gradient element */
```

Description: Operates the selected gradient channel to provide a shaped gradient pulse to the selected set of gradient coils. This statement is tailored to provide a dynamic variable shaped gradient level controlled using the system AP math functions and real-time looping. The statement drives the chosen gradient shape to the level defined by the formula:

$$\text{amplitude} = \text{amp_const} + \text{amp_incr} * \text{amp_vmult}$$

The range of the gradient amplitude is -32767 to $+32767$, where 32767 is full scale and -32767 is negative full scale.

If the requested level lies outside this range, it is truncated to the appropriate boundary value. Note that the `vloops` argument is also controlled by a real-time AP math variable. Unlike the shaped rf pulses, the shaped gradient leaves the gradients at the last value in the gradient pattern when the pulse completes.

Arguments: `name` is the name of a text file without a `.GRD` extension to describe the shape of the pulse. The text file with a `.GRD` extension should be located in `$vnmrsystem/shapelib` or in the user's directory `$vnmruser/shapelib`.

`width` is the requested length of the pulse in seconds. The width of the pulse is affected by two factors: (1) the minimum time of every element in the shape file must be at least 10 μ s, and (2) the time for every element must be a multiple of 50 ns. If `width` is less than 10 μ s times the number of steps in the shape, a warning message is generated. The shaped gradient software will round each element to a multiple of 50 ns. If the requested width differs from the actual width by more than 2%, a warning message is displayed.

`amp_const`, `amp_incr`, and `amp_vmult` scale the amplitude of the pulse according to the formula above. `amp_const` and `amp_incr` can be values of type double or integer. `amp_vmult` must be a real-time AP math variable (`v1` to `v14`) or a table pointer (`t1` to `t60`). The amplitude ranges are also given above.

`channel` selects the gradient coil channel desired and should evaluate to the characters 'x', 'y', or 'z'. (Be careful not to confuse the characters 'x', 'y', or 'z' with the strings "x", "y", or "z".)

`vloops` allows the user to loop the selected waveform. Values range from 1 to 255. This also must be a real-time AP math variable (`v1` to `v14`) or a table pointer (`t1` to `t60`). Do not use 0 for `vloops`, because this may cause inconsistencies when WAIT is selected for the `wait_4_me` argument. Due to a digital hardware bug affecting looping, patterns must be carefully constructed to achieve the desired results.

`wait` is a keyword, either WAIT or NOWAIT, that selects whether or not a delay is inserted to wait until the gradient is completed before executing the next element. The total time it will wait is `width*vloops`. It uses the `incdelay` statement when waiting for the gradient pulse to complete.

`tag` is a unique integer that "tags" this gradient statement from any other gradient statement used in the sequence.

```
Examples: #include "standard.h"
pulsesequence(
{
...
char gphase, gread, gslice;
...
amplitude=(int)(0.5*ni*gpe);
stat=getorientation(&gread,&gphase,&gslice,"orient")
;
...
initval(1.0,v1);
initval(nf,v9);
loop(v9,v5);
...
shapedvgradient("hsine",d3,amplitude,igpe, \
v5,gphase,v1,NOWAIT,1);
...
endloop(v5);
...
}
```

Related:	<code>incdelay</code>	Set real-time incremental delay
	<code>rgradient</code>	Set gradient to specified level
	<code>shapedgradient</code>	Generate shaped gradient pulse

`shaped2Dgradient` Generate arrayed shaped gradient pulse
`vgradient` Generate dynamic variable gradient pulse

simpulse Pulse observe and decouple channels simultaneously

Syntax: `simpulse(obswidth,decwidth,obsphase,decphase, \`
`RG1,RG2)`
`double obswidth, decwidth; /* pulse lengths in sec */`
`codeint obsphase,decphase; /* variables for phase */`
`double RG1; /* gating delay before pulse */`
`double RG2; /* gating delay after pulse */`

Description: Gates the observe and decoupler channels. The shorter of the two pulses is centered on the longer pulse, while the amplifier gating occurs before the start of the longer pulse (even if it is the decoupler pulse) and after the end of the longer pulse.

For ^{UNITY}*INOVA*, the absolute difference in the two pulse widths must be greater than or equal to 0.2 μ s; otherwise, a timed event of less than the minimum value (0.1 μ s) would be produced:

- if the difference is less than 0.1 μ s, the pulses are made equally long.
- If the difference is from 0.1 to 0.2 μ s, the difference is made 0.2 μ s.
- If the difference is larger than 0.2 μ s, the difference is made as close as the timing resolution allows (0.0125 μ s).

For systems other than ^{UNITY}*INOVA*, the minimum time is 0.2 μ s; thus, the times are doubled (the difference must be 0.4 μ s, resolution is 0.025 μ s).

Arguments: `obswidth` and `decwidth` are the duration, in sec, of the pulse on the observe transmitter and first decoupler, respectively.

`obsphase` and `decphase` are the phase of the pulse on the observe transmitter and the first decoupler, respectively. Each must be a real-time variable.

`RG1` is the delay, in seconds, between gating the amplifier on and gating the first rf transmitter on (all phase shifts occur at the beginning of this delay).

`RG2` is the delay, in seconds, between gating the final rf transmitter off and gating the amplifier off.

Examples: `simpulse(pw,pp,v1,v2,0.0,rof2);`

Related: `decpulse` Pulse the decoupler transmitter
`decrpulse` Pulse decoupler transmitter with amplifier gating
`dps_show` Draw delay or pulses in a sequence for graphical display
`rgpulse` Pulse observe transmitter with amplifier gating
`sim3pulse` Simultaneous pulse on 2 or 3 rf channels
`sim4pulse` Simultaneous pulse on four channels

sim3pulse Pulse simultaneously on 2 or 3 rf channels

Applicability: ^{UNITY}*INOVA*, ^{UNITY}*plus*, ^{UNITY}, and VXR-S systems with two or more independent rf channels.

Syntax: `sim3pulse(pw1,pw2,pw3,phase1,phase2,phase3,RG1,RG2)`
`double pw1,pw2,pw3; /* pulse lengths in sec */`
`codeint phase1,phase2,phase3; /* variables for phases */`
`double RG1; /* gating delay before pulse */`
`double RG2; /* gating delay after pulse */`

Description: Performs a simultaneous, three-pulse pulse on three independent rf channels. A simultaneous, two-pulse pulse on the observe transmitter and second decoupler can also be performed by setting the pulse length for the first decoupler to 0.0 (see the second example below for how this is done).

Timing limitations connected with the difference in pulse widths are covered in the description of `simpulse`.

Arguments: `pw1`, `pw2`, and `pw3` are the pulse length, in seconds, of channels `OBSch`, `DECch`, and `DEC2ch`, respectively.

`phase1`, `phase2`, and `phase3` are the phases of the corresponding pulses. These must be real-time variables (`v1` to `v14`, `oph`, etc.).

`RG1` is the delay, in seconds, between gating the amplifier on and gating the first rf transmitter on (all phase shifts occur at the beginning of this delay).

`RG2` is the delay, in seconds, between gating the final rf transmitter off and gating the amplifier off.

Examples: `sim3pulse(pw,p1,p2,oph,v10,v1,rof1,rof2);`
`sim3pulse(pw,0.0,p2,oph,v10,v1,rof1,rof2);`

Related:	<code>decpulse</code>	Pulse the decoupler transmitter
	<code>decrgpulse</code>	Pulse decoupler transmitter with amplifier gating
	<code>dps_show</code>	Draw delay or pulses in a sequence for graphical display
	<code>rgpulse</code>	Pulse observe transmitter with amplifier gating
	<code>simpulse</code>	Pulse observe, decoupler channels simultaneously
	<code>sim4pulse</code>	Simultaneous pulse on four channels

sim4pulse **Simultaneous pulse on four channels**

Applicability: UNITY *INOVA*, UNITY *plus*, and UNITY systems with two or more independent rf channels.

Syntax: `sim4pulse(pw1,pw2,pw3,pw4,phase1,phase2, \`
`phase3,phase4,RG1,RG2)`
`double pw1,pw2,pw3,pw4; /* pulse length in sec */`
`codeint phase1,phase2; /* variables for phase */`
`codeint phase3,phase4; /* variables for phase */`
`double RG1; /* gating delay before pulse */`
`double RG2; /* gating delay after pulse */`

Description: Allows for simultaneous pulses on up to four different channels. If any of the pulses are set to 0.0, no pulse is executed on that channel.

Timing limitations connected with the difference in pulse widths is covered in the description of `simpulse`.

Arguments: `pw1`, `pw2`, `pw3`, and `pw4` are the pulse length, in seconds, of channels `OBSch`, `DECch`, `DEC2ch`, and `DEC3ch`, respectively.

`phase1`, `phase2`, `phase3`, and `phase4` are the phases of the corresponding pulses. Each must be real-time variable (`v1-v14`, `oph`, etc.)

`RG1` is the delay, in seconds, between gating on the amplifier and turning on the first transmitter (all phases set at beginning of `RG1`, even if `pwn` is 0.0).

`RG2` is the delay, in seconds, between the final transmitter off and gating the amplifier off.

Examples: `sim4pulse(pw, 2*pw, p1, 2*p1, oph, v3, ZERO, TWO, RG1, RG2);`
`sim4pulse(pw, 0.0, 0.0, 2*p1, oph, ZERO, ZERO, TWO, RG1, RG2);`

Related: `rgpulse` Pulse observe channel with amplifier gating
`simpulse` Pulse observe and decoupler channel simultaneously
`sim3pulse` Pulse simultaneously on 2 or 3 channels

simshaped_pulse Perform simultaneous two-pulse shaped pulse

Applicability: Systems with a waveform generator on two or more rf channels.

Syntax: `simshaped_pulse(obsshape, decshape, obswidth, \`
`decwidth, obsphase, decphase, RG1, RG2)`
`char *obsshape, *decshape; /* names of .RF shape files */`
`double obswidth, decwidth; /* pulse lengths in sec */`
`codeint obsphase, decphase; /* variables for phase */`
`double RG1; /* gating delay before pulse */`
`double RG2; /* gating delay after pulse */`

Description: Performs a simultaneous, two-pulse shaped pulse on the observe transmitter and the first decoupler under waveform generator control. The overhead at the start and end of the two-pulse shaped pulse varies with the system:

- `UNITYINOVA`: 1.45 μ s (start), 0 (end).
- `UNITYplus`: 11.5 μ s, 0.
- Systems with an Acquisition Controller board: 21.5 μ s, 8.6 μ s.
- Systems with an Output board: 21.7 μ s, 8.8 μ s.

These values hold regardless of the values for the arguments `obswidth` and `decwidth`.

If either `obswidth` or `decwidth` is 0.0, no pulse occurs on the corresponding channel. If both `obswidth` and `decwidth` are non-zero and either `obsshape` or `decshape` is set to the null string (' '), then a hard pulse occurs on the channel with the null shape name. If either the pulse width is zero or the shape name is the null string, then a waveform generator is not required on that channel.

Arguments: `obsshape` is the name of the text file in the `shapelib` directory that contains the rf pattern to be executed on the observe transmitter.

`decshape` is the name of the text file in the `shapelib` directory that contains the rf pattern to be executed on the first decoupler.

`obswidth` is the length of the pulse, in seconds, on the observe transmitter.

`decwidth` is the length of the pulse, in seconds, on the first decoupler.

`obsphase` is the phase of the pulse on the observe transmitter. The value must be a real-time variable (`v1` to `v14`, `oph`, etc.).

`decphase` is the phase of the pulse on the first decoupler. The value must be a real-time variable (`v1` to `v14`, `oph`, etc.).

`RG1` is the delay, in seconds, between gating the amplifier on and gating the first rf transmitter on (all phase shifts occur at the beginning of this delay).

`RG2` is the delay, in seconds, between gating the final rf transmitter off and gating the amplifier off.

Examples: `simshaped_pulse("gauss", "hrm180", pw, p1, v2, v5, \`
`rof1, rof2);`

Related:	<code>decshaped_pulse</code>	Shaped pulse on first decoupler
	<code>dec2shaped_pulse</code>	Shaped pulse on second decoupler
	<code>shaped_pulse</code>	Shaped pulse on observe transmitter
	<code>sim3shaped_pulse</code>	Simultaneous three-pulse shaped pulse

sim3shaped_pulse Perform a simultaneous three-pulse shaped pulse

Applicability: Systems with a waveform generator on three or more rf channels.

Syntax: `sim3shaped_pulse(obsshape, decshape, dec2shape, \`
`obswidth, decwidth, dec2width, obsphase, \`
`decphase, dec2phase, RG1, RG2)`

```

char *obsshape;      /* name of obs .RF file */
char *decshape;      /* name of dec .RF file */
char *dec2shape;     /* name of dec2 .RF file */
double obswidth;     /* obs pulse length in sec */
double decwidth;     /* dec pulse length in sec */
double dec2width;    /* dec2 pulse length in sec */
codeint obsphase;    /* obs real-time var. for phase */
codeint decphase;    /* dec real-time var. for phase */
codeint dec2phase;   /* dec2 real-time var for phase */
double RG1;          /* gating delay before pulse in sec */
double RG2;          /* gating delay after pulse in sec */

```

Description: Performs a simultaneous, three-pulse shaped pulse under waveform generator control on three independent rf channels. The overhead at the start and end of the shaped pulse varies:

- UNITY *INOVA*: 1.95 μ s (start), 0 (end).
- UNITY *plus*: 17.25 μ s, 0.
- Systems with an Acquisition Controller board: 32.25 μ s, 12.9 μ s.
- Systems with an Output board: 32.45 μ s, 13.1 μ s.

These values hold regardless of the values of the arguments `obswidth`, `decwidth`, and `dec2width`.

`sim3shaped_pulse` can also be used to perform a simultaneous two-pulse shaped pulse on any combination of three rf channels. This can be achieved by setting one of the pulse lengths to the value 0.0 (see the second example below for an illustration of how this is done).

If any of the shape names are set to the null string (' '), then a hard pulse occurs on the channel with the null shape name. If either the pulse width is zero or the shape name is the null string, then a waveform generator is not required on that channel.

Arguments: `obsshape` is the name of the text file in the `shapelib` directory that contains the rf pattern to be executed on the observe transmitter.

`decshape` is the name of the text file in the `shapelib` directory that contains the rf pattern to be executed on the first decoupler.

`dec2shape` is the name of the text file in the `shapelib` directory that contains the rf pattern to be executed on the second decoupler.

`obswidth` is the length of the pulse, in seconds, on the observe transmitter.

`decwidth` is the length of the pulse, in seconds, on the first decoupler.

`dec2width` is the length of the pulse, in seconds, on the second decoupler.

`obsphase` is the phase of the pulse on the observe transmitter. The value must be a real-time variable (`v1` to `v14`, `oph`, etc.).

`decphase` is the phase of the pulse on the first decoupler. The value must be a real-time variable (`v1` to `v14`, `oph`, etc.).

`dec2phase` is the phase of the pulse on the second decoupler. The value must be a real-time variable (`v1` to `v14`, `oph`, etc.).

`RG1` is the delay, in seconds, between gating the amplifier on and gating the first rf transmitter on (all phase shifts occur at the beginning of this delay).

`RG2` is the delay, in seconds, between gating the final rf transmitter off and gating the amplifier off.

Examples:

```
sim3shaped_pulse("gauss", "hrml80", "sinc", pw, p1, p2, \
v2, v5, v6, rof1, rof2);
sim3shaped_pulse("dummy", "hrml80", "sinc", 0.0, p1, p2, \
v2, v5, v6, rof1, rof2);
```

Related:	<code>decshaped_pulse</code>	Shaped pulse on first decoupler
	<code>dec2shaped_pulse</code>	Shaped pulse on second decoupler
	<code>shaped_pulse</code>	Shaped pulse on observe transmitter
	<code>simshaped_pulse</code>	Simultaneous two-pulse shaped pulse

sli **Set SLI lines**

Applicability: Systems with imaging capability and the Synchronous Line Interface (SLI) board, an option that provides an interface to custom user equipment.

Syntax:

```
sli(address, mode, value)
int address;            /* SLI board address */
int mode;               /* SLI_SET, SLI_OR, SLI_AND, SLI_XOR */
unsigned value;        /* bit pattern */
```

Description: Sets lines on the SLI board. It has no return value. The board contains 32 TTL-compatible logic signals that can be set by these functions. Each line has an LED indicator and a 100-ohm series resistor for circuit protection. The lines are accessible through the 50-pin ribbon connector J4 on the front edge of the SLI board. The pin assignments are as follows:

- Pins 1 and 49 are a +5 V supply through 100-ohm series resistor (enabled by installing jumper J3L)
- Pins 3 to 10 control bits 0 to 7
- Pins 12 to 19 control bits 8 to 15
- Pins 21 to 28 control bits 16 to 23
- Pins 41 to 48 control bits 24 to 31
- Pins 2, 11, 20, 29, 40, and 50 are ground

`sli` has a pre-execution delay of 10.950 μ s but no post-execution delay. The delay is composed of a 200-ns startup delay with 5 AP bus cycles (1 AP bus cycle = 2.150 μ s).

The logic levels on the SLI lines are not all set simultaneously. The four bytes of the 32 bit word are set consecutively, the low-order byte first. The delay between setting of consecutive bytes is 1 AP bus cycle \pm 100 ns. (This 100-ns timing jitter is non-cumulative.)

The error message `Illegal mode: n` is caused by the `mode` argument not being one of `SLI_SET`, `SLI_OR`, `SLI_XOR`, or `SLI_AND`.

Arguments: `address` is the address of the SLI board in the system. It must match the address specified by jumper J7R on the board. Note that the jumpers 19-20 through -2 specify bits 2 through 11, respectively. Bits 0 and 1 are always zero. An installed jumper signifies a “one” bit, and a missing jumper a “zero”. The standard addresses for the SLI in the VME card cage:

- Digital (left) side is C90 (hex) = 3216
- Analog (right) side is 990 (hex) = 2448

`mode` determines how to combine the specified value with the current output of the SLI to produce the new output. The four possible modes:

- `SLI_SET` is to load the new value directly into the SLI
- `SLI_OR` is to logically OR the new value with the old
- `SLI_AND` is to logically AND the new value with the old
- `SLI_XOR` is to logically XOR the new value with the old

`value` (as modified by the `mode` argument) specifies the bit pattern to be set in the SLI board. This should be a non-negative number, between 0 (all lines low) and $2^{32}-1$ (all lines high).

Examples: `pulsesequence()`

```
{
...
int SLIaddr;          /* Address of SLI board */
unsigned SLIbits;    /* 32 bits of SLI line settings */
...
SLIbits = getval("sli");
SLIaddr = getval("address");
...
sli(SLIaddr, SLI_SET, SLIbits);
...
}
```

Note that `sli` and `address` are not standard parameters, but need to be created by the user if they are mentioned in a user pulse sequence (for details, see the description of the `create` command).

Related: `sp#on` Turn on specified spare line
`sp#off` Turn off specified spare line
`vsli` Set SLI lines from real-time variable

sp#off Turn off specified spare line

Applicability: Not available on *MERCURY-VX* and *MERCURY* systems.

Syntax: (*UNITYINOVA*) `sp1off()` to `sp5off()`
(*UNITYplus*, *UNITY*, or *VXR-S*) `sp1off()`, `sp2off()`
(*GEMINI 2000*) `sp1off()`

Description: Turns off the specified user-dedicated spare line connector (`sp1off` for SPARE 1, `sp2off` for SPARE 2, etc.) for high-speed device control.

- *UNITYINOVA* has five spare lines available from the Breakout panel on the back of the left console cabinet.

- UNITY*plus* has two spare lines located on the front panel of the Pulse Sequence Controller board in the digital cardcage.
- UNITY and VXR-S have two spare lines on the Interface board.
- GEMINI 2000 has one spare line.

Examples: `sp1off()`;
`sp4off()`;

Related: `sp#on` Turn on specified spare line

sp#on Turn on specified spare line

Applicability: Not available on *MERCURY-VX* and *MERCURY* systems.

Syntax: (*UNITYINOVA*) `sp1on()` to `sp5on()`
 (*UNITYplus*, *UNITY*, or *VXR-S*) `sp1on()`, `sp2on()`
 (*GEMINI 2000*) `sp1on()`

Description: Turns on the specified user-dedicated spare line connector (`sp1on` for SPARE 1, `sp2on` for SPARE 2, etc.) for high-speed device control. On the *UNITYINOVA*, each spare line changes from low to high when turned on.

- *UNITYINOVA* has five spare lines available from the Breakout panel on the back of the left console cabinet.
- *UNITYplus* has two spare lines located on the front panel of the Pulse Sequence Controller board in the digital cardcage.
- *UNITY* and *VXR-S* have two spare lines on the Interface board.
- *GEMINI 2000* has one spare line.

Examples: `sp1on()`;
`sp5on()`;

Related: `sp#off` Turn off specified spare line

spinlock Control spin lock on observe transmitter

Applicability: Systems with a waveform generator on the observe transmitter channel.

Syntax: `spinlock(pattern,90_pulselength,tipangle_resoln, \`
`phase,ncycles)`

```
char *pattern;          /* name of .DEC text file */
double 90_pulselength; /* 90-deg pulse length of channel */
double tipangle_resoln; /* resolution of tip angle */
codeint phase;         /* phase of spin lock */
int ncylices;         /* number of cycles to execute */
```

Description: Executes a waveform-generator-controlled spin lock on the observe transmitter. Both the rf gating and the mixing delay are handled within this function. Arguments can be variables (which require the appropriate `getval` and `getstr` statements) to permit changes via parameters (see the second example below).

Arguments: `pattern` is the name of the text file in the `shapelib` directory that stores the decoupling pattern (leave off the `.DEC` file extension).

`90_pulselength` is the pulse duration for a 90° tip angle on the observe transmitter.

`tipangle_resoln` is the resolution in tip-angle degrees to which the decoupling pattern is stored in the waveform generator.

phase is the phase angle of the spin lock. It must be a real-time variable (v1 to v14, oph, etc.).

ncycles is the number of times that the spin-lock pattern is to be executed.

Examples: `spinlock("mlev16", pw90, 90.0, v1, 50);`
`spinlock(locktype, pw, resol, v1, cycles);`

Related: `decspinlock` First decoupler spin lock waveform control
`dec2spinlock` Second decoupler spin lock waveform control
`dec3spinlock` Third decoupler spin lock waveform control

starthardloop Start hardware loop

Applicability: All systems except the *GEMINI 2000* and any system equipped with an Output board, Part. No. 00-953520-0#, where # is from 0 to 4.

Syntax: `starthardloop(vloop)`
`codeint vloop; /* real-time variable for loop count */`

Description: Starts a hardware loop. The number of repetitions of the hardware loop must be two or more. If the number of repetitions is 1, the hardware looping feature is not activated. A hardware loop with a count equal to 0 is not permitted and generates an error. Depending on the pulse sequence, additional code may be needed to trap for this condition and skip the `starthardloop` and `endhardloop` statements if the count is 0.

Only instructions that require no further intervention by the acquisition computer (pulses, delays, acquires, and other scattered instructions) are allowed in a hard loop. Most notably, no real-time math statements are allowed, thereby precluding any phase cycle calculations. The number of events included in the hard loop, including the total number of data points if acquisition is performed, is subject to the following limitations:

- 2048 or less for the Data Acquisition Controller board, Pulse Sequence Controller board, or *MERCURY-VX* and *MERCURY STM/Output* board.
- 1024 or less for the Acquisition Controller board.
- 63 or less for the Output board (see the description section of the `acquire` statement for further information about these boards).

In all cases, the number of events must be greater than one. No nesting of hard loops is allowed.

For the Output board, a hardware loop must be preceded by some timed event other than an explicit acquisition or another hardware loop. If two hardware loops must follow one another, it will therefore be necessary to insert a statement like `delay(0.2e-6)` between the first `endhardloop` and the second `starthardloop`. With only a single hardware loop, there is no timing limitation on the length of a single cycle of the loop. With two hardware loops (such as a loop of pulses and delays followed by an implicit acquisition), the first hardware loop must have a minimum cycle length of approximately 80 μ s. With three or more hardware loops, loops that are not the first or last must have a minimum cycle length of about 100 μ s.

For the Data Acquisition Controller, Pulse Sequence Controller, Acquisition Controller, and *MERCURY-VX* and *MERCURY STM/Output* boards, there are no timing restrictions between multiple, back-to-back hard loops. There is one subtle restriction placed on the actual duration of a hard loop if back-to-back hard loops are encountered: the duration of the i th hard loop must be $N(i+1) * 0.4 \mu$ s, where $N(i+1)$ is the number of events occurring in the $(i+1)$ th hard loop.

Arguments: `vloop` is the number of hardware loop repetitions. It must be a real-time variable (`v1` to `v14`, `ct`, etc.) and *not* an integer, a real number, or a regular variable.

Examples: `starthardloop(v2) ;`

Related: `acquire` Explicitly acquire data
`endhardloop` End hardware loop

status Change status of decoupler and homospoil

Syntax: `status(state)`
`int state; /* index: A, B, C, ..., Z */`

Description: Controls decoupler and homospoil gating (homospoil not available on the *GEMINI 2000*). Parameters controlled by `status` are `dm` (first decoupler mode), `dmm` (first decoupler modulation mode), and `hs` (homospoil). For systems with a third rf channel, `dm2` (second decoupler mode), `dm3` (third decoupler mode), `dmm2` (second decoupler modulation mode), and `dmm3` (third decoupler modulation mode) are also controlled.

Each of these parameters can have multiple states: `status(A)` sets each parameter to the state described by the first letter of its value, `status(B)` uses the second letter, etc. If a pulse sequence has more status statements than there are status modes for a particular parameter, control reverts to the last letter of the parameter value. Thus if `dm='ny'`, `status(C)` will look for the third letter, find none, and then use the second letter (`y`) and turn the decoupler on (actually, leave the decoupler on).

The states do not have to increase monotonically during a pulse sequence. It is perfectly possible to write a pulse sequence that starts with `status(A)`, goes later to `status(B)`, then goes back to `status(A)`, then to `status(C)`, etc.

Homospoil is treated slightly differently than the decoupler. If a particular homospoil code letter is '`y`', delays coded as `hsdelay` that occur during the time the `status` corresponds to that code letter will begin with a homospoil pulse, the duration of which is determined by the parameter `hst`. Thus if `hs='ny'`, all `hsdelay` delays that occur during `status(B)` will begin with a homospoil pulse. The final status always occurs during acquisition, at which time a homospoil pulse is not permitted. Thus, if a particular pulse sequence uses `status(A)`, `status(B)`, and `status(C)`, `dm` and other decoupler parameters can have up to three letters, but `hs` has only two, because having `hs='y'` during `status(C)` is meaningless and is consequently ignored.

On all systems with class C amplifiers, except the *GEMINI 2000*, to switch from low-power to high-power decoupling, insert `dhpflag=TRUE ;` or `dhpflag=FALSE ;` in a pulse sequence just before a `status` statement.

Arguments: `state` sets the status mode to A, B, C, ..., or Z.

Examples: `status(A) ;`

Related: `dhpflag` Switch decoupling from low-power to high-power
`hsdelay` Delay specified time with possible homospoil pulse
`setstatus` Set status of observe transmitter or a decoupler transmitter
`statusdelay` Execute the status statement with a given delay time

statusdelay Execute the status statement with a given delay time

Applicability: `UNITY INOVA`, `UNITYplus`, `UNITY`, `VXR-S`

Syntax: `statusdelay(state,time)`
`int state; /* index: A, B, C, ..., Z */`
`double time; /* delay time, in sec. */`

Description: Executes the `status` statement and delays for the time provided as an argument.

The current `status` statement takes a variable amount of time to execute, which depends on the number of rf channels configured in the system, the previous status state of each decoupler channel, and the new status state of each decoupler channel. This time is small (on the order of a few microseconds without programmable decoupling to tens of microseconds with programmable decoupling) but can be significant in certain experiments. `statusdelay` allows the user to specify a defined period of time for the `status` statement to execute.

If the amount of time given as an argument is not long enough to account for the overhead delays of `status`; the pulse sequence will still run, but a warning message will be generated to let the user know of the discrepancy.

The following table lists the maximum amount of time per channel for the `status` statement to execute.

<i>System</i>	<i>Without programmable decoupling (μs)</i>	<i>With programmable decoupling (μs)</i>
UNITY <i>INOVA</i>	2.5	2.5
UNITY <i>plus</i>	5.75	10.35
UNITY	2.15	12.9
VXR-S	0	10.75

Arguments: `state` specifies the status mode as A,B,C,....,Z.
`time` specifies the delay time, in seconds.

Examples: `statusdelay(A,d1);`
`statusdelay(B,0.000010);`

Related: `status` Change status of decoupler and homospoil

stepsize Set small-angle phase step size, rf type C or D

Applicability: Systems with rf type C or D, and *MERCURY-VX* and *MERCURY*. This statement is due to be eliminated in future versions of VNMR software. Although it is still functional, you should not write any pulse sequences using it and should replace it in existing sequences with `obsstepsize`, `decstepsize`, `dec2stepsize`, or `dec3stepsize`, as appropriate.

Syntax: `stepsize(step_size,device)`
`double step_size; /* step size of phase shifter */`
`int device; /* OBSch, DECch, DEC2ch, or DEC3ch */`

Description: Sets the step size of the small-angle phase increment for a particular device. The phase information into statements `decpulse`, `decrgpulse`, `dec2rgpulse`, `dec3rgpulse`, `pulse`, `rgpulse`, and `simpulse` is still expressed in units of 90°.

Arguments: `step_size` is a real number or a variable for the phase step size desired.
`device` is OBSch (observe transmitter) or DECch (first decoupler). For the UNITY*INOVA* and UNITY*plus* only, `device` can also be DEC2ch (second

decoupler) or DEC3ch (third decoupler). The `step_size` phase shift selected is active only for the `xmtrphase` statement if `device` is OBSch, only for the `dcplrphase` statement if `device` is DECch, only for the `dcplr2phase` statement if `device` is DEC2ch, or only for the `dcplr3phase` statement if the `device` is DEC3ch.

Examples: `stepsize(30.0,OBSch);`
`stepsize(step,DEC2ch);`

Related: `dcplrphase` Set small-angle phase of first decoupler, rf type C or D
`dcplr2phase` Set small-angle phase of second decoupler, rf type C or D
`dcplr3phase` Set small-angle phase of third decoupler, rf type C or D
`decstepsize` Set step size of first decoupler
`dec2stepsize` Set step size of second decoupler
`dec3stepsize` Set step size of third decoupler
`obsstepsize` Set step size of observe transmitter
`xmtrphase` Set small-angle phase of observe transmitter, rf type C

sub Subtract integer values

Syntax: `sub(vi,vj,vk)`
`codeint vi; /* real-time variable for minuend */`
`codeint vj; /* real-time variable for subtrahend */`
`codeint vk; /* real-time variable for difference */`

Description: Sets the value of `vk` equal to `vi-vj`.

Arguments: `vi` is the integer value of the minuend, `vj` is the integer value of the subtrahend, and `vk` is the difference of `vi` and `vj`. Each argument must be a real-time variable (`v1` to `v14`, `oph`, etc.).

Examples: `sub(v2,v5,v6);`

Related: `add` Add integer values
`assign` Assign integer values
`dbl` Double an integer value
`decr` Decrement an integer value
`divn` Divide integer values
`hlv` Half the value of an integer
`incr` Increment an integer value
`mod2` Find integer value modulo 2
`mod4` Find integer value modulo 4
`modn` Find integer value modulo n
`mult` Multiply integer values

T

tsadd Add an integer to AP table elements

Applicability: All systems except the *GEMINI 2000*.

Syntax: `tsadd(table,scalarval,moduloval)`
`codeint table; /* real-time table variable */`
`int scalarval; /* integer added */`
`int moduloval; /* modulo value of result */`

Description: A run-time scalar operation that adds an integer to elements of an AP table.

Arguments: `table` specifies the name of the table (t1 to t60).

`scalarval` is an integer to be added to each element of the table.

`moduloval` is the modulo value taken on the result of the operation if `moduloval` is greater than 0.

Examples: `tsadd(t31,4,4);`

Related: **tsdiv** Divide an integer into AP table elements
tsmult Multiply an integer with AP table elements
tssub Subtract an integer from AP table elements

tsdiv Divide an integer into AP table elements

Applicability: All systems except the *GEMINI 2000*.

Syntax: `tsdiv(table,scalarval,moduloval)`
`codeint table; /* real-time table variable */`
`int scalarval; /* integer divisor */`
`int moduloval; /* modulo value of result */`

Description: A run-time scalar operation that divides an integer into the elements of an AP table.

Arguments: `table` specifies the name of the table (t1 to t60).

`scalarval` is an integer to be divided into each element of the table.

`scalarval` must not equal 0; otherwise, an error is displayed and PSG aborts.

`moduloval` is the modulo value taken on the result of the operation if `moduloval` is greater than 0.

Examples: `tsdiv(t31,4,4);`

Related: **tsadd** Add an integer to AP table elements
tsmult Multiply an integer with AP table elements
tssub Subtract an integer from AP table elements

tsmult Multiply an integer with AP table elements

Applicability: All systems except the *GEMINI 2000*.

Syntax: `tsmult(table,scalarval,moduloval)`
`codeint table; /* real-time table variable */`
`int scalarval; /* integer multiplier */`
`int moduloval; /* modulo value of result */`

Description: A run-time scalar operation that multiplies an integer with the elements of an AP table.

Arguments: `table` specifies the name of the table (t1 to t60).

`scalarval` is an integer to be multiplied with each element of the table.

`moduloval` is the modulo value taken on the result of the operation if `moduloval` is greater than 0.

Examples: `tsmult(t31,4,4);`

Related: **tsadd** Add an integer to AP table elements
tsdiv Divide an integer into AP table elements
tssub Subtract an integer from AP table elements

tssub Subtract an integer from AP table elements

Applicability: All systems except the *GEMINI 2000*.

Syntax: `tssub(table, scalarval, moduloval)`
`codeint table; /* real-time table variable */`
`int scalarval; /* integer subtracted */`
`int moduloval; /* modulo value of result */`

Description: A run-time scalar operation that subtracts an integer from the elements of an AP table.

Arguments: `table` specifies the name of the table (t1 to t60).

`scalarval` is an integer to be subtracted from each element of the table.

`moduloval` is the modulo value taken on the result of the operation if `moduloval` is greater than 0.

Examples: `tssub(t31, 4, 4);`

Related: **tsadd** Add an integer to AP table elements
tsdiv Divide an integer into AP table elements
tsmult Multiply an integer with AP table elements

ttadd Add an AP table to a second table

Applicability: All systems except the *GEMINI 2000*.

Syntax: `ttadd(table_dest, table_mod, moduloval)`
`codeint table_dest; /* real-time table variable */`
`codeint table_mod; /* real-time table variable */`
`int moduloval; /* modulo value of result */`

Description: A run-time vector operation that adds one AP table to a second table.

Arguments: `tablenamedest` is the name of the destination table (t1 to t60).

`table_mod` is the name of the table (t1 to t60) that modifies `table_dest`. Each element in `table_dest` is modified by the corresponding element in `table_mod` and the result is stored in `table_dest`. The number of elements in `table_dest` must be greater than or equal to the number of elements in `table_mod`.

`moduloval` is the modulo value taken on the result of the operation if `moduloval` is greater than 0.

Examples: `ttadd(t28, t42, 6);`

Related: **ttdiv** Divide an AP table into a second table
ttmult Multiply an AP table by a second table
ttsub Subtract an AP table from a second table

ttdiv Divide an AP table into a second table

Applicability: All systems except the *GEMINI 2000*.

Syntax: `ttdiv(table_dest, table_mod, moduloval)`
`codeint table_dest; /* real-time table variable */`
`codeint table_mod; /* real-time table variable */`
`int moduloval; /* modulo value of result */`

Description: A run-time vector operation that divides one AP table into a second table.

Arguments: `table_dest` is the name of the destination table (t1 to t60).

`table_mod` is the name of the table (`t1` to `t60`) that modifies `table_dest`. Each element in `table_dest` is modified by the corresponding element in `table_mod` and the result is stored in `table_dest`. The number of elements in `table_dest` must be greater than or equal to the number of elements in `table_mod`. No element in `table_mod` can equal 0.

`moduloval` is the modulo value taken on the result of the operation if `moduloval` is greater than 0.

Examples: `ttdiv(t28,t42,6);`

Related: `ttadd` Add an AP table to a second table
`ttmult` Multiply an AP table by a second table
`ttsub` Subtract an AP table from a second table

ttmult Multiply an AP table by a second table

Applicability: All systems except the *GEMINI 2000*.

Syntax: `ttmult(table_dest,table_mod,moduloval)`
`codeint table_dest; /* real-time table variable */`
`codeint table_mod; /* real-time table variable */`
`int moduloval; /* modulo value of result */`

Description: A run-time vector operation that multiplies one AP table by a second table.

Arguments: `table_dest` is the name of the destination table (`t1` to `t60`).

`table_mod` is the name of the table (`t1` to `t60`) that modifies `table_dest`. Each element in `table_dest` is modified by the corresponding element in `table_mod` and the result is stored in `table_dest`. The number of elements in `table_dest` must be greater than or equal to the number of elements in `table_mod`.

`moduloval` is the modulo value taken on the result of the operation if `moduloval` is greater than 0.

Examples: `ttmult(t28,t42,6);`

Related: `ttadd` Add an AP table to a second table
`ttdiv` Divide an AP table into a second table
`ttsub` Subtract an AP table from a second table

ttsub Subtract an AP table from a second table

Applicability: All systems except the *GEMINI 2000*.

Syntax: `ttsub(table_dest,table_mod,moduloval)`
`codeint table_dest; /* real-time table variable */`
`codeint table_mod; /* real-time table variable */`
`int moduloval; /* modulo value of result */`

Description: A run-time vector operation that subtracts one AP table from a second table.

Arguments: `table_dest` is the name of the destination table (`t1` to `t60`).

`table_mod` is the name of the table (`t1` to `t60`) that modifies `table_dest`. Each element in `table_dest` is modified by the corresponding element in `table_mod` and the result is stored in `table_dest`. The number of elements in `table_dest` must be greater than or equal to the number of elements in `table_mod`.

`moduloval` is the modulo value taken on the result of the operation if `moduloval` is greater than 0.

Examples: `ttsub(t28,t42,6);`

Related: `ttadd` Add an AP table to a second table
`ttdiv` Divide an AP table into a second table
`ttmult` Multiply an AP table by a second table

txphase Set quadrature phase of observe transmitter

Syntax: `txphase(phase)`
`codeint phase; /* variable for quadrature phase */`

Description: Sets the observe transmitter quadrature phase to the value referenced by the real-time variable so that the transmitter phase is changed independently from a pulse. This may be useful to “preset” the transmitter phase at the beginning of a delay that precedes a particular pulse. For example, in the sequence `txphase(v2); delay(d2); pulse(pw,v2);`, the transmitter phase is changed at the start of the `d2` delay. In a “normal” sequence, an `rof1` time precedes the pulse to change the transmitter phase.

Arguments: `phase` is the quadrature phase for the observe transmitter. It must be a real-time variable (`v1` to `v14`, `oph`, `ct`, etc.).

Examples: `txphase(v3);`

Related: `decphase` Set quadrature phase of first decoupler
`dec2phase` Set quadrature phase of second decoupler
`dec3phase` Set quadrature phase of third decoupler

V

vagradient Variable angle gradient

Syntax: `vagradient(gradlvl,theta,phi)`
`double gradlvl; /* gradient amplitude in G/cm */`
`double theta; /* angle from z axis in degrees */`
`double phi; /* angle of rotation in degrees */`

Description: Applies a gradient of amplitude `gradlvl` at an angle `theta` from the `z` axis and rotated about the `xy` plane at an angle `phi`. Information from a gradient table is used to scale and set the values correctly. The values applied to each gradient axis are as follows:

$$\begin{aligned} x &= \text{gradlvl} * (\sin(\text{phi}) * \sin(\text{theta})) \\ y &= \text{gradlvl} * (\cos(\text{phi}) * \sin(\text{theta})) \\ z &= \text{gradlvl} * (\cos(\text{theta})) \end{aligned}$$

`vagradient` leaves the gradients at the given levels until they are turned off. To turn off the gradients, add a `vagradient` statement with `gradlvl` set to zero or include the `zero_all_gradients` statement.

`vagradient` is used if there are actions to be performed while the gradients are on. `vagradpulse` is simpler to use if there are no other actions performed while the gradients are on.

Arguments: `gradlvl` is the gradient amplitude, in gauss/cm.

`theta` defines the angle, in degrees, from the `z` axis.

`phi` defines the angle of rotation, in degrees, about the `xy` plane.

Examples: `vgradient(3.0, 54.7, 0.0);`
`pulse(pw, oph);`
`delay(0.001 - pw);`
`zero_all_gradients();`

Related:	<code>magradient</code>	Simultaneous gradient at the magic angle
	<code>magradpulse</code>	Simultaneous gradient pulse at the magic angle
	<code>mashapedgradient</code>	Simultaneous shaped gradient at the magic angle
	<code>mashapedgradpulse</code>	Simultaneous shaped gradient pulse at the magic angle
	<code>vagradpulse</code>	Variable angle gradient pulse
	<code>vashapedgradient</code>	Variable angle shaped gradient
	<code>vashapedgradpulse</code>	Variable angle shaped gradient pulse
	<code>zero_all_gradients</code>	Zero all gradients

vagradpulse Variable angle gradient pulse

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `vagradpulse(gradlvl, gradtime, theta, phi)`
`double gradlvl; /* gradient amplitude in G/cm */`
`double gradtime; /* gradient time in sec */`
`double theta; /* angle from z axis in degrees */`
`double phi; /* angle of rotation in degrees */`

Description: Applies a gradient pulse of amplitude `gradlvl` at an angle `theta` from the *z* axis and rotated about the *xy* plane at an angle `phi`. Information from a gradient table is used to scale and set the values correctly. The values applied to each gradient axis are as follows:

$$x = \text{gradlvl} * (\sin(\text{phi}) * \sin(\text{theta}))$$

$$y = \text{gradlvl} * (\cos(\text{phi}) * \sin(\text{theta}))$$

$$z = \text{gradlvl} * (\cos(\text{theta}))$$

The gradients are turned off after `gradtime` seconds.

`vagradpulse` is simpler to use if there are no other actions while the gradients are on. `vagradient` is used if there are actions to be performed while the gradients are on.

Arguments: `gradlvl` is the gradient amplitude, in gauss/cm.
`gradtime` is the time, in seconds, to apply the gradient.
`theta` is the angle, in degrees, from the *z* axis
`phi` is the angle of rotation, in degrees, about the *xy* plane.

Examples: `vagradpulse(3.0, 0.001, 54.7, 0.0);`

Related:	<code>magradient</code>	Simultaneous gradient at the magic angle
	<code>magradpulse</code>	Simultaneous gradient pulse at the magic angle
	<code>mashapedgradient</code>	Simultaneous shaped gradient at the magic angle
	<code>mashapedgradpulse</code>	Simultaneous shaped gradient pulse at the magic angle
	<code>vagradient</code>	Variable angle gradient
	<code>vashapedgradient</code>	Variable angle shaped gradient
	<code>vashapedgradpulse</code>	Variable angle gradient pulse
	<code>zero_all_gradients</code>	Zero all gradients

vashapedgradient Variable angle shaped gradient

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `vashapedgradient(pattern,gradlvl,gradtime,theta, \`
`phi,loops,wait)`
`char* pattern; /* name of gradient shape text file */`
`double gradlvl; /* gradient amplitude in G/cm */`
`double gradtime; /* time to apply gradient in sec */`
`double theta; /* angle from z axis in degrees */`
`double phi; /* angle of rotation in degrees */`
`int loops; /* number of waveform loops */`
`int wait; /* WAIT or NOWAIT */`

Description: Applies a gradient shape `pattern` with an amplitude `gradlvl` at an angle `theta` from the `z` axis and rotated about the `xy` plane at an angle `phi`. Information from a gradient table is used to scale and set the values correctly. The amplitudes applied to each gradient axis are as follows:

$$x = \text{gradlvl} * (\sin(\text{phi}) * \sin(\text{theta}))$$

$$y = \text{gradlvl} * (\cos(\text{phi}) * \sin(\text{theta}))$$

$$z = \text{gradlvl} * (\cos(\text{theta}))$$

`vashapedgradient` leaves the gradients at the given levels until they are turned off. To turn off the gradients, add another `vashapedgradient` statement with `gradlvl` set to zero or insert a `zero_all_gradients` statement. Note that `vashapedgradient` assumes the gradient pattern zeroes the gradients at its end, and it does not explicitly zero the gradients.

`vashapedgradient` is used if there are actions to be performed while the gradients are on,

Arguments: `pattern` is a text file that describes the shape of the gradient. The text file is located in `$vnmrsystem/shapelib` or in the users directory `$vnmruser/shapelib`.

`gradlvl` is the gradient amplitude, in gauss/cm.

`gradtime` is the time, in seconds, to apply the gradient.

`theta` is the angle, in degrees, from the `z` axis.

`phi` is the angle of rotation, in degrees, about the `xy` plane.

`loops` is a value from 0 to 255 to loop the selected waveform. Gradient waveforms on the ^{UNITY}INOVA do not use this field and it should be set to 0.

`wait` is a keyword, either `WAIT` or `NOWAIT`, that selects whether or not a delay is inserted to wait until the gradient is completed before executing the next statement.

Examples: `vashapedgradient("ramp_hold",3.0,trise,54.7, \`
`0.0,0,NOWAIT);`
`pulse(pw,oph);`
`delay(0.001-pw-2*trise);`
`vashapedgradient("ramp_down",3.0,trise,54.7, \`
`0.0,0,NOWAIT);`

Related:	<code>magradient</code>	Simultaneous gradient at the magic angle
	<code>magradpulse</code>	Simultaneous gradient pulse at the magic angle
	<code>mashapedgradient</code>	Simultaneous shaped gradient at the magic angle
	<code>mashapedgradpulse</code>	Simultaneous shaped gradient pulse at the magic angle
	<code>vagradient</code>	Variable angle gradient
	<code>vagradpulse</code>	Variable angle gradient pulse
	<code>vashapedgradpulse</code>	Variable angle shaped gradient pulse
	<code>zero_all_gradients</code>	Zero all gradients

vashapedgradpulse Variable angle shaped gradient pulse

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

```
Syntax: vashapedgradpulse(pattern,gradlvl,gradtime, \
        theta,phi)
char *pattern;          /* gradient shape text file */
double gradlvl;         /* gradient amplitude in G/cm */
double gradtime;       /* gradient time in seconds */
double theta;          /* angle from z axis in degrees */
double phi;            /* angle of rotation in degrees */
```

Description: Applies a gradient shape `pattern` with an amplitude `gradlvl` at an angle `theta` from the z axis and rotated about the xy plane at an angle `phi`.

Information from a gradient table is used to scale and set the values correctly. The amplitudes applied to each gradient axis are as follows:

```
x = gradlvl * (sin(phi)*sin(theta))
y = gradlvl * (cos(phi)*sin(theta))
z = gradlvl * (cos(theta))
```

The gradient are turned off after `gradtime` seconds. Note that `vashapedgradpulse` assumes that the gradient pattern zeroes the gradients at its end and does not explicitly zero the gradients.

`vashapedgradpulse` is simpler to use then the `vashapedgradient` statement if there are no other actions while the gradients are on. `vashapedgradient` is used when there are actions to be performed while the gradients are on.

Arguments: `pattern` is a text file that describes the shape of the gradient. The text file is located in `$vnmrsystem/shapelib` or in the user directory `$vnmruser/shapelib`.

`gradlvl` is the gradient amplitude, in gauss/cm.

`gradtime` is the time, in seconds, to apply the gradient.

`theta` is the angle, in degrees, from the z axis.

`phi` is the angle of rotation, in degrees, about the xy plane.

Examples: `vashapedgradpulse("hsine",3.0,0.001,54.7,0.0);`

Related:	<code>magradient</code>	Simultaneous gradient at the magic angle
	<code>magradpulse</code>	Simultaneous gradient pulse at the magic angle
	<code>mashapedgradient</code>	Simultaneous shaped gradient at the magic angle
	<code>mashapedgradpulse</code>	Simultaneous shaped gradient pulse at the magic angle
	<code>vagradient</code>	Variable angle gradient
	<code>vagradpulse</code>	Variable angle gradient pulse
	<code>vashapedgradient</code>	Variable angle shaped gradient
	<code>zero_all_gradients</code>	Zero all gradients

vdelay Set delay with fixed timebase and real-time count

Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

```
Syntax: vdelay(timebase,count)
int timebase;          /* NSEC, USEC, MSEC, or SEC */
codeint count;        /* real-time variable for count */
```

Description: Sets a delay for a time period equal to the product of the specified `timebase` and the `count`.

Arguments: `timebase` is one of the four defined time bases: `NSEC` (see note below), `USEC` (microseconds), `MSEC` (milliseconds), or `SEC` (seconds).

`count` is a real-time variable (`v1` to `v14`). For predictable acquisition, the real-time variable should have a value of 2 or more.

If `timebase` is set to `NSEC`, the delay depends on which acquisition controller board is used on the system (see the description section of the `acquire` statement for further information about these boards.):

- On systems with a Data Acquisition Controller board, the minimum delay is a `count` of 0 (100 ns), and a `count` of n corresponds to a delay of $(100 + (12.5*n))$ ns. For example, `vdelay(NSEC, v1)`, when `v1=4`, gives a delay of $(100 + (12.5*4))$ ns or 150 ns.
- On systems with a Pulse Sequence Controller board or an Acquisition Controller board, the minimum delay is a `count` of 2 (200 ns). A `count` greater than 2 is the minimum delay plus the resolution (25 ns) of the board. For example, `vdelay(NSEC, v1)`, when `v1=4`, gives a delay of $(200 + 25)$ ns or 225 ns.
- On systems with Output boards, the minimum delay is a `count` of 2 (200 ns). A `count` greater than 2 is the minimum delay plus the resolution (100 ns) of the board. For example, `vdelay(NSEC, v1)`, when `v1=4`, gives a delay of $(200 + 100)$ ns or 300 ns.

Examples: `vdelay(USEC, v3);`

Related:	<code>create_delay_list</code>	Create table of delays
	<code>delay</code>	Delay for a specified time
	<code>hsdelay</code>	Delay specified time with possible homospoil pulse
	<code>idelay</code>	Delay for a specified time with IPA
	<code>incdelay</code>	Real time incremental delay
	<code>initdelay</code>	Initialize incremental delay
	<code>vfreq</code>	Select frequency from table
	<code>voffset</code>	Select frequency offset from table
	<code>vdelay_list</code>	Get delay value from delay list with real-time index

`vdelay_list` Get delay value from delay list with real-time index

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `vdelay_list(list_number, vindex)`

```
int list_number;      /* same index as create_delay_list */
codeint vindex;      /* real time variable */
```

Description: Provides a means of indexing into previously created delay lists using a real-time variable or an AP table. The indexing into the list is from 0 to $N-1$, where N is the number of items in the list. The delay table has to have been created with the `create_delay_list` statement. It has no return value.

Arguments: `tlist_number` is the number between 0 and 255 for each list. This number must match the `list_number` used when creating the table.

`vindex` is a real-time variable (`v1` to `v14`) or an AP table (`t1` to `t60`).

Examples:

```
pulsesequance()
{
...
int noffset, ndelay, listnum;
double offsets1[256], offsets2[256], delay[256];
...
}
```

```

/* initialize offset and delay lists */
create_offset_list(offsets1,noffset,OBSch,0);
create_delay_list(delay,ndelay,1);
create_offset_list(offsets2,noffset,DECch,2);
...
voffset(0,v4); /* get v4 from observe offset list */
vdelay_list(1,v5); /* get v5 from delay list */
voffset(2,v4); /* get v4 from decouple offset list */
...
}

```

Related:	<code>create_delay_list</code>	Create table of delays
	<code>delay</code>	Delay for a specified time
	<code>hsdelay</code>	Delay specified time with possible homospoil pulse
	<code>idelay</code>	Delay for a specified time with IPA
	<code>incdelay</code>	Real time incremental delay
	<code>initdelay</code>	Initialize incremental delay
	<code>vfreq</code>	Select frequency from table
	<code>voffset</code>	Select frequency offset from table
	<code>vdelay</code>	Set delay with fixed timebase and real-time count

vfreq **Select frequency from table**

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `vfreq(list_number,vindex)`

```

int list_number; /* same index as for create_freq_list */
codeint vindex; /* real-time variable */

```

Description: Provides a means of indexing into previously created frequency lists using a real-time variable or an AP table. The indexing into the list is from 0 to $N-1$, where N is the number of items in the list. The frequency table must have been created with the `create_freq_list` statement. It has no return value.

Arguments: `list_number` is the number between 0 and 255 for each list. This number must match the `list_number` used when creating the table.
`vindex` is a real-time variable (`v1` to `v14`) or an AP table (`t1` to `t60`).

Examples: See the example for the `vdelay` statement.

Related:	<code>create_freq_list</code>	Create table of frequencies
	<code>vdelay</code>	Select delay from table
	<code>voffset</code>	Select frequency offset from table

vgradient **Set gradient to a level determined by real-time math**

Applicability: Systems with imaging or PFG modules. Not applicable to *MERCURY-VX*, *MERCURY*, and *GEMINI 2000* systems.

Syntax: `vgradient(channel,intercept,slope,mult)`

```

char channel; /* gradient channel 'x', 'y' or 'z' */
int intercept; /* initial gradient level */
int slope; /* gradient increment */
codeint mult; /* real-time variable */

```

Description: Provides a dynamic variable gradient controlled using the AP real-time math functions. It has no return value. The statement drives the chosen gradient to the level defined by the formula:

$$\text{level} = \text{intercept} + \text{slope} * \text{mult}.$$

The gradient level ranges from –2047 to +2047 for systems with 12-bit DACs, or from –32767 to +32767 for gradients using the waveform generators, which have 16-bit DACs. If the requested level lies outside this range, it is rounded to the appropriate boundary value.

After `vgradient`, the action of the gradient is controlled by the gradient power supply. The gradient level is ramped at the preset slew rate (2047 DAC units per millisecond) to the value requested by `vgradient`. This fact becomes a concern when using `vgradient` in a loop with a delay element, in order to produce a modulated gradient. The delay element should be sufficiently long so as to allow the gradient to reach the assigned value:

$$\text{delay} \geq \frac{|\text{new_level} - \text{old_level}|}{2047} \times \text{risetime}$$

Arguments: `channel` specifies the gradient to be set and is one of the characters 'X', 'x', 'Y', 'y', 'Z', or 'z'. In imaging, `channel` can also be 'gread', 'gphase', or 'gslice'.

`intercept` and `slope` are integers. In imaging, `intercept` is the initial gradient DAC setting and `slope` is the gradient DAC increment.

`mult` is a real-time variable (`v1` to `v14`, etc.). In imaging, `mult` is set so that `intercept+slope*mult` is the output.

Examples:

```
(1) mod2(ct,v10);          /* v10 is 0,1,0,1,0,1,... */
vgradient('z',0,2000,v10);
                        /* z gradient is 0,2000,0,2000,... */
delay(d2);              /* delay for duration d2 */
rgradient('z',0.0);    /* gradient turned off */

(2) mod4(ct,v10);
                        /* v10 is 0,1,2,3,4,0,1,2,3,4,... */
vgradient('z',-5000.0,2500.0,v10);
                        /* z is -5000,-2500,0,2500 */

(3) pulsedsequence()
{
...
char gphase, gread, gslice;
int amplitude, igpe, stat;
double gpe;
...
gpe = getval("gpe");
amplitude = (int)(0.5*ni*gpe);
igpe = (int)gpe;
stat =
getorientation(&gread,&gphase,&gslice,"orient");
...
initval(nf,v9);
loop(v9,v5);
...
vgradient(gphase,amplitude,igpe,v5);
...
endloop(v5);
```

```

...
}

```

Related:	<code>dps_show</code>	Draw delay or pulses in a sequence for graphical display
	<code>getorientation</code>	Read image plane orientation
	<code>rgradient</code>	Set gradient to specified level
	<code>shapedgradient</code>	Provide shaped gradient pulse to gradient channel
	<code>shaped2Dgradient</code>	Generate arrayed shaped gradient pulse
	<code>shapedvgradient</code>	Generate dynamic variable shaped gradient pulse
	<code>zgradpulse</code>	Create a gradient pulse on the z channel

voffset **Select frequency offset from table**

Applicability: Not applicable on *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.

Syntax: `voffset(list_number, vindex)`
`int list_number; /* number of list */`
`codeint vindex; /* real-time or AP table variable */`

Description: Provides a means of indexing into previously created frequency offset lists using a real-time variable or an AP table. The indexing into the list is from 0 to $N-1$, where N is the number of items in the list. The offset table has to have been created with the `create_offset_list` statement. It has no return value.

Arguments: `list_number` is the number between 0 and 255 for each list. This number must match the `list_number` used when creating the table.
`vindex` is a real-time variable (`v1` to `v14`) or an AP table (`t1` to `t60`).

Examples: See the example for the `vdelay` statement.

Related:	<code>create_offset_list</code>	Create table of frequency offsets
	<code>vdelay</code>	Select delay from table
	<code>vfreq</code>	Select frequency from table

vscan **Provide dynamic variable scan**

Applicability: Systems with imaging capability.

Syntax: `vscan(rtvar)`
`codeint rtval; /* AP math variable */`

Description: Provides a dynamic scan capability for compressed-compressed image sequences. It uses an AP real-time variable as a counter. This real-time variable must be supplied by the user, but need not be initialized since the `init_vscan` statement provides the initialization. `vscan` uses the standard `nt` parameter to determine the number of scans it performs. Since it is a real-time variable, it is limited to 32K scans. When `vscan` is used, system-supplied scan functionality is disabled, similar to the use of the `acquire` statement. `vscan` has no return value.

Arguments: `rtvar` is an AP math variable (`v1` to `v14`). Its range is 1 to 32767.

Examples: `pulsesequence()`

```

{
...
char gphase, gread, gslice;
int amplitude, igpe, stat;
double gpe;
...
initval(nv, v10);

```

```

initval(nf,v9);
loop(v10,v6);
  init_vscan(v11,np*nf);
  loop(v9,v5);
  ...
  acquire(np,1/sw);
  ...
  endloop(v5);
  vscan(v11);
endloop(v6);
...
}

```

Related: **acquire** Explicitly acquire data
init_vscan Initialize real-time variable for `vscan` statement

vsetuserap Set user AP register using real-time variable

Applicability: UNITY/INOVA systems.

Syntax: `vsetuserap(vi,register)`

```

codeint vi;          /* variable output to AP bus register */
int register;       /* AP bus register: 0, 1, 2, or 3 */

```

Description: Sets one of the four 8-bit AP bus registers that provide an output interface to custom user equipment. The outputs of these registers go the USER AP connectors J8212 and J8213, located on the back of the left console cabinet. The outputs have a 100-ohm series resistor for circuit protection.

Arguments: `vi` is an index to a real-time variable that contains a signed or unsigned real number or integer to output to the specified user AP register.

`register` is the AP register number, mapped to output lines as follows:

- Register 0 is J8213, lines 9 to 16.
- Register 1 is J8213, lines 1 to 8.
- Register 2 is J8212, lines 9 to 16.
- Register 3 is J8212, lines 1 to 8.

Examples: `vsetuserap(v1,1);`

Related: **readuserap** Read input from user AP register
setuserap Set user AP register

vsli Set SLI lines from real-time variable

Applicability: Systems with imaging capability and the Synchronous Line Interface (SLI) board, an option that provides an interface to custom user equipment.

Syntax: `vsli(address,mode,var)`

```

int address;        /* SLI board address */
int mode;          /* SLI_SET, SLI_OR, SLI_AND, SLI_XOR */
codeint var;       /* real-time variables for SLI lines */

```

Description: Sets lines from real-time variables on the SLI board. It has no return value.

`vsli` has a pre-execution delay of 10.950 μ s but no post-execution delay. The delay is composed of a 200-ns startup delay with 5 AP bus cycles (1 AP bus cycle = 2.150 μ s).

The logic levels on the SLI lines are not all set simultaneously. The four bytes of the 32 bit word are set consecutively, the low-order byte first. The delay between setting of consecutive bytes is 1 AP bus cycle ± 100 ns. (This 100-ns timing jitter is non-cumulative.)

The following error messages are possible:

- `Illegal mode: n` is caused by the mode argument *not* being one of `SLI_SET`, `SLI_OR`, `SLI_XOR`, or `SLI_AND`.
- `Illegal real-time variable: n` is caused by the var argument being outside the range `v1` to `v13`.

Arguments: `address` is the address of the SLI board in the system. It must match the address specified by jumper J7R on the board. Note that the jumpers 19-20 through -2 specify bits 2 through 11, respectively. Bits 0 and 1 are always zero. An installed jumper signifies a “one” bit, and a missing jumper a “zero”. The standard addresses for the SLI in the VME card cage:

- Digital (left) side is C90 (hex) = 3216
- Analog (right) side is 990 (hex) = 2448

`mode` determines how to combine the specified value with the current output of the SLI to produce the new output. The four possible modes:

- `SLI_SET` is to load the new value directly into the SLI
- `SLI_OR` is to logically OR the new value with the old
- `SLI_AND` is to logically AND the new value with the old
- `SLI_XOR` is to logically XOR the new value with the old

`var` specifies the real-time variables to use to set the SLI lines. Because the SLI has 32 bits and the real-time variables have only 16 bits, two real time variables are used for each call. The one specified in the calling sequence is used for the high-order word, and the next sequential real-time variable is used for the low-order word. Thus, legal values for `var` are `v1` to `v13`.

```
Examples: pulsesequence ( )
{
...
int SLIaddr;      /* Address of SLI board */
...
SLIaddr = getval("address");
...
vsli(SLIaddr, SLI_SET, v1);
...
}
```

Notice that `address` is not a standard parameter, but needs to be created by the user if it is mentioned in a user pulse sequence (for details, see the description of the `create` command).

Related:	<code>sli</code>	Set SLI lines
	<code>sp#off</code>	Turn off specified spare line
	<code>sp#on</code>	Turn on specified spare line

X

- xgate** **Gate pulse sequence from an external event**
- Applicability: All systems except *MERCURY-VX*, *MERCURY*, and *GEMINI 2000*.
- Syntax: `xgate(events)`
`double events; /* number of external events */`
- Description: Halts the pulse sequence. When the number of external events has occurred, the pulse sequence continues.
- Arguments: `events` is the number of external events.
- Examples: `xgate(2.0);`
`xgate(events);`
- Related: `rotorperiod` Obtain rotor period of MAS rotor
`rotorsync` Gated pulse sequence delay from MAS rotor position
-
- xmtroff** **Turn off observe transmitter**
- Syntax: `xmtroff()`
- Description: Explicitly gates off the observe transmitter in the pulse sequence.
- Related: `xmtron` Turn on observe transmitter
-
- xmtron** **Turn on observe transmitter**
- Syntax: `xmtron()`
- Description: Explicitly gates on the observe transmitter in the pulse sequence. Transmitter gating is handled automatically by the statements `obspulse`, `pulse`, `rgpulse`, `shaped_pulse`, `simpulse`, `sim3pulse`, `simshaped_pulse`, `sim3shaped_pulse`, and `spinlock`.
The `obsprgon` statement generally needs to be enabled with an explicit `xmtron` statement and followed by a `xmtroff` call.
- Related: `xmtroff` Turn on observe transmitter
-
- xmtrphase** **Set transmitter small-angle phase, rf type C, D**
- Applicability: All systems except *GEMINI 2000*.
- Syntax: `xmtrphase(multiplier)`
`codeint multiplier; /* real-time AP variable */`
- Description: Sets the phase of transmitter in units set by the `stepsize` statement. The small-angle phaseshift is a product of `multiplier` and the preset step size for the transmitter. If `stepsize` has not been used, the default step size is 90°.
If the product of the step size set by the `stepsize` statement and `multiplier` is greater than 90°, the sub-90° part is set by `xmtrphase`. Carryovers that are multiples of 90° are automatically saved and added in at the time of the next 90° phase selection (such as at the time of the next `pulse` or `decpulse`).

`xmtrphase` should be distinguished from `txphase`. `xmtrphase` is needed any time the transmitter phase shift is to be set to a value that is not a multiple of 90°. `txphase` is optional and rarely is needed.

Arguments: `multiplier` is a small-angle phaseshift multiplier and must be an AP variable.

Examples: `xmtrphase(v1);`

Related: `dcplrphase` Set small-angle phase of first decoupler, rf type C or D
`dcplr2phase` Set small-angle phase of second decoupler, rf type C or D
`dcplr3phase` Set small-angle phase of third decoupler, rf type C or D
`stepsize` Set small-angle phase step size, rf type C or D

Z

`zero_all_gradients` Zero all gradients

Syntax: `zero_all_gradients()`

Description: Sets the gradients in the x, y, and z axes to zero.

Examples: `vgradient(3.0, 54.7, 0.0);`
`delay(0.001);`
`zero_all_gradients();`

Related: `vgradient` Variable angle gradient
`vgradpulse` Variable angle gradient pulse
`vashapedgradient` Variable angle shaped gradient
`vashapedgradpulse` Variable angle shaped gradient pulse

`zgradpulse` Create a gradient pulse on the z channel

Applicability: Systems with imaging or PFG module.

Syntax: `zgradpulse(value, delay)`
`double value; /* amplitude of gradient on z channel */`
`double delay; /* length of gradient in sec */`

Description: Creates a gradient pulse on the z channel with amplitude and duration given by the arguments. At the end of the pulse, the gradient is set to 0.

Arguments: `value` is the amplitude of the pulse. It is a real number between -32768 and 32767.

`delay` is any delay parameter, such as `d2`.

Examples: `zgradpulse(1234.0, d2);`

Related: `dps_show` Draw delay or pulses for graphical display of a sequence
`rgradient` Set gradient to specified level
`vgradient` Set gradient to level determined by real-time math

Chapter 4. UNIX-Level Programming

Sections in this chapter:

- 4.1 “UNIX and VNMR,” this page
- 4.2 “UNIX: A Reference Guide,” page 278
- 4.3 “UNIX Commands Accessible from VNMR,” page 280
- 4.4 “Background VNMR,” page 280
- 4.5 “Shell Programming,” page 282

UNIX is among the most popular operating systems in the world today, with hundreds of books written on every aspect of UNIX, at every level. This manual does not attempt to replace that material, but attempts instead to provide a glimpse of the subject and then to guide you to resources that can paint a fuller picture.

4.1 UNIX and VNMR

Many VNMR software users do not need to have any contact with UNIX whatsoever. Although the UNIX operating system is running the workstation at all times, a user who wants to use only the Varian VNMR software package can do just that. In some installations, the system operator starts VNMR and different users simply sit down at the instrument and use the NMR software, just as in the earlier generation of NMR spectrometers. The worst that could happen is that the previous user logged out, requiring the next user to log back in with their name and password. After completing this login procedure, the VNMR software starts automatically, and again you do not need to have contact with UNIX if you don't wish to do so.

UNIX provides more than a hundred “tools” that can perform almost anything short of complex mathematical manipulations like a Fourier transform. For example, UNIX has commands to search through your files, to sort line lists, to tell you who is on the system, to run a program unattended at night, and much more. The more performance you want to get out of your computer, and the more you want to be able to do, the more it will benefit you to learn about UNIX.

Dozens of manuals are available for your Sun computer system, and surely you will not want to or be able to read them all. For those with no exposure to UNIX, however, we strongly recommend that you read any user's guides that accompanied your Sun workstation. After that, a book we have found to be particularly useful is *The UNIX System* by S. R. Bourne (Addison-Wesley). For coverage of the Solaris environment, a good book is *Guide to Solaris* by John Pew (ZD Press).

4.2 UNIX: A Reference Guide

A brief overview of the UNIX computer operating system and its associated commands appears below. For more information on UNIX, refer to the Sun manuals covering Solaris or to UNIX general references found at larger bookstores.

Command Entry

Single command entry	<code>commandname</code>
Command names	Generally lowercase, case-sensitive
Multiple command separator	<code>;</code> (semicolon) or new line
Arguments	<code>commandname arg1 arg2</code>

File Names

Typical (shorthand names usually used)	<code>/vnmr/fidlib/fid1d</code>
Level separator	<code>/</code> (forward slash)
Individual filenames	Any number of characters (256 unique)
Characters in filenames	Underline, period often used
First character in filename	First character unrestricted

File Handling Commands

Delete (unlink) a file(s)	<code>rm filenames</code>
Copy a file	<code>cp filename newfilename</code>
Rename a file	<code>mv filename newfilename</code>
Make an alias (link)	<code>ln filename1 filename2</code>
Sort files	<code>sort filenames</code>
Tape backup	<code>tar</code>

Directory Names

Home directory for each user	Directory assigned by administrator
Working directory	Current directory user is in
Shorthand for current directory	<code>.</code> (single period)
Shorthand for parent directory	<code>..</code> (two periods)
Shorthand for home directory	<code>~</code> (tilde character)
Root directory	<code>/</code> (forward slash)

Directory Handling Commands

Create (or make) a directory	<code>mkdir directoryname</code>
Rename a directory	<code>mv dirname newdirname</code>
Remove an empty directory	<code>rmdir directoryname</code>
Delete directory and all files in it	<code>rm -r directoryname</code>
List files in a directory, short list	<code>ls directoryname</code>

List files in a directory, long list	<code>ls -l directoryname</code>
Copy file(s) into a directory	<code>cp filenames directoryname</code>
Move file(s) into a directory	<code>mv filenames directoryname</code>
Print working (current) directory	<code>pwd</code>
Change current directory	<code>cd newdirectoryname</code>

Text Commands

Edit a text file using vi editor	<code>vi filename</code>
Edit a text file using ed editor	<code>ed filename</code>
Edit a text file using textedit editor	<code>textedit filename</code>
Display first part of a file	<code>head filename</code>
Display last part of a file	<code>tail filename</code>
Concatenate and display files	<code>cat filenames</code>
Compare two files	<code>cmp filename1 filename2</code>
Compare two files deferentially	<code>diff filename1 filename2</code>
Print file(s) on line printer	<code>lp filenames</code>
Search file(s) for a pattern	<code>grep expression filenames</code>
Find spelling errors	<code>spell filename</code>

Other Commands

Pattern scanning and processing	<code>awk pattern filename</code>
Change file protection mode	<code>chmod newmode filename</code>
Display current date and time	<code>date</code>
Summarize disk usage	<code>du -k</code>
Report free disk space	<code>df -k filesystem</code>
Kill a background process	<code>kill process-id</code>
Sign onto system	<code>login username</code>
Send mail to other users	<code>mail</code>
Print out UNIX manual entry	<code>man commandname</code>
Process status	<code>ps</code>
Convert quantities to another scale	<code>units</code>
Who is on the system	<code>w</code>
System identification	<code>uname -a</code>

Special Characters

Send output into named file	<code>> filename</code>
Append output into named file	<code>>> filename</code>
Take input from named file	<code>< filename</code>
Send output from first command to input of second command (pipe)	<code> (vertical bar)</code>
Wildcard character for a single character in filename operations	<code>?</code>
Wildcard character for multiple characters in filename operations	<code>*</code>

Run program in background	&
Abort the current process	Control-C
Logout or end of file	Control-D

4.3 UNIX Commands Accessible from VNMR

Several UNIX commands are accessible directly from VNMR, including the `vi`, `edit`, `shell`, `shelli`, and `w` commands.

Opening a UNIX Text Editor from VNMR

Entering `vi(file)` or `edit(file)` from VNMR invokes a UNIX text editor for editing the name of the file given in the argument (e.g., `vi('myfile')`). On the Sun workstation, a popup screen contains the editing window. On the GraphOn terminal, the main screen becomes the editing window. Exiting from the editor closes the editing window.

The most useful UNIX program you can learn is `vi`, the powerful UNIX text editor. UNIX provides at least two other text editors, `ed` and `textedit`, that are easier to learn than `vi`, but `vi` is the most widely used UNIX text editor and worth learning because of its many features. A text editor is necessary if you wish to prepare or edit text files, such as macros, menus, and pulse sequences (short text files such as those used to annotate spectra are usually edited in simpler ways)

Opening a UNIX Shell from VNMR

Entering the `shell` command from VNMR without any argument brings up a normal UNIX shell. On the Sun, a popup window is created. On the GraphOn terminal, the entire terminal is used. Entering `shell` with the syntax

```
shell(command)<:$file1$file2,...>
```

executes the UNIX command line given, displays any text lines generated, and returns control to VNMR when finished. If return arguments `$file1`, `$file2`,... are present, the results of the command line are returned to the files listed, with each file receiving a single display line, for example:

```
shell('ls -t|grep May'):$filelist)
```

On a terminal, the command `shelli(command)` runs interactively the UNIX command line given as the argument. No return or output variables are allowed. Under window-based VNMR, `shelli` is identical to the `shell` command.

To display information about who is on UNIX, enter the `w` command from VNMR.

4.4 Background VNMR

Running VNMR commands and processing as a UNIX background tasks are possible by using `Vnmr` and `vbg` commands from UNIX.

Running VNMR Command as a UNIX Background Task

VNMR commands can be executed as a UNIX background task by using the command

```
Vnmr -mback <-n#> command_string <&>
```

where `-mback` is a keyword (entered exactly as shown), `-n#` sets that processing will occur in experiment # (e.g., `-n2` sets experiment 2), and `command_string` is a VNMR command or macro. If `-n#` is omitted, processing occurs in experiment 1. If more than one command is to be executed, place double quote marks around the command string; e.g., `"printon dg printoff"`

UNIX background operation (`&`) is possible, as in `Vnmr -mback wft2da &`. Usually it is a good idea to use redirection (`>` or `>>`) with background processing:

```
Vnmr -mback -n3 wft2da > vnmroutput &
```

The UNIX shell script `vbg` (see below) is also available to run VNMR processing in the background.

All text output, both normal text window output and the typical two-letter prompts that appear in the upper right (“FT”, “PH”, etc.), are directed to the UNIX output window.

Note the following characteristics of the `Vnmr` command:

- Full multiuser protection is implemented. If user `vnmr1` is logged in and using experiment 1, and another person logs in as `vnmr1` from another terminal and tries to use the background `Vnmr`, the second `vnmr1` receives the message “experiment 1 locked” if that person tries to use experiment 1. The second user can use other experiments, however.
- Pressing Control-C does *not* work: if you type the UNIX command shown, you cannot abort it with Control-C.
- Operation within VNMR is possible using the shell command; e.g.,
`shell('Vnmr -mback -n2 wftda')`
- Plotting is possible; e.g.,
`Vnmr -mback -n3 "pl pscale pap page"`
- Printing is possible; e.g.,
`Vnmr -mback "printon dg printoff"`

Running VNMR Processing in the Background

The UNIX shell script `vbg` runs VNMR processing in the background. The main requirements are that `vbg` must be run from within a UNIX shell and that no foreground or other background processes can be active in the designated experiment. From UNIX, `vbg` is entered in the following form:

```
vbg # command_string <prefix>
```

where `#` is the number of an experiment (from 1 to 9) in the user's directory in which the background processing is to take place, `command_string` is one or more VNMR commands and macros to be executed in the background (double quotes surrounding the string are mandatory), and `prefix` is the name of the log file, making the full log file name `prefix_bgf.log` (e.g., to perform background plotting from experiment 3, enter `vbg 3 "vsadj pl pscale pap page" plotlog`).

The default log file name is `#_bgf.log`, where `#` is the experiment number. The log file is placed in the experiment in which the background processing takes place. Refer to the *VNMR Command and Parameter Reference* for more information on `vbg`.

4.5 Shell Programming

The shell executes commands given either from a terminal or contained in a file. Files containing commands and control flow notation, called *shell scripts*, can be created, allowing users to build their own commands. This section provides a very short overview of such programming; refer to the UNIX literature for more information.

Shell Variables and Control Formats

As a programming language, the shell provides string-valued variables: \$1, \$2,.... The number of variables is available as \$# and the file being executed is available as \$0. Control flow is provided by special notation, including *if*, *case*, *while*, and *for*. The following format is used:

<pre>if command-list (not Boolean) then command-list else command-list fi</pre>	<pre>while command-list do command-list done</pre>
<pre>case word in pattern) command-list;; ... esac</pre>	<pre>for name (in w1 w2) do command-list done</pre>

Shell Scripts

The shell scripts below show two ways a shell script might be written for the same command. In both scripts, the command name *lower* is selected by the user and the intent of the command is to convert a file to lower case, but the scripts differ in features.

The first script:

```
: lower --- command to convert a file to lower case
: usage  lower filename
: output filename.lower
tr '[A-Z]' '[a-z]' < $1 > $1.lower
```

The second script:

```
: lower --- a command to convert a file to lower case
: usage  lower filename or lower inputfile outputfile
: output filename.lower or output file
case $# in
  1) tr '[A-Z]' '[a-z]' <$1 > $1.lower;;
  2) tr '[A-Z]' '[a-z]' <$1 > $2;;
  *) echo "Usage: lower filename or lower \
        inputfile outputfile";;
esac
```

In the first script, only one form of input is allowed, but in the second script, not only is a second form of input allowed but a prompt explaining how to use *lower* appears if the user enters *lower* without any arguments. Notice that in both scripts a colon is used to identify lines containing comments (and that each script is carefully commented).

Chapter 5. Parameters and Data

Sections in this chapter:

- 5.1 “VNMR Data Files,” this page
- 5.2 “FDF (Flexible Data Format) Files,” page 290
- 5.4 “Creating and Modifying Parameters,” page 298
- 5.5 “Modifying Parameter Displays in VNMR,” page 304
- 5.6 “User-Written Weighting Functions,” page 307
- 5.7 “User-Written FID Files,” page 310

5.1 VNMR Data Files

Although a number of different files are used by VNMR to process data, VNMR data files use only two basic formats:

- *Binary format* – Stores FIDs and transformed spectra. Binary files consist of a file header describing the details of the data stored in the file followed by the spectral data in integer or floating point format. Because of the different representations of integer and floating point numbers on different computer systems, binary files cannot be copied between VAX and Sun systems without a conversion step. On Sun systems, integers are 32-bits wide and are stored byte by byte, with the most significant byte at the lowest address of the full 32-bit word. On VAX systems, integers are stored with the least significant byte at the lowest address. The Sun system also uses the IEEE standard floating point format, whereas the VAX uses a slightly different format in which the floating point exponent is different. VNMR software contains routines to manipulate data (FIDs) that has been transferred between Sun and VAX systems.
- *Text format* – Stores all other forms of data, such as line lists, parameters, and all forms of reduced data obtained by analyzing NMR spectra. The advantage of storing data in text format is that it can be easily inspected and modified with a text editor and can be copied from one computer to another with no major problems. The text on both Sun and VAX systems use the ASCII format in which each letter is stored in one byte.

Binary Data Files

Binary data files are used in the VNMR file system to store FIDs and the transformed spectra. FIDs and their associated parameters are stored as `filename.fid` files. A `filename.fid` file is always a directory file containing the following individual files:

- `filename.fid/fid` is a binary file containing the FIDs.
- `filename.fid/procpar` is a text file with parameters used to obtain the FIDs.
- `filename.fid/text` is a text file.

In experiments, binary files store FIDs and spectra. In non-automation experiments, the FID is stored within the experiment regardless of what the parameter `file` is set to. The path `~username/vnmrsys/expn/acqfil/fid` is the full UNIX path to that file. FIDs are stored as either 16- or 32-bit integer binary data files, depending on whether the data acquisition was performed with `dp='n'` or `dp='y'`, respectively.

After an Fourier transform, the experiment file `expn/datdir/data` contains the transformed spectra stored in 32-bit floating point format. This file always contains complex numbers (pairs of floating point numbers) except if `pmode=''` was selected in processing 2D experiments. To speed up the display, VNMR stores also the phased spectral information in `expn/datdir/phasefile`, where it is available only after the first display of the data. In arrayed or 2D experiments, `phasefile` contains only those traces that have been displayed at least once after the last FT or phase change. Therefore, a user program to access that file can only be called after a complete display of the data.

The directory file `expn` for current experiment *n* contains the following files:

- `expn/curpar` is a text file containing the current parameters.
- `expn/procpar` is a text file containing the last used parameters.
- `expn/text` is a text file.
- `expn/acqfil/fid` is a binary file that stores the FIDs.
- `expn/datdir/data` is a binary file with transformed complex spectrum.
- `expn/datdir/phasefile` is a binary file with transformed phased spectrum.
- `expn/sn` is saved display number *n*.

To access information from one of the experiment files of the current experiment, the user must be sure that each of these files has been written to the disk. The problem arises because VNMR tries to keep individual blocks of the binary files in the internal buffers as long as possible to minimize disk accesses. This buffering in memory is not the same as the disk cache buffering that the UNIX operating system performs. The command `flush` can be used in VNMR to write all data buffers into disk files (or at least into the disk cache, where it is also available for other processes). The command `fsave` can be used in VNMR to write all parameter buffers into disk files.

The default directory for the 3D spectral data is `curexp/datadir3d`. The output directory for the extracted 2D planes is the same as that for the 3D spectral data, except that 2D uses the `/extr` subdirectory and 3D uses the `/data` subdirectory. Within the 3D data subdirectory `/data` are the following files and further subdirectories:

- `data1` to `data#` are the actual binary 3D spectral data files. If the option `nfiles` is not entered, the number of data files depends upon the size of the largest 2D plane and the value for the UNIX environmental parameter `memsize`.
- `info` is a directory that stores the 3D coefficient text file (`coef`), the binary information file (`procdat`), the 3D parameter set (`procpar3d`), and the automation file (`auto`). The first three files are created by the `set3dproc()` command within VNMR. The last file is created by the `ft3d` program.
- `log` is a directory that stores the log files produced by the `ft3d` program. The file `f3` contains all the log output for the f_3 transform. For the f_2 and f_1 transforms, there are two log file for each data file, one for the f_2 transform (`f2.#`) and one for the f_1 (`f1.#`). The file master contains the log output produced by the master `ft3d` program.

Data File Structures

A data file header of 32 bytes is placed at the beginning of a VNMR data file. The header contains information about the number of blocks and their size. It is followed by one or more data blocks. At the beginning of each block, a data block header is stored, which contains information about the data within the individual block. A typical 1D data file, therefore, has the following form:

```
data file header
header for block 1
data of block 1
header for block 2
data of block 2
. . .
```

The data headers allow for 2D hypercomplex data that may be phased in both the f_1 and f_2 directions. To accomplish this, the data block header has a second part for the 2D hypercomplex data. Also, the data file header, the data block header, and the data block header used with all data have been slightly revised. The new format allows processing of FIDs obtained with earlier versions of VNMR. The 2D hypercomplex data files with `datafilehead.nbheaders=2` have the following structure:

```
data file header
header for block 1
second header for block 1
data of block 1
header for block 2
second header for block 2
data of block 2
. . .
```

All data in this file is contiguous. The byte following the 32nd byte in the file is expected to be the first byte of the first data block header. If more than one block is stored in a file, the first byte following the last byte of data is expected to be the first byte of the second data block header. Note that these data blocks are not disk blocks; rather, they are a complete data group, such as an individual trace in an experiment. For non-arrayed 1D experiments, only one block will be present in the file.

Details of the data structures and constants involved can be found in the file `data.h`, which is provided as part of the VNMR source code license. The C specification of the file header is the following:

```
struct datafilehead
/* Used at start of each data file (FIDs, spectra, 2D) */
{
long nblocks; /* number of blocks in file */
long ntraces; /* number of traces per block */
long np; /* number of elements per trace */
long ebytes; /* number of bytes per element */
long tbytes; /* number of bytes per trace */
long bbytes; /* number of bytes per block */
short vers_id; /* software version, file_id status bits */
short status; /* status of whole file */
long nbheaders; /* number of block headers per block */
};
```

The variables in `datafilehead` structure are set as follows:

- `nblocks` is the number of data blocks present in the file.

- `ntraces` is the number of traces in each block.
- `np` is the number of simple elements (16-bit integers, 32-bit integers, or 32-bit floating point numbers) in one trace. It is equal to twice the number of complex data points.
- `ebytes` is the number of bytes in one element, either 2 (for 16-bit integers in single precision FIDs) or 4 (for all others).
- `tbytes` is set to $(np * ebytes)$.
- `bbytes` is set to $(ntraces * tbytes + nbheaders * sizeof(struct datablockhead))$. The size of the `datablockhead` structure is 28 bytes.
- `vers_id` is the version identification of present VNMR.
- `nbheaders` is the number of block headers per data block.
- `status` is bits as defined below with their hexadecimal values. All other bits must be zero.

Bits 0–6: file header and block header status bits (bit 6 is unused):

0	<code>S_DATA</code>	0x1	0 = no data, 1 = data
1	<code>S_SPEC</code>	0x2	0 = FID, 1 = spectrum
2	<code>S_32</code>	0x4	*
3	<code>S_FLOAT</code>	0x8	0 = integer, 1 = floating point
4	<code>S_COMPLEX</code>	0x10	0 = real, 1 = complex
5	<code>S_HYPERCOMPLEX</code>	0x20	1 = hypercomplex

* If `S_FLOAT=0`, `S_32=0` for 16-bit integer, or `S_32=1` for 32-bit integer.
If `S_FLOAT=1`, `S_32` is ignored.

Bits 7–14: file header status bits (bits 10 and 15 are unused):

7	<code>S_ACQPAR</code>	0x80	0 = not Acqpar, 1 = Acqpar
8	<code>S_SECND</code>	0x100	0 = first FT, 1 = second FT
9	<code>S_TRANSF</code>	0x200	0 = regular, 1 = transposed
11	<code>S_NP</code>	0x800	1 = np dimension is active
12	<code>S_NF</code>	0x1000	1 = nf dimension is active
13	<code>S_NI</code>	0x2000	1 = ni dimension is active
14	<code>S_NI2</code>	0x4000	1 = ni2 dimension is active

Block headers are defined by the following C specifications:

```
struct datablockhead
/* Each file block contains the following header */
{
short scale;      /* scaling factor */
short status;    /* status of data in block */
short index;     /* block index */
short mode;      /* mode of data in block */
long ctcount;    /* ct value for FID */
float lpval;     /* f2 (2D-f1) left phase in phasefile */
float rpval;     /* f2 (2D-f1) right phase in phasefile */
float lvl;       /* level drift correction */
float tlt;       /* tilt drift correction */
};
```

status is bits 0–6 defined the same as for file header status. Bits 7–11 are defined below (all other bits must be zero):

7	MORE_BLOCKS	0x80	0 = absent, 1 = present
8	NP_CMPLX	0x100	0 = real, 1 = complex
9	NF_CMPLX	0x200	0 = real, 1 = complex
10	NI_CMPLX	0x400	0 = real, 1 = complex
11	NI2_CMPLX	0x800	0 = real, 1 = complex

Additional data block header for hypercomplex 2D data:

```
struct hypercmlxbhead
{
short s_spare1;      /* short word: spare */
short status;       /* status word for block header */
short s_spare2;     /* short word: spare */
short s_spare3;     /* short word: spare */
long l_spare1;      /* long word: spare */
float lpvall1;      /* 2D-f2 left phase */
float rpvall1;      /* 2D-f2 right phase */
float f_spare1;     /* float word: spare */
float f_spare2;     /* float word: spare */
};
```

Main data block header mode bits 0–15:

Bits 0–3: bit 3 is currently unused

0	NP_PHMODE	0x1	1 = ph mode
1	NP_AVMODE	0x2	1 = av mode
2	NP_PWRMODE	0x4	1 = pwr mode

Bits 4–7: bit 7 is currently unused

4	NF_PHMODE	0x10	1 = ph mode
5	NF_AVMODE	0x20	1 = av mode
6	NF_PWRMODE	0x40	1 = pwr mode

Bits 8–11: bit 11 is currently unused

8	NI_PHMODE	0x100	1 = ph mode
9	NI_AVMODE	0x200	1 = av mode
10	NI_PWRMODE	0x400	1 = pwr mode

Bits 12–15: bit 15 is currently unused

12	NI2_PHMODE	0x8	1 = ph mode
13	NI2_AVMODE	0x100	1 = av mode
14	NI2_PWRMODE	0x2000	1 = pwr mode

Usage bits for additional block headers (hypercmlxbhead.status)

U_HYPERCOMPLEX	0x2	1 = hypercomplex block structure
----------------	-----	----------------------------------

The actual FID data is typically stored as pairs of integers in either 16-bit format or 32-bit format. The first integer represents the real part of a complex pair (or the X channel from the perspective of quadrature detection); the second integer represents the imaginary component (or the Y channel). In phase-sensitive 2D experiments, “X” and “Y”

experiments are similarly interleaved. The format of the integers and the organization as complex pairs must be specified in the data file header.

VNMR Use of Binary Data Files

To understand how VNMR uses individual binary data files, consider the example of a simple Fourier transform followed by the display of the spectrum. The FT is performed with the command `ft`, which acts as follows:

1. Copy processing parameters from `curpar` into `propar`.
2. If FID is not in the `fid` file buffer, open the `fid` file (if not already open) and load it into buffer.
3. Initialize the `data` file with the proper size (using parameter `fn`).
4. Convert integer FID into floating point and store result in data file buffer.
5. Apply dc drift correction and first point correction.
6. Apply weighting function, if requested.
7. Zero fill data, if required.
8. Fourier transform data in data file buffer.

At this point, the data file buffer contains the complex spectrum. Unless other FTs are done, which use up more memory space than assigned to the data file buffer, the data is not automatically written to the file `expn/datdir/data` at this time. Joining a different experiment or the command `flush` would perform such a write operation.

The `ds` command takes the following steps in displaying the spectrum:

1. If data is not in `phasefile` buffer or if the phase parameters have changed, `ds` tries to open the phase file (if not already open) and load data into the buffer (if it is there). If `ds` is unsuccessful, the data must be phased:
 - a. If the data is not in the data file buffer, `ds` opens the data file (if not already open) and loads it into the buffer.
 - b. `ds` initializes the `phasefile` buffer with the proper size (using the same parameter `fn` as used for last FT).
 - c. `ds` calculates the phased (or absolute value) spectrum and stores it in the `phasefile` buffer.
2. `ds` calculates the display and displays the spectrum.

The `phasefile` buffer now contains the phased spectrum. Unless other displays are done, which use up more memory space than assigned to the `phasefile` buffer, the data is not automatically written to the file `expn/datdir/phasefile` at this time. Joining a different experiment or entering the command `flush` would perform such a write operation.

Depending on the nature of the data processing, the two files `data` and `phasefile` will contain different information, as follows:

- *After a 1D FT* – `data` contains a complex spectrum, which can be used for phased or absolute value displays.
- *After a 1D display* – `phasefile` contains either phased or absolute value data, depending on which type of display had been selected.

- *After a 2D FID display* – `data` contains the complex FIDs, floated and normalized for different scaling during the 2D acquisition. `phasefile` contains the absolute value or phased equivalent of this FID data.
- *After the first FT in a 2D experiment* – `data` contains the once-transformed spectra. This is equivalent to the interferograms, if the data is properly reorganized (see f_1 and f_2 traces below). If a display is done now, `phasefile` contains phased (or absolute value) half-transformed spectra or interferograms.
- *After the second FT in a 2D experiment* – `data` contains the fully transformed spectra, and after a display, `phasefile` contains the equivalent phased or absolute-value spectra.

Storing Multiple Traces

Arrayed experiments are handled in VNMR by storing the multiple traces of arrayed experiments in one file. To allow this, the file is divided into several blocks, each containing one trace. Therefore, in an arrayed experiment, the files `fid`, `data`, and `phasefile` typically contain the same number of blocks. The number of traces in an arrayed experiment is identical to the parameter `arraydim`. The only complication when working with such data files in arrayed experiments might be that there are “holes” in such files (in the UNIX version of VNMR only). The holes occur if not all FIDs are transformed or displayed. They do not present a problem as long as a user program just uses a “seek” operation to position the file pointer at the right point in the file and does not try to read traces that have never been calculated.

One can look at 2D experiments as a special case of an arrayed experiment; however, the situation is complicated by the fact that the data often has to be transposed. After the first FT, the resulting spectra are transposed to become the FIDs used for the second FT, and after the second FT, the user might want to work on traces in either the f_1 or f_2 direction. Furthermore, some types of symmetrization and baseline correction algorithms may have to work on traces in both directions at the same time. The situation is complicated by the fact that the “in place” matrix transposition of large data sets is a very complex operation, requiring many disk accesses and can therefore not be used in a system that has to transform large non-symmetric data sets in a short time.

“Out of place” transpositions are not acceptable for large data sets because they double the disk space requirements of the large 2D experiments. Therefore, VNMR software uses a storage format in the 2D data file that allows access to both rows and columns at the same time. Because of the proprietary nature and complexity of the algorithm involved, it is not presented here. The storage format is used only in `datdir/data`.

2D FIDs are stored the same way as 1D FIDs. Transformed 2D data is stored in `data` in large blocks of typically 256K bytes. This means that multiple traces are combined to form a block. Within one block, the data is not stored as individual traces but is scrambled to make access to rows and columns as fast as possible.

Phased 2D data is stored in `phasefile` in the same large blocks as in `data`, but the traces within each block are stored sequentially in their natural order. Both traces along f_1 and f_2 are stored in the same file. The first block(s) contain traces number 1 to f_{n1} along the f_1 axis; the next block(s) contains traces number 1 to f_{n1} along the f_2 axis. Note again, that `phasefile` will only contain data if the corresponding display operation has been performed. Therefore, in most typical situations, where only a display along one of the two 2D axes is done, `phasefile` will contain only the block(s) for the traces along f_1 or a 'hole' followed by the block(s) for the traces along f_2 . Furthermore, in large 2D experiments, where multiple blocks must be used to store the whole data, only a 'full' display will ensure that all blocks were actually calculated.

Header and Data Display

The VNMR commands `ddf`, `ddff`, and `ddfp` display file headers and data. `ddf` displays the data file in the current experiment. Without arguments, only the file header is displayed. Using `ddf<(block_number, trace_number, first_number)>`, `ddf` displays a block header and part of the data of that block is displayed. `block_number` is the block number, default 1. `trace_number` is the trace number within the block, default 1. `first` is the first data element number within the trace, default 1.

The `ddff` command displays the FID file in the current experiment and the `ddfp` command displays the phase file in the current experiment. Without any arguments, both display only the file header. Using the same arguments as the `ddf` command, `ddff` and `ddfp` display a block header and part of the data of that block is displayed. The `mstat` command displays statistics of memory usage by VNMR commands.

5.2 FDF (Flexible Data Format) Files

The FDF file format was developed to support the ImageBrowser, chemical shift imaging (CSI), and single-voxel spectroscopy (SVS) applications. When these applications were under development, the current VNMR file formats for image data were not easily usable for the following reasons:

- The data and parameters describing the data were separated into two files. If the files were ever separated, there would be no way to use or understand the data.
- The data file had embedded headers that were not needed and provided no useful purpose.
- There was no support or structure for saving multislice data sets or a portion of a multislice data set as image files.

FDF was developed to make it similar to VNMR formats, with parameters in an easy-to-manipulate ASCII format and a data header that is not fixed so that parameters can be added. This format makes it easy for users and different applications to manipulate the headers and add needed parameters without affecting other applications.

File Structures and Naming Conventions

Several file structure and naming conventions have been developed for more ease in using and interpreting files. Applications should not assume certain names for certain file; however, specific applications may assume default names when outputting files.

Directories

The directory-naming convention is `<name>.dat`. The directory can contain a parameter file and any number of FDF files. The name of the parameter file is `procpa`, a standard VNMR name.

File Names

Each type of file has a different name in order to make the file more recognizable to the user. For image files, the name is `image[nnnn].fdf`, where `nnnn` is a numeric string from 0000 to 9999. For volumes, the name is `volume[nnnn].fdf`, where `nnnn` is also a numeric string from 0000 to 9999. Programs that read FDF files should not depend on these names because they are conventions and not definitions.

Compressed Files

Although not implemented at this time, compression will be supported for the data portion of the file. The headers will not be compressed. A field will be put in the header to define the compression method or to identify the command to uncompress the data.

File Format

The format of an FDF file consists of a header and data:

- **Listing 11** is an example of an FDF header. The header is in ASCII text and its fields are defined by a data definition language. Using ASCII text makes it easy to decipher the image content and add new fields, and is compatible with the ASCII format of the `procpars` file. The fields in the data header can be in any order except for the magic number string, which are the first characters in the header, and the end of header character `<null>`, which must immediately precede the data. The fields have a C-style syntax. A correct header can be compiled by the C compiler and should not result in any errors.
- The data portion is binary data described by fields in the header. It is separated from the header by a null character.

Listing 11. Example of an FDF Header

```
#!/usr/local/fdf/startup
int rank=2;
char *spatial_rank="2dfov";
char *storage="float";
int bits=32;
char *type="absval";
int matrix[]={256,256};
char *abscissa[]={ "cm", "cm" };
char *ordinate[]={ "intensity" };
float span[]={-10.000000,-15.000000};
float origin[]={5.000000,6.911132};
char *nucleus[]={ "H1", "H1" };
float nucfreq[]={200.067000,200.067000};
float location[]={0.000000,-0.588868,0.000000};
float roi[]={10.000000,15.000000,0.208557};
float orientation[]={0.000000,0.000000,1.000000,-1.000000,
0.000000,0.000000,0.000000,1.000000,0.000000};
checksum=0787271376;

<zero>
```

Header Parameters

The fields in the data header are defined in this section.

Magic Number

The magic number is an ASCII string that identifies the file as a FDF file. The first two characters in the file must be `#!`, followed by the identification string. Currently, the string is `#!/usr/local/fdf/startup`.

Data Set Dimensionality or Rank Fields

These entries specify the data organization in the binary portion of the file.

- `rank` is a positive integer value (1, 2, 3, 4,...) giving the number of dimensions in the data file (e.g., `int rank=2`);
- `matrix` is a set of rank integers giving the number of data points in each dimension (e.g., for `rank=2`, `float matrix[] = {256, 256}`);
- `spatial_rank` is a string ("none", "voxel", "1dfov", "2dfov", "3dfov") for the type of data (e.g., `char *spatial_rank="2dfov"`);

Data Content Fields

The following entries define the data type and size.

- `storage` is a string ("integer", "float") that defines the data type (e.g., `char *storage="float"`);
- `bits` is an integer (8, 16, 32, or 64) that defines the size of the data (e.g., `float bits=32`);
- `type` is a string ("real", "imag", "absval", "complex") that defines the numerical data type (e.g., `char *type="absval"`);

Data Location and Orientation Fields

The following entries define the user coordinate system and specify the size and position of the region from which the data was obtained. **Figure 6** illustrates the coordinate system. Vectors that correspond to header parameters are shown in **boldface**.

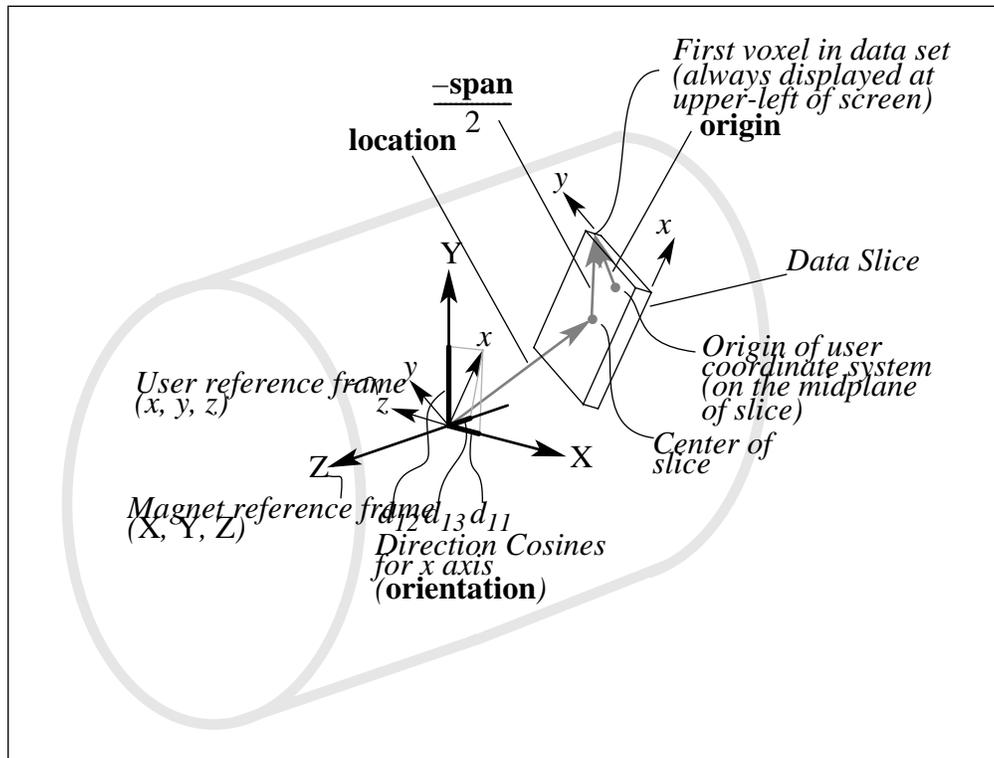


Figure 6. Magnet Coordinates as Related to User Coordinates.

- `orientation` specifies the orientation of the user reference frame (x, y, z) with respect to the magnet frame (X, Y, Z). `orientation` is given as a set of nine direction cosines, in the order:
 $d_{11}, d_{12}, d_{13}, d_{21}, d_{22}, d_{23}, d_{31}, d_{32}, d_{33}$
 where:
 $x = d_{11}X + d_{12}Y + d_{13}Z$
 $y = d_{21}X + d_{22}Y + d_{23}Z$
 $z = d_{31}X + d_{32}Y + d_{33}Z$
 and
 $X = d_{11}x + d_{21}y + d_{31}z$
 $Y = d_{12}x + d_{22}y + d_{32}z$
 $Z = d_{13}x + d_{23}y + d_{33}z$
 The value is written as nine floating point values grouped as three triads (e.g., `float orientation[] = {0.0, 0.0, 1.0, -1.0, 0.0, 0.0, 0.0, 1.0, 0.0};`).
- `location` is the position of the center of the acquired data volume relative to the center of the magnet, in the user's coordinate system. The position is given in centimeters as a triple (three floating point values) of x, y, z distances (e.g., `float location[] = {10.0, 15.0, 0.208};`).
- `roi` is the size of the acquired data volume (three floating point values), in centimeters, in the user's coordinate frame, not the magnet frame (e.g., `float roi[] = {10.0, 15.0, 0.208};`). Do not confuse this `roi` with ROIs that might be specified inside the data set.

Data Axes

The data axes entries specify the user coordinates of data points. These axes do not tell how to orient the display of the data, but only what to call the coordinates of a given datum. There are no standard header entries to specify the orientation of the data display. Currently, data is always displayed or plotted in the same order that it is stored. The fastest data dimension is plotted horizontally from left to right; the next dimension is plotted vertically from top to bottom.

- `origin` is a set of rank floating point values giving the user coordinates of the first point in the data set (e.g., `float origin[] = {5.0, 6.91};`).
- `span` is a set of rank floating point values for the signed length of each axis, in user units. A positive value means the value of the particular coordinate increases going away from the first point (e.g., `float span[] = {-10.000, -15.000};`).
- `abscissa` is a set of rank strings ("hz", "s", "cm", "cm/s", "cm/s²", "deg", "ppm1", "ppm2", "ppm3") that identifies the units that apply to each dimension (e.g., `char *abscissa[] = {"cm", "cm"};`).
- `ordinate` is a string ("intensity", "s", "deg") that gives the units that apply to the numbers in the binary part of the file (e.g., `char *ordinate[] = {"intensity"};`).

Nuclear Data Fields

Data fields may contain data generated by interactions between more than one nucleus (e.g., a 2D chemical shift correlation map between protons and carbon). Such data requires interpreting the term "ppm" for the specific nucleus, if ppm to frequency conversions are necessary, and properly labeling axes arising from different nuclei. To properly interpret ppm and label axes, the identity of the nucleus in question and the corresponding nuclear

resonance frequency are needed. These fields are related to the abscissa values "ppm1", "ppm2", and "ppm3" in that the 1, 2, and 3 are indices into the nucleus and nucfreq fields. That is, the nucleus for the axis with abscissa string "ppm1" is the first entry in the nucleus field.

- nucleus is one entry ("H1", "F19", same as VNMR tn parameter) for each rf channel (e.g., `char *nucleus[] = { "H1", "H1" };`).
- nucfreq is the nuclear frequency (floating point) used for each rf channel (e.g., `float nucfreq[] = { 200.067, 200.067 };`).

Miscellaneous Fields

- checksum is the checksum of the data. Changes to the header do not affect the checksum. The checksum is a 32-bit integer, calculated by the gluer program (e.g., `int checksum=0787271376;`).
- compression is a string with either the command needed to uncompress the data or a tag giving the compression method. This field is not currently implemented.

End of Header

A character specifies the end of the header. If there is data, it immediately follows this character. The data should be aligned according to its data type. For single precision floating point data, the data is aligned on word boundaries. Currently, the end of header character is <zero> (an ASCII "NUL").

Transformations

By editing some of the header values, it is possible to make a program that reads FDF data files to perform simple transformations. For example, to flip data left-to-right, set:

```
span'_0=-span_0
origin'_0=origin_0-span'_0
```

Creating FDF Files

To generate files in the FDF format, the following macros are available to write out single or multislice images:

- For the current imaging software—including sequences `sems`, `mems`, and `flash`—use the macro `svib(directory<, 'f' | 'm' | 'i' | 'o'>)`, where `directory` is the directory name desired (`.dat` is appended to the name), `'f'` outputs data in floating point format (this is the default), `'m'` or `'i'` outputs data as 12-bit integer values in 16-bit words, and `'b'` outputs data in 8-bit integer bytes.
- For older style SIS imaging sequences and microimaging sequences, use the macro `svsis(directory<, 'f' | 'm'>)`, where `directory`, `'f'`, and `'m'` are defined the same as `svib`.

Raw data from the FID file of the current experiment can be saved as an FDF file with the `svfdf(directory)` macro, where `directory` is the name of the directory in which to store the files (`.dat` is appended to the name). Data is saved in multiple files, with one trace per file. The files are named `fid0001.fdf`, `fid0002.fdf`, etc. The `procpar` file from the current experiment is also saved in the same directory.

Another way to create the FDF files is to edit or create a header defining a set of data with no headers and attach it to the data file with the `fdfgluer` program. Use the syntax `fdfgluer header_file <data_file <output_file>>` (from UNIX only).

This program takes a `header_file` and a `data_file` and puts them together to form an FDF file. It also calculates a checksum and inserts it into the header. If the `data_file` argument is not present, `fdfgluer` assumes the data is input from the standard input, and if the `output_file` name is not present, `fdfgluer` puts the FDF file to the standard output.

Splitting FDF Files

The `fdfsplit` command takes an FDF file and splits it into its data and header parts. The syntax is `fdfsplit fdf_file data_file header_file` (from UNIX only). If the header still has a checksum value, that value should be removed.

5.3 Reformatting Data for Processing

Sometimes, data acquired in an experiment has to be reformatted for processing. This is especially true for in-vivo imaging experiments where time is critical in getting the data so experiments are designed to acquire data quickly but not necessarily in the most desirable format for processing. Reformatting data can also occur in other applications because of a particular experimental procedure.

The VNMR processing applications `ft2d` and `ft3d` can accept data in standard, compressed, or compressed-compressed (3D) data formats. There are a number of routines that allow users to reformat their data into these formats for processing. The reformatting routines allow users to compress or uncompress their data (`flashc`), move data around between experiments and into almost any format (`mf`, `mfblk`, `mfdata`, `mftrace`), reverse data while moving it (`rblk`, `rfdata`, `rftrace`), or use a table of values, in this case an AP table stored in `tablib`, to sort and reformat scans of data (`tabc`, `tcapply`).

In this section, standard and compressed data are defined, reformatting options are described, and several examples are presented. [Table 39](#) summarizes the reformatting commands described in this section. Note that the commands `rsapply`, `tcapply`, `tcclose`, and `tcopen` are for 2D spectrum data; the remaining commands in the table are for FID data.

Standard and Compressed Formats

Usually when discussing standard and compressed data formats, *standard* means the data was acquired using the arrayed parameters `ni` and `ni2`, which specify the number of increments in the second and third dimensions; and *compressed* means using parameter `nf` to specify the increments in the second dimension.

For multislice imaging, standard means using `ni` to specify the phase-encode increments and `nf` to specify the number of slices and compressed means using `nf` to specify the phase-encode increments while arraying the slices.

Compressed-compressed means using `nf` to specify the phase-encode increments and slices for 2D or to specify the phase-encode increments in the second and third dimensions for 3D. In compressed-compressed data sets, `nf` can be set to $nv * ns$ or $nv * nv2$, where `nv` is the number of phase-encode increments in the second dimension, `nv2` is the number of phase-encode increments in the third dimension, and `ns` is the number of slices.

To give another view of data formats, which will help when using the “move FID” commands, each `ni` increment or array element is stored as a data block in a FID file and each `nf` FID is stored as a trace within a data block in a FID file.

Table 39. Commands for Reformatting Data

Commands	
<code>flashc*</code>	Convert compressed 2D data to standard 2D format
<code>mf(<from_exp,>to_exp)</code>	Move FIDs between experiments
<code>mfblk*</code>	Move FID block
<code>mfclose</code>	Close memory map FID
<code>mfdata*</code>	Move FID data
<code>mfopen(<src_expno,>dest_expno)</code>	Memory map open FID file
<code>mftrace*</code>	Move FID trace
<code>rfblk*</code>	Reverse FID block
<code>rfdata*</code>	Reverse FID data
<code>rftrace*</code>	Reverse FID trace
<code>rsapply</code>	Reverse data in a spectrum
<code>tabc<(dimension)></code>	Convert data in table order to linear order
<code>tcapply<(file)></code>	Apply table conversion reformatting to data
<code>tcclose</code>	Close table conversion file
<code>tcopen<(file)></code>	Open table conversion file
* <code>flashc<('ms' 'mi' 'rare'<,traces><,echoes>)</code>	
<code>mfblk(<src_expno,>src_blk_no,dest_expno,dest_blk_no)</code>	
<code>mfdata(<src_expno,>,src_blk_no,src_start_loc,dest_expno, \</code> <code>dest_blk_no,dest_start_loc,num_points)</code>	
<code>mftrace(<src_expno,>src_blk_no,src_trace_no,dest_expno</code> <code>dest_blk_no,dest_trace_no)</code>	
<code>rfblk(<src_expno,>src_blk_no,dest_expno,dest_blk_no)</code>	
<code>rfdata(<src_expno,>src_blk_no,src_start_loc,dest_expno, \</code> <code>dest_blk_no,dest_start_loc,num_points)</code>	
<code>rftrace(<src_expno,>src_blk_no,src_trace_no,dest_expno, \</code> <code>dest_blk_no,dest_trace_no)</code>	

Compress or Uncompress Data

The most common form of reformatting for imaging has been to use the `flashc` command to convert compressed data sets to standard data sets in order to run `ft2d` on the data. With the implementation of `ft2d('nf',<index>)`, `flashc` is no longer necessary. However, use of `flashc` is still necessary for converting compressed-compressed data to compressed or standard formats.

Move and Reverse Data

The commands `mf`, `mfblk`, `mfdata`, and `mftrace` are available to move data around in a FID file or to move data from one experiment FID file to another experiment FID file. These commands give users more control in reformatting their data by allowing them to move entire FID files, individual blocks within a FID file, individual traces within a block of a FID file, or sections of data within a block of a FID file.

To illustrate the use of the “move FID” commands, [Listing 12](#) is an example with code from a macro that moves a 3D dataset from an arrayed 3D dataset to another experiment that runs `ft3d` on the data. The `$index` variable is the array index. It works on both compressed-compressed and compressed 3D data.

The “reverse FID” commands `rfblk`, `rftrace`, and `rfdata` are similar to their respective `mfblk`, `mftrace`, and `mfdata` commands, except that `rfblk`, `rftrace`,

Listing 12. Code from a “Move FID” Macro

```

if ($seqcon[3] = 'c') and ($seqcon[4] = 'c') then
  "**** Compressed-compressed 3d ****"
  $arraydim = arraydim
  if ($index > $arraydim) then
    write('error','Index greater than arraydim.')
    abort
  endif
  mfblk($index,$workexp,1)
  jexp($workexp)
  setvalue('arraydim',1,'processed')
  setvalue('arraydim',1,'current')
  setvalue('array','','processed')
  setvalue('array','','current')
  ft3d
  jexp($cexpn)
else if ($seqcon[3] = 'c') and ($seqcon[4] = 's') then
  "**** Compressed 3d ****"
  if (ni < 1.5) then
    write('error','seqcon, ni mismatch check parameters.')
    abort
  endif
  $arraydim = arraydim/ni
  if ($index > $arraydim) then
    write('error','Index greater than arraydim.')
    abort
  endif
  $i = 1
  $k = $index
  while ($i <= ni) do
    mfblk($k,$workexp,$i)
    $k = $k + $arraydim
    $i = $i + 1
  endwhile
  jexp($workexp)
  setvalue('arraydim',ni,'processed')
  setvalue('arraydim',ni,'current')
  setvalue('array','','processed')
  setvalue('array','','current')
  ft3d
  jexp($cexpn)

```

and `rfdata` also reverse the order of the data. The `rfblk`, `rftrace`, and `rfdata` commands were implemented to support EPI (Echo Planar Imaging) processing. [Listing 13](#) is an example of using these commands to reverse every other FID echo for EPI data. Note that the `mfopen` and `mfclose` commands can significantly speed up the data reformatting by opening and closing the data files once, instead of every time the data is moved. The `rfblk`, `rftrace`, and `rfdata` commands can also be used with the “move FID” commands.

CAUTION: For speed reasons, the “move FID” and “reverse FID” commands work directly on the FID and follow data links. These commands can modify data returned to an experiment with the `rt` command. To avoid modification, enter the following sequence of VNMR commands before

manipulating the FID data:

```
cp(curexp+' /acqfil/fid',curexp+' /acqfil/fidtmp')
rm(curexp+' /acqfil/fid')
mv(curexp+' /acqfil/fidtmp',curexp+' /acqfil/fid')
```

Table Convert Data

VNMR supports reconstructing a properly ordered raw data set from any arbitrarily ordered data set acquired under control of an external AP table. The data must have been acquired according to a table in the `tablib` directory. The command for table conversion is `tabc`.

Reformatting Spectra

The commands `rsapply`, to reverse a spectrum, and `tcapply`, to reformat a 2D set of spectra using an AP table, support reformatting of spectra within a 2D dataset. The types of reformatting are the reversing of data within a spectrum and the reformatting of arbitrarily ordered 2D spectrum by using an AP table. These commands do not change the original FID data, and they may provide some speed improvement over the similar commands that operate on FID data. For 2D data, an `ft1d` command should be applied to the data, followed by the desired reformatting, and then an `ft2d` command to complete the processing.

Listing 13. Example of Command Reversing Data Order

```
*****
" epirf(<blkno>) - macro to reverse every other FID
" block & trace indicies start at 1 for rfbld,rftrace,rfdata **
*****
mfopen
$i=2
while ($i <= nv) do
    rftrace($1,$i)
    $i = $i + 2
endwhile
mfclose
```

5.4 Creating and Modifying Parameters

VNMR parameters and their attributes can be created and modified with the commands covered in this section. The parameter trees used by these commands are UNIX files containing the attributes of a parameter as formatted text.

Parameter Types and Trees

The types of parameters that can be created are 'real', 'string', 'delay', 'frequency', 'flag', 'pulse', and 'integer' (default is 'real'). In brief, the meaning of these types are as follows (for more detail, refer to the description of the `create` command in the *VNMR Command and Parameter Reference*):

- 'real' is any positive or negative value, and can be positive or negative.
- 'string' is composed of characters, and can be limited to selected words by enumerating the possible values with the command `setenumerals`.

- 'delay' is a value between 0 and 8190 (0 and 4095 on *GEMINI 2000*), in units of seconds.
- 'frequency' is positive real number values.
- 'flag' is composed of characters, similar to the 'string' type, but can be limited to selected characters by enumerating the possible values with the command `setenumeral`. If enumerated values are not set, the 'string' and 'flag' types are identical.
- 'pulse' is a value between 0 and 8190 (0 and 4095 on *GEMINI 2000*), in units of microseconds.
- 'integer' is composed of integers (0, 1, 2, 3,...),

The four parameter tree types are 'current', 'global', 'processed', and 'systemglobal' (the default is 'current'). Each type is described below:

- 'current' contains the parameters that are adjusted to set up an experiment. The parameters are from the file `curpar` in the current experiment.
- 'global' contains user-specific parameters from the file `global` in the `vnmr/sys` directory of the present UNIX user.
- 'processed' contains the parameters with which the data was obtained. These parameters are from the file `procpa` in the current experiment.
- 'systemglobal' contains instrument-specific parameters from the text file `/vnmr/conpar`. The `config` program is used to define most of these parameters. All users have the same `systemglobal` tree.

Tools for Working with Parameter Trees

Table 40 lists commands for creating, modifying, and deleting parameters.

To Create a New Parameter

Use `create(parameter<, type<, tree>>)` to create a new parameter in a parameter tree with the name specified by `parameter`. For example, entering `create('a', 'real', 'global')` creates a new real-type parameter `a` in the global tree. `type` can be 'real', 'string', 'delay', 'frequency', 'flag', 'pulse', or 'integer'. If the `type` argument is not entered, the default is 'real'. `tree` can be 'current', 'global', 'processed', or 'systemglobal'. If the `tree` argument is not entered, the default is 'current'. See the section above for a description of parameter types and trees. Note that these same arguments are used with all the commands appearing in this section.

To Get the Value of a Parameter

The value of most parameters can be accessed simply by using their name in an expression; for example, `sw?` or `r1=np` accesses the value of `sw` and `np`, respectively. However, parameters in the processed tree cannot be accessed this way. Use `getvalue(parameter<, index><, tree>)` to get the value of any parameter, including the value of a parameter in a processed tree. To make this easier, the default value of `tree` is 'processed'. The `index` argument is the number of a single element in an arrayed parameter (the default is 1).

Table 40. Commands for Working with Parameter Trees

Commands	
<code>create(parameter<, type<, tree>>)</code>	Create a new parameter in parameter tree
<code>destroy(parameter<, tree>)</code>	Destroy a parameter
<code>destroygroup(group<, tree>)</code>	Destroy parameters of a group in a tree
<code>display(parameter '*' '**'<, tree>)</code>	Display parameters and their attributes
<code>fread(file<, tree<, 'reset' 'value'>>)</code>	Read in parameters from a file into a tree
<code>fsave(file<, tree>)</code>	Save parameters from a tree to a file
<code>getvalue(parameter<, index><, tree>)</code>	Get value of parameter in a tree
<code>groupcopy(from_tree, to_tree, group)</code>	Copy group parameters from tree to tree
<code>paramvi(parameter<, tree>)</code>	Edit parameter and its attributes using <i>vi</i>
<code>prune(file)</code>	Prune extra parameters from current tree
<code>setdgroup(parameter, dgroup<, tree>)</code>	Set the Dgroup of a parameter in a tree
<code>setenumerals*</code>	Set values of a string parameter in a tree
<code>setgroup(parameter, group<, tree>)</code>	Set group of a parameter in a tree
<code>setlimit*</code>	Set limits of a parameter in a tree
<code>setprotect*</code>	Set protection mode of a parameter
<code>settype(parameter, type<, tree>)</code>	Change type of a parameter
<code>setvalue*</code>	Set value of any parameter in a tree
* <code>setenumerals(parameter, N, enum1, enum2, ... enumN<, tree>)</code>	
<code>setlimit(parameter, maximum, minimum, step_size<, tree>) or</code>	
<code>setlimit(parameter, index<, tree>)</code>	
<code>setprotect(parameter, 'set' 'on' 'off', value<, tree>)</code>	
<code>setvalue(parameter, value<, index><, tree>)</code>	

To Edit or Set Parameter Attributes

Use `paramvi(parameter<, tree>)` to open the file for a parameter in the UNIX *vi* text editor so that you can edit the attributes. To open a parameter file with an editor other than *vi*, use `paramedit(parameter<, tree>)`. Refer to entry for `paramedit` in the *VNMR Command and Parameter Reference* for information on how to select a text editor other than *vi*. The format of a stored parameter is described in the next section.

Several parameter attributes can be set by the following commands:

- `setlimit(parameter, maximum, minimum, step_size<, tree>)` sets the maximum and minimum limits and stepsize of a parameter.
- `setlimit(parameter, index<, tree>)` sets the maximum and minimum limits and the stepsize, but obtains the values from the *index*-th entry of a table in *conpar*.
- `setprotect(parameter, 'set' | 'on' | 'off', bit_vals<, tree>)` sets the protection bits associated with a parameter. The keyword 'set' causes the current protection bits to be replaced with the set specified by *bit_vals* (listed in the *VNMR Command and Parameter Reference*). 'on' causes the bits specified in *bit_vals* to be turned on without affecting other protection bits. 'off' causes the bits specified in *bit_vals* to be turned off without affecting other protection bits.
- `settype(parameter, type<, tree>)` changes the type of an existing parameter. A string parameter can be changed into a string or flag type, or a real parameter can be changed into a real, delay, frequency, pulse, or integer type.
- `setvalue(parameter, value<, index><, tree>)` sets the value of any parameter in a tree. `setvalue` bypasses normal range checking for parameter entry. It also bypasses any action that would be invoked by the parameter's protection bits.

- `setenumeral(parameter, N, enum1, enum2, ..., enumN, tree)` sets possible values of a string-type or flag-type parameter in a parameter tree.
- `setgroup(parameter, group, tree)` sets the group (also called the Ggroup) of a parameter in a tree. The `group` argument can be 'all', 'sample', 'acquisition', 'processing', 'display', or 'spin'.
- `setdgroup(parameter, dgroup, tree)` sets the Dgroup of a parameter in a tree. The `dgroup` argument is an integer. The usage of `setdgroup` is set by the application. Only the experimental user interface uses this command currently.

To Display a Parameter

Use `display(parameter | '*' | '**', tree)` to display one or more parameters and their attributes from a parameter tree. The first argument can be one of the following three options: a parameter name (to display the attributes of that parameter, '*') (to display the name and value of all parameters in a tree), or '**' (to display the attributes of all parameters in a tree).

To Move Parameters

Use `groupcopy(from_tree, to_tree, group)` to copy a set of parameters of a group from one parameter tree to another (it cannot be the same tree). `group` is the same keywords as used with `setgroup`.

The `fread(file, tree, 'reset' | 'value')` command reads in parameters from a file and loads them into a tree. The keyword 'reset' causes the tree to be cleared before the new file is read; 'value' causes only the values of the parameters in the file to be loaded. The `fsave(file, tree)` command writes parameters from a parameter tree to a file for which the user has write permission. It overwrites any file that exists.

To Destroy a Parameter

The `destroy(parameter, tree)` command removes a parameter from a parameter tree while the `destroygroup(group, tree)` command removes parameters of a group from a parameter tree. The `group` argument uses the same keywords as used with the `setgroup` command. If the destroyed parameter was an array, the array parameter is automatically updated.

To remove leftover parameters from previous experimental setups, use `prune` instead. The `prune(file)` command destroys parameters in the current parameter tree that are not also defined in the parameter file specified.

Format of a Stored Parameter

To use the `create` command to create a new parameter, or to use the `paramvi` and `paramedit` commands to edit a parameter and its attributes, requires knowledge of the format of a stored parameter. If an error in the format is made, the parameter may not load. This section describes the format in detail.

The format of stored parameters changed somewhat starting with version 4.2 of VNMR. To make the changeover automatic, parameters in the format prior to VNMR 4.2 are automatically updated when they are retrieved and saved in working with an experiment. If you wish, you can also use the macro `parfix` to manually update parameters. For example, the commands `rtp('mypars') parfix svp('mypars')` update a parameter set named `mypars`.

The stored format of a parameter is made up of three or more lines:

- Line 1 contains the attributes of the parameter and has the following fields (given in same order as they appear in the file):

`name` is the parameter name, which can be any valid string.

`subtype` is an integer value for the parameter type: 0 (undefined), 1 (real), 2 (string), 3 (delay), 4 (flag), 5 (frequency), 6 (pulse), 7 (integer).

`basictype` is an integer value: 0 (undefined), 1 (real), 2 (string).

`maxvalue` is a real number for the maximum value that the parameter can contain, or an index to a maximum value in the parameter `parmax` (found in `/vnmr/conpar`). Applies to both string and real types of parameters.

`minvalue` is a real number for the minimum value that the parameter can contain or an index to a minimum value in the parameter `parmin` (found in `/vnmr/conpar`). Applies to real types of parameters only.

`stepsize` is a real number for the step size in which parameters can be entered or index to a step size in the parameter `parstep` (found in `/vnmr/conpar`). If `stepsize` is 0, it is ignored. Applies to real types only.

`Ggroup` is an integer value: 0 (ALL), 1 (SAMPLE), 2 (ACQUISITION), 3 (PROCESSING), 4 (DISPLAY), 5 (SPIN).

`Dgroup` is an integer value. The specific application determines the usage of this integer.

`protection` is a 32-bit word made up of the following bit masks, which are summed to form the full mask:

<i>Bit</i>	<i>Value</i>	<i>Description</i>
0	1	Cannot array the parameter
1	2	Cannot change active/not active status
2	4	Cannot change the parameter value
3	8	Causes <code>_parameter</code> macro to be executed (e.g., if parameter is named <code>sw</code> , the macro <code>_sw</code> is executed when <code>sw</code> is changed)
4	16	Avoids automatic redisplay
5	32	Cannot delete parameter
6	64	System parameter for spectrometer or data station
7	128	Cannot copy parameter from tree to tree
8	256	Cannot set array parameter
9	512	Cannot set parameter enumerals values
10	1024	Cannot change the parameter's group
11	2048	Cannot change protection bits
12	4096	Cannot change the display group
13	8192	Take max, min, step from <code>/vnmr/conpar</code> parameters <code>parmax</code> , <code>parmin</code> , <code>parstep</code> .

`active` is an integer value: 0 (not active), 1 (active).

`intptr` is not used (generally set to 64).

- Line 2, or the group of lines starting with line 2, list the values of the parameter. The first field on line 2 is the number of values the parameter is set to. The format of the rest of the fields on line 2 and subsequent lines, if any, depends on the value of `basictype` set on line 1 and the value entered in the first field on line 2:

If `basictype` is 1 (real) and first value on line 2 is any number, all parameter values are listed on line 2, starting in the second field. Each value is separated by a space.

If `basictype` is 2 (string) and first value on line 2 is 1, the single string value of the parameter is listed in the second field of line 2, inside double quotes.

If `basictype` is 2 (string) and first value on line 2 is greater than 1, the first array element is listed in the second field on line 2 and each additional element is listed on subsequent lines, one value per line. Strings are surrounded by double quotes.

- Last line of a parameter file lists the enumerable values of a string or flag parameter. This specifies the possible values the string parameter can be set to. The first field is the number of enumerable values. If this number is greater than 1, all of the values are listed on this line, starting in the second field.

For example, here is how a typical real parameter file, named `a`, is interpreted (the numbers in parentheses are not part of the file but are line references in the interpretation):

```
(1) a 31 1e+30 -1e+30 0 0 1 0 1 64
(2) 24.126400
(3) 0
```

This file is made up of the following lines:

1. The parameter has the name `a`, subtype is 3 (delay), `basictype` is 1 (real), maximum size is `1e+30`, minimum size is `-1e+30`, `stepsize` is 0, `Ggroup` is 0 (ALL), `Dgroup` is 1 (ACQUISITION), protection is 0 (cannot array the parameter), active is 1 (ON), and `intptr` is 64 (not used).
2. Parameter `a` has 1 value, the real number 24.126400.
3. Parameter `a` has 0 enumerable values.

As another example, here are the values in a file for the parameter `tof`:

```
(1) tof 5 1 7 7 7 2 1 8202 1 64
(2) 1 1160
(3) 0
```

The `tof` file is made up of the following lines:

1. The parameter has the name `tof`, subtype is 5 (frequency), and `basictype` is 1 (real). To read the next 3 values, we must jump to the protection field. Because the protection word value is 8202, which is $8192 + 8 + 2$, then bit 13 (8192), bit 3 (8), and bit 1 (2) bitmasks are set. Because bit 13 is set, the maximum size, minimum size, and `stepsize` values (each is 7) are indices into the 7th array value in the parameters `parmax`, `parmin`, and `parstep`, respectively, in the file `conpar`. Because bit 3 is set, this causes a macro to be executed. The bit 1 bitmask (2) is also set, which means the active/not active status of the parameter cannot be changed. For the remaining fields, `Ggroup` is 2 (ACQUISITION), `Dgroup` is 1 (ACQUISITION), active is 1 (ON), and `intptr` is 64 (not used).
2. Parameter `tof` has 1 value, the real number 1160.
3. Parameter `tof` has 0 enumerable values.

The following file is an example of a multielement array character parameter, `beatles`:

```
(1) beatles 2 2 8 0 0 2 1 0 1 64
(2) 4 john
(3) paul
    george
    ringo
(4) 0
```

The `beatles` file is made up of the following lines:

1. The parameter has the name of `beatles`, subtype is 2 (string), basictype is 2 (string), 800 is max min step (not really used for strings), Ggroup is 2 (acquisition), Dgroup is 1 (ALL), protection is 0, active is 1 (ON), 64 is a terminating number.
2. There are four elements to this variable; therefore, it is arrayed. `john` is the first element in the array.
3. `paul`, `george`, and `ringo` are the other three elements in the array.
4. 0 (zero) is the terminating line.

5.5 Modifying Parameter Displays in VNMR

The VNMR display commands and macros—`dg`, `dg1`, `dg2`, `dgs`, and `ap`—are controlled by template parameters specifying the content and form of the information displayed. The template parameters have the same name as the respective command or macro; for example, the display created by the `dg` command is controlled by the parameter `dg` in the experiment's current parameter set.

To modify an existing template parameter, such as `dg`, enter `paramvi('dg')` to use the `vi` text editor, or enter `paramedit('dg')` to use the text editor set by the UNIX environmental variable `vnmeditor`. Users can also create a new template parameter (e.g., `newdg`) and then display it with the command `dg('newdg')`.

Display Template

A display template can have a single string or multiple strings. The first number on the second line of a stored parameter indicates the number of string templates. If the number is 1, the display template is a single string; otherwise, a value greater than 1 indicates the template is multiple strings. [Figure 7](#) shows an example of a single-string display template (actually the parameter `dg`) and the resulting display.

```
dg 2 2 1023 0 0 4 1 6 1 64
1 "1:ACQUISITION:sfrq:3,tn,at:3,np:0,sw:1,fb:0,bs:0,ss:0,pw:1,p1:1,d1:3,d2:3,tof
:1,nt:0,ct:0:2:SAMPLE:date,solvent,file:2:DECOUPLING:dn,dof:1,dm,dmm,dmf,dhp:0,d
lp:0,homo:2(ni):2D ACQUISITION:sw1:1,ni:0:3:PROCESSING:cf(nf):0,lb:2,sb:3,sbs(sb
):3,gf:3,gfs(gf):3,awc:3,lsfid:0,phfid:1,wfile,proc,fn:0,math,,werr,wexp,wbs,wnt;4(ni):2D PROCESSING:lb1:2,sb1:3,sbs1(sb1):3,gf1:3,gfs1(gf1):3,awc1:3,wfile1,p
roc1,fn1:0:4:FLAGS:il,in,dp,hs:4:SPECIAL:temp:1;"
0
ACQUISITION          SAMPLE          PROCESSING          FLAGS
sfrq          399.952  date      March 8, ~ lb      not used  il      n
tn              H1          1993      sb      not used  in      n
at              2.305      solvent   cdcl3    gf      not used  dp      y
np              29952      file      exp      awc     not used  hs     nn
sw              6497.7     DECOUPLING  lsfid    not used  SPECIAL
fb              3600      dn        H1       phfid   not used  temp   not used
bs      not used  dof        74.7    wfile
ss              0         dm        nnn     proc     ft
pw              23.0      dmm       c       fn      not used
p1              0         dmf       200    math     i
d1              0         dhp       0
d2              0         dlp       20     werr     logain
tof            1100.0    homo      n       wexp
nt              16
ct              0         wbs
                wnt
```

Figure 7. Single-String Display Template with Output

In a single-string template, the string always starts with a double quote and then repeats the following information for each column in the display:

- Column number (e.g., 2)
- Condition for display of column (optional, e.g., “4 (ni)”, see below).
- Colon
- Column title (e.g., 2D ACQUISITION)
- Colon
- Parameters to appear in column, separated by commas (for notation, see below)
- Semicolon

At the end of the string is another double quote. Spaces *cannot* appear anywhere in the string template except as part of a column title.

Column titles are often in upper case, but need not be, and are limited to 19 characters. More than one title can appear in the same column (such as shown above, SAMPLE and DECOUPLING are both in column 2).

Parameters listed in “plain” form (e.g., `tn`, `date`, `math`) are printed either as strings or in a form in which the number of decimal places displayed varies depending on the value of the parameter.

To display a specific number of digits past the decimal place, the desired number is placed following a colon (e.g., `sfrq:3`, `at:3`, `sw:0`). Extra commas can be inserted to skip rows within a column (e.g., `math, , werr, wexp,)`.

The maximum number of columns is 4; each column can have 17 lines of output. Since this includes the title(s), fewer than 17 parameters can be displayed in any one column. The entire template is limited to 1024 characters or less.

As an alternative to a single-string template, which tends to be difficult to read, a template can be written as multiple strings, each enclosed in double quotes. The first number indicates the number of strings that follow. Each string must start with a column number. **Figure 8** contains the display template for the parameter `dg2`, which is a typical example of a multiple-string template

```
6 "1:1st DECOUPLING:dfrq:3,dn,dpwr:0,dof:1,dm,dmm,dmf:0,dseq,dres:1,homo;"
"2(numrfch>2):2nd DECOUPLING:dfrq2:3,dn2,dpwr2:0,dof2:1,dm2,dmm2,dmf2:0,dseq2,dres2:1,homo2;"
"2(numrfch>3):3rd DECOUPLING:dfrq3:3,dn3,dpwr3:0,dof3:1,dseq3,dres3:1,homo3;"
"3(ni2):3D ACQUISITION:d3:3,sw2:1,ni2:0,phase2:0;"
"3(ni2):3D DISPLAY:rp2:1,lp2:1;"
"4(ni2):3D PROCESSING:lb2:3,sb2:3,sbs2(sb2):3,gf2:3,gfs2(gf2):3,awc2:3,wfile2,proc2,fn2:0;"
```

Figure 8. Multiple-String Display Template

The conditional statement in this example (e.g., “(numrfch >2)”) is covered below.

The title field can contain a string variable besides a literal. If the variable is a real variable, or not present, or equal to the null string, the variable itself is used as the title (e.g., `mystrvar[1]='Example Col 1'` and `mystrvar[2]='Example Col 2'`).

Default Display Templates

The `settclddefault(<default><, sequence>)>` macro selects the display templates to use as the default for a pulse sequence:

- Without any arguments, `settdcldefault` prompts for the name of a set of display templates to use for the default displays for the current pulse sequence. The current pulse sequence is defined by the parameter `seqfil`.
- If a single argument is given, it is used as the name of the display templates for the default displays of the current pulse sequence (e.g., `settdcldefault('cosy')` uses the `cosy` display templates as the default displays for experiments using the pulse sequence defined by `seqfil`).
- If a second argument is given, it is used in the place of `seqfil` to define which pulse sequence will use the default displays of the first argument (e.g., `settdcldefault('default2d', 'HMQC8')` uses the `default2d` display templates for `HMQC8` experiments.

In general, 1D experiments do not need to define a default set of templates because a set already exists. A good default set for *GLIDE*-style 2D experiments is `default2d`. These experiments generally have capital letters in their names (e.g., `HSQC`, `NOESY`). A good default set for older style 2D experiments is `defaultold2d`. These experiments generally do not have capital letters in their names (e.g., `mqcosy`, `tocsy`).

Conditional and Arrayed Displays

Use of parentheses allows the conditional display of an entire column and/or individual parameters. If the real parameter within parentheses is not present, or is equal to 0 or to 'n', then the associated parameter or section is not displayed. In the case of string parameters, if the real number is not present, or is equal to the NULL string or the character 'n', then the associated parameter or section is not displayed. The following examples from the `dg` template above demonstrate this format:

- `p1(p1):1` means display parameter `p1` only when `p1` is non-zero.
- `sbs(sb):3` means display `sbs` only when `sb` is active (not equal to 'n').
- `4(ni):2D PROCESSING:` means display entire “2D PROCESSING” section only when parameter `ni` is active and non-zero.

Note that if a parameter is arrayed, the display status is derived from the first value of the array. Thus, if `p1` is arrayed and the first value is 0, `p1` will not appear; if the first value is non-zero, `p1` will appear, with “arrayed” as its parameter value.

Similarly, a multiple variable expression can also be placed within the parentheses for conditional display of parameters. Each expression must be a valid `MAGICAL II` expression (see “[Programming with MAGICAL,](#)” page 29) and must be written so there is no space between the last character of the expression and the closing parenthesis “)”.

In summary, if a single variable expression is placed in the parentheses, it is `FALSE` under the following conditions:

- Variable does not exist.
- Variable is real and equals 0 or is marked inactive.
- Variable is a string variable equal to the NULL string or equal to the character 'n'.

Multiple variable expressions are evaluated the same as in `MAGICAL II`. If a variable does not exist, it is considered an error.

Examples of multiple parameter expressions include the following:

- `2(numrfch>2):2nd DECOUPLING:` means display entire “2nd DECOUPLING” section only when `numrfch` (number of rf channels) is greater than 2.

- `3((myflag <> 'n') or ((myni > ni) and (mysw < sw))):My Section:` means display entire “My Section” section only when `myflag` is not equal to 'n' or when `myni` is greater than `ni` and `mysw` is less than `sw`.

The asterisk (...*) is a “special parameter” designator that allows the value of a series of string parameters to be displayed in a single row without names. This is more commonly used with the parameters `aig`, `dcg`, and `dmg`, for example:

```
aig*,dcg*,dmg*
```

For tabular output of arrayed parameters, square brackets ([...]) are used. For example:

```
1:Sample Table Output:[pw,p1,d1,d2];
```

Notice that all parameters in the column must be in the brackets; thus, the following is illegal:

```
1:Sample Table Output:[pw,p1,d1],d2;
```

Since arrayed variables are normally displayed with `da`, this format is rarely needed.

The field width and digit field options can be used to clean up the display. The first number after the colon is the field width. The next colon is the digit field. For example:

```
1:Sample Table Output:[pw:6:2,p1:6:2,d1:10:6,d2:10:6];
```

Here, the parameters `pw` and `p1` are displayed in 6 columns with 2 places after the decimal point, while `d1` and `d2` are displayed in 10 columns with 6 places after the decimal point.

Output Format

For display, each parameter and value occupies 20 characters of space:

- Characters 1 to 8 are the name of the parameter. Parameters with names longer than 8 characters are permitted within VNMR itself but cannot be displayed or printed with `dg` or `pap`.
- Character 9 is always blank.
- Characters 10 to 18 are used for the parameter value. Any parameter value exceeding 9 characters (a file name is a common example) is continued on the next line; in this case, character 19 is a tilde “~”, which is used to show continuation.
- Character 20 is always blank.

For printing with the `pap` command, which uses the `ap` parameter template, a “`da`” listing is printed starting in column 3, so that the template will typically specify only two columns of output. `ap` can specify more than two columns, but if any parameter is arrayed, the listing of that parameter will overwrite the third column. For printing, the maximum number of lines in each column is 64.

5.6 User-Written Weighting Functions

The parameter `wfile` can be set to the name of the file containing a user-written weighting function. If the parameter `wfile` (or `wfile1` or `wfile2`) does not exist, it can be created with the commands

```
create('wfile','flag')
setgroup('wfile','processing')
setlimit('wfile',15,0,0).
```

If `wfile` exists but `wfile=''` (two single quotes), VNMR does not look for the file: `wfile` is inactive. To enable user-written weighting functions, set `wfile=filename`, where `filename` is the name of the executable weighting

function (enclosed in single quotes) that was created by compiling the weighting function source code with the UNIX shell script `wegen` (a process described in the next section).

VNMR first checks if `filename` exists in `wtlib` subdirectory of the user's private directory. If the file exists there, VNMR then checks if the file `filename.wtp`, which may contain the values for up to ten internal weighting parameters, exists in the current experiment directory. If `filename.wtp` does not exist in the current experiment directory, the ten internal weighting parameters are set to 1.

VNMR executes the `filename` program, using the optional file `filename.wtp` as the source for parameter input. The output of the program is the binary file `filename.wtf` in the current experiment directory. This binary file contains the weighting vector that will be read in by VNMR. The total weighting vector used by VNMR is a vector-vector product of this external, weighting vector and the internal VNMR weighting vector, the latter being calculated from the parameters `lb`, `gf`, `gfs`, `sb`, `sbs`, and `awc`. The parameter `awc` still provides an overall additive contribution to the total weighting vector. Although the external weighting vector cannot be modified with `wti`, the total weighting vector can be modified with `wti` by modifying the internal VNMR weighting vector. Note that only a single weighting vector is provided for both halves of the complex data set—real and imaginary data points of the complex pair are always weighted by the same factor.

If the `filename` program does not exist in a user's `wtlib` subdirectory, VNMR looks for a text file in the current experiment directory with the name `filename`. This file contains the values for the external weighting function in floating point format (for example, 0.025, but not 2.5e-2) with one value per line. If the number of weighting function values in this file is less than the number of complex FID data points (that is, $np/2$), the user-weighting function is padded out to $np/2$ points using the last value in the `filename` text file.

Writing a Weighting Function

Weighting functions must follow this format, similar to pulse sequence programs:

```
#include "weight.h"
wtcalc(wtpntr, npoints, delta_t)
int npoints;          /* number of complex data points */
float *wtpntr,        /* pointer to weighting vector */
delta_t;              /* dwell time */

{
...                  /* user-written part */
}
```

The variable `wtpntr` is a pointer and must be dealt with differently than an ordinary variable such as `delta_t`. `wtpntr` contains the address in memory of the first element of the user-calculated weighting vector; `*wtpntr` is the value of that first element. The statement `*wtpntr++=x` implies that `*wtpntr` is set equal to `x` and the pointer `wtpntr` is subsequently incremented to the address of the next element in the weighting vector.

The following examples show using the `filename` program set by `wtfilename=filename`

- Source file `filename.c` in a user's `vnmr/sys/wtlib` directory:

```
#include "weight.h"
wtcalc(wtpntr, npoints, delta_t)
int npoints;          /* number of complex data points */
float *wtpntr,        /* pointer to weighting vector */
delta_t;              /* dwell time */

{
```

```

int i;
for (i = 0; i < npoints; i++)
    *wtpntr++ = (float) (exp(-(delta_t*i*wtconst[0]));
/* wtconst[0] to wtconst[9] are 10 internal weighting */
/* parameters with default values of 1 and type float. */
}

```

- Optional parameter file filename.wtp in the current experiment directory:

```

0.35      /* value placed in wtconst[0] */
-2.4     /* value placed in wtconst[1] */
...      /* etc. */

```

- Text file filename in the current experiment directory:

```

0.9879   /* value of first weighting vector element */
0.8876   /* value of second weighting vector element */
-0.2109  /* value of third weighting vector element */
0.4567   /* value of fourth weighting vector element */
...      /* etc. */
0.1234   /* value of last weighting vector element */

```

Compiling the Weighting Function

The macro/shellsript `wtpgen` is used to compile `filename` as set by parameter `wtpfile` into an executable program. The source file is `filename.c` stored in a user's `vnmr/sys/wtlib` directory. The executable file is in the same directory and has the same name as the source file but with no file extension. The syntax is for `wtpgen` is `wtpgen(file<.c>)` from VNMR or `wtpgen file<.c>` from UNIX.

The `wtpgen` macro allows the compilation of a user-written weighting function that subsequently can be executed from within VNMR. The shellsript `wtpgen` can be run from within UNIX by typing the name of the shellsript file name, where the `.c` file extension is optional. `wtpgen` can also be run from within VNMR by executing the macro `wtpgen` with the file name in single quotes.

The following functions are performed by `wtpgen`:

1. Checks for the existence of the `bin` subdirectory in the VNMR system directory and aborts if the directory is not found.
2. Checks for files `usrwt.o` and `weight.h` in the `bin` subdirectory and aborts if either of these two files cannot be found there.
3. Checks for the existence of the user's directory and creates this directory if it does not already exist.
4. Establishes in the `wtlib` directory soft links to `usrwt.o` and `weight.h` in the directory `/vnmr/bin`.
5. Compiles the user-written weighting function, which is stored in the `wtlib` directory, link loads it with `usrwt.o`, and places the executable program in the same directory. Any compilation and/or link loading errors are placed in the file `errmsg` in `wtlib`.
6. Removes the soft links to `usrwt.o` and `weight.h` in the `bin` subdirectory of the VNMR system directory.

The name of the executable program is the same as that for the source file without a file extension. For example, `testwt.c` is the source file for the executable file `testwt`.

5.7 User-Written FID Files

You can introduce computed data into your experiment by using the command `makefid(input_file <, element_number, format>)`. The `input_file` argument, which is required, is the name of a file containing numeric values, two per line. The first value is assigned to the X (or real) channel; the second value on the line is assigned to the Y (or imaginary) channel. Arguments specifying the element number and the format are optional and may be entered in either order.

The argument `element_number` is any integer larger than 0. If this element already exists in your FID file, the program will overwrite the old data. If not entered, the default is the first element or FID. `format` is a character string with the precision of the resulting FID file and can be specified by one of the following:

'dp=n'	single precision (16-bit) data
'dp=y'	double precision (32-bit) data
'16-bit'	single precision (16-bit) data
'32-bit'	double precision (32-bit) data

If an FID file already exists, `format` is the precision of data in that file. Otherwise, the default for `format` is 32 bits.

The number of points comes from the number of numeric values read from the file. Remember it reads only two values per line.

If the current experiment already contains a FID, you will not be able to change either the format or the number of points from that present in the FID file. Use the command `rm(curexp+' /acqfil/fid')` to remove the FID.

The `makefid` command does not look at parameter values when establishing the format of the data or the number of points in an element. Thus, if the FID file is not present, it is possible for `makefid` to write a FID file with a header that does not match the value of `dp` or `np`. Since the active value is in the processed tree, you will need to use the `setValue` command if any changes are needed.

Be aware that `makefid` can modify data returned to an experiment by the `rt` command. To avoid this, enter the following sequence of VNMR commands on the saved data before running `makefid`:

```
cp(curexp+' /acqfil/fid', curexp+' /acqfil/fidtmp')
rm(curexp+' /acqfil/fid')
mv(curexp+' /acqfil/fidtmp', curexp+' /acqfil/fid')
```

The command `writefid(textfile<, element_number>)` writes a text file using data from the selected FID element. The default element number is 1. The program writes two values per line—the first is the value from the X (or real) channel, and the second is the value from the Y (or imaginary) channel.

Chapter 6. Customizing Graphics Windows

Sections in this chapter:

- 6.1 “Customizing the Sample Entry Form Window,” this page
- 6.2 “Customizing the status Window,” page 322
- 6.3 “Customizing the Interactive dg Window,” page 324

Almost every aspect of VNMR graphics windows can be customized for local use. Many of these windows are written in the scripting language Tcl/Tk (tool command language/tool kit). This language allows considerable customizing by users of the windows and their functions.

To find out more about Tcl/Tk, refer to books such as *Tcl and the Tk Toolkit* by J. K. Ousterhout (Addison-Wesley, 1994) and *Effective Tcl/Tk Programming* by M. Harrison and M. McLennan (Addison-Wesley, 1998). For those who do not wish to learn Tcl/Tk, Varian has further simplified much of this customization through the use of `.conf` files.

6.1 Customizing the Sample Entry Form Window

The Sample Entry Form window is the interface to the `enter` program. The `enter` program is used to define experiments for an automation run. The Sample Entry Form window is covered from the user’s viewpoint in the manuals *Getting Started*, *User Guide: Liquids*, and *Walkup NMR Using GLIDE*. In this section, we cover customizing the `enter` interface.

Almost everything about the `enter` interface can be modified by the user. This includes whether certain choices are presented and whether choices are presented as check boxes or require typed input. Requests for alternative information also can be added.

Window Configuration Files

The interface to the `enter` program is controlled by one of following configuration files supplied in the directory `/vnmr/asm`:

- `auto.conf` – when defining an experiment for a current automation run.
- `enter.conf` – when setting up an automation run with a Carousel, SMS, or NMS sample changer.
- `entervast.conf` – when setting up an automation run with the VAST accessory.
- `enterlcnmr.conf` – when setting up an automation run with the LC-NMR accessory.

The `enter.conf` file is duplicated in [Listing 14](#), with the lines numbered for reference. Any line in the file that starts with a `#` is a comment line. The interface presented by this configuration file is shown in [Figure 9](#).

Listing 14. Text of enter.conf File

```

1. # Enter configuration information
2.
3. # infields identifies the items that will be displayed by the
4. # enter program. The order of the listed items is the order
5. # in which they will be displayed.
6. set infields {loc user solvent exp textfield}
7.
8. # outfields identifies the items that will be output by the
9. # enter program. The order of the listed items is the order
10. # in which they will be output.
11. set outfields {loc user exp solvent textfield userdir data stat separator}
12.
13. # Available input styles include info, radio, check, xradio, xcheck,
14. # xradiocustom, xcheckcustom, and textentry
15.
16. set loc(id) loc
17. set loc(label) "Sample Number"
18. set loc(menulabel) "Sample Number is "
19. set loc(style) radio
20. set loc(file) ""
21. set loc(min) 1
22. set loc(max) 50
23. set loc(numPerLine) 20
24. set loc(required) 1
25. set loc(output) SAMPLE#:
26. set loc(duplicates) 0
27. set loc(errormess) "No sample locations available"
28. set loc(errormess2) "Sample Tray is Completely Defined"
29.
30. # To select locations instead of allowing a choice
31. # uncomment the following lines
32. # set loc(label) "Insert Sample at location "
33. # set loc(output) SAMPLE#:
34. # set loc(style) info
35. # set loc(output) SAMPLE#:
36. # set loc(value) $nextLoc
37. # set loc(usenextloc) 1
38.
39. set user(id) user
40. set user(label) "User identification"
41. set user(menulabel) "User identification is "
42. set user(style) xradio
43. set user(file) users
44. set user(numPerLine) 6
45. set user(required) 1
46. set user(output) USER:
47.
48. # The following five lines set USER automatically.
49. # If you do not want USER to appear on the enter screen,
50. # remove user from infields. If you uncomment the following,
51. # this mode will be selected
52. #
53. # set user(id) user
54. # set user(label) "User identification is "
55. # set user(style) info
56. # set user(output) USER:
57. # set user(value) "$env(USER)"

```

Listing 14. Text of enter . conf File (continued)

```

58.
59. set solvent(id) solvent
60. set solvent(label) "Solvent Selection"
61. set solvent(menulabel) "Solvent Selection is "
62. set solvent(style) xradio
63. set solvent(file) solvents
64. set solvent(numPerLine) 4
65. set solvent(required) 1
66. set solvent(output) SOLVENT:
67.
68. set exp(id) exp
69. set exp(label) "Experiment Selection"
70. set exp(menulabel) "Experiment Selection is "
71. set exp(style) radio
72. set exp(file) experiments
73. set exp(numPerLine) 6
74. set exp(required) 1
75. set exp(output) MACRO:
76.
77. # The following three lines allow customization of experiments
78. # set exp(style) xradiocustom
79. # set exp(label2) "Selected Experiment"
80. # set exp(col) 40
81.
82. set textfield(id) textfield
83. set textfield(label) "Text\t"
84. set textfield(style) textentry
85. set textfield(file) ""
86. set textfield(col) 40
87. set textfield(required) 0
88. set textfield(output) TEXT:
89.
90. set userdir(id) userdir
91. set userdir(output) USERDIR:
92. set userdir(value) "$env(vnmruser)"
93.
94. set data(id) data
95. set data(output) DATA:
96.
97. set stat(id) stat
98. set stat(output) "STATUS:"
99. set stat(value) "Queued"
100.
101. set separator(id) separator
102. set separator(output) -----
103.
104. # Button Definitions
105. # Possible cntrls are addExp, saveExp, saveAndExit, addSaveAndExit, quit
106. # Automation controls are autoSample,autoSampleNoExit,prioritySample,quit
107.
108. set cntrls {addExp saveAndExit quit}
109. # if you prefer a two button exit mechanism, uncomment the next line
110. # set cntrls {addSaveAndExit quit}
111. # if you prefer a one button exit mechanism, uncomment the line below
112. # In this case, the label for quit should be reset to "Exit"
113. # set cntrls {saveExp quit}
114.

```

Listing 14. Text of `enter.conf` File (continued)

```

115. set addExp(id) addExp
116. set addExp(label) "Add Entry"
117.
118. set saveExp(id) saveExp
119. set saveExp(label) "Save Entry"
120.
121. set saveAndExit(id) saveAndExit
122. set saveAndExit(label) "Exit and Save"
123.
124. set addSaveAndExit(id) addSaveAndExit
125. set addSaveAndExit(label) "Exit and Save"
126.
127. set autoSample(id) autoSample
128. set autoSample(label) "Add Sample"
129.
130. set autoSampleNoExit(id) autoSampleNoExit
131. set autoSampleNoExit(label) "Add Sample"
132.
133. set prioritySample(id) prioritySample
134. set prioritySample(label) "Priority Sample"
135. set prioritySample(passwd) ""
136.
137. set quit(id) quit
138. set quit(label) "Quit"
139.
140. # list of files from which excluded locations are taken
141. # the files names are relative to the directory of the enter file
142. set exList {}
143. set locList {}
144.
145. # show and edit can be yes or no
146. # content can be all or new
147. # num sets the number of entries to be shown in the scrolling window
148. # col sets the width of the scrolling window (in characters)
149. set results(show) no
150. set results(edit) no
151. set results(content) all
152. set results(num) 3
153. set results(col) 60

```

Setting Which Selections Are Displayed

On line 6, the `infields` parameter specifies which selections are displayed by `enter` and in what order. The default requests five selections, named `loc`, `user`, `solvent`, `exp`, and `textfield`. Most of the names chosen are arbitrary, but as you will see, subsequent definitions depend on the names set here. Also, while names such as `xj` and `kld` could also work, their meaning is not obvious. You might, however, want to add a name such as `notebook`. We use `notebook` as an example later in this chapter. Note that the `loc` and `exp` names are not arbitrary. These two input selections have been given special characteristics that require specific attributes.

Setting the Content of the Output File

On line 11, the `outfields` parameter specifies which items are written by `enter` into its output file and in what order they are written. This output file contains all the information

needed to run an experiment and is referred to as the `enterQ` file, even though at the time it is built, its name is arbitrary. When the output file is finally submitted as the set of experiments by the `autogo` command, it is copied into the automation directory and named `enterQ`.

The default `enter` program requests nine selections—named `loc`, `user`, `exp`, `solvent`, `textfield`, `userdir`, `data`, `stat`, and `separator`—to be written into the `enterQ` file. Some of the items in `outfields` match items in `infields`, and some do not. Also, the order that the items are written does not need to match the order of the items in `infields`.

Setting Name Attributes

The characteristics of each name used by `infields` and `outfields` needs to be defined. Each name is defined by a series of attributes. The attributes are fixed. They include an `id`, `label`, `menulabel`, `style`, `file`, `numPerLine`, `required`, `output`, and `duplicates`. There are also some attributes that depend on the value of other attributes. These include `min`, `max`, `errormess`, and `usenextloc`.

The syntax of setting attributes is shown on lines 16 to 27. The word `set` is a command that takes two arguments. The first argument is a parameter name and the second is a value. For example, the line

```
set loc(id) loc
```

sets the parameter `loc(id)` to the word `loc`. The `id` attribute should match the name of the item. The value of the `label` attribute is displayed at the top of the window pane used for that selection.

The label `Sample Number` shown in [Figure 9](#) is controlled by the line

```
set loc(label) "Sample Number"
```

Figure 9. Default Interface (`enter` Program)

Note that if a parameter name is to be set to more than one word, the words need to be enclosed in double quotes (").

The `menulabel` attribute is currently unused.

Setting the Types of Widgets

The `style` attribute defines the type of widget used to select information. Available input styles include `info`, `radio`, `check`, `xradio`, `xcheck`, `textentry`, `xradiocustom`, and `xcheckcustom`.

The `info` style is used when information is presented to the user but the user cannot make a selection. This style is not used in the default `enter.conf` file but is used in two alternative interfaces that are commented out.

- The first, on lines 31 to 36, changes how the sample location is presented. In the default interface, a user presses a button to select a tray number. In the commented out interface, the user is presented with a location number into which the sample must be placed.
- The second, on lines 52 to 56, changes the way user identification is selected. In the default interface, a user presses a button to select a user name. In this interface, the user id is displayed for informational purposes but cannot be changed.

The `radio` and `check` styles are identical in function but different in appearance. The `radio` style presents a button with a label inside of the button. The `check` style presents a small box that can be checked, and the label is printed along side. For both `radio` and `check` styles, multiple selections can be made. The Sample Number and Experiment Selection window panes use the `radio` style.

Stylistically, `xradio` and `xcheck` styles are the same as the `radio` and `check` styles, respectively. The difference is that `xradio` and `xcheck` provide for exclusive selection of a choice. That is, if you press choice a and then choice b, choice a is deselected. The User identification and Solvent Selection window panes are examples of the `xradio` style.

If the style for the `exp` parameter is changed from `radio` to `xradio`, then the user can only select a single experiment. In the default setup, a user can select multiple experiments on a single sample location. A user can also select one or more experiments on a number of sample locations. When multiple samples and experiments are selected, then `enterQ` is ordered to minimize robot usage by finishing all experiments on a sample before putting the next sample into the magnet. If the style of the `loc` selection is changed from `radio` to `xradio`, the user can select only a single location.

The Sample Location buttons use the right mouse button to facilitate selecting multiple locations. The left mouse button selects and deselects an item, just as it does for all the check boxes. A single click of the right mouse button on one of the location check boxes selects that location and all preceding locations down to the next selected location. For example, a left mouse click on location 10 selects it. A right mouse click on 14 selects locations 14, 13, 12, and 11. A double click of the right mouse button on a location deselects that location and all preceding locations down to the first deselected location.

Alternate Interfaces

Figure 10 shows an interface in which all `radio` styles are changed to the `check` style and all `xradio` styles are changed to the `xcheck` style. Notice that the small box for the `xcheck` style (exclusive choice) is a diamond and the small box for the `check` style (multiple choice) is a square. If the `textentry` style is selected, a user simply inputs text.

Figure 10. Alternate Interface (enter Program)

A `col` attribute defines how much space to make available for character input. You set the `col` attribute to the maximum number of characters you expect. The `textfield` parameter uses this style have allocates space to enter 40 characters.

The `xradiocustom` style is a hybrid of the `xradio` style and the `textentry` style. Similarly, the `xcheckcustom` style is a hybrid of the `xcheck` style and the `textentry` style. These two styles provide a set of `xradio` or `xcheck` buttons that initialize the `textentry` field. The `textentry` field can subsequently be edited. This is useful for users who like to customize standard experiments.

For example, if the H1 experiment button is pressed, the `h1` macro is written into the `textentry` field. You might then add `temp=40` to the `textentry` field. If the `xradiocustom` or the `xcheckcustom` styles are selected, two additional attributes are needed. A `label2` attribute specifies a second label to be printed in front of the `textentry` field. A `col` attribute defines how much space to make available for character input. These styles are not used in the default `enter.conf` file but are used in an alternative interface that is commented out. Lines 77 to 79 will select this alternative `xradiocustom` interface. [Figure 11](#) shows the interface with this selection.

File Attribute

The `file` attribute must be present for any parameter listed in `infields`. If `file` is set to a name, then a file of that name in the `/vnmr/asm` directory is read to specify the choices available. The `user`, `exp`, and `solvent` parameters specify a file for their set of choices. These files are pairs of lines. The first line is a label that will be displayed as a choice. The second line of each pair is the string that will be output into the file generated

Figure 11. Second Alternate Interface (enter Program)

by the `enter` command. If the file attribute is set to a null string, the `min` and `max` attributes can be selected for choices of integers. This is used by the `loc` selection.

The `numPerLine` attribute provides some control over the layout of the `enter` program. This attribute specifies how many choices are presented on a line. You may notice that the `numPerLine` attribute for the `loc` selection differs between [Figure 9](#) and [Figure 10](#).

The `required` attribute specifies whether a particular selection must be made. In the default configuration file, the `required` attribute for `textfield` is set to 0. This means that users do not need to enter descriptive text in order to submit an experiment. Changing the value of the `required` attribute to 1 enforces entry of descriptive text.

The `output` attribute specifies the title of a line in the `enterQ` file. Every parameter listed in `outfields` must have an output attribute. Parameters listed in `infields` that have a style of `radio`, `check`, `xradio`, `xcheck`, `textentry`, `xradiocustom`, or `xcheckcustom` have the selected choice printed after the value of the `output` attribute. Other parameters can define an attribute named `value`, the value of which is printed after the value of the `output` attribute in the `enterQ` file.

The `loc` parameter has several special attributes:

- The `duplicates` attribute specifies whether a user can duplicate a location that is present in a preexisting file. By default, this is not allowed. The locations defined in the preexisting files are shaded out in the location window pane and are not selectable. For example, notice locations 2 and 6 in [Figure 9](#), [Figure 10](#), and [Figure 11](#).
- The `errormess` attribute specifies an error message to be displayed when a sample tray is filled. If this message is set, no more samples are accepted. If `errormess` is set to a null string (''), sample locations that are finished can be reused. The null setting is useful for continuous “walkup” operation.

- The `errormess2` attribute specifies an error message to be displayed in the continuous walkup mode (i.e., `errormess` is set to a null string) when all sample locations are used.
- The `usenextloc` attribute is an initialization step only; it is not customizable.

Button Definitions

The buttons at the bottom of the `enter` window are partially configurable. The choices available are `addExp`, `saveExp`, `saveAndExit`, `addSaveAndExit`, and `quit`. Choices appropriate to automation runs are `autoSample`, `autoSampleNoExit`, and `prioritySample`.

- The `addExp` selection, when pressed, copies the currently defined experiments into a temporary file. The user still has the choice of ending the session by pressing either the `saveAndExit` button or the `quit` button.
- The `saveAndExit` selection appends the temporary file created by pressing the `addExp` button to the `enterQ` output file, deletes the temporary file, and then causes the `enter` program to exit.
- The `saveExp` button, when pressed, copies the currently defined experiments into a temporary file, appends the temporary file to the `enterQ` output file, and then deletes the temporary file.
- The `addSaveAndExit` button does exactly the same things as the `saveExp` button and then it causes the `enter` program to exit.
- The `autoSample` button submits the currently defined experiment directly to an automation run and then exits the `enter` program.
- The `autoSampleNoExit` button functions the same as the `autoSample` button except `autoSampleNoExit` does not cause the `enter` program to exit.
- The `prioritySample` button submits the currently defined experiment to the front of the queue of an automation run and then exits the `enter` program.
- The `quit` button deletes the temporary file and then exits.

In the default case, the user can create a lot of experiments with the `addExp` button, but not actually add them to the `enterQ` file until the `saveAndExit` button is pressed.

As an alternative, a two-button exit scheme might be preferred by some. In this case, an `addSaveAndExit` button and a `quit` button would be present. The `addSaveAndExit` button writes the experiments to a temporary file, appends the temporary file to the `enterQ` output file, deletes the temporary file, and then exits. In effect, it is the combination of the `addExp` button and the `saveAndExit` button.

A third alternative is to use the `saveExp` and `quit` buttons. In this case, the only way to exit from the `enter` program is with the `quit` button. After pressing the `saveExp` button, there is no way to cancel those experiments. [Figure 11](#) shows this alternative.

The `cntrls` parameter on line 107 specifies the buttons and their order. The names are important in this case. The alternate scheme is selected by removing the comment symbol (`#`) in line 109. The second alternative scheme is selected by removing the `#` in line 112. The only other attribute that is configurable is the label for each button.

rtoutput and rtoutput2 Attributes

Buttons of type `addExp`, `saveExp`, `addSaveAndExit`, `autoSampleNoExit`, `autoSample`, and `prioritySample` can have a `rtoutput` attribute. The value of the

`rtoutput` attribute is sent to VNMR for every sample added to the enter queue by the button.

The `rtoutput` attribute has access to all of the attributes of all the variables listed in the `outfields` variable. In addition, the value of each of the outfield variables is available as the `val` attribute.

For example, `$loc(val)` contains the value of `loc` of the submitted experiment. Similarly, `$user(val)`, `$exp(val)`, `$solvent(val)`, etc. will be set to the values selected by the user.

A variable `$filename` is the name of the file where the output from the `enter` program will be written.

A second real-time output attribute can be specified by the `rtoutput2` attribute, which has access to all the same variables as the `rtoutput` attribute. The distinction is that the action specified for `rtoutput` occurs for each sample submitted. A single press of the `addExp` button can cause many experiments to be submitted, if, for example, multiple experiments and/or multiple locations were specified. The `rtoutput` will occur once for each submitted experiment. The `rtoutput2` action happens after all the `rtoutput` actions and only once for the entire group of samples submitted by a single button press.

An example is as follows:

```
set addExp(id) addExp
set addExp(label) "Add Entry"
set addExp(rtoutput) {write('alpha','loc=$loc(val)')}
set addExp(rtoutput2) {write('alpha','info written to file $filename')}
```

If any `$` variables are included in the value of the attribute, the value must be enclosed in braces `{}`.

Adding a Control Button that Sends a Command to VNMR

A control button can be made that sends a command to VNMR when the button is selected. For example, to add a `hello` button to the bottom of the Sample Entry Form window, add `hello` button to the `cntrls` line and then define the button in the `enter.conf` file. The control buttons have access a variable `$filename` that is the name of the file where the output from the `enter` program will be written.

```
set cntrls {addExp saveAndExit quit hello}
set hello(id) vnmexec
set hello(label) "hello"
set hello(rtoutput) "banner('hello')"
```

The `id` attribute must be `vnmexec` and the `rtoutput` attribute will be sent to VNMR. If any `$` variables are included in the value of the attribute, the value must be enclosed in braces `{}`.

Using radio and check with set_rtoutput and unset_rtoutput Attributes

Selections of type `radio` and `check` have optional attributes `set_rtoutput` and `unset_rtoutput`. These attributes are magical commands that will be sent to VNMR when the button is selected and deselected, respectively. The value of the attribute can include any other attribute from that group.

Prepend a \$ character to the front of the attribute name to access the value of that attribute. In addition, four other variables are provided:

- \$index – the index of the selected or deselected radio or check button.
- \$label – the label of the selected or deselected radio or check button.
- \$value – the value of the selected or deselected radio or check button.
- \$filename – the name of the file where output from enter will be written.

For example

```
set loc(set_rtoutput) {write('alpha','$loc(label) $value selected')}
set loc(unset_rtoutput) {write('alpha','$loc(label) $value de-selected')}
```

If any \$ variables are included in the value of the attribute, the value must be enclosed in braces {}.

Using xradio and xcheck with rtoutput Attribute

Selections of type xradio and xcheck have an optional attribute rtoutput. This attribute is a magical command that will be sent to VNMR when the button is selected. The value of the attribute can include any other attribute from that group.

Prepend a \$ character to the front of the attribute name to access the value of that attribute. In addition, four other variables are provided:

- \$index – the index of the selected xradio or xcheck button.
- \$label – the label of the selected xradio or xcheck button.
- \$value – the value of the selected xradio or xcheck button.
- \$filename – the name of the file where output from enter will be written.

For example

```
set user(rtoutput) {write('alpha','$user(label) is $label with $value')}
```

If any \$ variables are included in the value of the attribute, the value must be enclosed in braces {}.

Sample Entry Control

The exList field in the configuration files is used to specify files that contain excluded sample locations. This is important for walkup automation, where sample locations are reused. The field is a list of file names. The contents of the files are searched for location definitions. For example, if the line SAMPLE#: 33 is one of the files, location 33 will be excluded. This is also useful to exclude certain locations that contain reference samples.

The current exList is set to {exp1/sampleinfo locQ}. Relative path names are relative to the automation directory. Absolute path names can also be used. The entry exp1/sampleinfo prevents the current location of the sample in the magnet from being used. The locQ entry causes all locations to be used before they are reused. Removing locQ from exList makes locations available for reuse as soon as all the experiments on that location are finished.

The locList is a single file that contains a list of locations that are submitted to an automation run. This file is used to recycle used locations for walkup automation and should not be altered. The difference between the files enter.conf and auto.conf

files is the selection of the button at the bottom of the window and the setting of the `exList` and `locList` parameters.

Adding a New Field

If you want to add a new field to the `enter` program, editing the `enter.conf` file is required. Suppose you want to have the users input a notebook number. If you have a list of possible notebook numbers, you could use a `xcheck` or `xradio` style of window pane.

Alternatively, you could have the user type in a notebook number, using the `textentry` style. Adding the following lines defines the window pane, using the `textentry` style.

```
set notebook(id) notebook
set notebook(label) "Note book Number"
set notebook(style) textentry
set notebook(file) ""
set notebook(col) 40
set notebook(required) 1
set notebook(output) NOTEBOOK:
set infields {loc user solvent exp notebook textfield}
set outfields {loc user exp solvent notebook textfield userdir data
stat separator}
```

Adding `notebook` to `infields` causes the notebook pane to appear in the `enter` program. Adding `notebook` to `outfields` causes its value to be written to the file when an entry is added. Note that in the example the notebook entry is specified as required. The specifications in the `enter.conf` file can be multiply defined. The last definition, in a top-to-bottom model, is the definition that is used. Therefore, adding the above lines to the button of the default `enter.conf` file has the effect of adding the notebook window pane. You could instead edit the `infields` and `outfields` definitions on lines 6 and 11 directly.

These changes add the `notebook` field to each entry in the `enter` queue for the automation run. The `auto_au` macro probably needs to be updated to take advantage of the new `notebook` field. You might set a `VNMR` parameter to the value of the notebook number. Or, in conjunction with the `autoname` parameter, you could imbed the notebook entry in the file name used to save the data.

New fields are the primary addition to the `gilson.conf` configuration file. Added were entries to specify the rack location on the sample changer (up to 5 rack locations are possible) and the zone location (each rack location can have up to 3 different zones). A specific configuration files for the `status` command (`statgil.conf`) is present to handle the extra `outfields` members.

6.2 Customizing the status Window

The status window displays the contents of the `enterQ` and `doneQ` files used to control automation:

- `enterQ` contains the list of experiments remaining to be submitted. This file is constructed by the `enter` program, which uses the `outfields` parameter to specify which items are written into the `enterQ` file.
- `doneQ` contains the list of experiments that either are currently active or are finished. This file is derived from the `enterQ` file.

Window Configuration File

The interface to status is usually controlled by the `status.conf` file., supplied in the `/vnmr/asm` directory. This file is duplicated in [Listing 15](#), with the lines numbered for reference. Any line in the file that starts with a `#` is a comment line.

For status to work correctly, an `outfields` parameter must be specified that matches the `outfields` parameter used by `enter` as the initiator of the automation run. The

Listing 15. Text of the `status.conf` File

```

1. # Status configuration information
2.
3. # outfields identifies the items which will were output by the
4. # enter program. The order of the listed items must be the
5. # same as those used for the enter program
6. set outfields {loc user exp solvent textfield userdir data stat separator}
7.
8. # showfields identifies the items which will be displayed by the
9. # status program. They must be a subset of outfields. The order
10. # does not need to be the same as outfields
11. set showfields {user loc textfield}
12.
13. # Button Definitions
14. # Possible cntrls are rt locate and quit
15. set cntrls {rt locate quit}
16.
17. set rt(id) rt
18. set rt(label) "Retrieve Data"
19.
20. set locate(id) locate
21. set locate(label) "Find Entry"
22.
23. set quit(id) quit
24. set quit(label) "Quit"
25.
26.
27. # num sets the number of entries to be shown in the scrolling window
28. # col sets the width of the scrolling window (in characters)
29. # logtitle sets the title above the Log window
30. # rows sets the number of rows in the Log window
31. # the selectcolor set the color of an entry which is selected with
32. # a mouse click. The other color parameters set colors of entries
33. # based on the STATUS: field for that entry.
34. # sort defines the way that the entries will be sorts. The choices
35. # are std, loc, user, or stat
36. set results(num) 8
37. set results(col) 60
38. set results(logtitle) "Log information"
39. set results(rows) 15
40. set results(selectcolor) pink
41. set results(errorcolor) red
42. set results(queuecolor) blue
43. set results(completercolor) black
44. set results(activecolor) magenta
45. set results(totalcolor) black
46. set results(sort) std
47. set results(sort) user

```

order of the items in the `outfields` parameter must also match that used by the `enter` program.

The `status` command displays a scrollable window with the separate experiments listed. Not all fields that define an `enterQ` entry need to be displayed in this window. The `showfields` parameter is a subset of the items in `outfields`. These are displayed in the order they are defined by the `showfields` parameter.

Defining Buttons and Window Attributes

Three buttons can be defined to be displayed below the scrolling list of experiments. The choices are `rt`, `locate`, and `quit`. The parameter `cntrls` is used to define the buttons and their order. The label on each button is controlled by the `label` attribute of each button definition.

When an entry in the scrolling window is clicked on with the left mouse button, a full summary of that entry is displayed below the buttons. The `results` parameter controls the details of the scrolling window and the summary display. [Figure 12](#) shows the default `status` window.

The `num` attribute sets the number of experiments to be displayed in the scrolling window. This value, along with the number of items in the `showfields` parameter, determines the overall height of the status window.

The `col` attribute defines how much space to make available for character display. This attribute controls the overall width of the status window.

The `logtitle` attribute specifies the title to be displayed above the summary window.

Color is used by the `status` program to indicate the experiment status. Possible statuses are `queued`, `active`, `complete`, `shimming`, and `error`. Color selection for each status are made with the appropriate `color` attribute.

Two other color attributes are defined:

- `selectcolor` sets the color of the currently selected entry from the scrolling window. That is, the entry where the left mouse was clicked.
- `totalcolor` is the color of the number of total experiments shown at the top of the status command.

The `sort` attribute defines the default sorting criterion to be used to display the experiments in the scrolling window. The choices are to sort chronologically, which is the `std` sort, to sort by location numbers (`loc`), to sort by user names (`user`), or to sort by experiment status (`stat`). This attribute only defines the default sort. The `locate` button provides access to the other sort criteria.

6.3 Customizing the Interactive dg Window

The interactive `dg` window brings a new level of functionality to VNMR. This window is readily customizable and so can be designed for the specific needs of individual pulse sequences. The window consists of a series of panes. Any pane can be selected by clicking on the label tab normally found to the right of the window. [Figure 13](#) shows this window.

Each pane of the window deals with settings and actions associated with a particular phase of operating the spectrometer. The most common display element on a pane is a labeled value of a setting. This value may be altered by clicking on it with the mouse, editing the value in the normal manner, and then either pressing Return or moving the mouse cursor to another value and clicking on that (shifting the focus).



Figure 12. Default Interface (status Program)

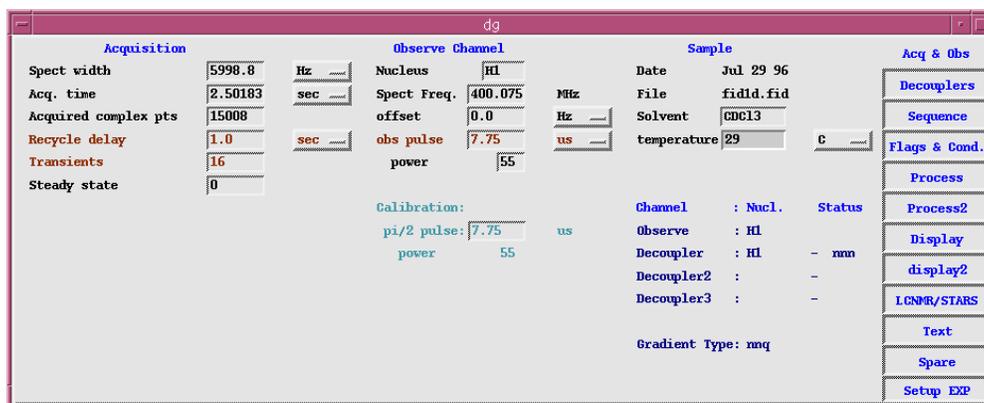


Figure 13. dg Window

Normally a setting displayed in `dg` is associated with a parameter. You can alter the setting by typing into the command line in the normal way or as outlined above

A number of editing operations can be used on an entry:

- A single click of the left mouse button positions the entry cursor between characters at about the mouse position. Typing characters insert them at this point. The backspace key deletes characters to the left of the cursor, and the Del key deletes characters to the right.
- Double-clicking the left mouse button highlights a string of characters bounded by white space or punctuation, such as a word. The highlighted characters can be deleted as a group or changed as a group by typing new characters.
- Triple-clicking highlights the entire entry. This spans multiple words. The action on deletion or overtyping is the same as the double click highlight.

Types of Fields

Many types of fields are available—titles, labels, entries, tabs, menus, buttons, check boxes, and more. Each type of field available is described in this section.

Titles

Titles are inactive, but identify groups of elements, normally below the title.

Labels

A label consists of two components—a character string and its current value. A label is noninteractive. An example of a label is “Completed transients 423”.

Entries

An entry consists of three components—a character string (label), its current value and its units. The value field is interactive and is editable using the previous rules.

The unit field may be absent, may be fixed or may be selectable. If selectable, the selection is through a menu that is accessed by holding down the left mouse button on the field and then moving it to the desired new value before releasing it. Unit changes are local; they require no action from within VNMR.

Tabs

Each pane of `dg` has a tab associated with it. These tabs are normally on the right edge of the window. The currently displayed pane has its tab raised to the front. You can go to any other pane simply by clicking on its tab.

The tab labeled **Spare** typically has nothing of interest in its pane. The tab labeled **Text** is the text window of older versions of VNMR. It is here that commands such as `d11` display output. Commands `dg`, `dgs` etc. still work and display their traditional output on this pane.

As soon as the text displayed is greater than the size of the pane, a vertical scroll bar appears as an aide to navigation.

Menus

A menu consists of either one or two elements. Used on its own, a menu may have a character string (label) element and a choice bar. Used in conjunction with an “Entry,” only

the choice bar is seen. The choice bar has a small rectangle embedded in it. The choice bar also shows the current choice.

The left mouse button drops down the menu of choices when depressed while the mouse is on the choice bar. Keep the button depressed and move the mouse to highlight the desired choice. Release the mouse button and this will make the choice.

Buttons

A button differs from a menu in a several ways. First, it has only one element, a bar with a text string in it. Second, when clicked on with the mouse, a button causes an action to occur in VNMR. An example is the button in the “FT & Post FT” pane marked “Transform”. When pressed, an Ft is performed.

Titles are often buttons. You can tell if this is the case as inactive titles have no border.

Check Boxes

A check box can have one or two fields. They are often associated with entries, in which case they make the entry value active or inactive. The first field of a check box, if present, is a text string. The second field is the actual check box, which is a small square.

When checked, the small square is red and is sunken. When unchecked, it is gray and raised. The check box toggles between these two states with alternate mouse clicks on it. Generally, each check box is independent of all others.

Radio Buttons

Radio buttons are small diamonds arranged in vertical columns. Each row in a column has two fields, a text string and the actual radio button. When a radio button is selected, it is colored red and is sunken. When it is not selected, it is gray and raised.

Just like their namesake, adjacent radio buttons in a column are mutually exclusive. If you click on an unselected one, it becomes selected and the currently selected one becomes unselected. You will find radio buttons controlling mutually exclusive choices such as `ph`, `av`, and `pwr`.

Scales

Scales are slider bars. They have two or three fields. The first field is a text string. The second field is optional, but when present shows the current value of the slider. The third field is the slider itself.

There are two ways of altering the slider. The first is to grab the slider itself and drag it to the desired position in the trough. The other is to click in the trough itself. If you click in the trough with the middle mouse button, the slider moves to that position. Clicking in the trough with the left mouse button alters the slider in that direction by one unit. We have not used a slider in the sample panes, but an application could be setting phase parameters.

Scrolls

Scrolls are distinguished by two small boxes, side by side, one with an up arrow and the other with a down arrow. A scroll has three fields—a text string, the current value, and two arrows. You cannot see the set of choices that a scroll offers, only the currently selected value. Each click with the left mouse button on one of the arrows moves the selected value in the appropriate direction. A typical example of a scroll is in the selection of Fourier Number.

Selecting the New Interface

The primary program is named `dg` and resides in the `tcl/bin` directory of the `vnmr` system directory. This interface is selected by setting the UNIX environmental variable `vnmrtext` to the full path of the `dg` program. A typical setting would be

```
setenv vmrtext $vnmr/system/tcl/bin/dg
```

This line is in the `.login` file distributed with the software.

Deselecting the New Interface

You can run the noninteractive `dg` window by inserting a `#` character in front of the `vnmrtext` line.

Window Configuration Files

When the new interface is started, a `dg.conf` file specifies the general layout of the window (see [Figure 13](#)). This file exists in the `user_templates/dg/default` directory of the system directory. [Listing 16](#) shows a default version of `dg.conf` (the lines are numbered for reference). Alternatively, if a user has a private copy of `dg.conf` in the user's directory `vnmr/sys/templates/dg/default`, that copy is used.

The `dg.conf` file specifies the tabs, the associated label, and the configuration file for each window pane. If this file specifies only a single tab, then the actual tabs are not displayed and the specified configuration file is used for the single pane.

One special configuration file, `dg.info`, is present that mimics the behavior of the old `dg` window. The `dgLocal(output, number)` for the `dg.info` pane must be set to 1. The `dgLocal(output, number)` for all other panes must be set to 0.

Two other parameters in the `dg.conf` control the layout of the tabs and the overall geometry of the window. The `dg.conf` file must be edited by hand if you wish to make changes. Three parameters control the background color of entry elements if the parameter being displayed is arrayed, is set to "Not Active," or does not exist. Another parameter specifies whether the `dg` template configuration tool is available.

The window configuration files are checked for in the following order of priority:

1. In the user's `vnmr/sys/templates/dg` directory, if an "Experiment Specific" configuration file exists in a directory named after the value of `seqfil`.
2. In the user's `vnmr/sys/templates/dg/default` directory, which contains experiment-independent configuration files.
3. In the system's `user_templates/dg` directory, if an "Experiment Specific" configuration file exists in a directory named after the value of `seqfil`.
4. In the system's `user_templates/dg/default` directory, which contains experiment-independent configuration files.

Editing the Configuration Files

While the configuration files are simple text files, editing the files by hand is not recommended. A configuration tool is provided to construct the files. To activate the tool, hold down the Control key and click the left mouse button on the currently selected tab.

Two windows appear. The first window (see [Figure 14](#)) as a matrix of buttons labeled 1,1 1,2 1,3 etc. The name of the active configuration file is displayed in the title bar. This matrix

Listing 16. Text of dg.conf File

```

1. set dgLocal(title,1) "Acquisition"
2. set dgLocal(file,1) "dg.acq"
3. set dgLocal(output,1) 0
4.
5. set dgLocal(title,2) "Pre FT"
6. set dgLocal(file,2) "dg.process1"
7. set dgLocal(output,2) 0
8.
9. set dgLocal(title,3) "FT & Post FT"
10. set dgLocal(file,3) "dg.process2"
11. set dgLocal(output,3) 0
12.
13. set dgLocal(title,4) "Text"
14. set dgLocal(file,4) "dg.info"
15. set dgLocal(output,4) 1
16.
17. set dgLocal(title,5) "Spare"
18. set dgLocal(file,5) "dg.spare"
19. set dgLocal(output,5) 0
20.
21. set dgLocal(title,6) "Spare"
22. set dgLocal(file,6) "dg.spare"
23. set dgLocal(output,6) 0
24.
25. # Color for Arrayed entries
26. set dgLocal(ac) pink
27. # Color for Not Active entries
28. set dgLocal(off) gray80
29. # Color for Not defined entries
30. set dgLocal(nc) gray70
31. #set edit to yes or no to toggle configuration access
32. set dgLocal(edit) yes
33.
34. set dgLocal(side) vert
35. # Uncomment the following line to have the tabs appear across the top
36. # set dgLocal(side) horiz
37.
38. wm geometry . 925x350+0-0

```

window is used to select items and rearrange items. Each button in the matrix window represents a corresponding grid element in the dg pane. The buttons highlighted in pink indicate that some interaction item is present at that grid location. The first four characters of the label of the interaction are displayed.

To move items within the pane, hold the left mouse button down over one of the highlighted grid buttons, drag the mouse arrow, with the button still down, to a non-highlighted grid item, and then release the mouse button. The change is immediately shown in the dg pane.

To select grid items, click the left mouse button over one of the grid items in the matrix window. The currently selected item will blink in the matrix window. By selecting a grid item, you can either define or redefine the contents of that grid item.

The second window (see [Figure 15](#)) is used to define the interaction elements. At the top of this window, the Panel File: entry identifies the configuration file associated with the current dg pane. Below that is the Panel Title: and the Geometry of the DG window. This

dg.acq									
1,1	Acqu	1,3	1,4	Samp	1,6	1,7	Flag	Nucl	1,10
2,1	2,2	2,3	2,4	Date	2,6	2,7	inte	2,9	2,10
Spec	3,2	3,3	Mfz	Solv	3,6	3,7	inte	3,9	3,10
Obs	4,2	4,3		File	4,6	4,7	32 b	4,9	4,10
Acq.	5,2	5,3		5,5	5,6	5,7	homo	5,9	5,10
Acq.	6,2	6,3	6,4	Deco	6,6	6,7	6,8	6,9	6,10
Spec	7,2	7,3		Nucl	7,6	7,7	Cond	7,9	7,10
8,1	8,2	8,3	8,4	Dec	8,6	8,7	bloc	8,9	8,10
Obs.	9,2	9,3		Dec	9,6		fid	9,9	9,10
po	10,2	10,3	10,4	10,5	10,6	10,7	exp.	10,9	10,10
Recy	11,2	11,3		Dec	11,6	11,7	erro	11,9	11,10
12,1	12,2	12,3	12,4	mod	12,6	12,7	12,8	12,9	12,10
Tran	13,2	13,3	13,4	mod	13,6	13,7	Spec	13,9	13,10
co	14,2	14,3	14,4	pow	14,6	14,7	temp	14,9	
Stea	15,2	15,3	15,4	90 p	15,6		15,8	15,9	15,10
Bloc	16,2	16,3	16,4	pow	16,6	16,7	16,8	16,9	16,10

Figure 14. Matrix Window (dg Program)

Display Groups

Panel File: dg.acq
 Panel Title: Acquisition
 Geometry of DG window: 925x350+0-0

Rows: 16
 Columns: 10

Current element: 1,9
 Type of element: scroll
 Row extent: 1
 Column extent: 3
 Justify: left

Label of element: Nucleus
 Choices: H1 F19 P31 C13
 Value of choices:
 Units:
 Color of label: black
 Width of element: 3
 Scale Tcl pars:
 Vnmr Variables: tn
 Vnmr Cmd: tn=' \$VALUE'
 Vnmr Cmd2:
 Tcl Cmd: \$tn
 Show Condition:

Refresh Display Exit s2pul Specific Save Display

Figure 15. Interaction Elements Window (dg Program)

information comes from the `dg.conf` file. At the bottom of the window are several buttons. The Refresh Display button causes any changes you may make to be displayed in the Dg pane. However, those changes are only temporary and will go away when the configuration window goes away, either by pressing the Exit button or by selecting another tab from the Dg pane.

To save changes, the only way is to press the Save Display button in the lower right-hand corner of the window. To the left of this button is a selection to specify if the configuration file is “Experiment Specific” where Experiment will be substituted with the current value of `seqfil`.

- If Experiment Specific is selected, the file is saved in an Experiment directory, where Experiment is substituted with the current value of the `seqfil` parameter.
- If Experiment Specific is not selected, the file is saved in the default directory. These are subdirectories of the `/vnmr/user_templates/dg` directory or the user’s `vnmrsys/templates/dg` directory.

If you have write permission in the `vnmr` system directories, you are presented a choice of System and User. Selecting one or the other saves the configuration files in the directories `/vnmr/user_templates/dg` or the user’s `vnmrsys/templates/dg` directory. If you do not have write permission in the `vnmr` system directories, you do not see this choice.

In all cases, the name of the file is shown in the Panel File entry at the top of the window. Note that the file name is editable and can be used to create new configuration files. In order for them to become active, you need to add an appropriate entry into the `dg.conf` file.

As already mentioned, the geometry of the dg pane is defined in the `dg.conf` file. Entering a new value in the geometry field of the configuration window, and then pressing Refresh Display causes the dg window to resize and reposition to the new geometry. Alternatively, the mouse can be used to resize and reposition the dg window. Whenever the mouse enters and then leaves the area of the screen covered by the dg window, the value of geometry in the configuration window is updated. Once the desired geometry is set, the value displayed in the configuration window should be copied into the proper line in the `dg.conf` file.

The dg pane is broken up into a grid of rectangles, as represented by the matrix window. The size of the grid in terms of the number of rows and columns is controlled by the Rows and Columns menus in the configuration window. The Rows represents how many items can be placed in a column. It basically defines the height of the dg window. There are different choices that can be made when deciding the number of rows and columns. This will be discussed after all the customizable elements are described.

Below the Rows and Columns menus is a label that identifies which element of the matrix window is selected. Below that is the Type of Element menu. This menu provides a list of all the different types of interaction items that can be placed at the current location. If a pink highlighted button is selected from the matrix window, this menu displays the current item at that location.

The next two rows are Row Extent and Column Extent menus. Interaction items can be defined to be larger than a single grid rectangle. Increasing the Row Extent of an item causes it to occupy a corresponding number of grid rectangles below the currently selected rectangle. Increasing the Column extent of an item causes it to occupy a corresponding number of grid rectangles to the right of the currently selected rectangle.

The Justify menu selects whether the item is aligned along the left edge of its grid space, centered within the grid space, or aligned along the right edge of the grid space.

Below this menu are twelve entry fields. These are used to define the label and actions of the interaction items. Each type of interaction item has its own set of adjustable characteristics. Entry fields that are not appropriate for the selected type of element are shaded and you can not enter a value in the shaded field.

Interaction Elements

The Type of Element choices and the associated characteristics define the actions of the dg pane. The available elements are none, title, label, button, entry, check, radio, menu, menu2, scale, scroll and list. For each of these elements, the Row Extent, Column Extent, and Justify options are available.

Also for each of these elements, the Color of Label choice is available. It must be filled in with the name of any legitimate X-windows color. The UNIX command `showrgb` lists the available color names. If an unknown color name or no color name is present, it defaults to black

None Element

The none element removes any interaction item from the selected grid rectangle.

Title Element

The title element places a non-interactive title at the selected grid rectangle. The available characteristics are the following:

Label of element: The text string to be displayed as the title. While this field is optional, the title element is invisible if it is empty.

The title item is useful to explore the effect of Row Extent and Column extent. If you input a fairly long text line as the title and then press Refresh Display, only a portion of the text is displayed. Increase the value of Row Extent from the menu and more text is displayed. Increase the Column Extent and the title can be positioned between rows of the grid.

Label Element

The label element places a noninteractive label at the selected grid rectangle. The label is different from a title in that the value of a parameter can be displayed and the display is updated in the parameter value changes. However, you cannot change the parameter directly with this item. The available characteristics are the following:

Label of element: Text string to be displayed to the left of the parameter value. This field is optional.

Units: Text string to be displayed to the right of the parameter value. This field is optional.

Width of element: Width of the field that the parameter value is displayed. This field is optional, but is automatically set to 8 if no value or an illegal value is entered.

Vnmr Variables: List of VNMR variables that are used to construct a value to be displayed. This can be zero or more parameter names.

Tcl Cmd: A Tcl expression that is evaluated to determine the value that is displayed by this label item. Any legitimate Tcl expression is allowed.

To access the values of any VNMR parameters specified in the `Vnmr Variables` list, prepend a dollar sign (\$) to the parameter name. For example, the value of `sfrq` is `$sfrq`.

The following examples show Tcl expressions possible for Tcl Cmd:

hello	A simple string that will not be updated and is not very useful. It would be better to use a title for this case.
[expr \$np/2.0/\$sw]	An expression to calculate acquisition times. Parameters np and sw need to be listed as Vnmr Variables in order to get access to their values.
[expr acos(-1)]	A calculator for pi.
\$ct	Probably the most common use. The value of a VNMR parameter is displayed and updated as it changes. ct needs to be listed as Vnmr Variables to get access to its value. During an acquisition, this value would be updated as block-size transfers of data occur.

Button Element

The button element is the first interactive item. It provides a mechanism to send any MAGICAL command to VNMR. As a mouse button passes over a button, the button changes color to indicate that it is an active item. The available characteristics are the following.

Label of element:	Text string to be displayed inside the button. This field is optional.
Width of element:	Width of the button. This field is optional. The actual width depends on this entry and the value of the Justify field. If any value greater than zero is set in this field, a button of roughly that many characters is shown. If the entry is set to zero, a default size based on the Label of element field is used. If the field is empty (or a non-real value is input), it behaves as if the value of zero were set, provided Justify is set to left or right. If Justify is set to center, an empty field or a non-real value causes the button to occupy the entire width of the selected grid rectangle.
Vnmr Cmd:	MAGICAL expression or command executed when the button is pressed. The field is optional, however; if nothing is specified, nothing happens when the button is pressed.

Entry Element

The entry element is similar to label, except that a value is not only displayed but can be directly altered. The available characteristics are the following

Label of element:	Text string to be displayed to the left of the parameter value. This field is optional.
Units:	Text string to be displayed to the right of the parameter value. This field is optional.
Width of element:	Width of the recessed entry field. In this field, the parameter value is displayed and entered. This field is optional but is automatically set to 8 if no value or an illegal value is entered.
Vnmr Variables:	List of VNMR parameters used in the following Vnmr Cmd and Tcl Cmd fields. This can be zero or more parameter names.
Vnmr Cmd:	MAGICAL expression sent to VNMR. Any specified VNMR parameters can be used. Their value is accessed by prepending a dollar sign (see example below). One special variable is also available. That is the value of the typed in entry. The value is accessed by the keyword \$VALUE.
Tcl Cmd:	Tcl expression that is evaluated to determine the value displayed by this entry item. Any legitimate Tcl expression is allowed.

Show Condition: Tcl expression that is evaluated to determine whether the value background should be grayed out. If it evaluates to false, the color specified in `dg.conf` by `dgLocal(off)` is used.

To access the values of any VNMR parameters specified in the `Vnmr Variables` list, prepend a dollar sign (\$) to the front of the parameter name. The basic example for setting a `Vnmr` variable would be the following:

```
Vnmr Variables:    bs
Vnmr Cmd:         bs=$VALUE
Tcl Cmd:          $bs
Show Condition:   [vnmrOn bs]
```

The `Vnmr Variables` field requests access to the VNMR parameter `bs`. The `Vnmr Cmd` field constructs a MAGICAL expression where `bs` is set to the value entered into this entry widget. The `Tcl Cmd` field states how the value displayed in the entry field is determined.

When a value is entered, the field is updated according to the instructions in the `Tcl Cmd` field. If a nonsense value is entered, or if parameter recalculation occurs, the displayed value should be redisplayed based on VNMR parameters, not some internal state of that entry field. If the `Tcl Cmd` field is left blank, the entry field is cleared after the `Vnmr Cmd` is sent. The `Vnmr Cmd` is sent if the Return key is pressed in the entry window or the mouse arrow is clicked on some other widget so that the focus leaves the entry window.

Check Element

The check element selects and de-selects some mode or state, often as a yes or no selection. It is presented as a small square box to the left of a label. The box is depressed and colored if it is selected. The available characteristics are the following:

Label of element: Text string to be displayed to the right of the check box. This field is optional.

Vnmr Variables: List of VNMR parameters used in the following `Vnmr Cmd`, `Vnmr Cmd2`, and `Tcl Cmd` fields. This can be zero or more parameter names.

Vnmr Cmd: MAGICAL expression sent to VNMR whenever the check box is selected. Any specified VNMR variables can be used.

Vnmr Cmd2: MAGICAL expression sent to VNMR whenever the check box is deselected. Any specified VNMR parameters can be used.

Tcl Cmd: Tcl expression that is evaluated to determine whether or not the check box should be identified as selected or de-selected.

The prototype example for using a check box would be the following, which selects or de-selects experiment interleaving:

```
Vnmr Variables:    il
Vnmr Cmd:         il='y'
Vnmr Cmd2:        il='n'
Tcl Cmd:          [expr {$il == "y"}]
```

In the example, the `Vnmr Variables` field requests access to the VNMR parameter `il`. The `Vnmr Cmd` field constructs a MAGICAL expression where `il` is set to 'y' when the check box is selected. The `Vnmr Cmd2` field constructs a MAGICAL expression where `il` is set to 'n' when the check box is deselected. The `Tcl Cmd` field determines, based on the current value of `il`, whether the check box should be shown as selected or deselected.

It is the use of the value of `il` in this expression (as `$il`) that requires `il` to be in the `Vnmr Variables` entry. The syntax of the `Tcl Cmd` field is standard Tcl syntax. Whatever the expression, it should return a 1 if the check box is to be selected; 0, otherwise.

Radio Element

The radio element gives a number of choices, only one of which can be selected. Whenever one is selected, the others are deselected. The choices are presented as small diamonds to the left of a label, and the choices are presented in a column of rows. This is one item where it is useful to use the `Row extent` so that each choice has its own row. The radio element is probably the most difficult item to program correctly. The available characteristics are the following:

Label of element:	Set of text strings to be displayed to the right of the radio diamonds. If the label for a given choice is more than one word, it must be enclosed in double quotes. It must be filled in with at least two labels.
Value of choices:	List of values the variable <code>VALUE</code> (accessed as <code>\$VALUE</code>) will be set to. The number of values must match the number of labels. If a value is more than a single word, it must be enclosed in double quotes.
Vnmr Variables:	List of VNMR parameters used in the following <code>Vnmr Cmd</code> and <code>Tcl Cmd</code> fields. This can be zero or more parameter names.
Vnmr Cmd:	MAGICAL expression sent to VNMR whenever one of the radio boxes is selected. Any specified VNMR parameters can be used. The variable <code>\$VALUE</code> is set to the value in the <code>Value of choices</code> list of the selected choice.
Tcl Cmd:	Tcl expression that is evaluated to determine which radio selection should be identified. The return value of the expression must match one of the choices in the <code>Value of choices</code> list.

The radio buttons are useful when making exclusive choices among more than two items. If the choice is between two items, the check box is more appropriate. A prototype example for using radio buttons is the following, which selects one of three alternatives for temperature error handling:

```
Label of element:  "Ignore errors" "Warn on error" \
                  "Abort on error"
Value of choices  n w y
Vnmr Variables:   tin
Vnmr Cmd:         tin='$VALUE'
Tcl Cmd:          $tin
```

Note the single quotes around `$VALUE` in the `Vnmr Cmd` field. This is standard MAGICAL syntax for setting string parameters. The single quotes are not part of the value of the string. That is, the value of `$tin` is simply `n`, `w`, or `y` and not `'n'`, `'w'`, or `'y'`.

The alternative of setting

```
Value of choices: 'n' 'w' 'y'
Vnmr Cmd:         tin=$VALUE
```

could be used but then the `Tcl Cmd` field is much more complicated. The value of `$tin` does not match the characters with single quotes. Simply using `'$tin'` as the value of `Tcl Cmd` is not a valid Tcl expression.

The next example shows the flexibility of this interface. However, it does take familiarity with Tcl to decipher the value of `Tcl Cmd`. The result of this definition is a series of radio buttons that implement all of the `jexp` commands.

```
Label of element:   Exp1 Exp2 Exp3 Exp4 Exp5 Exp6 Exp7
                   \ Exp8 Exp9
Value of choices:  1 2 3 4 5 6 7 8 9
Vnmr Variables:   curexp
Vnmr Cmd:         jexp$VALUE
Tcl Cmd:          string range $curexp [expr
                  \[string length $curexp]-1] end]
```

Note that the substitution of `$VALUE` is not as a parameter in a `MAGICAL` expression but to complete a `MAGICAL` command name. The result of the `Tcl Cmd` field is to return the last character of the `curexp` parameter, which will match one of the `Value of choices` list.

It is often the ease in which a `Tcl Cmd` entry can be constructed that determines what entries are put in the `Value of choices` field. For example, a second way to implement the same function as the `jexp` example above is with the following:

```
Label of element:   Exp1 Exp2 Exp3 Exp4 Exp5 Exp6 Exp7
                   \Exp8 Exp9
Value of choices:   exp1 exp2 exp3 exp4 exp5 exp6 exp7
                   \exp8 exp9
Vnmr Variables:    curexp
Vnmr Cmd:          j$VALUE
Tcl Cmd:           [file tail $curexp]
```

Some might claim the second `Tcl Cmd` expression is simpler.

Menu2 Element

The `menu2` element gives a number of choices in a drop-down menu. A label can be displayed to the left of the `menu2` button, and the current selection is displayed inside the `menu2` button. This button is distinguished from the `button` element by a second, small rectangle imbedded in the button. The available characteristics are the following:

```
Label of element:   Text string to be displayed to the left of the menu box. This field
                   is optional.
Choices:           Set of text strings to be displayed in the drop-down menu. If the
                   text for a given choice is more than one word, it must be enclosed
                   in double quotes. It must be filled in with at least one choice. The
                   label of the currently selected choice is displayed in the menu
                   box.
Value of choices:   List of values the variable VALUE (accessed as $VALUE) will be
                   set to. The number of values must match the number of choices.
                   If a value is more than a single word, it must be enclosed in
                   double quotes.
Vnmr Variables:    List of VNMR parameters to be used in the following Vnmr Cmd
                   and Tcl Cmd fields. This can be zero or more parameter names.
Vnmr Cmd:          MAGICAL expression that is sent to VNMR whenever an item is
                   selected from the drop-down menu. Any specified VNMR
                   parameters can be used. The variable $VALUE is set to the value
                   in the Value of choices list of the selected choice.
```

Tcl Cmd: Tcl expression that is evaluated to determine which choice should be identified and displayed in the menu2 button. The return value of the expression must match one of the choices in the Value of choices list.

The menu2 element is useful when making exclusive choices among several items. If the choice is among two items, a check box is useful; three or four items can be handled by radio buttons. For more items, the menu2 item is useful because the entire list of choices is only displayed where you are making a selection. Note that the menu2 item differs from the standard Tcl/Tk menu item in that it supports a multiple-column display of choices if more than ten choices are specified.

The following example selects one of several decoupler modulation schemes:

```
Label of element:      modulation
Choices:              ccc ccw cww www ccg ccp
Value of choices:     ccc ccw cww www ccg ccp
Vnmr Variables:      dmm
Vnmr Cmd:             dmm= '$VALUE'
Tcl Cmd:              $dmm
```

Scale Element

The scale element adjusts a parameter with a slider. A label and the current value of the scale can be displayed to the left of the scale. The size of the scale item often requires a Row extent of 2 and a Column extent: of 2 or more. The value of the scale can be changed by clicking mouse button 1 or 2 in the scale or dragging the slider. The available characteristics are the following:

Label of element:	Text string to be displayed to the left of the menu box. This field is optional.
Width of element:	Amount of space reserved to display the value of the scale. If the width is 0, the value is not displayed. If the center justification is selected, the label and value are aligned along the left edge and the scale is aligned along the right edge of the grid rectangle.
Scale Tcl pars:	The scale element has many configuration options. These can be set here. In general, an option is a keyword preceded by a minus sign followed by a value. Scales include the following options: <ul style="list-style-type: none"> -from Value corresponding to left or top of scale -to Value corresponding to right or bottom of scale -tickinterval Spacing between numerical values below or to left of scale. A 0 removes all values -resolution Value specifying resolution of values. A value greater than zero causes the scale value to be an even multiple of the resolution. The default value is 1, which gives integer resolution. -showvalue Set to 0 or 1 to show the scale value above or to the right of the slide. The default is 0, for no. -orient Set to v for a vertical scale or h for a horizontal scale. h is default. If v is chosen, the Row extent value of the item probably needs to be increased.

	<code>-length</code>	Length of the scale in the long direction. The value is in arbitrary units.
	<code>-width</code>	Width of the scale in the narrow direction. The value is in arbitrary units. The default is 10.
Vnmr Variables:		List of VNMR parameters used in the following Vnmr Cmd and Tcl Cmd fields. This can be zero or more parameter names.
Vnmr Cmd:		MAGICAL expression sent to VNMR whenever a mouse button is released in the scale item. Any specified VNMR parameters can be used. The variable \$VALUE is set to the value of the scale.
Tcl Cmd:		Tcl expression that is evaluated to determine the value of the scale. Any legitimate Tcl expression is allowed. To access the values of any VNMR parameters specified in the Vnmr Variables list, prepend a dollar sign (\$) to the front of the parameter name.

The scale element is a useful mechanism to modify a numerical parameter. It prevents errors in parameter entry. Its weakness is that it takes up a fair amount of area and is not always easily manipulated by dragging the slider with the left mouse button to a new value. However, clicking anywhere in the slider trough with the middle mouse button sets the scale to that value. Also, clicking inside the trough on either side of the slider with the left mouse button changes the scale value by one (resolution) unit.

The following example provides adjustment of the temperature:

```

Label of element:    temp
Width of element:   3
Scale Tcl pars:     -to 100 -from 0 -tickinterval 20
                   \-length 180

Vnmr Variables:     temp
Vnmr Cmd:           temp=$VALUE
Tcl Cmd:            $temp

```

If you wanted the scale value to move with the slider, the value of `Width of element` field could be set to 0 and a `-showvalue 1` option could be added to the `Scale Tcl pars` field.

Scroll Element

The scroll element adjusts a parameter with a up-down buttons. A label and the current value of the scale can be displayed to the left of the scroll buttons. The scroll can be used for any list of items. In contrast to a menu2 item, you can only see the current value with a scroll element. The available characteristics are the following:

Label of element:	Text string to be displayed to the left of the scroll buttons. This field is optional.
Choices:	Set of text strings to be scrolled through. If the text for a given choice is more than one word, it must be enclosed in double quotes. It must be filled in with at least two choices.
Width of element:	Amount of space reserved to display the value of the scroll. If the width is 0, the value is not displayed. If the center justification is selected, the label and value are aligned along the left edge and the scroll is aligned along the right edge of the grid rectangle.
Vnmr Variables:	List of VNMR parameters to be used in the following Vnmr Cmd and Tcl Cmd fields. This can be zero or more parameter names.

Vnmr Cmd:	MAGICAL expression sent to VNMR whenever the scroll updates to the next item in the list. Any specified VNMR parameters can be used. The variable \$VALUE is set to the value of the scroll.
Tcl Cmd:	Tcl expression that is evaluated to determine the value of the scroll. Any legitimate Tcl expression is allowed. To access the values of any VNMR parameters specified in the Vnmr Variables list, prepend a dollar sign (\$) to the front of the parameter name.

The scroll element is a useful mechanism to modify a numerical or string parameter. It prevents errors in parameter entry. This item is most useful if there is an obvious up-down notion about the parameter. An example with Fourier Numbers is the following:

Label of element:	Fourier Number
Choices:	128 256 512 1024 2048 4096 8192 \16384 32768 65536 131072
Width of element:	6
Vnmr Variables:	fn
Vnmr Cmd:	fn=\$VALUE
Tcl Cmd:	\$fn

Tips for dg Design

The key to designing dg panes is to have a clear understanding of the operation of the two entries Vnmr Cmd and Tcl Cmd. The contents of these two fields are passed as strings via the Tcl set command in the form `set dgTemplate {string}`.

What VNMR Sees

In the case of Vnmr Cmd, the string is sent to VNMR for evaluation. Thus, the final string needs to be something that makes sense to MAGICAL. However, along the way, Tcl gets a look at the string and may well do some evaluation and substitution.

As an example, in the simple case where Vnmr Cmd is something like `tof=$VALUE`, Tcl substitutes the contents of VALUE (a Tcl variable) in the string for \$VALUE. Thus, the final string is something like `tof=493.5`, assuming that the value entered was 493.5.

More complex mixtures of MAGICAL and Tcl can be used. For example,
`if [vnmrSize pp] then pp=$VALUE*[vnmrUnits pp] endif`

The effect of this command is discussed later.

An issue that arises is where to use a local MAGICAL variable such as \$a. Unless something special is done, Tcl intercepts \$a and looks to substitute it by the contents of a Tcl variable a. This will probably fail! The solution is to escape the \$ by using the syntax `\$a` instead of \$a. The \$ is then passed to MAGICAL.

What TCL Sees

For Tcl Cmd, the string is eventually evaluated and the results displayed. So we can think of this as the value being displayed as being `dgTemplate` once it is evaluated by Tcl. The value displayed normally comes from VNMR.

Consider the situation where you might enter a negative value for spectral width. You can type a negative value and it shows until you either press Return or move the mouse focus. At this point, the negative number is sent to VNMR. MAGICAL catches this and will

correct the error (it sets `sw` to 100). The corrected value is then returned to the `Tcl Cmd`, so that the value displayed will change to the corrected one.

Common Constructs

In this section, we look at some strategies for the `Vnmr Cmd` and `Tcl Cmd` entries.

The simplest case is that of a numeric value for a parameter such as `tof`:

```
Vnmr Cmd:          tof=$VALUE
Tcl Cmd:           $tof
```

Where we expect a string, the `$VALUE` should be in single quotes, for example

```
Vnmr Cmd:          tn=' $VALUE '
Tcl Cmd:           $tn
```

This avoids the need for the user to quote the entry.

When entering numeric fields, the question of precision and of decimal places may arise. If you want to display an integer, a trick is required if any math is involved. Here is one example that introduces two concepts.

```
Vnmr Cmd:          np=$VALUE*2
Tcl Cmd:           [expr $np/2]
```

In this case, we wish to display the number of complex points. This is, of course, $np/2.0$. The `Vnmr Cmd` entry is straightforward. `Tcl Cmd` requires some explanation. `Tcl` needs to be told when math is involved. This is done with the `expr` command. We need the square brackets [...] to tell `Tcl` to evaluate the expression in [...] first. Each term in the expression is best separated by blanks. Finally, by dividing by 2 rather than 2.0, we do integer math rather than real math, so that the result is an integer displayed as 8000 rather than 8000.00

In some cases, we want to display some decimal places, but not necessarily all available. For example, if `sb=2/3`, the value of `sb` is 0.66666666...

```
Tcl Cmd:           [format "%.3f" $sb]
```

This displays `sb` with 3 decimal places.

A more complex example can be found with `fn`.

```
Vnmr Cmd:          fn=$VALUE*2
Tcl Cmd:           [expr{($fn > 2000) ? [format "%dk" |
                               [expr $fn / 2000]] : $fn / 2}]
```

This complex expression checks to see if `fn` is greater than 1024. If `fn>1024`, it is displayed as `nk`, but if not, the display is the full number of complex points.

This introduces the `Tcl` expression for true and false. The expression in parentheses (...) is evaluated for truth (or the value 1). If found true, the result is the value of the expression between the question mark (?) and the colon (:); otherwise, the result is the value of the expression that follows the colon.

Allowing the units of an entry to change requires some more `Tcl`. Take `sw` for example. We may wish to display and enter this either as `Hz` or as `ppm`.

```
Vnmr Cmd:          sw=$VALUE*[vnmrUnits sw]
Tcl Cmd:           [expr $sw / [vnmrUnits sw]]
```

The Tcl procedure `vnmrUnits` takes the string `sw` (note, not `$sw`) as an argument and returns a scaling factor for `sw`. The scaling factor is chosen through an adjacent `menu2` widget. The key definitions for this widget are the following.

```
Choices:           Hz ppm
Value of choices:  1 4
Vnmr Variables:   sw
Vnmr Cmd:         setdgroup('sw', $VALUE)
Tcl Cmd:          [vnmrDgroup sw]
```

The values that can be set in `Dgroup` are shown in the table for `Dgroup` and `factor`. Note that in Tcl, `vnmrDgroup` returns the key and `vnmrUnits` returns the scaling factor.

When the factor is not one already recognized by `dg`, a slightly different procedure is used. An example is `temp`.

```
Vnmr Cmd:          temp=$VALUE- [expr {[vnmrUnits temp] \
                               == 1.0} ? 0 : 273]
Tcl Cmd:           [expr $temp + ([vnmrUnits temp] \
                               == 1.0) ? 0 : 273 ]]
```

The Tcl ternary `if` is again used, here to convert between the two temperature scales.

Many variables can be set to a “not used” condition by setting the variable to `'n'`. This can be indicated by using the “Show Condition” characteristic of an entry element. An example is `lb`.

```
Vnmr Cmd:          lb=$VALUE
Tcl Cmd:           $lb
Show Condition:    [vnmrOn lb]
```

When `lb='n'`, the background of the value box is a darker gray (or whatever color is specified in `dg.conf` by `dgLocal(off)`). Note that the background is set dark if the condition is `FALSE`.

When we deal with a variable such as `sbs`, a more complex condition may be needed.

```
Show Condition:    [expr {[vnmrOn sb] && [vnmrOn sbs]}]
```

Here, the `sbs` background is dark when either `sb` or `sbs` is `'n'`.

Overall Design of Panes

We have used a number of design criteria for our sample panes. It is recommended that you stick to the following design rules in order to maintain as much consistency as possible. Think of the person who will use the pane when you are not around to explain it!

- Avoid labels that are just parameter names. Try to use concise natural language to describe the value rather than leaving the user to look it up a manual. For example, “Spectral Width” is much better than “sw”. Don’t over-use capital letters in labels. “Spectral width” is better than “SPECTRAL WIDTH”
- Group parameters in logical blocks. For example, group decoupling parameters together.
- Try to always display a parameter in about the same spot on the same pane. Don’t make the user hunt all over a pane (or many panes).
- Use color, but use it wisely. We have used “blue” for titles, “seagreen” for important fields and “indianred” for alert conditions. These colors are easy to read and somewhat

muted but still convey some sense of meaning. Remember that some people are color-blind and that a particular color (such as red) may not always carry the same connotations for others.

- Try not to clutter the pane. There is no need to fill every cell in the matrix. Use space to highlight regions of interest on the pane.
- We have chosen a 16 x 10 matrix. The first column of entries is 3 columns wide with a fourth for menus of units. The other columns of entries are, in general, 3 matrix columns wide, including the units.
- Keep things neat. Watch the size of value boxes. Most entry fields in the samples have a width of 7 and are justified “center.” This allows everything to line up neatly.
- The definition file `dg.conf` is not mutable. This means that the tabs must serve all pulse sequences that a user may wish to use. Plan the number of panes and their function to satisfy the most complex experiment. Then the panes can be depopulated for simpler pulse sequences. Again, remember, keep each parameter in the same place in the same pane throughout. If it is not relevant, do not display it.
- Use the visual cues provided to indicate function. Titles are not interactive, buttons are. Labels are not interactive, entries are. Radio buttons require the user to choose one of the available options. Check boxes do not require a choice—none, some or all of the options can be selected.
- Let VNMR and MAGICAL do as much of the work as possible. The manipulations done by Tcl should only be those associated with the display and entry functions. Excessive use of Tcl adds another layer of complexity that someone will have to untangle later.

Utilities for Accessing VNMR Parameters.

Tcl procedures are available to provide access to VNMR parameter attributes. Each procedure available takes the VNMR parameter name as an argument. The procedures include `vnmrOn`, `vnmrSize`, `vnmrUnits`, `vnmrDgroup`, `vnmrMax`, and `vnmrMin`.

vnmrOn

The `vnmrOn` procedure returns 1 if the VNMR parameter is Active; 0 if Not Active.

vnmrSize

The `vnmrSize` procedure returns the number of array values for the parameter. If the parameter is not arrayed, it returns 1. If the parameter does not exist, it returns 0.

vnmrUnits

The `vnmrUnits` procedure returns a scaling factor based on the current `Dgroup` attribute of a parameter. The table on the right lists the `Dgroup` value and scaling factor.

vnmrDgroup

The `vnmrDgroup` procedure returns the value of the `Dgroup` attribute of the parameter.

<i>Dgroup</i>	<i>Factor</i>
1	1
2	1e3
3	1e6
4	reffrq
5	reffrq1
6	reffrq2

vnmrMax

The `vnmrMax` procedure returns the value of the `maxvalue` attribute of the parameter.

vnmrMin

The `vnmrMin` procedure returns the value of the `minvalue` attribute of the parameter.

Sending a Tcl Script

The command `tcl(script)` sends a Tcl (Tool Command Language) script to the Tcl version of the `dg` window. Any legal Tcl script can be sent. Sending the value of `curexp` to this `dg` window causes the window to update itself. The value of `seqfil` is also used to determine which configuration files to use to update the window. The `bootup` macro and the `jexp` macros use the following command for this purpose:

```
tcl('set seqfil '+seqfil+';set curexp '+curexp)
```

If the Tcl version of the `dg` window is not active, the `tcl` command does nothing.

Symbols

"..." (double quotes) notation, 26, 31, 56
 # notation (pulse shaping file), 132
 \$ (dollar sign) notation, 29, 33
 \$# special input argument, 35
 \$0 special input argument, 35
 \$1, \$2,... input arguments, 35
 & (ampersand) notation (UNIX), 280
 '...' (single quotes) notation, 27, 30
 (...) (parentheses) notation, 34
 (...)# notation (AP table file), 106
 * (asterisk) notation (display template), 307
 + (addition) operator, 31
 += notation (AP table file), 106
 . (single period) notation (UNIX), 278
 .. (double period) notation (UNIX), 278
 .c file extension, 69
 .fdf file extension, 290
 .fid file extension, 283
 / notation (UNIX), 278
 : (colon) notation, 28
 ; (semicolon) notation, 73
 ; (semicolon) notation (UNIX), 278
 < notation (UNIX), 279
 <...> (angled brackets) notation, 27
 > notation (UNIX), 279
 >> notation (UNIX), 279
 ? (question mark) notation (UNIX), 279
 [...] notation (display template file), 307
 [...] notation (square brackets), 33
 [...]# notation (AP table file), 106
 \ (backslash) notation, 30
 \... (backslash single quote) notation, 55
 _ x macro name, 27
 `...` (reverse single quotes) notation, 55, 56
 {...} (curly braces) notation, 35, 73
 {...}# notation (AP table file), 106
 | (vertical bar) notation (UNIX), 279
 ~ (tilde) notation (UNIX), 278

Numerics

1D data file, 285
 1D display, 288
 1D Fourier transform, 288
 2D data file, 289
 2D FID display, 289
 2D FID storage, 289
 2D hypercomplex data, 285
 2D phased data storage, 289
 2D plane of a 3D data set, 39
 2D plane selection without display, 39
 2D pulse sequence in standard form, creating, 148
 2D, 3D, and 4D data sets, 148
 3D coefficient text file, 284
 3D parameter set, 284
 3D pulse sequence in standard form, creating, 148
 3D spectral data default directory, 284
 4D pulse sequence in standard form, creating, 148
 63-dB attenuator, 92, 138
 79-dB attenuator, 92, 139

A

abort command, 37
 abort current process (UNIX), 280
 abortoff command, 37
 aborton command, 37
 abs command, 43
 abs macro, 37
 A-codes, 102
 acos command, 43
 acq_errors file, 74
 acqi command, 46, 120, 124
 Acqstat command, 46
 acqstatus parameter, 74
 acquire data explicitly, 159
 acquire data points, 129
 acquire statement, 128, 129, 144, 159
 acquisition bus trap, 77
 Acquisition codes, 102
 acquisition controller board types, 72
 Acquisition Controller boards, 72, 73, 126, 160
 acquisition CPU, 146
 acquisition phase (AP) tables. See AP table
 acquisition processor memory, 165
 acquisition statements, 74
 acquisition status codes, 74
 acquisition time, 117
 Acquisition window, 120, 124
 active menu, 55
 active parameter test, 48
 ADC overflow warning, 75
 add AP table to second AP table, 263
 add integer to AP table, 261
 add integer values, 160
 add statement, 99, 160
 addExp selection, 319
 addSaveAndExit button, 319
 alfa parameter, 74
 alias (UNIX), 278
 ampersand (&) character, 280
 amplifier blanking gate, 235
 amplifier modes, 82
 amplifiers
 blanking channels, 164
 duty cycle, 81
 gating, 80
 turn off, 164
 turn on, 164
 ampmode parameter, 82
 analyze command, 42
 analyze.inp file, 42
 and operator, 31
 angled brackets (< or >) notation, 23, 27
 AP bus commands, 93
 AP bus delay, 91, 145, 160
 AP bus delay constants, 139
 AP bus instruction, 142
 AP bus pulse shaping, 161, 162, 163
 AP bus registers, 97, 236, 244, 273
 ap command, 304
 ap parameter, 307
 AP table, 104
 add integer to elements, 261
 add to another table, 263
 autoincrement attribute, 107, 241

Index

- divide by second AP table, 263
 - divide integer into elements, 262
 - divn-factor, 108
 - file location, 105
 - load from file, 107, 211
 - loading statements, 105
 - multiply by a second AP table, 264
 - multiply integer with elements, 262
 - receiver phase cycle, 242
 - receiver variable, 108
 - retrieve element, 107, 197
 - scalar operations, 108
 - set divn-return and divn-factor, 242
 - statement format, 105
 - store integer array, 107, 243
 - subtract from second AP table, 264
 - subtract integer from elements, 263
 - table handling statements, 107
 - vector operations, 108
- apa command, 40
- apdelay.h file, 143, 146
- apovrride statement, 89, 93, 143, 160
- applicability of statements, 69
- Applications Laboratory, 24
- apshaped_dec2pulse statement, 162
- apshaped_decpulse statement, 161
- apshaped_pulse statement, 163
- arc cosine of a number, 43
- arc sine of a number, 43
- arc tangent of a number, 43
- arc tangent of two numbers, 43
- argument number, 35
- arguments passed to commands and macros, 27
- array defined, 32
- arraydim parameter, 148, 289
- arrayed experiment, 289
- arrayed parameter values, 196
- arrayed shaped gradient generation, 246
- arrayed string variables, 34
- arrayed variables, 31, 33
- arraying acquisition parameters, 148
- ASCII format, 283
- asin command, 43
- asm directory, 311
- assign integer values, 164
- assign statement, 99, 164
- asterisk (*) character, 279, 307
- asynchronous decoupling, 243
- at parameter, 117
- atan command, 43
- atan2 command, 43
- attenuators-based shaped pulses, 138
- attributes of parameter, 302
- attributes of variables, 32
- auto file, 284
- auto.conf fuke, 311
- Autogain, see automatic gain
- autogo command, 315
- autoincrement attribute, 105, 106, 107, 241
- Autolock, see automatic lock
- automatic execution of macros, 302
- automatic gain
 - errors, 76
- automatic lock
 - errors, 76
- automatic macro execution, 28
- automatic teller machine (ATM) cards caution, 21
- automatic variables, 32
- automation control window, 322
- automation file, 284
- automation run, 311
- autoSample button, 319
- autoSampleNoExit button, 319
- autoscale command, 42
- autoscaling, 42
- average command, 43
- average value of input, 43
- awk parameter, 308
- awk command (UNIX), 279
- axis command, 46
- axis labels, 46
- axis parameter, 46

B

- background process (UNIX), 279
- background processing, 281
- backslash (\) notation, 30
- backslash single quote ('\...') notation, 55
- backward single-quote ('...'), 30
- bandinfo macro, 138
- banner command, 40
- beeper sound, 46
- beepoff command, 46
- beepon command, 46
- binary files, 283
- binary information file, 284
- blanking amplifiers, 96, 164, 170, 220
- blankingoff statement, 97, 164
- blankingon statement, 97, 164
- blankoff statement, 96, 164
- blankon statement, 96, 165
- block size complete, 75
- block size counter, 99
- block size variable, 102
- Boolean expressions, 35
- Boolean operations, 31
- bootup macro, 27, 46, 47
- box mode, 39
- Breakout panel, 97, 236
- bs parameter, 75, 99, 102
- bsctr real-time variable, 99, 102
- bsval real-time variable, 99, 102
- buffering in memory, 284
- button definition file, 53
- button field, 327
- button labels, 56

C

- C loop, 141
- C programming language, 69
- C programming language framework, 72
- cat command, 59
- cat command (UNIX), 279
- cautions defined, 19

cd command (UNIX), 279
 cf parameter, 130
 change bar, 24
 change current directory, 279
 channel control, 146
 channel identifiers, 146
 channel selection, 82
 char-type variables, 73, 74
 check box field, 327
 check style, 316
 checkpw macro, 36
 checksum of FDF file data, 294
 chemical shift, 48
 chmod command (UNIX), 279
 clear command, 40, 56
 clearapdatatable statement, 129, 165
 clearing a window, 40
 cmp command (UNIX), 279
 cntrls parameter, 319, 324
 coarse attenuators, 92
 code table, 102
 codeint-type variables, 73
 coef file, 284
 coherence transfer selective phase cycling, 88
 colon (:) notation, 28
 command entry, 278
 command interpreter, 26
 command output to variables, 28
 command tracing, 37
 comments, 31
 in macros, 26
 comparing two files (UNIX), 279
 compilation error messages, 71
 compiling a pulse sequence, 66
 compiling source code, 70
 completed transient counter, 98
 complex pair of FID data, 287
 compressed acquisitions, 155
 compressed data format, 295
 compressed files, 291
 compressed loop, 216, 227
 Compressed-compressed data format, 295
 compressed-compressed image sequences, 272
 concatenate and display files (UNIX), 279
 concatenate strings, 31
 conditional execution, 194, 202
 conditional statements, 26, 36
 config command, 299
 confirm command, 40
 confirm message with mouse, 40
 confirmer window, 41
 conpar file, 299, 302
 constant delay time for changing the status, 103
 constant phases, 99
 constant strings, 27
 constants, 30
 continuous decoupling caution, 92
 continuous wave (CW) modulation, 83, 243
 conventions used in manual, 23
 conversion of files between systems, 283
 conversion units, 49
 copying files (UNIX), 278, 279
 copying macros, 44
 cos command, 43

cosine value of an angle, 43
 COSY-NOESY sequence, 130
 cp command (UNIX), 278, 279
 cp parameter, 99
 cr parameter, 38
 crcom command, 44
 create command, 299, 301
 create_delay_list statement, 157, 165
 create_freq_list statement, 157, 166
 create_offset_list statement, 157, 167
 createtable macro, 153
 creating
 directories (UNIX), 279
 FDF files, 294
 new parameter, 299
 slider in Acquisition window, 124
 user macros, 44
 variable without value, 32
 credit cards caution, 21
 ct variable, 98, 105
 curly braces ({...}) notation, 35, 73
 curpar file, 284, 288, 299
 current directory, 59
 current experiment files, 284
 current parameter tree, 299
 current parameters text file, 284
 current-type parameter tree, 299
 cursor mode, 39
 cursor position, 38
 curve fitting, 42
 cycling phases entry, 67

D

d0 parameter, 103
 d2 parameter, 99, 148
 d3 parameter, 99, 148
 d4 parameter, 99, 148
 DANTE sequence, 139
 Data Acquisition Controller boards, 72, 73, 160
 data acquisition statements, 74
 data block, 285
 data block header, 285
 data buffers, 284
 data directory, 284
 data file, 284, 288, 289
 data file header, 285
 data file in current experiment, 290
 data point acquisition, 129
 data portion of FDF file, 291
 data transposition, 289
 data.h file, 285
 datablockhead structure, 286
 datadir3d directory, 284
 datafilehead structure, 285
 date command (UNIX), 279
 dbl statement, 99, 168
 dc drift correction, 288
 dcon1 command, 57
 dcphase statement, 144, 168
 dcplr2phase statement, 87, 128, 144, 169
 dcplr3phase statement, 87, 128, 144, 170
 dcplrphase statement, 87, 128, 144, 169

Index

- ddf command, 290
- ddff command, 290
- ddfp command, 290
- debug command, 37
- DEC file suffix, 132
- dec2blank statement, 96, 170
- dec2off statement, 95, 172
- dec2offset statement, 91, 172
- dec2on statement, 95, 173
- dec2phase statement, 128, 174
- dec2power statement, 92, 128, 144, 175
- dec2prgoff statement, 137, 144, 177
- dec2prgon statement, 95, 137, 144, 177
- dec2pwrf statement, 92, 128, 144, 180
- dec2rgpulse statement, 84, 128, 182
- dec2shaped_pulse statement, 135, 141, 144, 184
- dec2spinlock statement, 138, 144, 187
- dec2stepsize statement, 87, 188
- dec2unblank statement, 96, 189
- dec3blank statement, 96, 171
- dec3off statement, 95, 172
- dec3offset statement, 91, 173
- dec3on statement, 95, 174
- dec3phase statement, 86, 128, 174
- dec3power power, 144
- dec3power statement, 92, 128, 176
- dec3prgoff statement, 137, 144, 177
- dec3prgon program, 137
- dec3prgon statement, 95, 144, 178
- dec3pwrf statement, 128, 144, 180
- dec3rgpulse statement, 84, 128, 182
- dec3shaped_pulse statement, 135, 144, 185
- dec3spinlock statement, 138, 144, 187
- dec3stepsize statement, 87, 189
- dec3unblank statement, 96, 189
- dec4offset statement, 173
- dec4phase statement, 175
- dec4power statement, 176
- dec4rgpulse statement, 183
- decblank statement, 96, 170
- DECch, DEC2ch, DEC3ch devices, 167, 168
- declaring variables, 33, 73
- declvflag variable, 93, 96
- declvloff statement, 93, 95, 128, 171
- declvlon statement, 93, 95, 128, 171
- decoff statement, 95, 172
- decoffset statement, 91, 172
- decon statement, 95, 173
- decoupler
 - blank associated amplifier, 96, 170
 - fine power, 179, 234, 240
 - fine power adjustment, 92
 - fine power with IPA, 209
 - full power, 171
 - gate channel, 251
 - gating, 94, 95, 259
 - high-power level, 93, 179
 - linear modulator power, 235, 240
 - linear modulator power with IPA, 210
 - modes, 94
 - modulation mode, 94
 - normal power, 171
 - offset frequency, 90, 91, 172, 223
 - pattern type, 132
 - phase, 86, 168
 - phase control, 87
 - power adjustment, 92
 - power level, 93, 96, 175, 233, 239
 - power level switching, 91
 - programmable decoupling, 176, 177
 - pulse shaping via AP bus, 161
 - pulse with IPA, 201, 202
 - pulse with receiver gating, 179, 181
 - pulse-related statements, 82
 - quadrature phase, 174
 - set status, 242
 - shaped pulse, 183
 - simultaneous pulses, 84
 - small-angle phase, 169
 - small-angle phase step size, 260
 - spin lock waveform control, 186
 - status, 259
 - step size, 188
 - turn off, 172
 - turn on, 173
 - two-pulse shaped pulse, 135
 - unblank amplifier, 189
 - WALTZ decoupling, 86
 - waveforms, 133
- decoupler mode, 243
- decoupler pulses entry, 68
- decoupling, switching, 190
- decphase statement, 86, 128, 174
- decpower statement, 92, 128, 144, 175
- decprgoff statement, 134, 137, 144, 176
- decprgon statement, 95, 134, 137, 144, 177
- decpulse statement, 83, 128, 147, 179
- decpwrf statement, 93, 179
- decpwrf statement, 92, 128, 144, 179
- decr statement, 99, 180
- decrement integer value, 180
- decrpulse statement, 83, 128, 181
- decshaped_pulse statement, 135, 141, 144, 183
- decspinlock statement, 138, 144, 186
- decstepsize statement, 87, 188
- decunblank statement, 96, 97, 189
- default2d display templates, 306
- defaultold2d display templates, 306
- delay
 - create delays table, 165
 - for synchronizing sample rotor, 241
 - initialize, 207
 - interincrement, 103
 - intertransient, 103
 - parameter type, 299
 - real-time incremental, 203
 - routine, 199
 - specified time, 190
 - specified time with IPA, 202
 - timebase fixed and real-time count, 268
 - with possible homospoil pulse, 201
- delay statement, 79, 124, 128, 190
- delay-related statements, 79
- delays
 - initializing next for hardware shimming, 200
- delays entry, 66
- delcom command, 44
- deleting files (UNIX), 278

- deleting user macros, 44
 - destroy command, 301
 - destroygroup command, 301
 - device gating, 196
 - df command, 57
 - dfid command, 57
 - dg command, 304
 - dg parameter, 304
 - dg program, 328
 - dg window, 324
 - dg.conf file, 328
 - dg.conf file listing, 329
 - dg.info file, 328
 - dg1 macro, 304
 - dg2 macro, 304
 - dg2 parameter, 305
 - Dgroup attribut, 342
 - Dgroup field, 302
 - Dgroup of a parameter, 301
 - dgs macro, 304
 - dhp parameter, 93, 171
 - dhpflag statement, 96
 - diagram of a pulse sequence, 63
 - diff command (UNIX), 279
 - differentially compare files (UNIX), 279
 - diffusion analysis, 42
 - digital resolution measurement, 38
 - dimensioning statement, 33
 - directory information, 47
 - disk blocks, 285
 - disk cache buffering, 284
 - disk file errors, 77
 - Display button, 59
 - display command, 301
 - display template, 304
 - display templates, 305
 - displaying
 - confirmer window, 41
 - controlling pulse sequence graphical display, 104
 - date and time (UNIX), 279
 - FID file, 290
 - file headers, 290
 - macros, 44
 - memory usage, 290
 - part of file (UNIX), 279
 - pulse sequences, 104
 - dividing an AP table into a second AP table, 263
 - dividing an integer into AP table elements, 262
 - dividing integer values, 190
 - divn factor, 106, 108, 242
 - divn statement, 190
 - divn-return attribute, 106, 108, 242
 - dll command, 28
 - dm parameter, 94, 147
 - dm2 parameter, 94
 - dm3 parameter, 94
 - dmm parameter, 83, 94, 143, 145, 243
 - dmm2 parameter, 94, 143
 - dmm3 parameter, 94, 143
 - DODEV, DO2DEV, DO3DEV constants, 82
 - dof parameter, 90
 - dof2 parameter, 90
 - dof3 parameter, 90
 - dollar-sign (?) notation, 29, 33
 - done codes, 74, 75
 - doneQ file, 322
 - double integer value, 168
 - double quotation marks ("...") notation, 31, 56
 - double-precision, 32
 - double-type variables, 73, 74
 - dp parameter, 284
 - dps command, 65, 70, 104, 191
 - dps_off statement, 104, 190
 - dps_on statement, 104, 191
 - dps_ps_gen command, 70
 - dps_show statement, 191
 - dps_skip statement, 193
 - dpwr parameter, 92, 93, 142, 171
 - dpwr2 parameter, 92
 - dpwr3 parameter, 92
 - draw pulses for graphical display, 191
 - dres command, 38
 - ds command, 58, 288
 - dsn command, 38
 - dsnmax command, 38
 - du command (UNIX), 279
 - duplicates attribute, 318
 - duty cycle, 81
 - dynamic range of shaped pulse, 139
 - dynamic variable gradient pulse generation, 203, 248
 - dynamic variable scan, 272
 - dynamic variable shaped gradient pulse generation, 249
- ## E
- echo command, 40
 - echo command (UNIX), 40
 - ed command (UNIX), 279, 280
 - edit command, 280
 - editing
 - configuration files, 328
 - macros, 28, 45
 - parameter attributes, 300
 - text files, 279
 - effective transient counter, 149
 - elsenz statement, 101, 193, 194
 - Emacs editor, 29
 - end hardware loop, 194
 - end ifzero statement, 194
 - end loop started by loop, 194
 - end of file (UNIX), 280
 - endhardloop statement, 126, 194
 - endif statement, 101, 105, 194
 - endloop statement, 100, 101, 125, 194, 195
 - endmsloop statement, 195
 - endpeloop statement, 195
 - ENI-5100 class A amplifier, 83
 - enter program, 311
 - enter.conf file, 311
 - enter.conf file listing, 312
 - enterlcnmr.conf file, 311
 - enterQ file, 315, 319, 322
 - entervast.conf file, 311
 - entry field, 326

Index

- enumerated values of a parameter, 303
 - env command (UNIX), 28, 52
 - errmsg text file, 71
 - error codes, 74, 75
 - error during acquisition, 75
 - error macro, 36
 - errormsg attribute, 318
 - Euler angles, 155
 - event in a hardware loop, 127
 - evolution time, 64
 - exec command, 36, 46
 - executable pulse sequence code, 70
 - execute statements conditionally, 101
 - execute statements repeatedly, 100
 - execute succeeding statements
 - if argument nonzero, 193
 - if argument zero, 202
 - executing a VNMR command, 46
 - execution of macros and commands, 27
 - exists command, 46, 60
 - exList field, 321
 - exp command, 43
 - experiment files, 110
 - experiment increment pointers, 99
 - Experiment Specific configuration files, 331
 - experiment-based parameters, 32
 - expfit command (UNIX), 42
 - expl command, 42
 - explicit acquisition, 74, 129, 159
 - expn directory file, 284
 - exponential curves, 42
 - exponential value of a number, 43
 - expressions, 34
 - external device interface, 157
 - external event gating, 275
 - external timebase, 131
 - external user devices, 97
 - external variables, 32
 - extr directory, 284
 - extracted 2D planes, 284
- F**
- f3 file, 284
 - FALSE Boolean value, 35
 - FDF files
 - attach header to data file, 294
 - creating, 294
 - directory naming convention, 290
 - format, 291
 - header format, 291
 - magic number, 291
 - splitting data and header parts, 295
 - transformations of data, 294
 - why developed, 290
 - fdf files, 290
 - fdfluer command, 294
 - fdsplit command, 295
 - FID complete, 75
 - FID data, 287
 - fid file, 284, 288
 - fid file extension, 283
 - FID files, 283, 290, 310
 - FIFO underflow error, 77
 - file
 - binary format, 283
 - existence test, 46
 - header of binary file, 283
 - information, 47
 - protection mode (UNIX), 279
 - text format, 283
 - file attribute, 317
 - File button, 59
 - files command, 59
 - Files Main Menu, 59
 - Files program, 58
 - files_main menu, 59
 - filesinfo command, 59, 61
 - fine attenuators, 92, 142
 - fine power, 209, 234, 240
 - control, 91
 - decoupler, 179
 - transmitter, 222
 - fine power routine, 125, 199
 - fine-grained pulse shaping, 141
 - Finish button, 70
 - first point correction, 288
 - fixed phases entry, 67
 - fixpar macro, 27
 - flag of a parameter test, 48
 - flag-type parameter, 299
 - flammable gases warning, 20
 - FLASH pulse sequence, 96
 - flashc command, 296
 - flexible data format files. *See* FDF files
 - flip between graphics and text windows, 40
 - flip command, 40
 - floating constant, 30
 - floating point, 32
 - float-type variables, 74
 - flush command, 284, 288
 - fm-fm modulation, 243
 - fn parameter, 288
 - focus command, 47
 - format command, 40
 - format of weighting function, 308
 - formatting for output, 40
 - forward slash notation (UNIX), 278
 - Fourier transform process, 288
 - fourth attenuator, 139
 - fourth decoupler
 - offset frequency, 173
 - power level, 176
 - pulse with receiver gating, 183
 - quadrature phase, 175
 - fractions in integer mathematics, 99
 - framework for pulse sequences, 72
 - fread command, 301
 - frequency
 - control, 90
 - create frequencies table, 166
 - offsets table, 167
 - set based on position, 231
 - set from position list, 232
 - set on position, 232
 - table indexing, 270
 - frequency and intensity from line list, 38

frequency limits of region, 38
 frequency lists, 166
 frequency offset lists, 272
 frequency offset routine, 122, 199
 frequency-type parameter, 299
 fsave command, 284, 301
 ft command, 288
 ft3d command, 284
 function keys, 52

G

G_Delay general routine, 120, 123, 199
 G_Offset general routine, 120, 122, 199
 G_Power general routine, 120, 125, 199
 G_Pulse general routine, 120, 121, 124, 200
 gap command, 47
 GARP modulation, 243
 gate pulse sequence from an external event, 275
 gate statement, 196
 gating control statements, 93
 Gaussian pulse, 139
 gcoil parameter, 153
 generic delay routine, 123, 199
 generic pulse routine, 121, 199
 getarray statement, 157, 196
 getelem statement, 107, 197
 getfile command, 47
 getll command, 38
 getorientation statement, 197
 getreg command, 38
 getstr statement, 72, 117, 198
 getval statement, 72, 117, 198
 getvalue command, 299
 Ggroup, 301, 302
 gilson.conf file, 322
 glide directory, 52
 global file, 299
 global list, 167
 statements, 157
 global PSG parameters, 111
 global variables, 32
 global-type parameter tree, 299
 go command, 101, 102
 gradaxis parameter, 154
 gradient
 control, 150
 set to specified level, 238
 simultaneous shaped, 213
 variable angle, 265
 variable angle gradient pulse, 266
 variable angle shaped gradient, 266
 variable angle shaped gradient pulse, 268
 waveforms, 132, 134
 zero all gradients, 276
 gradient function, 203
 gradient level set by real-time math, 270
 gradient pattern file, 206
 gradient pulse, 151
 generation, 248
 on z channel, 276
 simultaneous shaped, 214
 gradient statement, 155

gradtables directory, 153
 gradtype parameter, 144, 150
 graphical display of a sequence, 70
 graphical display of pulse sequences, 104
 graphical display of statements, 190, 191
 graphics display status, 47
 graphics window, 40
 graphis command, 47
 GraphOn terminal, 280
 GRD file suffix, 132
 grep command (UNIX), 279
 gripper abort, 76
 group of parameters, 301
 groupcopy command, 301

H

half value of integer, 200
 half-transformed spectra, 289
 hardloop nesting, 129
 hardware loop, 125, 194
 end of loop, 194
 start of loop, 258
 hardware phase control, 87
 hardware shimming
 initializing next delay, 200
 hardware WALTZ decoupling, 86
 hardwired 90° phase, 87
 head command (UNIX), 279
 header of FDF file, 291
 helium contact with body, 20
 helium gas flowmeters caution, 22
 Help button, 53, 54
 help command, 53, 54
 help directory, 53, 54
 help files for menus, 53, 54
 help path variable, 54
 HET2DJ pulse sequence, 148
 hidden delay, 142
 hidecommand command, 44
 high-band nuclei, 83
 high-noise signal, 75
 high-power amplifiers cautions, 22
 high-power decoupling, 96
 high-speed device control, 97
 high-speed line propagation delay, 145
 hlv statement, 99, 102, 200
 HMQC experiment, 82
 hom2dj macro, 64
 hom2dj.c sequence listing, 69
 HOM2DJT pulse sequence, 109
 home directory for user (UNIX), 278
 homo parameter, 83, 84
 homo2 parameter, 84
 homo3 parameter, 84
 homodecoupler gating, 84
 homonuclear J-resolved pulse sequence, 109
 homonuclear-2D-J pulse sequence, 64, 69
 homospoil gating, 94, 95, 259
 homospoil pulse, 64, 66, 79, 201
 host disk errors, 77
 hs parameter, 79, 94
 hsdelay statement, 79, 95, 128, 201

Index

hst parameter, 79, 95
hwlooping.c module, 86
hypercmplxhead structure, 287
hypercomplex 2D, 148

I

i2pul.c pulse sequence, 120
id2 pointer, 71, 99, 150
id3 pointer, 71, 99
id4 pointer, 71, 99
idecpulse statement, 84, 201
idecrgpulse statement, 84, 202
idelay statement, 80, 202
identifier, 29, 35
IEEE standard floating point format, 283
if, then, else, endif conditional form, 36
ifzero statement, 101, 105, 202
image file names, 290
image plane orientation, 197
imaginary component of FID data, 287
imaging module, 150
imaging-related statements, 155
implicit acquisition, 74
implicit expressions, 35
implicitly arrayed delay, 148
inactive parameter, 48
incdelay statement, 80, 203
incgradient statement, 155, 203
incr statement, 99, 204
increment an integer value, 204
increment counts, 71
increment index, 150
incremental delay, 80, 203, 207
incrementing a loop, 37
index out of bounds, 34
indices of an array, 33
indirect detection, 205
indirect detection experiments, 146, 147
indirect statement, 205
infields parameter, 314
info directory, 284
init_gradpattern statement, 157, 206
init_rfpattern statement, 157, 205
init_vscan statement, 157, 207
initdelay statement, 80, 207
initialize incremental delay, 207
initialize parameters for imaging sequences, 207
initialize real-time variable, 207, 208
initialize string variable, 33
initparms_sis statement, 96
initval statement, 101, 208
input arguments, 35
input command, 41
input tools, 40
inset command, 58
integ command, 39
integer array stored in AP table, 243
integer mathematical statements, 99
integer values
 add, 160
 assign, 164
 decrement, 180

 divide, 190
 double, 168
 half value, 200
 increment, 204
 modulo 2, 215
 modulo 4, 215
 modulo n, 216
 multiply, 217
 subtract, 261

integer-type parameter, 299
intensity of spectrum at a point, 39
interactive dg window, 324
interactive parameter adjustment (IPA), 120
 change fine power, 209
 change linear modulator power, 210
 change offset frequency, 208
 delay specified time, 80, 202
 fine power control, 93
 pulse decoupler, 84, 201, 202
 pulse transmitter, 82, 208, 209, 210
interferograms, 289
interincrement delays, 103
internal hardware delays, 142
internal variables, 98
intertransient delays, 103
int-type variables, 73, 74
iobspulse statement, 82, 208
ioffset statement, 91, 208
IPA, *See* interactive parameter adjustment (IPA)
ipulse statement, 82, 209
ipwrf statement, 93, 209
ipwrm statement, 93, 210
irgpulse statement, 82, 210
ix variable, 71

J

jexp command, 32

K

keyboard entries recording, 46
keyboard focus to VNMR input window, 47
keyboard input, 41
kill command (UNIX), 279
kinetic analyses, 42

L

label field, 326
largest integral in region, 39
last used parameters text file, 284
lastmenu parameter, 55
latching, on PTS synthesizers, 140
LC-NMR accessory, 311
legrelay parameter, 147
length command, 47
length of macros, 37
lib directory, 158
libparam.a object library, 70
libpsglib.a directory, 70, 157

- library directory, 158
 - line frequencies and intensities, 39
 - line list, 33, 38
 - linear amplifier systems
 - decoupler power, 175
 - power control, 91
 - power level, 233, 239
 - stabilization, 83
 - transmitter power level, 221
 - linear attenuator used for pulse shaping, 135
 - linear modulator power, 240
 - linear modulators, 93
 - lines in a file, 41
 - linewidth measurement, 38
 - link loading, 70
 - lint command (UNIX), 70
 - list files in a directory (UNIX), 278
 - listenoff command, 47
 - listenon command, 47
 - listing names of macros, 44
 - lists
 - frequency, 166
 - global, 167
 - offset, 167
 - lk_hold statement, 128, 151, 211
 - lk_sample statement, 128, 151, 211
 - llamp parameter, 33
 - llfrq parameter, 33
 - ln command, 43, 278
 - loading AP table elements from file, 107, 211
 - loading AP table statements, 105
 - loading macros into memory, 28, 45
 - loadtable statement, 105, 107, 211
 - loc parameter, 318
 - local oscillator frequency, 89
 - local variables, 32, 33, 34
 - lock correction circuitry, 151
 - set to hold, 211
 - set to sample, 211
 - lock feedback loop, 152
 - lock level, 48
 - locList file, 321
 - log directory, 284
 - log files, 281, 284
 - logarithm of a number, 43
 - logical frame, 155
 - login command, 47
 - login command (UNIX), 279
 - login macro, 27, 28, 46
 - login procedure, 277
 - logout (UNIX), 280
 - long-type variables, 74
 - lookup command, 41
 - loop
 - end, 194, 195
 - multislice end, 195
 - multislice start, 216
 - phase-encode end, 195
 - phase-encode start, 227
 - start, 212
 - statements, 157
 - types, 36
 - loop statement, 100, 101, 125, 141, 212
 - low-band nuclei, 83
 - low-core acquisition variables, 102
 - lower shell script, 282
 - low-noise signal, 75
 - low-power decoupling, 96
 - lp command (UNIX), 279
 - ls command (UNIX), 278
- ## M
- maclib directory, 27
 - maclibpath parameter, 27
 - macro
 - automatic execution, 28, 302
 - calling a macro in a loop, 29
 - clear system macro, 29
 - concept, 25
 - defined, 25
 - directory, 27
 - editing, 28
 - execution, 27
 - existence test, 46
 - faster execution, 28
 - files, 27
 - loading into memory, 28
 - output to variables, 28
 - parsing, 28
 - passing information, 33
 - remove from memory, 29
 - VNMR activation, 47
 - macro name list, 44, 45
 - macro parameter, 28
 - macro tracing, 37
 - macrocat command, 44, 45
 - macrocp command, 44
 - macrodir command, 44
 - macroedit macro, 28, 44
 - macrold command, 28, 29, 45
 - macrorm command, 45
 - macros.h file, 120
 - macrosyscat command, 45
 - macrosyscp command, 45
 - macrosysdir command, 45
 - macrosysrm command, 45
 - macrovi command, 28, 45
 - magic number, 291
 - MAGICAL language defined, 25
 - MAGICAL language features, 29
 - magnet leg override capability, 147
 - magnet quench warning, 20
 - magnetic media caution, 21
 - magradient statement, 212
 - magradpulse statement, 154, 155, 213
 - mail command (UNIX), 279
 - makefid command, 310
 - man command, 55
 - man command (UNIX), 279
 - manual directory, 55, 74
 - manual entry (UNIX), 279
 - manualpath parameter, 55
 - MARK button, 39
 - mark command, 39
 - MAS rotor, 240, 241
 - mashedgradient statement, 155, 213

Index

mashedgradpulse statement, 214
mathematical expression, 35
mathematical functions, 43
matrix arithmetic, 31
matrix transposition, 289
matrix window, 328
maximum value of parameter, 302
maxpk macro, 37
MAXSTR dimension, 73
maxvalue attribute, 343
mean of data in regression.inp, 42
memory usage by VNMR commands, 290
memory usage statistics, 45
MEMS pulse sequence, 96
memsize parameter (UNIX), 284
menu command, 53, 54, 55
menu fields, 326
menu files, 53, 54
menu system, 52
menu system control, 55
menu-driven pulse sequence writing, 63
menulib directory, 53, 54, 57
menulibpath parameter, 54
menus for pulse sequence programming, 65
menuvi command, 54
message confirmation by mouse, 40
message display with large characters, 40
metal objects warning, 19
mf command, 296
mfbk command, 296
mfdata command, 296
mftrace command, 296
microimaging pulse sequences, 152
minimum value of parameter, 302
minvalue attribute, 343
mkdir command (UNIX), 278
mlabel parameter, 55, 56
MLEV-16 modulation, 243
mod2 statement, 99, 215
mod4 statement, 99, 215
modifying the instrument, 20
modn statement, 99, 216
modulation frequency, 243
modulation frequency change delay, 143
modulation mode change delays, 143
modulo 2 integer value, 215
modulo 4 integer value, 215
modulo n integer value, 216
modulo number, 99
mouse button, 52
move data in FID file, 296
move FID commands, 296
moving files into a directory, 279
MREV-type sequences, 129
msloop statement, 157, 216
mstat command, 45, 290
mstring parameter, 55, 56
mult statement, 99, 217
multidimensional NMR, 148
multiple command separator (UNIX), 278
multiple FID acquisition, 130
multiple trace or arrayed experiments, 289
multiply AP table by second AP table, 264
multiply integer values, 217

multiply integer with AP table elements, 262
multislice loops, 157, 216
multiuser protection, 281
mv command (UNIX), 278, 279

N

n1-n3 parameters, 32
name replacement, 35
natural logarithm of a number, 43
nested macros, 37
nested multiple hardloops, 129
newmenu command, 55
nf parameter, 130
ni parameter, 99
ni2 parameter, 99
ni3 parameter, 99
nitrogen contact with body, 20
nitrogen gas flowmeters caution, 22
nll command, 39
NMR algorithms, 25
NMR language, 25
noise modulation, 243
noninteractive dg window, selecting, 328
notational conventions, 23
notebook number, 322
np parameter, 76
nrecords command, 41
nth2D variable, 227
null string, 32, 33, 56
number of arguments, 35
numeric parameter value lookup, 117, 198
numPerLine attribute, 318
numreg command, 39

O

object code, 70
object file, 157
object libraries, 70
obl_gradient statement, 217
obl_shapedgradient statement, 218
oblique gradient, 217, 218
oblique gradient statements, 155
oblique gradient with phase encode in 1 axis, 223, 228
oblique gradient with phase encode in 2 axes, 224
oblique gradient with phase encode in 3 axes, 224, 228
oblique shaped gradient with phase encode in 1 axis, 225, 229
oblique shaped gradient with phase encode in 2 axes, 226
oblique shaped gradient with phase encode in 3 axes, 226, 230
oblique_gradient statement, 155, 218
oblique_shapedgradient statement, 219
obs_mf parameter, 95
obsblank statement, 220
OBSch device, 167, 168
observe channel gating, 251
observe transmitter modulation, 243

observe transmitter power, 221
 observe transmitter pulse, 80
 obsoffset statement, 91, 220
 obspower statement, 92, 128, 221
 obsprgoff statement, 144, 221
 obsprgon statement, 95, 136, 144, 221
 obspulse statement, 82, 122, 128, 222
 obsprwf statement, 92, 128, 144, 222
 obsstepsize statement, 87, 222
 obsunblank statement, 223
 off command, 48
 offset frequency, 172, 208, 220
 offset lists, 167
 offset macro, 35
 offset statement, 90, 123, 128, 144, 223
 offset table, 272
 on command, 48
 one pointer, 99
 operators, 30
 oph variable, 87, 99, 130
 order of precedence, 30
 orientation of image plane, 197
 outfield parameter, 314, 323
 Output boards, 72, 73, 133, 160
 output from commands and macros, 28
 output to various devices, 41
 output tools, 40
 overhead delays, 155
 overhead operations, 103
 override internal software AP bus delay, 160

P

pacemaker warning, 19
 pane design, 341
 pap command, 307
 par2d macro, 148
 par3d macro, 148
 par4d macro, 148
 paramedit command, 300, 304
 parameter
 attributes, 302
 create new parameter, 299
 enumerable values, 303
 maximum value, 302
 minimum value, 302
 table, 72
 template, 304
 trees, 298
 typical parameter file, 303
 values, 302
 parameters
 accessing the value, 299
 arrayed parameter values, 196
 as global variables, 32
 as variables, 26
 categories, 110
 change type, 300
 conditional display, 306
 display field width, 307
 display formats, 307
 display values in text window, 40
 editing attributes, 300
 existence test, 46
 get value, 299
 global PSG parameters, 111
 look up value, 117
 plotting automatically, 40
 protection bit, 27
 protection bits, 300
 set up for pulse sequence, 41
 spectroscopy imaging sequences, 207
 step size, 302
 types, 298
 user created, 117
 parameters retrieved from a parameter file, 48
 paramvi command, 300, 301, 304
 parent directory (UNIX), 278
 parentheses (...) notation, 34
 parfix macro, 301
 parlib directory, 41
 parmax parameter, 302
 parmin parameter, 302
 parsing macros, 28
 parstep parameter, 302
 pattern scanning and processing (UNIX), 279
 pe_gradient statement, 155, 224
 pe_shapedgradient statement, 225
 pe2_gradient statement, 224
 pe2_shapedgradient statement, 226
 pe3_gradient statement, 225
 pe3_shapedgradient statement, 226
 peak command, 26, 28, 39
 peak width of solvent resonances, 48
 peloop statement, 157, 227
 Performa XYZ PFG module, 153
 Permanent menu, 52, 53
 pexpl command, 42
 PFG (pulsed field gradient), 153
 phase angle, 132
 phase calculation, 98
 phase carryover, 88
 phase control, 99
 phase cycle, 64
 phase cycle length, 66
 phase cycle storage, 104
 phase cycling, 109
 phase encode loops, 157
 phase file in the current experiment, 290
 phase parameter, 148
 phase step size, 260
 phase_encode_gradient statement, 155, 228
 phase_encode_shapedgradient statement, 229
 phase_encode3_gradient statement, 228
 phase_encode3_shapedgradient statement, 230
 phase1 integer, 149
 phase1 variable, 71
 phase2 parameter, 148
 phase3 parameter, 148
 phased 2D data storage, 289
 phased spectral information, 284
 phased spectrum, 288
 phase-encode loop, 195, 227
 phasefile file, 284, 288, 289
 phase-pulse technique, 88, 89, 231
 phase-related statements, 85
 phases entry, 67

Index

- phase-sensitive 2D NMR, 148, 287
- phaseshift statement, 89, 231
- phi angle, 154
- phi parameter, 155, 218
- pipe, 279
- plotif macro, 37
- plotting curves, 42
- pmode parameter, 284
- poffset statement, 157, 231
- poffset_list statement, 157, 232
- pointer to memory, 98
- pointers to constants, 99
- poly0 command, 42
- polynomial curves, 42
- position list, 232
- position statements, 157
- position_offset statement, 157, 232
- position_offset_list statement, 157, 233
- position-based frequency, 231, 232
- power control statements, 91
- power level of shaped pulse, 139
- power statement, 92, 128, 140, 142, 143, 144, 233
- pplvl parameter, 93
- ppm of solvent resonances, 48
- preacquisition and acquisition steps, 74
- precedence of operators, 30
- presaturation, 92
- print files (UNIX), 279
- print working (current) directory (UNIX), 279
- prioritySample button, 319
- private help files, 54, 55
- private menu library, 54
- probe damage caution, 92
- procdat file, 284
- process status (UNIX), 279
- processed-type parameter tree, 299
- procpa file, 284, 288, 290, 291, 299
- procpa3d file, 284
- program execution, 26
- programmable control of transmitter, 221
- programmable control statements, 136
- programmable decoupling
 - ending, 176
 - starting, 177
- programmable phase and amplitude control, 136
- programmable pulse modulation, 243
- programming
 - imaging pulse sequences, 152
 - menus, 55
 - Performa XYZ PFG module, 153
 - pulse sequence, 63
- prompt for user input, 41
- propagation delay, 145
- prosthetic parts warning, 19
- protection bits, 27, 300, 302
- prune command, 301
- ps command (UNIX), 279
- PSG (pulse sequence generation), 63
- psg directory, 157, 158
- psg macro, 102
- psggen shell script, 157, 158
- psglib directory, 69
- psgset command, 41
- psi parameter, 155, 218
- PTS synthesizers with latching, 140
- pulse channels simultaneously, 251
- pulse control, 131
- pulse decoupler, 179
- pulse decoupler with IPA, 201, 202
- pulse decoupler with receiver gating, 181
- pulse four channels simultaneously, 252
- pulse interval time, 137
- pulse observe transmitter, 80
- pulse program buffer, 125
- pulse routine, 199
- pulse sequence control statements, 100
- Pulse Sequence Controller board, 72, 73, 97, 160, 257
- Pulse Sequence Entry Decoupler Menu, 68
- Pulse Sequence Entry Decoupler Pulses Menu, 65
- Pulse Sequence Entry Delay Menu, 66
- Pulse Sequence Entry Main Menu, 66, 70
- Pulse Sequence Entry Phases Menu, 67
- Pulse Sequence Entry Pulses Menu, 65, 67
- Pulse Sequence Entry Status Menu, 68
- pulse sequence gated from external event, 275
- pulse sequence generation (PSG), 63, 71
 - directory, 69
 - statement categories, 79
- pulse sequence programming menus, 65
- pulse sequences
 - compiling, 70
 - execution control, 98
 - files, 69
 - general form, 73
 - graphical display, 70, 104
 - imaging, 152
 - internal hardware delays, 142
 - object code, 72
 - object file, 157
 - parameter set up, 41
 - programming, 69
 - synchronization, 131
- pulse shape definitions, 132
- pulse shaping through AP bus, 135
- pulse shaping via AP bus, 141, 162, 163
- pulse statement, 81, 122, 128, 147, 234
- pulse transmitter with IPA, 208, 209, 210
- pulse transmitter with receiver gating, 222, 234, 238
- pulse width array, 33
- Pulsed Field Gradient module, 150
- pulsed field gradient module, 153
- pulseinfo macro, 138
- pulses entry, 68
- pulsesequence function, 73, 102
- pulsesequence.o file, 157
- pulse-type parameter, 299
- pulsing channels simultaneously, 84
- pulsing the decoupler transmitter, 82
- purge command, 29, 45
- pw parameter, 76, 82
- pwd command, 279
- pwrf statement, 92, 128, 140, 142, 144, 234
- pwrm statement, 92, 140, 142, 235
- pwsadj macro, 137

Q

quadrature detection, 287
 quadrature phase, 87
 quadrature phase of decoupler, 174, 175
 quadrature phase of transmitter, 265
 quadrature phase shift, 85
 question mark (?) character, 279
 quit button, 319
 quotation mark ("...") notation, 26

R

r1, r2, ... r7 parameters, 32, 33
 radio button field, 327
 radio style, 316
 radio-frequency emission regulations, 22
 rcvoff statement, 96, 235
 rcvron statement, 96, 236
 read parameters from a file, 301
 readlk command, 48
 readuserap statement, 97, 98
 real command, 32
 real component of FID data, 287
 real number formatting for output, 40
 real parameters, 32
 real-number arguments, 73
 real-time gradient statements, 155
 real-time incremental delay, 80, 203
 real-time statements, 102
 real-time variables, 73, 98, 100, 208
 real-type parameter, 298, 300
 real-type variables, 32
 receiver
 default state, 207
 gating, 68, 80, 96, 97, 222, 234, 238
 mode, 87
 phase, 87
 phase control, 99
 phase cycle, 242
 turn off, 237
 turn on, 236
 receiver gate, 235, 237
 receiver overflow warning, 75
 recoeff statement, 237
 recon statement, 237
 record macro, 46
 records in file, 41
 rectangular pulse, 139
 recursive calls, 27
 redefinition warning, 72
 reference to statements, 159
 reformatting data for processing, 295
 reformatting spectra, 298
 regions in spectrum, 39
 regression analysis, 42
 regression.inp file, 42
 relief valves warning, 21
 removable quench tubes warning, 21
 removing an empty directory (UNIX), 278
 removing macros, 45
 removing macros from memory, 45
 renaming a directory (UNIX), 278
 renaming a file (UNIX), 278

repeat, until loop, 37
 reserved words, 30
 resto parameter, 231
 results parameter, 324
 retrieve element from AP table, 107, 197
 retrieving individual parameters, 48
 Return button, 55
 return command, 37
 Return key, 23
 returning a value, 37
 reverse a spectrum, 298
 reverse double quotation marks, 56
 reverse FID commands, 296
 reverse mode, 147
 reverse order of data, 297
 reverse single quotes (`...`) notation, 55
 revmode.c file, 147
 rf channels control, 146
 RF file suffix, 132
 RF monitor errors, 77
 rf pattern file, 205
 rf pulse shapes, 131
 rf pulses waveforms, 132
 rf shape file, 133
 rf types, 90
 rfbk command, 296
 rfchannel parameter, 82, 146
 rfdata command, 296
 rftrace command, 296
 RG1 and RG2 delays, 80, 83
 rgpulse statement, 80, 105, 127, 128, 238
 rgradient statement, 144, 150, 152, 154, 238
 rinput command, 42
 rlpower statement, 239
 rlpwrf statement, 240
 rlpwrm statement, 92, 140, 240
 rm command (UNIX), 278
 rmdir command (UNIX), 278
 rof1 parameter, 81
 rof2 parameter, 81
 root directory (UNIX), 278
 rotor period, 131, 240
 rotor position, 241
 rotorperiod statement, 131, 241
 rotorsync statement, 131, 241
 RS-232 cable, 75
 rsapply command, 298
 rt command, 27, 32, 310
 rtp command, 27, 32
 rtv command, 27, 48
 run program in background, 280
 run-time statements, 102

S

safety precautions, 19, 21
 sample changer
 errors, 75
 Sample Entry Form window, 311
 Sample Location buttons, 316
 sample location exclusion, 321
 Sample Number, 315
 saveAndExit selection, 319

Index

- saved display file, 284
- saveExp button, 319
- scale fields, 327
- scalelimits macro, 42
- scalesw parameter, 46
- scaling factors for axis, 46
- scroll fields, 327
- scrolling list of experiments, 324
- SCSI errors, 77
- searching a text file, 41
- searching files for a pattern (UNIX), 279
- second decoupler
 - blank associated amplifier, 170
 - fine power, 180
 - fine power adjustment, 92
 - gating, 95
 - homodecoupler gating, 84
 - offset frequency, 90, 91, 172
 - phase control, 87
 - power adjustment, 92
 - power level, 175
 - programmable decoupling, 177
 - pulse shaping via AP bus, 162
 - pulse with receiver gating, 182
 - quadrature phase, 174
 - shaped pulse, 184
 - simultaneous pulses, 84
 - small-angle phase, 169
 - spin lock waveform control, 187
 - step size, 188
 - turn off, 172
 - turn on, 173
 - unblank decoupler, 189
- select command, 39
- semicolon (;) notation, 73
- semicolon (;) notation (UNIX), 278
- SEMS pulse sequence, 96
- send mail to other users (UNIX), 279
- send2Vnmr command (UNIX), 47
- separators, 31
- seqcon parameter, 157, 216
- seqgen command, 70, 71, 101
- seqgen command (UNIX), 70
- seqlib directory, 70, 101
- set command, 315
- set2d macro, 148
- set3dproc command, 284
- setautoincrement statement, 107, 241
- setdgroup command, 301
- setdivnfactor statement, 108, 242
- setenumerals command, 298, 301
- setgroup command, 301
- setlimit command, 32, 300
- setprotect command, 300
- setreceiver statement, 99, 108, 130, 242
- setstatus statement, 94, 95, 143, 242
- settable statement, 105, 107, 243
- settclddefault macro, 305
- settype command, 300
- setuserap statement, 97
- setuserpsg shell script, 157, 158
- setvalue command, 300, 310
- sh2pul macro, 132
- shaped gradient, 268
 - pulse generation, 245, 246, 249
 - variable angle, 266
- shaped oblique gradient, 218, 219
- shaped pulse
 - decoupler, 183
 - delays, 146
 - information, 138
 - on transmitter, 244
 - simultaneous three-pulse, 254
 - simultaneous two-pulse, 253
 - time truncation error, 137
 - using attenuators, 138
 - waveform generator control, 135
- shaped two-pulse experiment, 132
- shaped_pulse statement, 135, 141, 144, 244
- shaped2Dgradient statement, 246
- shapedgradient statement, 151, 155, 245
- shapedincgradient statement, 155, 248
- shapedvgradient statement, 155, 249
- shapelib directory, 132, 161, 245
- shell command, 48, 281
- shell command (UNIX), 280
- shell scripts, 282
- shelli command, 280
- shimming
 - errors, 76
- short-type variables, 74
- showfields parameter, 324
- signal-to-noise measurement, 38
- sim3pulse statement, 84, 128, 251
- sim3shaped_pulse statement, 136, 144, 254
- sim4pulse statement, 85, 252
- simpulse statement, 84, 128, 251
- simshaped_pulse statement, 135, 144, 253
- simultaneous gradient, 212
- simultaneous pulses, 84, 85
- simultaneous shaped gradient, 213
- simultaneous shaped gradient pulse, 214
- sin command, 44
- sine value of angle, 44
- single period notation (UNIX), 278
- single quotes ('...') notation, 27, 30
- size operator, 31, 33
- SLI board, 255, 273
- SLI lines
 - set from real-time variable, 273
 - setting lines, 255
- sli statement, 157, 255
- slider action, 124
- slider bars, 327
- SLIDER_LABEL attribute, 120, 124
- small-angle phase increment, 87
- small-angle phase of decoupler, 169, 170
- small-angle phase of transmitter, 275
- small-angle phase shifts, 86
- small-angle phase step size, 260
- sn file, 284
- soft loop, 125, 141
- solids high-power amplifiers caution, 22
- solppm command, 48
- solvent resonances, 48
- sort command (UNIX), 278
- sort files (UNIX), 278
- source code, 69, 157

- sp#off statement, 97, 256
 - sp#on statement, 97, 257
 - SPARE 1 connector, 97
 - spare line gating, 256, 257
 - spare lines, 97
 - spectral analysis tools, 38
 - spectrometer control statements, 79
 - spectrometer differences, 69
 - spectroscopy imaging sequences, 207
 - spectrum gap, 47
 - spectrum intensity at a point, 39
 - spectrum selection without display, 39
 - spell command (UNIX), 279
 - spelling errors check (UNIX), 279
 - spin lock control on transmitter, 257
 - spin lock control statements, 137
 - spin lock waveform control on decoupler, 186
 - spinlock statement, 137, 144, 257
 - spinner errors, 75
 - split evolution time, 64
 - sqrt operator, 30
 - square brackets ([...]) notation, 33
 - square brackets notation, 307
 - square root, 30
 - square wave modulation, 243
 - ss parameter, 98, 102
 - ssctr real-time variable, 99, 102
 - ssval real-time variable, 99, 102
 - standard data format, 295
 - standard deviation of input, 43
 - standard PSG variables, 72
 - standard.h file, 73, 120
 - start loop, 212
 - starthardloop statement, 126, 258
 - status change, 63
 - status entry, 68
 - status of transmitter or decoupler, 242
 - status statement, 94, 103, 128, 143, 145, 259
 - status window, 322
 - status.conf file, 323
 - status.conf file listing, 323
 - statusdelay statement, 95, 103
 - steady-state phase cycling, 103
 - steady-state pulses, 102
 - step size
 - decoupler, 188
 - parameters, 302
 - transmitter, 222
 - steps in shaped pulse, 139
 - stepsize statement, 169, 260
 - store array in AP table, 107
 - stored format of a parameter, 302
 - storing multiple traces, 289
 - string command, 32
 - string constant, 30
 - string formatting for output, 40
 - string length, 47
 - string parameter value lookup, 117, 198
 - string parameters, 32
 - string template, 304
 - string variables, 32
 - strings displayed in text window, 40
 - string-type parameter, 298, 300
 - style attribute, 316
 - sub statement, 99, 261
 - substr command, 49
 - substring from a string, 49
 - subtract AP table from second AP table, 264
 - subtract integer from AP table elements, 263
 - subtract integer values, 261
 - sum of integer values, 160
 - sum-to-memory error, 76
 - Sun manuals, 277
 - svfdf macro, 294
 - svib macro, 294
 - svsis macro, 294
 - swapping rf channels, 82
 - swept-square wave modulation, 243
 - synchronization of a pulse sequence, 131
 - synchronous decoupling, 243
 - Synchronous Line Interface (SLI) board, 157, 255, 273
 - sysgcoil parameter, 153
 - sysmaclibpath parameter, 27
 - system identification, 279
 - system macro, 45
 - system macro library, 27
 - systemglobal-type parameter tree, 299
- ## T
- T_1 analyses, 42
 - t1-t60 table names, 105
 - T_2 analyses, 42
 - T2PUL pulse sequence, 108
 - tab fields, 326
 - tabc command, 298
 - table names, 105
 - table of delays, 165
 - table of frequencies, 166
 - table of frequency offsets, 167
 - tablib directory, 105
 - tail command (UNIX), 279
 - tallest peak in region, 39
 - tan command, 44
 - tangent value of angle, 44
 - tape backup (UNIX), 278
 - tar command (UNIX), 278
 - tcapply command, 298
 - tcl command, 343
 - tcl directory, 328
 - Tcl procedures, 342
 - Tcl script, 343
 - Tcl/Tk (tool command language/tool kit), 311
 - template parameters, 304
 - temporary variables, 26, 29, 32, 33
 - terminating a calling macro, 37
 - terminating zero, 120
 - test4acq procedure, 86
 - text display status, 49
 - text editor, 280
 - text file, 284
 - text file lookup, 41
 - text format files, 283
 - text window, 40
 - textedit command (UNIX), 279, 280
 - textentry style, 316

Index

- textfield parameter, 317
 - textis command, 49
 - thermal shutdown, 81
 - theta angle, 154
 - theta parameter, 155, 218
 - third attenuator, 139
 - third decoupler
 - blank associated amplifier, 171
 - fine power, 180
 - fine power adjustment, 92
 - gating, 95
 - homodecoupler gating, 84
 - offset frequency, 90, 91, 173
 - phase control, 87
 - power adjustment, 92
 - power level, 176
 - programmable decoupling, 177, 178
 - pulse with receiver gating, 182
 - quadrature phase, 174
 - shaped pulse, 185
 - simultaneous pulses, 85
 - small-angle phase, 170
 - spin lock waveform control, 187
 - step size, 189
 - turn off, 172
 - turn on, 174
 - unblank amplifier, 189
 - three attenuators system, 142
 - three pointer, 99
 - three-pulse pulse, 84
 - three-pulse shaped pulse, 136, 254
 - tilde character notation (display templates), 307
 - tilde character notation (UNIX), 278
 - time increments, 73
 - time-sharing pulse shaping, 139
 - timing in a pulse sequence, 103
 - tip angle, 133
 - title fields, 326
 - TODEV constant, 82
 - tof parameter, 90
 - token defined, 29
 - total weighting vector, 308
 - TPPI experiments, 150
 - TPPI phase increments, 71
 - tpwr parameter, 92, 142
 - transformations of FDF data files, 294
 - transformed complex spectrum storage file, 284
 - transformed phased spectrum storage file, 284
 - transformed spectra storage files, 283
 - transient blocks, 99
 - transmitter
 - blanking, 220
 - fine power, 222, 234, 240
 - fine power adjustment, 92
 - fine power with IPA, 209
 - gating, 95, 133, 275
 - hardware control of phase, 87
 - linear modulator power, 235, 240
 - linear modulator power with IPA, 210
 - offset frequency, 90, 220, 223
 - phase control, 85, 87
 - power adjustment, 92
 - power level, 221, 233, 239
 - programmable control, 136, 221
 - pulse shaping via AP bus, 163
 - pulse with IPA, 208, 209, 210
 - pulse with receiver gating, 222, 234, 238
 - pulse-related statements, 80
 - quadrature phase, 265
 - set status, 242
 - shaped pulse, 135, 244
 - simultaneous pulses, 84
 - small-angle phase, 275
 - small-angle phase step size, 260
 - spin lock control, 137, 257
 - step size, 222
 - temporary frequency shifting, 88
 - unblank, 223
 - troubleshooting
 - acquisition status codes, 74
 - troubleshooting a new sequence, 71
 - TRUE Boolean value, 35
 - trunc operator, 30
 - truncate real number, 30
 - tsadd statement, 108, 261
 - tsdiv statement, 108, 262
 - tsmult statement, 108, 262
 - tssub statement, 108, 263
 - ttadd statement, 108, 109, 263
 - ttdiv statement, 108, 263
 - ttmult statement, 108, 264
 - ttsub statement, 108, 264
 - two attenuators system, 141
 - two periods notation (UNIX), 278
 - two pointer, 99
 - two-pulse pulse, 85
 - two-pulse sequence T2PUL, 108
 - two-pulse shaped pulse, 135, 253, 254
 - txphase statement, 85, 88, 128, 265
 - type A or B rf, 88
 - type of parameter, 300
 - typeof operator, 31, 35
 - types of parameters, 298, 302
- ## U
- U+ H1 Only label, 146
 - uname command (UNIX), 279
 - unblank amplifier, 96, 189
 - underline prefix, 27
 - uniform excitation, 92
 - uninitialized variable, 71
 - unit command, 49
 - units command (UNIX), 279
 - UNIX
 - commands, 278
 - file names, 278
 - manuals, 277
 - operating system, 277
 - shell, 280
 - shell programming, 282
 - shell startup, 48
 - text commands, 279
 - text editor, 280
 - tools, 277
 - updtgcoil macro, 153
 - upper barrel warning, 20

usenxtloc attribute, 319
 user AP lines, 97
 user AP register, 236, 244, 273
 user device interfacing, 97
 user library, 70, 141
 user macro, 44
 user macro directory, 27
 user_templates directory, 328
 user-created parameters, 117
 user-customized pulse sequence generation, 157
 usermacro1,...,usermacro8 macros, 53
 user-programmable menus, 57
 user-written weighting function, 307

V

v1, v2, ... v14 real-time variables, 73, 98
 vgradient statement, 265
 vgradpulse statement, 154, 266
 values of a parameter, 302
 variable angle gradient, 265
 variable angle gradient pulse, 266
 variable angle shaped gradient, 266
 variable angle shaped gradient pulse, 268
 variable declaration, 33, 73
 variable gradient pulse generation, 248
 variable scan, 272
 variable shaped gradient pulse generation, 249
 variable types, 32
 variables using parameters, 26
 vashapedgradient statement, 154, 267
 vashapedgradpulse statement, 154, 268
 VAST accessory, 311
 VAX systems, 283
 vbg shell script (UNIX), 281
 vdelay statement, 80, 268
 vdelay_list statement, 157, 269
 vertical bar notation (UNIX), 279
 vfreq statement, 157, 270
 vgradient statement, 144, 150, 155, 270
 vi command (UNIX), 279, 280
 vi command (VNMR), 280
 vi text editor, 54, 300
 VNMR
 background processing, 281
 macros executed at startup, 46, 47
 software package, 277
 source code license, 285
 versus Vnmr, 24
 Vnmr command (UNIX), 281
 VNMR Command and Parameter Reference manual,
 26
 VNMR versus Vnmr, 24
 vnmr_confirm command, 41
 vnmrDgroup procedure, 342
 vnmreditor variable (UNIX), 28
 vnmrMax procedure, 343
 vnmrmenu file, 53
 vnmrmenu parameter, 52
 vnmrmenu variable (UNIX), 52
 vnmrMin procedure, 343
 vnmrSize procedure, 342
 vnmrsys directory, 27, 70

vnmrtext variable (UNIX), 328
 vnmrUnits procedure, 342
 voffset statement, 157, 272
 vsadj macro, 26
 vscan statement, 157, 272
 initialize variable, 207
 vsetuserap statement, 97
 vsli statement, 157, 273
 vsmult macro, 35
 VT errors, 75
 VT experiment warning, 20
 vtime parameter, 75

W

w command, 280
 w command (UNIX), 279
 WALTZ decoupling, 86
 WALTZ-16 modulation, 243
 warning error codes, 75
 warning messages, 71
 warnings defined, 19
 waveform generation, 243
 waveform generator control, 134, 135, 136, 137
 waveform generator delays, 143
 waveform generator gate, 133
 waveform generators, 131
 waveform initialization statements, 157
 wbs command, 74
 weighting function, 288, 307, 308
 werr command, 74
 wexp command, 74
 WFG_OFFSET_DELAY macro, 146
 WFG2_OFFSET_DELAY macro, 146
 WFG3_OFFSET_DELAY macro, 146
 which macro, 27
 while, do, endwhile loop, 36
 who is on the system (UNIX), 279
 widget type, 316
 wildcard character (UNIX), 279
 wnt command, 74
 working directory (UNIX), 278
 write command, 41
 writing parameter buffers into disk files, 284
 wtcalf function, 308
 wtf file extension, 308
 wtfile parameter, 307, 309
 wtfile1 parameter, 307
 wtfile2 parameter, 307
 wtgen shell script, 308, 309
 wti command, 308
 wtlb directory, 308, 309
 wtp file extension, 308

X

X channel, 287
 X nucleus decoupling, 147
 xcheck style, 316
 xcheckcustom style, 317
 xgate statement, 131, 275
 xmtroff statement, 95, 275

Index

xmtron statement, [95](#), [275](#)
xmtrphase statement, [87](#), [88](#), [128](#), [144](#), [275](#)
xradio style, [316](#)
xradiocustom style, [317](#)
XY32 modulation, [243](#)

Y

Y channel, [287](#)

Z

z channel gradient pulse, [276](#)
zero acquired data table, [129](#)
zero all gradients, [276](#)
zero data in acquisition processor memory, [165](#)
zero fill data, [288](#)
zero pointer, [99](#)
zero_all_gradients statement, [276](#)
zgradpulse statement, [144](#), [151](#), [154](#), [276](#)